



HUAWEI *Ascend* G610

User Guide





Contents

Foreword	1
Safety precautions.....	2
Preparations.....	3
Your phone at a glance	3
Inserting a SIM/USIM card.....	4
Inserting a microSD card	5
Installing the battery	6
Charging the battery	6
Powering your phone on and off.....	8
Dual-card management.....	8
Getting started.....	9
Gestures.....	9
Locking and unlocking the screen	10
Getting to know your home screen	11
Using the notification panel	14
Accessing applications.....	15
Texting.....	15
Personalizing your phone	19
Setting the theme	19
Changing the wallpaper	19
Setting the home screen transition effect	19
Organizing home screen widgets and application icons.....	20
Organizing home screen icons using folders.....	20
Customizing Me Widget.....	21
Customizing your home screens	22
Managing profiles	23
Setting tones.....	24
Changing the font size	24
Setting the screen unlock method	24
Adjusting the screen brightness.....	26
Calls.....	27
Smart dialing.....	27
Answering or rejecting a call	27
Viewing the call log.....	28
What you can do during a call.....	28

Making a conference call	29
Answering a third-party call	29
Making emergency calls	30
Using dual-microphone noise reduction	30
Other call services	30
People.....	32
Creating a contact.....	32
Searching for a contact	32
Importing or exporting contacts	32
Adding a contact to your favorites	33
Deleting a contact.....	33
Sharing contacts	34
Contact groups	34
Messaging	36
Sending a text message.....	36
Sending a multimedia message	36
Replying to a message.....	36
Searching for a message	37
Managing messages.....	37
Modifying message settings	38
Browser	39
Browsing web pages	39
Managing bookmarks	39
Setting the home page.....	40
Clearing your browsing history	40
Modifying browser settings	40
Email.....	41
Adding a POP3 or IMAP email account.....	41
Adding an Exchange account	41
Switching between email accounts.....	42
Sending emails	42
Checking emails	42
Removing an email account	43
Modifying email account settings	43
Multimedia.....	44
Camera	44
Gallery	46
Music.....	49

FM radio	51
Internet connection.....	53
Enabling the data service.....	53
Setting up a Wi-Fi connection	53
Wi-Fi Direct	54
Sharing your phone's mobile data connection.....	55
Controlling your data usage	57
Sharing data	59
Bluetooth	59
DLNA	60
Connecting your phone to a computer.....	61
File Manager	63
Creating a folder	63
Searching for a file	63
Copying or cutting a file.....	63
Compressing or decompressing files.....	64
Renaming a file	64
Deleting a file.....	64
Creating a shortcut for a file or folder	65
Checking the memory status	65
Managing applications.....	66
Viewing applications	66
Uninstalling an application	66
Clearing the application cache.....	66
Basic utilities	67
Calendar	67
Clock.....	68
Calculator.....	69
Notes	69
Weather	70
Accounts and sync	72
Adding an account.....	72
Deleting an account	72
Turning on data synchronization	72
Settings.....	73
Turning on or off airplane mode.....	73

Display settings	73
Setting the date and time.....	74
Changing the system language.....	74
Modifying location service settings.....	74
Setting the PIN of your SIM card	75
Restoring factory settings.....	75
Online update	76
Accessibility.....	76
FAQs.....	77
Legal Notice.....	80
Index.....	i

Foreword


Thank you for choosing the **HUAWEI Ascend G610** smartphone.


This guide introduces you to the features and functions of your new phone. Please read it carefully before you start using the phone.

All pictures and illustrations in this document are for your reference only. The actual product may vary.

Symbols and definitions

The following symbols are used in this document.

	Note	Provides additional information.
---	------	----------------------------------

	Caution	Indicates potential problems that may arise without the proper care and, if necessary, how to handle these problems.
---	---------	--

Safety precautions

Please read these safety precautions carefully before operating your phone.



Do not crush, throw, or puncture your phone. Avoid dropping, squeezing, or bending it also.



Your phone is not meant for use in a damp environment, such as the bathroom. Do not submerge your phone in liquid of any sort and avoid getting your phone wet.



Avoid using your mobile phone in areas where it may cause interference or present a hazard. Follow local laws and regulations.



Avoid using your phone while driving. Your safety should always be your top priority.



Follow any rules or regulations in hospitals and health care facilities. Power off your phone near any medical apparatus.



Power off your phone in an aircraft. The phone may interfere with the aircraft's control equipment and navigation system.



Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas, such as a gas station.



Keep your phone and its accessories away from children. Do not allow young children to use your phone without adult supervision.



Use only approved batteries and chargers to avoid the risk of explosions.



 
Observe any laws or regulations on the use of wireless devices. Respect the privacy and legal rights of others when using your phone.



To prevent damage to your phone or your computer, follow all instructions pertaining to the USB cable.

Preparations

Your phone at a glance

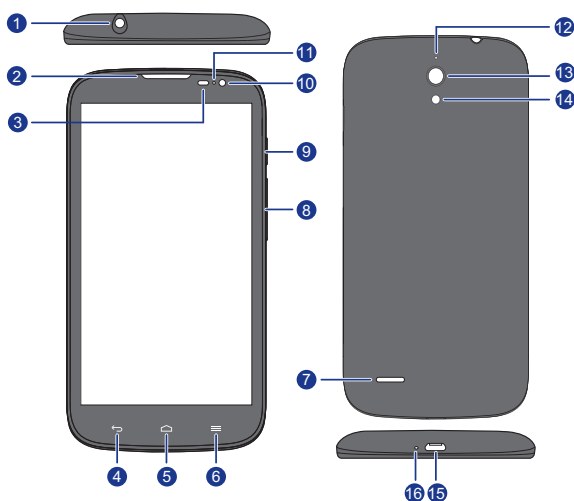

1 Headset jack

2 Earpiece

3 Proximity sensor/light sensor

4 Back

5 Home

6 Menu

7 Speaker

8 Volume button

9 Power button

10 Front camera

11 Status indicator

12 Noise reduction microphone

13 Rear camera

14 Flashlight

15 Micro USB port

16 Microphone

Buttons


	<ul style="list-style-type: none"> •When your phone is powered off, press and hold to power it on. •From any screens, press to turn on or off the screen. When the screen is turned on, press and hold to display an option menu.
--	---

↶	<ul style="list-style-type: none"> •Touch ↶ to return to the previous screen or exit the current application. •When you are entering text, touch ↶ to hide the onscreen keyboard.
---	---

🏠	<ul style="list-style-type: none"> •Touch 🏠 to return to the home screen. •Touch and hold 🏠 to open search screen.
---	--


☰	<ul style="list-style-type: none"> •Touch ☰ to display an option menu where available. •Touch and hold ☰ to display the list of recently used applications.
---	---

Inserting a SIM/USIM card

 Your phone supports only SIM/USIM cards. Other sizes may not work properly. Contact your service provider to replace your current card or purchase a new one. Power off your phone before installing or removing the SIM/USIM card.




 The dimensions of a standard SIM/USIM card are 25 mm x 15 mm (0.98 in. x 0.59 in.).

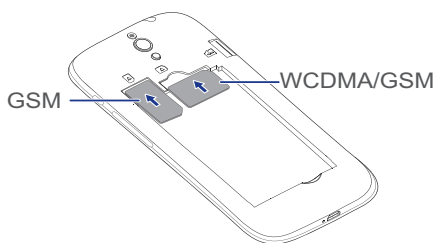


Inserting a microSD card

 You can expand your phone's storage capacity with a microSD card. Follow the operations in the figure below to install a microSD card.

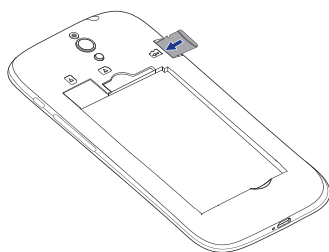


To remove a microSD card:


1. On the home screen, touch .
2. Under **DEVICE**, touch **Storage**.
3. Touch **Unmount SD card**.
4. Carefully take out the microSD card.

Installing the battery

 
1. Open the battery cover.

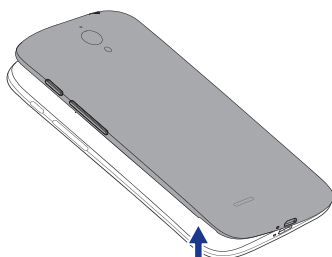

 2. Align the battery's metal contacts with those of the battery compartment, and press the other end of the battery to clip it into the battery compartment.

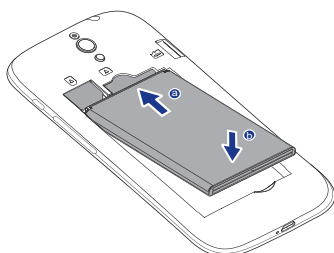


 3. Close the battery cover.

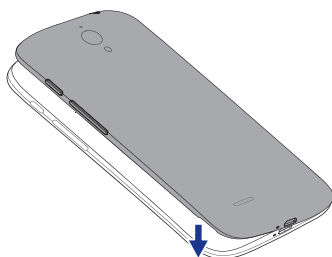

Charging the battery

 Use the provided USB cable and power adapter to connect your phone to a power outlet, or use the USB cable to connect your phone to a computer.

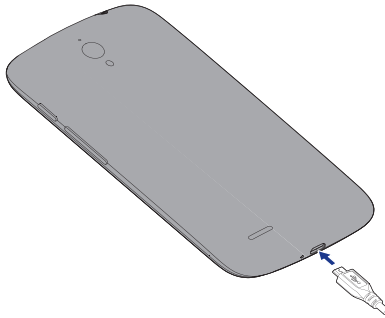

Battery indicator



The battery indicator shows your phone's battery level.

- Blinking red: The battery level is lower than 10%.
- Steady red (when charging): The battery level is lower than 10%.
- Steady yellow (when charging): The battery level is higher than 10%.
- Steady green (when charging): The battery is almost or already full.

Important information about the battery

- If the battery power is depleted, you may not be able to power on your phone immediately after you begin charging the battery. This is normal. Allow the battery to charge for a few minutes before attempting to power on your phone.
- Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. When the battery life becomes noticeably shorter, replace the battery.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- If your phone is very low on power, it plays an alert tone and displays a message. If the battery level is extremely low, your phone automatically powers off.

Powering your phone on and off


- To power on your phone, press and hold  .
- To power off your phone, press and hold  to display an option menu, and then touch **Power off**.

Dual-card management

Your phone supports dual card dual standby mode. You can use one card for your personal life and one card for work.


Enabling or disabling a SIM/USIM card

You can install two SIM/USIM cards on your phone and use one or both of them at the same time. When you do not need to use a SIM/USIM card, disable it.

1. On the home screen, touch  .
2. Under **WIRELESS & NETWORKS**, touch **SIM card management**.
3. Under **SIM CARD INFO**, enable or disable a SIM/USIM card.

 
Setting the default SIM/USIM card

You can set the default SIM/USIM card for some services, including data service, voice calls, and messaging. The default card is then prioritized for the selected services.

1. On the home screen, touch  .
2. Under **WIRELESS & NETWORKS**, touch **SIM card management**.
3. Under **DEFAULT SETTINGS**, touch **Voice calls** and **Messaging**, or **Voice calls** and **Data connection**, and select the SIM/USIM card you want to set as the default card.

Getting started


Gestures

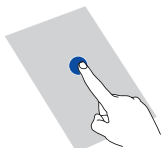


Touch: Tap an item once. For example, touch to select an item or open an application.



 
Touch and hold: Touch and leave your finger on the screen for 2 seconds or more. For example, touch and hold an application, widget, or blank area to display the related option menu.

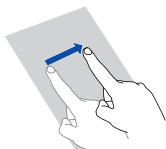

 Flick: Where applicable, swipe your finger in the direction you want the screen to move. For example, you can flick left or right across the notification panel to dismiss a notification.

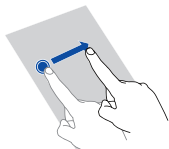

 Drag: Touch and hold an item and then move it to another position. For example, you can re-arrange applications and widgets on the home screen this way.

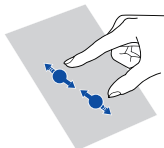




Pinch: Pinch two fingers together to zoom out or stretch them apart to zoom in. For example, pinch together or apart to zoom in or out on a picture or web page.

Locking and unlocking the screen



Locking the screen not only prevents your phone from carrying out undesirable operations when you are not using it, but also protects it from unauthorized use. You can lock and unlock your screen in a number of ways. The pre-installed screen unlock method is used as an example in this section.

 
Locking the screen



- Method 1: Press  to lock the screen.
- Method 2: After being idle for a specified period of time, your phone automatically locks its screen.

 To set the screen lock method, touch  on the home screen. Then **Security > Screen lock**.

Unlocking the screen

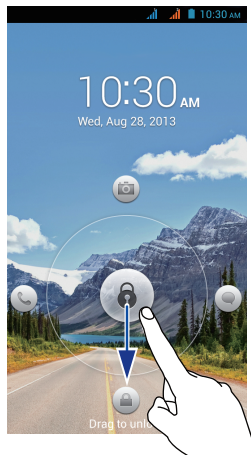1. If the screen is off, press  to wake it.
2. Drag  down to unlock the screen.



 Drag  left, right or up towards an application to open it.


























 




Getting to know your home screen

Your home screens are where you'll find your favorite widgets and all your applications. We did away with the application list to give you a more convenient and direct path to your applications. The default home screen is shown below.



-
- 1 Status bar: displays notifications and icons. Flick down from the status bar to open the notification panel.
-
- 2 Display area: displays application icons, folders, and widgets.
-
- 3 Screen position indicator: shows the current screen's position.
-
- 4 Dock: displays your most common applications.
-

Status icons

	Signal strength		No signal
	GPRS network connected		3G network connected
	Roaming		Airplane mode enabled
	Bluetooth on		Receiving location data from GPS
	Silence mode enabled		Vibration mode enabled
	Alarms enabled		Headset plugged in
	Charging		Battery low
	Battery full		Missed calls
	Call in progress		New emails
	New messages		New voicemail
	Uploading data		Downloading data
	Synchronizing data		Synchronization failed
	Phone memory full		Connected to a VPN
	Wi-Fi network available		Connected to a Wi-Fi network
	Portable Wi-Fi hotspot on		USB tethering on

 
Switching between home screens

Running out of space on the home screen? Not to worry. Your phone lets you create more home screens for various application icons and widgets.

- Flick left and right across the screen to switch between the home screens.



- Pinch two fingers together to display the home screen thumbnails. Touch a thumbnail to enter that particular home screen.

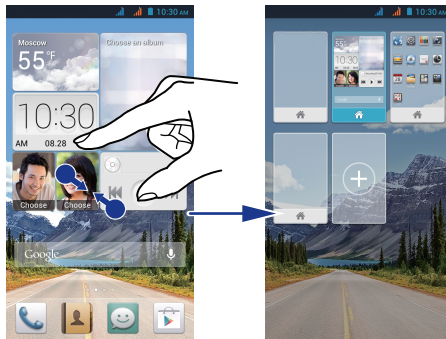

Taking a screenshot

Want to share an interesting scene in a movie or show off your new high score in a game? Take a screenshot and share away.


Press **Power** and the volume down button simultaneously to take a screenshot.

Then, open the notification panel and touch **Share** to share the screenshot.

Screenshots are saved to the **Screenshots** album in **Gallery**.

 
Auto-rotate screen




Your phone features a tilt sensor. If you rotate your phone when browsing a web page or viewing a photo, the orientation of your screen will automatically change to landscape or portrait view. You'll also be able to enjoy tilt sensor-based applications, such as racing games.

On the home screen, use two fingers to flick down from the status bar to open the notification panel shortcuts. Then, touch  to enable or disable the auto-rotate screen function.

Using the notification panel

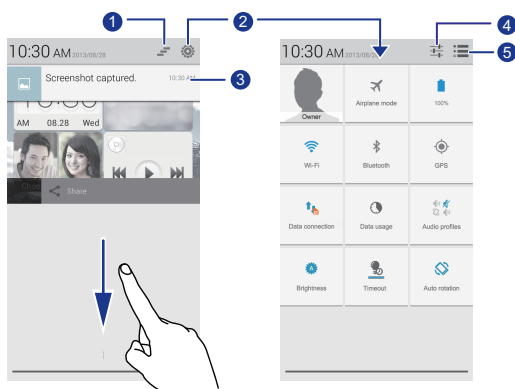On the home screen, use one finger to flick down from the status bar to open the notification panel. Use two fingers to flick down from the status bar to open the notification panel shortcuts.




- 1 Touch  to delete all notifications.
- 2 Touch  to open the notification panel shortcuts. Then, touch a shortcut to access its settings or enable or disable the corresponding function.
- 3 Touch an application to open it and flick left or right across a notification to dismiss it.
- 4 Touch  to display the settings screen.

-
- 5 Touch  to return to the notification panel.
-


Accessing applications


Starting applications and switching between them

On the home screen, touch an application icon to open it.

To switch to another application, touch  to return to the home screen, and touch the icon of the application you wish to open.


Viewing recently used applications

To display the list of recently used applications, touch and hold . You can then:


- Touch an application to start it.
- Flick left or right across an application to dismiss it.
- Touch  to clear the list.



Texting

Your phone comes with multiple text input methods. You can quickly enter text using the onscreen keyboard.

- Touch a text box to bring up the onscreen keyboard.
- To hide the onscreen keyboard, touch .

 
Selecting an input method






1. On the text input screen, flick down from the status bar to open the notification panel.
2. Touch  to select an input method.

-  To change your phone's default input method, touch  on the home screen. Under **PERSONAL**, touch **Language & input > Default** to select an input method.

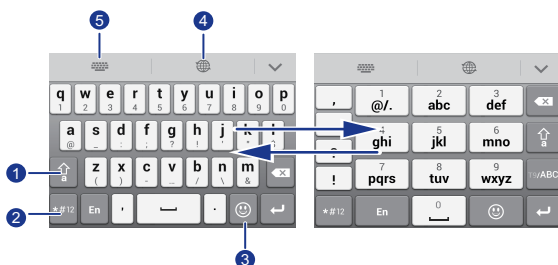
Huawei input method










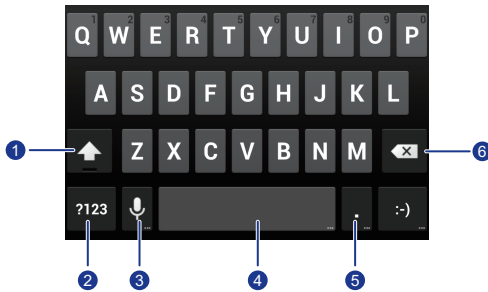 

 Slide your finger left or right across the onscreen keyboard to switch between the QWERTY and 9-key keyboards.



- 1 Touch  to switch between lowercase letters, uppercase letters, and caps lock.
- 2 Touch  to enter numbers and symbols.
- 3 Touch  to enter emoticons.
- 4 Touch  to switch the input language.
- 5 When you are typing in English, touch  to switch between QWERTY and 9-key keyboards.

 
Android input method








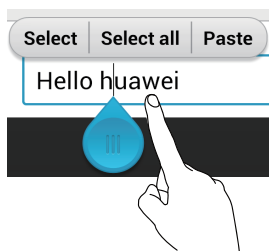 
-
- 1
- Touch  to switch between lowercase and uppercase letters.
 - Quickly touch  twice to turn on caps lock.
-
- 2
- Touch  to enter numbers and symbols.
-
- 3
- Touch  to switch to voice input.
 - Touch and hold  to open the **Input options** menu.
-
- 4
- Touch  to enter a space.
 - Touch and hold  to choose another input method.
-
- 5
- Touch  to enter a period.
 - Touch and hold  to enter symbols.
-
- 6
- Touch  to delete the character to the left of the cursor.
 - Touch and hold  to delete all characters to the left of the cursor.
-

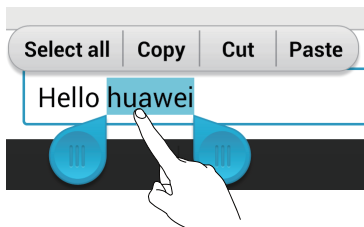Editing text



Learn how to select, cut, copy, and paste text on your phone.



- **Select text:** Touch and hold the text to bring up  . Then drag  and  to select more or less text, or touch **Select all** to select all text in a text box.
- **Cut text:** Select text and touch **Cut**.
- **Copy text:** Select text and touch **Copy**.
- **Paste text:** Touch where you want to insert the text, drag  to move the insertion point, and touch **Paste** to paste the text you copied or cut.



Configuring an input method


1. On the home screen, touch .
2. Under **PERSONAL**, touch **Language & input**.
3. Select the input method you wish to configure and touch  to modify the settings.

Personalizing your phone

Setting the theme

Your phone comes with a variety of themes.

Changing the theme

1. On the home screen, touch .
2. Select a theme and touch **APPLY** to apply it.

Customizing a theme

1. From the theme grid, touch **CUSTOMIZE CURRENT THEME**.
2. From the element list, choose the element you want to modify.

Changing the wallpaper


1. On the home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Wallpapers**.
3. From the **Wallpaper** screen, you can set the following items:
 - **Lock screen wallpaper**: Set the wallpaper displayed on the phone lock screen.
 - **Home screen wallpaper**: Set the home screen wallpaper.
 - **Shake to change**: Change the home screen wallpaper by shaking your phone.
 - **Random change**: The home screen wallpaper changes randomly.


Setting the home screen transition effect

1. On the home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Transitions**.
3. Select a home screen transition effect.



Organizing home screen widgets and application icons


Adding a widget to the home screen

1. On the home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Widgets**.
3. Drag a widget from the screen's lower section to a screen thumbnail.
4. Touch  to return to the home screen.

 If the home screen doesn't have enough space, your phone will automatically create a new home screen to the original's right and place the widget on the new home screen.

Deleting an application icon or widget

On the home screen, touch and hold the application icon or widget you wish to delete until  is displayed. Drag the unwanted application icon or widget to  to delete it.

 Deleting an application icon uninstalls the application. When you delete an application icon, your phone prompts you to confirm the action. Touch **OK** to uninstall the application.

Moving an application icon or widget

You can re-arrange application icons and widgets to any fitting empty space on the home screen.

Organizing home screen icons using folders

Creating a folder on the home screen

1. On the home screen, drag an item onto another one to create a folder containing both of them.
2. You can then:

- Touch the folder name to rename it.
- Touch **+** and add more items to the folder.

 
Removing an item from a folder

1. On the home screen, touch a folder.
2. Drag an item out from the folder to remove the item.

A folder must contain at least two items; otherwise, the folder will automatically disappear.

Customizing Me Widget

Me Widget is a collage of popular widget units that is displayed on your home screen for your added convenience. They include contacts, music, clock, and weather.

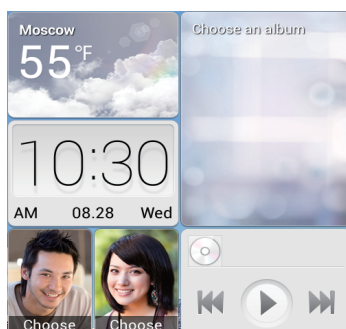


Removing a widget unit

1. Touch and hold Me Widget until your phone vibrates. Release your finger.
2. Touch **Touch to customize** to enter editing mode.
3. Touch **X** for the widget unit you wish to remove.
4. When you are done, touch **Done**.

Adding a widget unit

1. Touch and hold Me Widget until your phone vibrates. Release your finger.
2. Touch **Touch to customize** to enter editing mode.

3. Flick left or right across the widget unit list, select a widget unit and drag it to a blank area on Me Widget.

 Me Widget's size cannot be adjusted, so space is limited. If there is not enough space for a new widget unit, delete some existing ones first.

4. When you are done, touch **Done**.

Moving a widget unit

Before you move a widget unit, make sure there is enough space to hold it in the new position.


1. Touch and hold Me Widget until your phone vibrates. Release your finger.
2. Touch **Touch to customize** to enter editing mode.
3. Touch and hold a widget unit until your phone vibrates, and drag it to the new position.
4. When you are done, touch **Done**.

Customizing your home screens

Re-arranging home screens


1. On a home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Thumbnails**.
3. Touch and hold a home screen thumbnail until your phone vibrates, and drag it to the new location.

Adding a home screen

1. On a home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Thumbnails**.
3. Touch  to add a home screen.


Deleting a home screen


Only blank home screens can be deleted.

1. On a home screen, touch and hold a blank area to display the **Set home screen** dialog box.
2. Touch **Thumbnails**.
3. Touch  to delete a home screen.




Managing profiles

Changing the profile


1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. From the profile list, select a profile and touch the button to its right to activate the profile.


 You can also flick down from the status bar to open the notification panel and change the profile using the switch shortcuts.

Adding a profile

1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. Touch .
4. Touch the text box and name the profile.
5. Touch **OK**.
6. Touch  to set volumes, phone ringtone and so on.



Deleting a profile

 Preset profiles cannot be deleted.



1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. Touch and hold the profile you want to delete.
4. Touch **Delete**.
5. Touch **OK**.

Setting tones


Setting the ringtone

1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. Touch  > **Phone ringtone** and select either of the following options from the displayed dialog box:
 - **Ringtone**: choose from the default selection.
 - **Music**: choose from the audio files you have saved to your phone.
4. Touch **APPLY**.

Changing message tone and other tones

1. On the home screen, touch .
2. Under **DEVICE**, touch **Audio profiles**.
3. Touch  > **Default notification**.
4. Select a tone.
5. Touch **APPLY**.

Changing the font size

1. On the home screen, touch .
2. Under **DEVICE**, touch **Display**.
3. Touch **Font size** and select a font size.

Setting the screen unlock method

Face unlock

Enable your data service before using face unlock for the first time.


1. On the home screen, touch .


2. Under **PERSONAL**, touch **Security**.
3. Touch **Screen lock > Face Unlock**.
4. Follow the onscreen instructions to take a photo of your face.
Your phone will use face unlock as the primary unlock method.
5. Set a secondary unlock method.

If face unlock cannot recognize you (dim light, for example), follow the onscreen instructions to unlock your phone using the secondary unlock method.


To turn off face unlock, use the secondary unlock method to enter the **Screen lock** screen, and select another unlock method.

Unlocking the screen with a pattern

1. On the home screen, touch .
2. Under **PERSONAL**, touch **Security**.
3. Touch **Screen lock > Pattern**.
4. Follow the onscreen instructions to set a screen unlock pattern.


 If you draw incorrect patterns five consecutive times, the screen stops responding to further unlock attempts for 30 seconds. You will still be able to make emergency calls during this time.

Unlocking the screen with a PIN

1. On the home screen, touch .
2. Under **PERSONAL**, touch **Security**.
3. Touch **Screen lock > PIN**.
4. Follow the onscreen instructions to set a screen unlock PIN.


After a screen unlock PIN is set, you will have to enter it every time you want to unlock the phone screen.

Unlocking the screen with a password


1. On the home screen, touch .
2. Under **PERSONAL**, touch **Security**.
3. Touch **Screen lock > Password**.

4. Follow the onscreen instructions to set a screen unlock password.
5. Repeat the password and touch **OK**.

After a password is set, you will have to enter it every time you want to unlock the phone screen.

 If you enter incorrect passwords five consecutive times, the screen stops responding to further unlock attempts for 30 seconds. You will still be able to make emergency calls during this time.

Adjusting the screen brightness



1. On the home screen, touch .
2. Under **DEVICE**, touch **Display**.
3. Touch **Brightness**.
4. In the displayed dialog box, perform either of the following operations:
 - Select the **Automatic brightness** check box to have your phone automatically adjust its screen brightness based on the ambient light.
 - Drag the slider left to reduce the screen brightness or drag it right to increase the screen brightness.


You can also flick down from the status bar to open the notification panel and adjust the screen brightness using the switch shortcuts.

Calls


Smart dialing

 
In addition to standard call procedures, smart dialing lets you quickly find contacts by entering parts of their names or numbers.



1. On the home screen, touch .
2. Enter a phone number or the initials or first several letters of a contact name.
Matching contacts in your phone and phone numbers in your call log are then displayed in a list.
3. From the list, select the contact you wish to call.
4. To end the call, touch .


-  On the messaging, contacts, or dialer screen, you can open the notification panel and touch a SIM card icon to switch to the corresponding SIM card. Your phone then uses the selected SIM card to send messages or place calls.

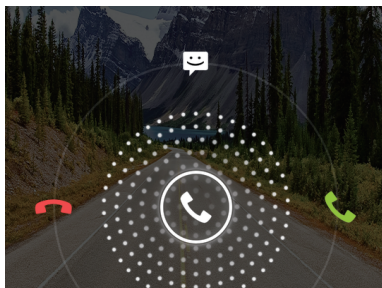

Answering or rejecting a call

-  When a call comes in, you can press the volume button to mute the ringtone.





- Drag  right to answer the call.
- Drag  left to reject the call.

 
- Drag  up to reject the call and send the caller a message.








 On the dialer screen, touch  > **Settings** > **Additional settings** > **Quick responses** to edit the message that will be sent.

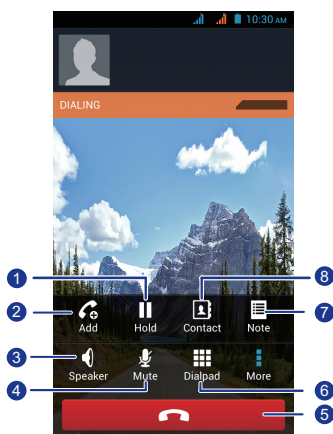
Viewing the call log


On the home screen, touch  to display your recent calls above the dialer. You can also touch  on the dialer screen to display the call log.



What you can do during a call





- 1 Touch  >  to place the current call on hold, and touch  again to resume the call.
- 2 Touch  >  to start a three-way call. Before you use three-way calling, make sure that you have subscribed to this service. For details, contact your service provider.
- 3 Touch  to use the speakerphone.
- 4 Touch  to mute or unmute the microphone.

-
- 5 Touch  to end the call.

 - 6 Touch  to display the dialer.


 - 7 Touch  >  to display a note.





 - 8 Touch  >  to display the contact list.

To return to the call screen, flick down from the status bar to open the notification panel, and touch **Ongoing call**.

Making a conference call



Conference calling with your friends, family, and co-workers is easy. Make or answer a call, and dial another number to add the second participant to your conference call.

 Before you make a conference call, make sure that you have subscribed to the conference call service. For details, contact your service provider.

1. Call the first participant.
2. When the call is connected, touch  >  to call the second participant.
The first participant will be placed on hold.
3. When the second call is connected, touch  to start a conference call.
4. To add more people to the call, repeat steps 2 and 3.
5. Touch  to end the call.



Answering a third-party call


Before you answer a third-party call, make sure that you have turned on call waiting.

1. If a call comes in when you are already busy on the phone, drag  right to answer the new call and place the first call on hold.
2. To switch between the two calls, touch .

Making emergency calls



In the event of an emergency, you will still be able to make emergency calls without the use of a SIM card. However, you must still be under the coverage area.

1. On the home screen, touch  .
2. Enter your local emergency number and touch  .

 Emergency calls are subject to cellular network quality, use environment, service provider policies, and local laws and regulations. Never rely solely on your phone for critical communications when emergencies occur.

Using dual-microphone noise reduction

With the noise reduction function, your phone's dual microphones can filter ambient noise during calls. It is recommended that you turn on this function when you are placing a call in a noisy environment.

1. On the home screen, touch  .
2. Touch  > **Settings** > **Additional settings**.
3. Select the **Noise reduction** check box to turn on dual-microphone noise reduction.



If you find the in-call voice low, try turning off dual-microphone noise reduction.

Other call services

Your phone also supports other call functions, such as call forwarding, call waiting, and voicemail. Before you use these functions, make sure that you have subscribed to these services. For details, contact your service provider.

Enabling call forwarding



Too busy to answer all your calls with one phone? Forward them to another number and never miss an important call again!

1. On the home screen, touch  .
2. Touch  > **Settings**.

3. Touch **Voice call > Call forwarding**.
4. Select a SIM card.
5. Select a forwarding mode.
6. Enter the phone number to which you want to forward calls, and touch **Enable**.


Enabling call waiting



The call waiting function lets you answer another incoming call when you are already busy in a call and switch between the two calls.

1. On the home screen, touch .
2. Touch  > **Settings**.
3. Touch **Voice call > Additional settings**.
4. Select a SIM card.
5. Touch **Call waiting** to enable call waiting.

Setting up your voicemail

Voicemail is your personal storage for missed calls, including the calls missed when you are busy on the phone or your phone is powered off.

 Before you use voicemail, make sure you have subscribed to the voicemail service and obtained your voicemail number. For details, contact your service provider. You must also enable call forwarding and set all incoming calls to be forwarded to your voicemail.




1. On the home screen, touch .
2. Touch  > **Settings**.
3. Touch **Voice call > Voicemail**.
4. Select a SIM card.
5. Touch **Setup > Voicemail number**.
6. Enter your voicemail number, and touch **OK**.

To listen to your voicemail messages, touch and hold the **1** key on the dialer and follow the voice instructions.




People

Forget about lugging around business card holders. With your phone, you can easily store and manage your contacts in your new phone.

Creating a contact

1. On the home screen, touch  then the  tab.
2. Touch .
3. Select an account.
4. Enter the contact name, phone number, and other details. Touch **Add another field** to enter more information.
5. Touch **DONE** to save the contact.

Searching for a contact

1. On the home screen, touch  then the  tab.
2. Touch .
3. Enter the contact name or initials.

Matching results are displayed as you type.

For example, to search for John Doe, enter **John Doe** or **J D**.


Importing or exporting contacts

Your phone supports contact files in .vcf format only. This is a standard format for files storing contacts. Contact names, addresses, phone numbers, and other information can be saved in .vcf files.

Importing contacts from a storage device




You can import contacts saved as a .vcf file from a storage device to your phone.

1. On the home screen, touch .

2. Touch  > **Import/export** > **SD Card**.
3. Touch **Next** and select the account where you want to import the contacts.
4. Touch **Next**, and choose the .vcf file you want to import from the displayed dialog box.
5. Touch **OK**.

Exporting contacts

Back up your contacts to a storage device in case you lose them during a system upgrade or by mistake.





1. On the home screen, touch  then the  tab.
2. Touch  > **Share visible contacts**.
3. Touch **selected** > **Select all** > **OK**.
4. Select **SD Card**.

A dialog box is then displayed, indicating the exported .vcf file name and its save location.




5. Touch **OK**.

To view the .vcf file you just exported, open the **File Manager** application. The file is displayed in the root directory of your phone's internal storage.

Adding a contact to your favorites

1. On the home screen, touch  then the  tab.
2. Touch .
3. Touch the contact you want to add to favorites.
4. Touch .




Deleting a contact

1. On the home screen, touch  then the  tab.
2. Touch  > **Delete contact**.

3. Select a contact and touch **OK**.
4. Touch **OK**.

Sharing contacts





You can share contacts in **.vcf** format in many ways.

1. On the home screen, touch  then the  tab.
2. Touch  > **Share visible contacts**.
3. Select a contact, touch **OK**.
4. Choose a sharing method from the displayed option menu.



Contact groups

You can create a contact group and send a message or email to all group members simultaneously.



Creating a contact group

1. On the home screen, touch  then the  tab.
2. Touch .
3. Name the contact group.
4. Touch .
5. Select a contact, touch **OK**.
6. Touch **DONE**.



Editing a contact group


1. On the home screen, touch  then  tab.
2. Touch and hold the contact group you wish to edit.
3. From the displayed option menu, choose **Edit**.
4. Rename the group or manage group members.
5. Touch **DONE**.

Sending messages or emails to a contact group

1. On the home screen, touch  then  tab.
2. Touch and hold the contact group you wish to send a message or email to.
3. From the displayed option menu, choose **Send group message** or **Send group E-mail**.



Deleting a contact group

1. On the home screen, touch  then  tab.
2. Touch and hold the contact group you wish to delete.
3. From the displayed option menu, choose **Delete**.


 Deleting a contact group will not remove the contacts in the group from your phone.

Messaging

Sending a text message



1. On the home screen, touch .
2. In the list of message threads, touch .
3. Touch the recipient text box and enter the contact name or phone number.

 Touch  to select more contacts.


4. Write your message.
5. When you are done, touch .


Sending a multimedia message


Make sure your data service is on before you try to send multimedia messages.

1. On the home screen, touch .
2. In the list of message threads, touch .
3. Touch the recipient text box and enter the contact name or phone number.


 Touch  to select more contacts.


4. Write your message.
5. Touch , select the attachment type, and attach a file.

 To attach more than one file to the message, touch **Slideshow**.



6. When you are done, touch .

Replying to a message

1. On the home screen, touch .
2. In the list of message threads, touch a contact name or phone number to view the conversation thread.


3. Touch the text field to write your reply.
4. When you are done, touch .

Searching for a message


1. On the home screen, touch .
2. In the list of message threads, touch .
3. Enter the message or contact, or parts of them.
Your phone then displays matching results.



Managing messages


Copying a message

1. On the home screen, touch .
2. In the list of message threads, touch a contact name or phone number to view the conversation thread.
3. Touch and hold the message you wish to copy.
4. From the displayed option menu, choose **Copy**.
5. Touch and hold the area you wish to paste the message and touch **Paste**.

Forwarding a message


1. On the home screen, touch .
2. In the list of message threads, touch a contact name or phone number to view the conversation thread.
3. Touch and hold the message you wish to forward.
4. From the displayed option menu, choose **Forward**.
5. Touch the recipient text box and enter the contact name or phone number.

 Touch  to select more contacts.


6. When you are done, touch .

Locking a message



You can lock important messages to avoid deleting them by mistake. Deleting a thread does not remove the locked messages in it.

1. On the home screen, touch .
2. In the list of message threads, touch a contact name or phone number to view the conversation thread.
3. Touch and hold the message you wish to lock.
4. From the displayed option menu, choose **Lock**.



Deleting a message

1. On the home screen, touch .
2. In the list of message threads, touch a contact name or phone number to view the conversation thread.
3. Touch and hold the messages you wish to delete.
4. From the displayed option menu, touch **Delete**.
5. Touch **Delete**.

Deleting a thread

1. On the home screen, touch .
2. In the list of message threads, touch and hold the thread you wish to delete.
3. Touch .
4. From the displayed option menu, touch **Delete**.


Modifying message settings

1. On the home screen, touch .
2. In the list of message threads, touch .
3. Touch **Settings**.
4. Change the message tone and more.

Browser

Your phone's browser lets you surf the web and stay on the ball with up-to-date news and information. Staying connected has never been easier.



Browsing web pages

1. On the home screen, touch .
2. Enter a website address in the address box.
Your phone displays matching websites as you type.
3. Touch the website you wish to visit.



Managing bookmarks

Bookmarks let you keep track of your favorite websites.



Adding a bookmark

1. On the home screen, touch .
2. On the **Browser** screen, open the web page you wish to add as a bookmark.
3. Touch  > **Save to bookmarks**.
4. Name the bookmark or use the default name. Then, touch **OK**.

Accessing a bookmark

1. On the home screen, touch .
2. On the **Browser** screen, touch .
3. Touch **Bookmarks/History**.
4. Under **Bookmarks**, touch a bookmark.



Editing a bookmark

1. On the home screen, touch .
2. On the **Browser** screen, touch .

3. Touch **Bookmarks/History**.
4. Touch and hold the bookmark you wish to edit.
5. From the displayed option menu, choose **Edit bookmark**.
6. Edit the bookmark, for example, rename it.
7. Touch **OK**.



Setting the home page

Set your favorite web page as your browser's home page to make life a little easier.



1. On the home screen, touch .
2. On the **Browser** screen, touch .
3. Touch **Settings > General > Set homepage**.
4. From the displayed option menu, choose the web page you wish to set as the home page.

Clearing your browsing history

To better protect your privacy, clear your browsing history from time to time.

1. On the home screen, touch .
2. On the **Browser** screen, touch .
3. Touch **Settings > Privacy & security > Clear history**.
4. Touch **OK**.

Modifying browser settings


1. On the home screen, touch .
2. On the **Browser** screen, touch .
3. Touch **Settings**.
4. Customize your browser settings to better fit your needs.

Email

Don't want to miss important emails from your friends or clients during your business trip? Use your phone to read and reply to emails when you are on the go.

Adding a POP3 or IMAP email account

Certain parameters must be set when you add a POP3 or IMAP email account. For details, contact your email service provider.

1. On the home screen, touch .
2. Select an email account type.
3. Enter your **Email address** and **Password**, and touch **Next**.
4. Follow the onscreen instructions to configure the email settings.


When the email account is set up, the **Inbox** screen is displayed.

 To add more email accounts, touch  > **Settings** > **Add account**.

Adding an Exchange account


Exchange is an email system developed by Microsoft to implement communication inside an enterprise. Some email service providers also provide Exchange accounts for individuals and families.

Certain parameters must be set when you add an Exchange account. For details, contact your email service provider.




1. On the home screen, touch .
2. Touch **Others**.
3. Enter your **Email address**, and **Password**. Then, touch **Manual setup**.
4. Follow the onscreen instructions to configure the email settings.

When the Exchange account is set up, the **Inbox** screen is displayed.









Switching between email accounts

1. On the home screen, touch .
2. Touch the email address on the top to display your email account list.
3. Touch an email account you wish to use.

Sending emails



1. On the home screen, touch .
2. Open an email account.
3. On the **Inbox** screen, touch .
4. Enter the recipient and subject and write your message. Upload any attachments.
5. When you are done, touch  to send the email.

Checking emails



1. On the home screen, touch .
 2. Open an email account.
 3. On the **Inbox** screen, touch the email you want to read.
 4. When reading an email, you can:
 - Touch  to reply to it.
 - Touch  to delete it.
 - Touch  to mark it as unread.
 - Touch  to go back to the previous email.
 - Touch  to skip to the next email.
-  Mail retrieval may be slightly delayed, depending on the network condition.
- Touch  in the lower right corner to refresh the inbox.

Removing an email account

After you delete an email account, your phone will no longer send or receive emails using that account.

1. On the home screen, touch .
2. On the **Inbox** screen, touch .
3. Touch **Settings**.
4. Select the account you wish to delete.
5. Touch **Remove account**.
6. Touch **OK**.

Modifying email account settings

1. On the home screen, touch .
2. On the **Inbox** screen, touch .
3. Touch **Settings > General**.
4. Set the font size, display options, and other settings.

Multimedia

Camera

As time flies by, there must be some memories you wish to keep forever. Camera is a great tool for this. It supports a variety of capture modes, such as panoramic and smile.

Photo taking screen




1 Touch  to set flash mode.

2 Touch  to switch between the rear and front cameras.

Drag  to open the option menu, where you can:

- Touch  to select a capture mode.





3 • Touch  to select a filter.

- Touch  to set the white balance.



- Touch  to set the capture scenario, ISO, photo size, and more.

4 Drag the slider to zoom in or out.




5 Touch the thumbnail to view your photos.

- Touch  to take a photo.
- 6
- Touch and hold  to focus the camera. Release your finger to take a photo.
-
- 7
- Drag the slider to  to switch to photo mode.
 - Drag the slider to  to switch to video mode.

Taking a photo





1. On the home screen, touch .
2. Frame the scene you wish to capture.
3. Touch and hold  until the viewfinder frame turns green, indicating that the camera is now focused.
4. Release your finger to take the photo.


Shooting a video

1. On the home screen, touch .
2. Frame the scene you wish to record.
3. Touch  to start recording.
4. Touch  to stop recording.

Taking a panoramic photo

Are you still upset that your camera's view angle isn't wide enough to capture an incredible scene? Panorama mode is exactly the solution you need. You'll be able to piece together several photos and combine them into one seamless shot.





1. On the home screen, touch .
2. Drag  to open the settings menu. Then, touch  > **Panorama**.
3. Frame the scene you wish to capture.
4. Tap .
5. Move your phone slowly to capture the view along the direction indicated by the arrow and allow the phone to capture multiple photos.

6. Your phone stops shooting when it has taken enough photos for a panoramic photo. You can also touch  to stop shooting.

The camera automatically stitches the photos together to create one panoramic photograph.





Taking a beauty-mode photo

Expect great photo quality when you don't have any makeup? Enable beauty mode for a flawless portrait of yourself.

1. On the home screen, touch .
2. Drag  to open the settings menu. Then, touch  > **Beauty**.
3. Frame the scene you wish to capture.
The camera will identify a face and automatically focus on it.
4. Tap .

Using HDR


High dynamic range (HDR) imaging technology improves the details in the lightest and darkest areas of photos to present more life-like qualities.

1. On the home screen, touch .
2. Drag  to open the settings menu. Then, touch  > **HDR**.
3. Frame the scene you wish to capture.
4. Touch and hold  until the viewfinder frame turns green, indicating that the camera is now focused.
5. Release your finger to take the photo.


Gallery

Gallery is where you keep your treasure trove of visual memories.



Viewing photos or videos

1. On the home screen, touch .
2. Touch the album you wish to view.

3. Touch the photo or video to view it in full screen mode.






 When viewing a photo, pinch two fingers together to zoom out or spread them apart to zoom in.

Playing a slideshow



1. On the home screen, touch .
2. Touch an album.
3. Touch  to play photos in the album as a slideshow.
4. Touch the screen to stop the slideshow.


Editing a photo

You can remove red eye, crop a photo, or apply a number of effects to make your photos even more stunning.



1. On the home screen, touch .
2. Touch the photo you wish to edit.
3. Touch  > **Edit** and then you can:
 - Touch  to lighten or shadow the photo.
 - Touch **FX** to cross-process or posterize the photo.
 - Touch  to tint the photo or make it negative.
 - Touch  to rotate or crop the photo.
4. Touch **SAVE**.

Rotating a photo



1. On the home screen, touch .
2. Touch the photo you wish to rotate.
3. Touch  > **Rotate Left** or **Rotate Right**.

 You can also enable the auto-rotate screen function to have your phone automatically adjust the display orientation when you rotate your phone.

Cropping a photo



1. On the home screen, touch .
2. Touch the photo you wish to crop.
3. Touch  > **Crop** and then you can:
 - Drag the grid to reposition it.
 - Drag the frames of the grid to resize it.
4. Touch **SAVE**.

Deleting a photo



1. On the home screen, touch .
2. Touch the photo you wish to delete.
3. Touch .
4. Touch **OK**.

Sharing a photo or video

Want to share your best shots or an amusing trick your dog just did? Simply share the photos and videos using email, Bluetooth, and more.

1. On the home screen, touch .
2. Touch the photo or video you wish to share.
3. Touch .
4. Choose a sharing method and follow the onscreen instructions.

Setting a photo as the wallpaper

1. On the home screen, touch .
2. Choose the photo you wish to set as the wallpaper.
3. Touch  > **Set picture as** > **Wallpaper**.
4. Drag the frames of the grid to resize it.
5. Touch **SAVE**.

Music


In the mood for music? Your phone provides you with a supreme audio experience.

Adding songs

 
You can copy songs to your phone and immerse yourself with extraordinary audio experience anytime. Add songs to your phone by:

- Copying songs from your computer using USB.
- Downloading songs from the web.
- Copying songs from other devices using Bluetooth.
- Copying songs from other devices using Wi-Fi.


Listening to music

1. On the home screen, touch .
2. Touch the song you want to play.

Touch the song name at the bottom to access the music playback screen.

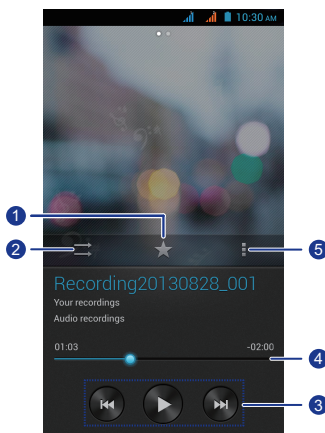

1 Touch  to add a song to the **My favorites** list.


2 Touch  to switch the playback mode.



- Touch  to play and touch  to pause.

- 3 •Touch  to jump to the previous song.

- Touch  to jump to the next song.


- 4 Drag the slider to control the playback.

- 5 Touch  to display the option menu from which you can perform additional operations.

 When a song is playing, touch  to exit the playback screen without stopping the song. To return to the music playback screen, open the notification panel and touch the playing song.

Creating a playlist


Creating playlists lets you be creative with your songs, and organize them into groups. Play the list that fits your mood the most.

1. On the home screen, touch .
2. Touch **Playlists > Create new playlist**.
3. Touch the text box to name the playlist.
4. Touch **Save**.


You can now add songs to the playlist.

5. In the displayed dialog box, touch **OK**.
6. Select the songs you wish to add.
7. Touch **ADD**.

Playing a playlist


1. On the home screen, touch .
2. Touch **Playlists**.
3. Touch and hold the playlist you wish to play.
4. From the displayed option menu, choose **Play**.

Deleting a playlist

1. On the home screen, touch .
2. Touch **Playlists**.
3. Touch and hold the playlist you wish to delete.
4. From the displayed option menu, choose **Delete**.


Sharing a song

You can share your favorite songs with your family and friends using email, Bluetooth, and more.

1. On the home screen, touch .
2. Choose a category.
3. Touch and hold the song you wish to share.
4. From the displayed option menu, choose **Share**.
5. Choose a sharing method and follow the onscreen instructions.


Setting a song as the ringtone

Want to hear your favorite song whenever you receive an incoming call? Just make it your ringtone.



1. On the home screen, touch .
2. Choose a category.
3. Touch and hold the song you wish to set as the ringtone.
4. From the displayed option menu, choose **Set as ringtone**.

FM radio

Want to listen to your favorite broadcast programs? Open **FM Radio** anytime anywhere you like.

-  Connect a headset to the phone. **FM Radio** utilizes the headset as an antenna.









Searching for stations

1. On the home screen, touch **Tools** > .
2. Touch  > **Search** to search for and save available stations.

Listening to FM radio


On the FM radio screen, you can perform the following operations:




-
- 1 Touch  to open the option menu.
-
- 2 Touch  to turn off the FM radio.
-
- 3 Touch  to access the channel list.
-
- 4 Touch  to add the current channel to the channel list.
-
- 5 Touch  or  to search for the previous or next channel.
-
- 6 Touch  or  to fine-tune the channel frequency at a precision of 0.1 MHz.
-

Internet connection

Enabling the data service


1. On the home screen, use two fingers to flick down from the status bar to open the notification panel shortcuts.
2. Touch  to enable your phone's data service.

 When you do not need to access the Internet, disable the data service to save battery power and reduce data usage.


Setting up a Wi-Fi connection

When you use your phone at home, you can connect to the Wi-Fi hotspot created from your router. Some public locations, such as airports and libraries, may also have Wi-Fi networks available for use.

Connecting to a Wi-Fi network


1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. Under **WIRELESS & NETWORKS**, touch **Wi-Fi**.
Your phone then scans for available Wi-Fi networks and displays them.
4. Choose the Wi-Fi network you wish to connect to and touch **Connect**.

For an encrypted Wi-Fi network, enter the password when prompted.


 If Wi-Fi and mobile data are both enabled, your phone connects to the Wi-Fi network preferentially. When Wi-Fi becomes unavailable, your phone automatically switches to the mobile data connection.

Connecting to a Wi-Fi network using the WPS



The Wi-Fi protected setup (WPS) lets you quickly connect to a Wi-Fi network. A safe connection is set up by pressing the WPS button or entering the PIN, instead of complex settings on the management software of Wi-Fi hotspots, such as wireless routers.

-  To use the WPS function and set up a Wi-Fi connection between your phone and a Wi-Fi hotspot, make sure that the Wi-Fi hotspot also supports the WPS.

Using the WPS button

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. On the Wi-Fi network list, touch .
4. On the Wi-Fi hotspot device, press the WPS button.



Using the WPS PIN

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. On the Wi-Fi network list, touch .
4. Touch **WPS Pin Entry**.
Your phone generates a PIN.
5. On the Wi-Fi hotspot device, enter the PIN.

Wi-Fi Direct

Wi-Fi Direct lets you easily connect two devices and transmit or share data between them.

Connecting two devices using Wi-Fi Direct

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch the Wi-Fi switch to turn on Wi-Fi.
3. On the Wi-Fi network list, touch .
4. Touch **Wi-Fi Direct**.
Your phone then scans for available devices and displays them.
5. Select a device.

Sending a file using a Wi-Fi network

1. Touch and hold the file you wish to send.
2. From the displayed option menu, choose **Share**.
3. Touch **Wi-Fi**.
4. Touch **Other devices**.

Your phone then scans for available devices and displays them.

5. Touch the device you wish to send the file to.



The specific steps vary with the file type.

Receiving a file using a Wi-Fi network

When a file comes in, your phone displays the **File transfer** dialog box. To receive the file, touch **Accept**.

By default, received files are saved to the **Wi-Fi** folder in **File Manager**.


Sharing your phone's mobile data connection

Want to access the Internet from multiple devices when you are on the go? Use USB tethering or set your phone as a Wi-Fi hotspot to share its data connection with other devices.

USB tethering

You can share your phone's data connection with a computer using a USB cable.

To use USB tethering, you may need to install your phone's driver on the computer or establish a network connection, depending on your computer's operating system. If your computer runs Windows 7, Windows Vista, or a latest Linux operating system (such as Ubuntu 10.4), you can use your phone's USB tethering function without configuring any settings on the computer. If your computer runs an earlier version of Windows or another operating system, it will identify your phone and install its driver automatically.


1. Use a USB cable to connect your phone to the computer.
2. On the home screen, touch .
3. Under **WIRELESS & NETWORKS**, touch **More...**

4. Touch **Tethering & portable hotspot**.
5. Select the **USB tethering** check box to share your phone's data connection.

 You cannot use your phone's USB tethering function when the phone is in USB storage mode.



Bluetooth tethering

You can share your phone's mobile data connection with other devices using Bluetooth.

1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **More...**
3. Touch **Tethering & portable hotspot**.
4. Select the **Bluetooth tethering** check box.
5. On the Bluetooth device you wish to use, search for and connect to your phone.

Wi-Fi hotspot

Your phone can also function as a Wi-Fi hotspot for other devices, sharing its mobile data connection.

1. On the home screen, touch .
 2. Under **WIRELESS & NETWORKS**, touch **More... > Tethering & portable hotspot**.
 3. Under **Tethering & portable hotspot**, turn on **Wi-Fi hotspot**.
 4. Touch **Wi-Fi hotspot > Set up Wi-Fi hotspot**.
 5. Name the Wi-Fi hotspot.
 6. Select an encryption mode.
-  It is recommended that you set the encryption mode to WPA2 PSK to better secure the Wi-Fi network.
7. Set the key to the Wi-Fi hotspot.

When other devices want to access your phone's network, this key must be entered.

 
- On the device you want to use, search for and connect to your phone's Wi-Fi network.

Controlling your data usage

Your phone's data usage control function lets you check and control your data usage.

Set a data usage cycle and a mobile data limit for this period and you will be notified when data usage reaches this limit. You can also query the data usage within a certain period of time or data traffic consumed by an application.

- On the home screen, touch .
- Under **WIRELESS & NETWORKS**, touch **Data usage**.

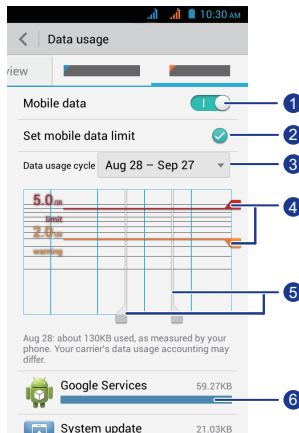

1 Turn the mobile data connection on or off. To configure data control and query data usage, the mobile data connection must be turned on.

2 Turn the mobile data usage limit on or off.

Set the data usage cycle.

3 Touch **Data usage cycle** then **Change cycle...** to set the data usage cycle.

Set the data usage limits. The yellow line indicates the warning limit, and the red line indicates the data usage limit.

4 Drag the red and yellow lines to adjust the values or touch the lines to set specific values.

When your data usage reaches the yellow line, you will receive a warning notification. When your data usage reaches the red line, your phone's mobile data connection will be disabled.

Time axis.

5 Drag the time axes to set a data usage cycle.

6 Display the data usage of each application.

On the **Data usage** screen, touch  to open an option menu, from which you can:

- Turn data roaming on or off.
- Prevent background mobile data traffic.
- Turn automatic data synchronization on or off.
- Select the **Show Wi-Fi usage** check box. The **Wi-Fi** tab will be displayed. Touch this tab to view Wi-Fi data usage.
- Touch **Mobile hotspots** and select the Wi-Fi networks that are mobile hotspots to prevent applications from accessing these networks in the background. If an application is downloading a large file using these networks, you will be notified.

Sharing data



Bluetooth

Your phone is Bluetooth-capable, allowing you to connect to other Bluetooth-enabled devices for wireless data transmission. When using Bluetooth, stay within 10 meters (33 feet) of other Bluetooth devices.

Turning on Bluetooth


1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **Bluetooth**.

When Bluetooth is turned on, your phone's name is displayed at the top of the **Bluetooth** screen. Touch the name to set your phone's visibility.


 To rename your phone, touch  > **Rename phone**. When you are done, touch **Rename** to save the changes.

Searching for and pairing with other Bluetooth devices

To exchange data with another Bluetooth device, enable Bluetooth on both devices and pair them with each other.


1. On the home screen, touch .
2. Under **WIRELESS & NETWORKS**, touch **Bluetooth**.
Your phone then scans for Bluetooth devices in range.
3. From the list of detected Bluetooth devices, touch a device and follow the onscreen instructions to pair with it.

To disconnect from a paired Bluetooth device, touch  > **Unpair**.

 If a Bluetooth connection cannot be set up between your phone and another device, they may be incompatible, in which case you will need to pair with a different device.

Transferring files using Bluetooth

Bluetooth enables you to conveniently send photos, videos, and other files to your family and friends. You can share files with Bluetooth-enabled devices without an Internet connection.

1. On the home screen, touch .
2. Touch and hold the file you wish to send.
3. From the displayed option menu, choose **Share > Bluetooth**.
4. From the detected Bluetooth device list, select a device.

Receiving files using Bluetooth


1. When your phone receives a file transfer request, open the notification panel.
2. Touch **Incoming file request** to display a file reception dialog box.
3. Touch **Accept** to start receiving the file.


When the file is received, you will receive a notification of a successful transfer. Open the notification panel to read the notification. By default, received files are saved to the **bluetooth** folder in **File Manager**.

DLNA

The Digital Living Network Alliance (DLNA) aims to implement intercommunication between computers and other electronic products through wired and wireless networks, providing users with seamless digital media services. DLNA enables users on the same Wi-Fi network to share multimedia files easily. Using DLNA, you can:

- Share multimedia files with your friends.
- Access multimedia files on other DLNA devices.
- Play multimedia files on other devices and control the playback.

 Before you use DLNA, make sure that your phone and other DLNA devices have connected to the same Wi-Fi network and DLNA is enabled on all devices.

On the home screen, touch **Tools** >  to display the DLNA screen. You can then share photos, videos, and songs with other DLNA devices, as well as view and download the multimedia files shared by other DLNA devices.

Connecting your phone to a computer

When you connect your phone to a computer using a USB cable, your phone will display a notification prompting you to select a connection type.

MTP mode

The Media Transfer Protocol (MTP) is used to transfer media files, such as pictures, songs, and videos, between your phone and a computer. The MTP mode is only compatible with Windows Media Player 10 or later.

1. Use a USB cable to connect your phone to the computer.
2. On the **USB computer connection** screen, choose **Media device (MTP)**.
The phone driver is then automatically installed on the computer.
3. After the driver is installed, follow the onscreen instructions on the computer to view or transfer files.

PTP mode

The Picture Transfer Protocol (PTP) is another method to transfer pictures and videos to your computer.

1. Use a USB cable to connect your phone to the computer.
2. On the **USB computer connection** screen, choose **Camera (PTP)**.
The phone driver is then automatically installed on the computer.
3. After the driver is installed, follow the onscreen instructions on the computer to view or transfer files.

HiSuite mode


HiSuite mode lets you back up your phone's data to your computer and, if necessary, restore the stored data to your phone. You can also use HiSuite to manage your phone's applications and files, and synchronize data, such as contacts, messages, pictures, songs, videos, and calendar, between your phone and the computer.

1. Use a USB cable to connect your phone to the computer.
2. On the **USB computer connection** screen, choose **HiSuite**.
3. Manage your phone's data on the displayed HiSuite window.

Mass storage mode

In mass storage mode, you can use your phone as a USB mass storage device and transfer files between your phone and a computer.

1. Use a USB cable to connect your phone to the computer.
2. On the **USB computer connection** screen, choose **USB storage**.
The phone driver is then automatically installed on the computer.
3. The computer will identify your phone as a USB mass storage device. You can then transfer files between your phone and the computer.



 After file transmission, safely remove the device from the computer and disconnect it from the USB cable to prevent your data from being lost or corrupted.

File Manager

File Manager helps you manage files and applications in your phone's internal storage and microSD card. You'll be able to view, create, edit, delete, move, archive, compress, and decompress files.




Creating a folder

You can create folders to better manage the files and applications stored in your phone's internal storage or microSD card.


1. On the home screen, touch .
2. Touch **Internal** or **SD card**.
3. Touch  > **New folder**.
4. In the displayed dialog box, name the new folder.
5. Touch **Save**.

Searching for a file

Too many files stressing you out? The search function helps you find what you need in no time.

1. On the home screen, touch .
2. Touch **Internal** or **SD card**.
3. Touch  > **Search**.
4. Enter part or all of the file name.
5. Touch  in the lower right corner of the keyboard.


Copying or cutting a file

1. On the home screen, touch .
2. Touch and hold the file you wish to copy or cut.
3. From the displayed option menu, choose **Copy** or **Cut**.

4. Select where you wish to paste the file.
5. Touch **Paste**.


Compressing or decompressing files

You can compress files into .zip files to save space or decompress .zip and .rar files.


1. On the home screen, touch .
2. Touch and hold the file or folder you wish to compress.
3. From the displayed option menu, choose **Compress**.
4. Choose the save path of the compressed file and name it.
5. Touch **OK**.

To decompress a file, touch and hold it and choose **Extract** from the displayed option menu.


Renaming a file

1. On the home screen, touch .
2. Touch and hold the file you wish to rename.
3. From the displayed option menu, choose **Rename**.
4. In the displayed dialog box, enter a new name for the file.
5. When you are done, touch **OK**.

Deleting a file



1. On the home screen, touch .
2. Touch and hold the file you wish to delete.
3. From the displayed option menu, choose **Delete**.
4. Touch **OK**.

Creating a shortcut for a file or folder

1. On the home screen, touch .
2. Touch and hold the file or folder you wish to create a shortcut for.
3. From the displayed option menu, choose **Desktop shortcuts**.

Checking the memory status


Before you save large files to your phone's internal storage or microSD card, make sure there is enough space first.

1. On the home screen, touch .
2. Touch  > **Storage**.
3. View the total and available spaces of your phone's internal storage or microSD card.

Managing applications


Viewing applications

You can view detailed information about all applications installed on your phone.

1. On the home screen, touch  .
2. Under **DEVICE**, touch **Apps**.
3. Flick to **ALL**.
4. Select the application you wish to view.

Uninstalling an application


You can remove unwanted applications to increase your phone's available storage.

1. On the home screen, touch  .
2. Under **DEVICE**, touch **Apps**.
3. Flick to **ALL**.
4. Select the application you wish to uninstall.
5. Touch **Uninstall** > **OK**.

 Some pre-installed applications cannot be uninstalled.

Clearing the application cache

You can clear the application cache to free up the phone memory.

1. On the home screen, touch  .
2. Under **DEVICE**, touch **Apps**.
3. Flick to **ALL**.
4. Touch an app, and then touch **Clear cache**.



Basic utilities

Your phone comes with a variety of useful tools, such as **Calendar**, **Clock**, and **Calculator**, helping you keep yourself organized.


Calendar

Calendar is your personal assistant that helps you manage, arrange, and keep track of all important events.

Creating an event

1. On the home screen, touch .
2. Touch .
3. Enter event details, such as the event name, time, and location.
4. Touch **SAVE**.



Viewing events

1. On the home screen, touch .
2. Touch the buttons on the top of the screen to switch between day, week, month, year, and agenda views.

The agenda view displays all your calendar events, which lets you know your schedule at a glance.




Sharing an event

You can share an event with your family and friends in a number ways, such as Bluetooth.



1. On the home screen, touch .
2. Open an event you wish to share.
3. Touch  > **Send event**.
4. Select a sharing method and follow the onscreen instructions.

Synchronizing and viewing events

Calendar events in your accounts (such as an email account) can be synchronized to and viewed on the **Calendar** application.

1. On the home screen, touch .
2. Touch  > **Calendars to display**.
3. Select the account whose calendar you wish to display.
4. Touch  > **Calendars to sync**.
5. Select the account from which you wish to synchronize calendar events.
6. Touch **OK**.



Modifying calendar settings

1. On the home screen, touch .
2. Touch  > **Settings**.
3. Follow the onscreen instructions to configure the calendar settings.

Clock

Clock lets you view the time around the world, use stopwatch or timer to keep track of time, or set alarms to wake you up in the morning.

Adding an alarm

1. On the home screen, touch .
2. From the alarm list, touch .
3. Set the alarm time, ringtone, how often it repeats, and more.
4. Touch **DONE**.



 Enabled alarms will go off even when your phone is powered off.

Deleting an alarm

1. On the home screen, touch .


2. From the alarm list, touch and hold the alarm you wish to delete.
3. From the displayed option menu, choose **Delete alarm**.
4. Touch **OK**.

Configuring alarm settings

1. On the home screen, touch .
2. From the alarm list, touch  > **Settings**.
3. On the alarm settings screen, set the ringing mode, snooze duration, and more.




Calculator



Calculator lets you make simple or complex calculations.

1. On the home screen, touch **Tools** > .
2. On the **Calculator** screen, flick left or right to switch between the advanced and basic panels.

Notes


Notes is a handy application that lets you record quick thoughts or important information.

1. On the home screen, touch **Tools** > .
2. Touch .
3. Enter what you wish to record.
4. When you are done, touch .

 On the **Notes** screen, you can touch  > **Delete notes** and select one or more notes to delete them at a time.




Weather

Weather provides you with the latest weather information for any city around the world. You can share weather information with your family and friends.

 Before you use **Weather**, turn on your phone's GPS and data service.

Adding a city




You can add cities you like to **Weather** and check their weather information.

1. On the home screen, touch **Tools** >  .
2. Touch  >  .




 Apart from your current city, you can add up to nine cities.

3. Enter a city name.
Matching cities are then displayed.
4. Select the city you wish to add.


Setting the default city

1. On the home screen, touch **Tools** >  .
2. Touch  >  .
3. Touch the city you wish to set as the default city.




Deleting a city

1. On the home screen, touch **Tools** >  .
2. Touch  >  .
3. Select the city you wish to delete, and touch **DELETE**.

Updating weather





1. On the home screen, touch **Tools** >  .
2. Flick left or right to find the city whose weather you wish to update.

3. Touch  to update the weather.

 You can also set **Weather** to automatic update mode. Touch  >  , select **Auto update**, and set **Update interval**. Your phone will then update the weather at the interval you set.

Sharing weather information


Your phone lets you send weather information as a text message to remind your family and friends of weather changes.

1. On the home screen, touch **Tools** >  .
2. Flick left or right to find the city whose weather you wish to share.
3. Touch  to display the messaging screen.
4. You can then:
 - Enter a phone number.
 - Touch  to select a contact.
5. Touch  to send the weather information to the recipient.


Accounts and sync

You can synchronize data on your phone, such as contacts, emails, and events, to and from the Internet.



Adding an account

1. On the home screen, touch .
2. Under **ACCOUNTS**, touch **Add account**.
3. Select an account type.
4. Follow the onscreen instructions and enter your account information.
5. Configure the account and set the type of data you wish to synchronize.


When an account is set up, it will be shown in the **ACCOUNTS** section.



-  The types of data you can synchronize to your phone vary with account type.

Deleting an account

1. On the home screen, touch .
2. Under **ACCOUNTS**, select an account type.
3. Select the account you wish to delete.
4. Touch  > **Remove account**.
5. In the displayed dialog box, touch **Remove account**.

Turning on data synchronization

1. On the home screen, touch .
2. Under **ACCOUNTS**, select an account type.
3. Select the account you wish to synchronize from.
4. Touch the data you wish to synchronize.

-  You can touch  > **Sync now** to have the data synchronization run in the background.

Settings

Turning on or off airplane mode

Your phone's signal reception or transmission may interfere with an airplane's flight system. Power off your phone or switch to airplane mode when you are on a flight.


In airplane mode, your phone's wireless features are disabled, but you can still listen to music or play games.

Use either of the following methods to turn on or off **Airplane mode**:

- Press and hold the power button. From the displayed option menu, choose **Airplane mode**.
- On the home screen, touch  . Under **WIRELESS & NETWORKS**, touch **More... > Airplane mode**.


When airplane mode is on,  appears in the status bar.

Display settings


1. On the home screen, touch  .
2. Under **DEVICE**, touch **Display**.
3. On the settings screen, you can:
 - Touch **Wallpaper** to set the lock screen and home screen wallpapers.
 - Touch **Auto-rotate screen** to turn the screen auto-rotate function on or off. If this function is turned on, your screen's orientation will automatically change with the way you hold your phone when you perform certain operations, such as browsing a web page, viewing a picture, or writing a message.
 - Touch **Brightness** to set the screen brightness. To manually adjust the brightness, clear the **Automatic brightness** check box.
 - Touch **Font size** to change the display font size.
 - Touch **Screen timeout** to set a screen timeout period. If idle for the specified period, your phone automatically locks its screen to save battery power.

Setting the date and time

By default, your phone relies on the network-based date and time. You can also manually set the date and time.


1. On the home screen, touch .
2. Under **SYSTEM**, touch **Date & time**.
3. From the settings screen, you can:
 - Clear the **Automatic date & time** check box to stop your phone from automatically obtaining the network date and time.
 - Clear the **Automatic time zone** check box to stop your phone from automatically obtaining the network time zone.
 - Touch **Set date** and flick up and down to set your phone's date.
 - Touch **Set time** and flick up and down to set your phone's time.
 - Touch **Select time zone** and select the time zone from the list. Scroll up or down to view more time zones.
 - Select or clear the **Use 24-hour format** check box to switch between the 12-hour and 24-hour formats.
 - Touch **Choose date format** to select how you wish the date to be displayed.

Changing the system language

1. On the home screen, touch .
2. Under **PERSONAL**, touch **Language & input**.
3. Touch **Language**.
4. From the list, choose a language.

Modifying location service settings

You can modify your phone's location service settings for more convenient positioning and navigation services.

1. On the home screen, touch .
2. Under **PERSONAL**, touch **Location services**.


3. From the settings screen, you can:


- Touch **Access to my location** to enable your phone to use your location information.
- Touch **GPS satellites** to have your phone obtain your location information from GPS satellites.
- Touch **Wi-Fi & mobile network location** to have your phone obtain your location information from a Wi-Fi network or mobile data connection.

Setting the PIN of your SIM card

The personal identification number (PIN) is delivered with your SIM card. If you enable the PIN protection function for your SIM card, you will need to enter the PIN each time you power your phone on.

Before you perform the following operations, make sure that you have obtained your SIM card's PIN from your service provider.


1. On the home screen, touch .
2. Under **PERSONAL**, touch **Security**.
3. Touch **Set up SIM card lock**.
4. Select the **Lock SIM card** check box.
5. Enter the PIN.
6. Touch **OK**.

 If you incorrectly enter the PIN a specified number of consecutive times, the PIN is blocked and the phone prompts you to enter the PIN unblocking key (PUK). If you incorrectly enter the PUK a specified number of consecutive times, the SIM card will be disabled permanently. For details about the maximum retry attempts for the PIN and PUK, contact your service provider.

Restoring factory settings

Restoring your phone to its factory settings erases all your personal data from the phone, including your email accounts, system and application settings, and installed applications.

 Back up important data on your phone before you restore factory settings.

1. On the home screen, touch .


2. Under **PERSONAL**, touch **Backup & reset**.


3. Tap **Factory data reset > Reset phone**.

The phone will restore its factory settings and restart.

Online update


Once in a while, new updates for your phone will be available online. You will receive a notification when updates are available. Before updating, make sure that your phone has enough storage space for the update package.

To update manually, on the home screen, touch  > **About phone** > **System Update** to check for updates and follow the onscreen instructions to update your phone online.

 All your personal data may be erased during a system update. It is recommended that you back up important data before updating your phone.

Accessibility









You can turn on or off preset or installed accessibility features.

1. On the home screen, touch .
2. Under **SYSTEM**, touch **Accessibility**.
3. Select the features you wish to turn on or off.

FAQs

For more information, please visit <http://consumer.huawei.com/en/support/faqs/index.htm>.

What are some ways I can save battery power?

- When you do not need Internet access, open the notification panel and touch  then  to turn off your mobile data connection.
- When you do not need wireless data services, such as GPS, Bluetooth, or Wi-Fi, open the notification panel and touch  then , , or  to turn off these services.
- Touch  > **Display** (under **DEVICE**) to reduce the screen brightness and screen timeout period. Press  to turn off the screen when you are not using your phone.
- Close applications that you are not using.
- Lower the volume.

How do I free up my phone storage?

- Move files and email attachments to a microSD card.
- Open the **Browser** application and delete locally cached content.
- Uninstall applications you no longer use.
- Restore your phone to its factory settings.

How do I take a screenshot?


Simultaneously press the power and volume down buttons to take a screenshot. Screenshots are saved to **Gallery** > **Screenshots**.

How do I use a microSD card to import contacts from another phone?

Your phone supports contact files in .vcf format only.



1. Save the contacts you want to import as a .vcf file and save the file to a microSD card.
2. Insert the microSD card into your phone, and touch **File Manager** then **SD card** to find the .vcf file.

3. Touch the .vcf file. Your phone then displays a message asking whether you want to import the contacts.
4. Touch **OK** to import the contacts.

 Compatibility problems may occur with .vcf files created by other phones, and certain contact information may be lost during import.

How do I use HiSuite to import contacts from another phone?


Your phone supports contact files in .vcf format only.

1. Save the .vcf file you want to import to your computer.
2. On the home screen of your phone, touch .
3. Under **SYSTEM**, touch **Developer options**.
4. Select the **USB debugging** check box.
5. Use a USB cable to connect your phone to your computer.
6. On the home screen of your phone, flick down from the status bar to open the notification panel.
7. Touch **Connected as USB storage** and select the **HiSuite** check box.
8. On the computer, open the HiSuite disk and double-click the installation program to install HiSuite.
9. After installation, open HiSuite and choose **People > DEVICE >**  and follow the instructions to select the .vcf file you want to import to your phone.
10. Disconnect your phone from your computer after the contacts are imported.


How do I set a song as my ringtone?

In **Music**, touch and hold the song you want to set as the ringtone. From the displayed option menu, choose **Set as ringtone**.

How do I disable the auto-rotate screen function?

On the home screen, touch . Under **DEVICE**, touch **Display**. Then, clear the **Auto-rotate screen** check box.

How do I set a screen unlock pattern?

1. On the home screen, touch .
2. Under **PERSONAL**, touch **Security**.

3. Touch **Screen lock > Pattern**, and follow the onscreen instructions to set a screen unlock pattern.

How do I switch the text input method?

When you write text, open the notification panel and touch **Select input method** to select an input method.

How do I stop the song playing in the background?

Open the notification panel, touch the playing song to display the music playback screen, and stop the playback.

How do I return to the call screen?

To return from another screen during a call, open the notification panel and touch the ongoing call.

How do I move an application icon on the home screen?

Touch and hold the application icon you want to move and drag it to a new location.

How do I hide the onscreen keyboard?

Touch  to hide the keyboard.

How do I forward a message?

Touch and hold the message you want to forward, and choose **Forward** from the displayed option menu.

How do I restart my phone?

Press and hold  , and touch **Restart > OK** to restart your phone.

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions

 ,  , and **HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/en/privacy-policy/index.htm>.



Index

A

Accessibility	76
Accessing a bookmark	39
Accounts and sync	72
Adding a bookmark	39
Adding a city	70
Adding a contact to your favorites	33
Adding a home screen	22
Adding a POP3 or IMAP email account	41
Adding a profile	23
Adding a widget to the home screen	20
Adding a widget unit	21
Adding an account	72
Adding an alarm	68
Adding an Exchange account	41
Adding songs	49
Adjusting the screen brightness	26
Android input method	17
Answering a call	27
Answering a third-party call	29
Auto-rotate screen	14

B

Battery indicator	7
Bluetooth tethering	56
Browsing web pages	39

C

Calculator	69
Calendar	67
Changing message tone and other tones	24
Changing the font size	24
Changing the profile	23
Changing the system language	74
Changing the theme	19
Changing the wallpaper	19
Charging the battery	6
Checking the memory status	65
Checking your emails	42
Clearing the application cache	66
Clearing your browsing history	40
Compressing files	64
Configuring alarm settings	69

Configuring calendar settings	68
Connecting to a Wi-Fi network	53
Connecting to a Wi-Fi network using the WPS button	54
Connecting to a Wi-Fi network using the WPS PIN	54
Connecting two devices using Wi-Fi Direct	54
Connecting your phone to a computer	61
Controlling your data usage	57
Copying a file	63
Copying a message	37
Copyright	80
Creating a contact	32
Creating a contact group	34
Creating a folder	63
Creating a folder on the home screen	20
Creating a playlist	50
Creating a shortcut for a file or folder	65
Creating an event	67
Cropping a photo	48
Customizing a theme	19
Cutting a file	63

D

Decompressing a file	64
Deleting a city	70
Deleting a contact	33
Deleting a contact group	35
Deleting a file	64
Deleting a home screen	22
Deleting a message	38
Deleting a photo	48
Deleting a playlist	51
Deleting a profile	23
Deleting a thread	38
Deleting an account	72
Deleting an alarm	68
Deleting an application icon or widget	20
Disclaimer of warranties	81
Display settings	73
DLNA	60

E

Editing a bookmark	39
Editing a contact group	34
Editing a photo	47
Editing text	18
Enabling call forwarding	30
Enabling call waiting	31

Enabling or disabling a SIM/USIM card	8
Enabling the data service	53
Export regulations	82
Exporting contacts	33
F	
Face unlock	24
FM radio	51
Forwarding a message	37
Freeing up additional phone storage	77
G	
Gestures	9
Getting to know your home screen	11
H	
HiSuite	62
Huawei input method	16
I	
Import regulations	82
Important information about the battery	7
Importing contacts from a storage device	32
Importing or exporting contacts	32
Inserting a microSD card	5
Inserting a SIM/USIM card	4
Installing the battery	6
L	
Listening to FM radio	52
Listening to music	49
Locking a message	38
Locking the screen	10
M	
Making a conference call	29
Making emergency calls	30
Mass storage mode	62
Modifying browser settings	40
Modifying email account settings	43
Modifying location service settings	74
Modifying message settings	38
Moving a widget unit	22
MTP mode	61
N	
Notes	69
Notice	80

O

Online update	76
---------------------	----

P

Pairing with another Bluetooth device	59
Permissions	80
Phone appearance and buttons	4
Photo taking screen	44
Playing a playlist	50
Playing a slideshow	47
Powering off	8
Powering on	8
Privacy policy	82
PTP mode	61

R

Re-arranging home screens	22
Receiving a file using a Wi-Fi network	55
Receiving files using Bluetooth	60
Rejecting a call	27
Rejecting a call using a text message	28
Removing a microSD card	5
Removing a widget unit	21
Removing an email account	43
Removing an item from a folder	21
Renaming a file	64
Replying to a message	36
Restoring to factory settings	75
Rotating a photo	47

S

Safety precautions	2
Searching for a file	63
Searching for a message	37
Searching for stations	52
Selecting an input method	15
Sending a file using a Wi-Fi network	55
Sending a multimedia message	36
Sending a text message	36
Sending emails	42
Sending messages or emails to a contact group	35
Setting a photo as the wallpaper	48
Setting a song as the ringtone	51
Setting the date and time	74
Setting the default city	70
Setting the default SIM/USIM card	8
Setting the home page	40

Setting the home screen transition effect	19
Setting the PIN of your SIM card	75
Setting the ringtone	24
Setting up your voicemail	31
Sharing a photo or video	48
Sharing a song	51
Sharing an event	67
Sharing contacts	34
Sharing weather information	71
Shooting a video	45
Smart dialing	27
Starting applications and switching between them	15
Status icons	12
Switching between email accounts	42
Switching between home screens	13
Synchronizing and viewing calendar events	68

T

Taking a beauty-mode photo	46
Taking a panoramic photo	45
Taking a photo	45
Taking a screenshot	13
Third-party software statement	81
Trademarks	80
Transferring files using Bluetooth	60
Turning on Bluetooth	59
Turning on data synchronization	72
Turning on or off airplane mode	73

U


Uninstalling an application	66
Unlocking the screen	10
Unlocking the screen with a password	25
Unlocking the screen with a pattern	25
Updating weather	70
USB tethering	55
Using Bluetooth	59
Using dual-microphone noise reduction	30
Using HDR	46
Using the notification panel	14

V

Viewing applications	66
Viewing photos or videos	46
Viewing recently used applications	15
Viewing the call log	28

W

Weather	70
What you can do during a call	28
Wi-Fi hotspot	56



Please visit www.huaweidevice.com/worldwide/support/hotline for recently updated hotline and email address in your country or region.

All the pictures in this guide are for your reference only. Your phone's actual display features may be different to those described here, depending on its software version.