


Quick Setup Guide

DC32E-M DC40E-M DC48E-M DC55E-M
DC40E-H DC48E-H

-The colour and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.
-Download the user manual from the website for further details.
<http://www.samsung.com/displaysolutions>

 


The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.





Checking the Components

Contact the vendor where you purchased the product if any components are missing.
The pictures may look different from the actual components.

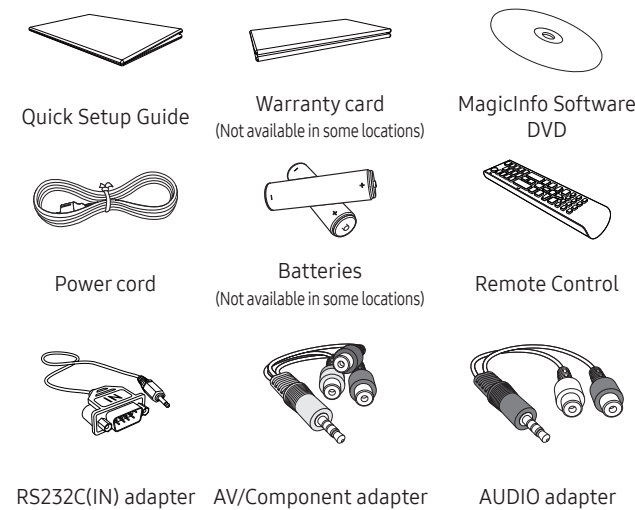


Control Panel

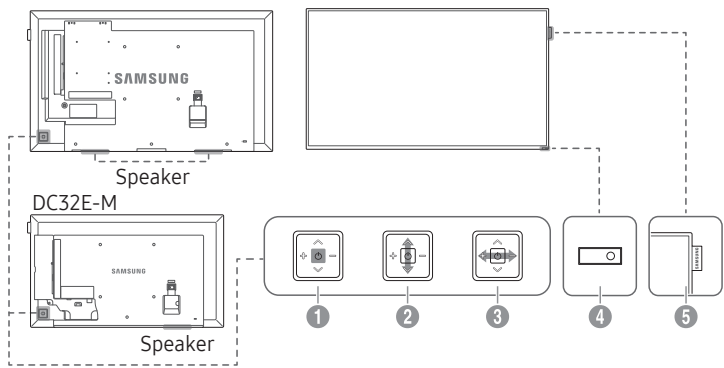 

 - 1 Power on the product.
If you press the  button when the product is turned on, the control menu will be displayed.
- To exit the OSD menu, press and hold the panel key for at least one second.
- 2 Move to the upper or lower menu. You can also adjust the value of an option.
- 3 Move to the left or right menu.
- You can adjust the volume by moving the panel key left or right when the control menu is not displayed.
- 4 Remote sensor
Press a button on the remote control pointing at the sensor on the front of the product to perform the corresponding function.
- 5 Spacer logo (Optional)
Do not pull on the spacer logo using force. The logo may tear or break off.

 Reverse Side



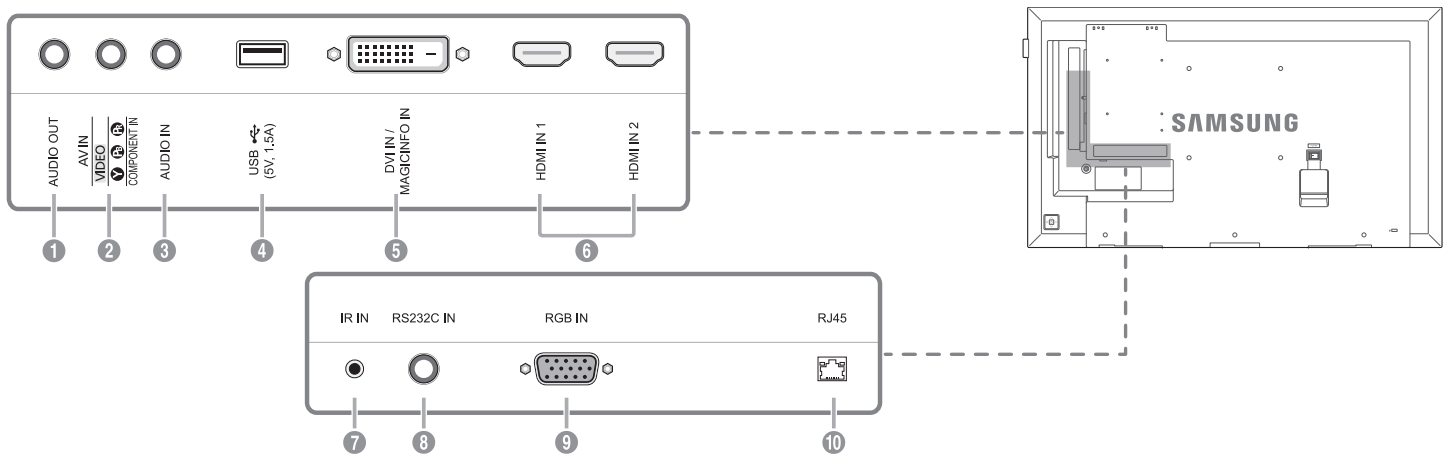


- 1 Connects to the audio of a source device.
- 2 Connects to a source device using the AV/Component adapter.
- 3 Receives sound from a PC via an audio cable.
- 4 Connect to a USB memory device.
- 5 DVI IN: Connects to a source device using a DVI cable or HDMI-DVI cable.
MAGICINFO IN: Use the (dedicated) DP-DVI cable when connecting a network box (sold separately).
- 6 Connects to a source device using an HDMI cable.
- 7 Supplies power to the external sensor board or receives the light sensor signal.
- 8 Connects to MDC using an RS232C adapter.
- 9 Connects to a source device using a D-SUB cable.
- 10 Connects to MDC using a LAN cable.


Troubleshooting Guide

Issues	Solutions	Issues	Solutions
The screen keeps switching on and off.	Check the cable connection between the product and PC, and ensure the connection is secure.	The screen is too bright. The screen is too dark.	Adjust Brightness and Contrast .
No Signal is displayed on the screen.	Check that the product is connected correctly with a cable. Check that the device connected to the product is powered on.	Screen colour is inconsistent.	Go to Picture and adjust the Colour Space settings.
Not Optimum Mode is displayed.	This message is displayed when a signal from the graphics card exceeds the product's maximum resolution and frequency.	White does not really look white.	Go to Picture and adjust the White Balance settings.
	Refer to the Standard Signal Mode Table and set the maximum resolution and frequency according to the product specifications.	There is no sound.	Check the connection of the audio cable or adjust the volume. Check the volume.
The images on the screen look distorted.	Check the cable connection to the product.	The volume is too low.	Adjust the volume. If the volume is still low after turning it up to the maximum level, adjust the volume on your PC sound card or software programme.
The screen is not clear. The screen is blurry.	Adjust Coarse and Fine . Remove any accessories (video extension cable, etc) and try again. Set the resolution and frequency to the recommended level.	The remote control does not work.	Make sure that the batteries are correctly in place (+/-). Check if the batteries are flat. Check for power failure. Make sure that the power cord is connected. Check for any special lighting or neon signs switched on in the vicinity.
The screen appears unstable and shaky.	Check that the resolution and frequency of the PC and graphics card are set within a range compatible with the product.		
There are shadows or ghost images left on the screen.	Then, change the screen settings if required by referring to the Additional Information on the product menu and the Standard Signal Mode Table.		

   
Connecting to a PC

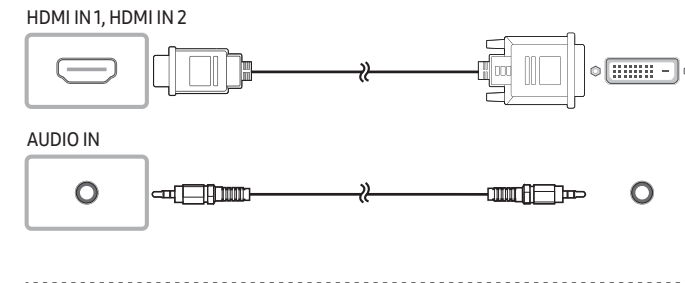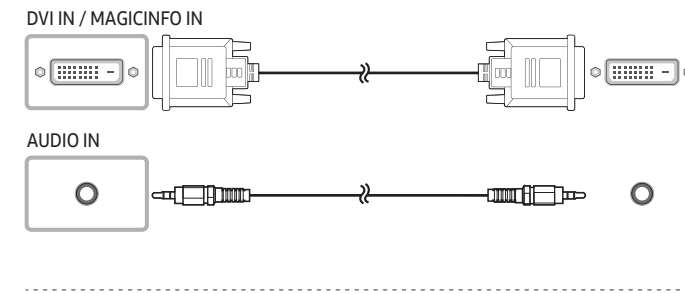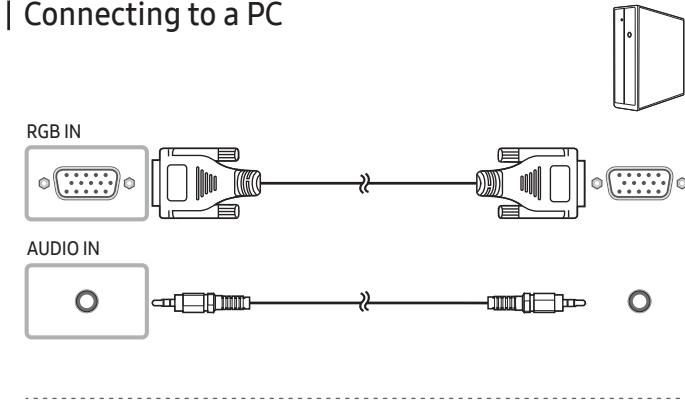

Connecting to an Audio System




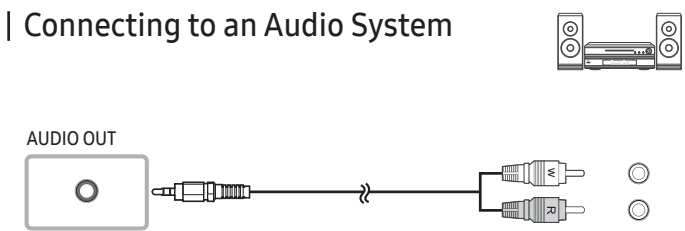 


Connecting the LAN Cable

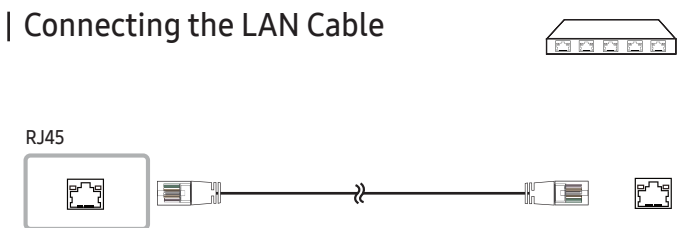 


Use Cat7(*STP Type) cable for the connection.
*Shielded Twist Pair

    Connecting to a Video Device

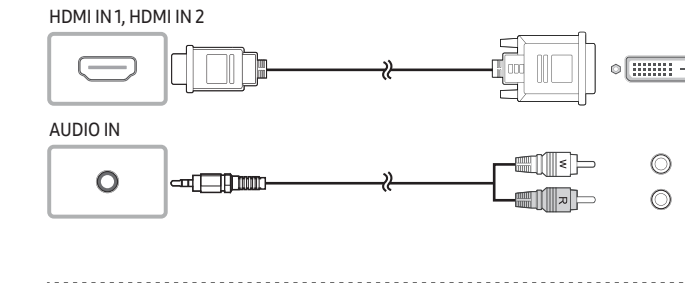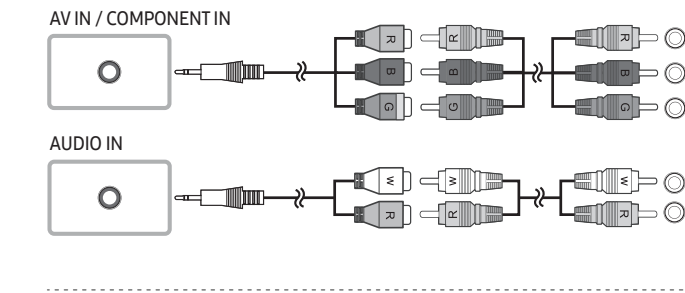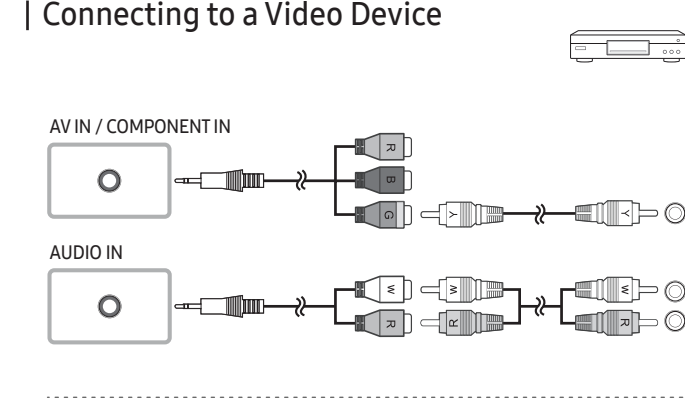

Connecting to MDC

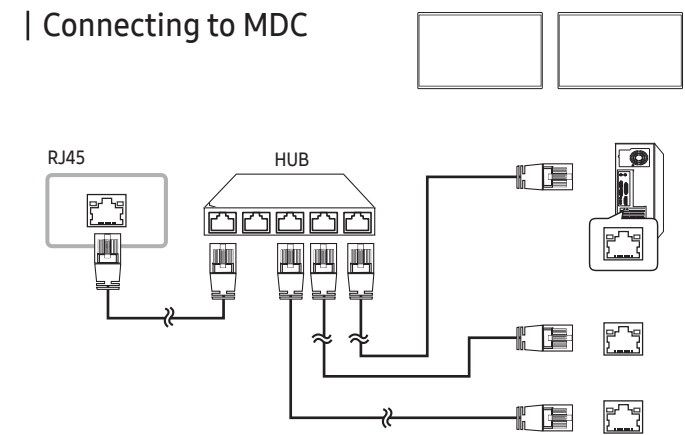 

For details on how to use the MDC programme, refer to Help after installing the programme.
The MDC programme is available on the website.

Specifications

Model Name		DC32E-M	DC40E-M / DC40E-H
Panel	Size	80.1 cm	101.6 cm
	Display area	698.4 mm (H) x 392.85 mm (V)	885.6 mm (H) x 498.15 mm (V)
Audio Output		10 W	10 W + 10 W
Model Name		DC48E-M / DC48E-H	DC55E-M
Panel	Size	120.9 cm	138.7 cm
	Display area	1054.08 mm (H) x 592.92 mm (V)	1209.6 mm (H) x 680.4 mm (V)
Audio Output		10 W + 10 W	10 W + 10 W
Power Supply		This product uses 100 to 240V. Refer to the label at the back of the product as the standard voltage can vary in different countries.	
Environmental considerations	Operating	Temperature : 0 °C – 40 °C (32 °F – 104 °F) Humidity : 10% – 80%, non-condensing	
	Storage	Temperature : -20 °C – 45 °C (-4 °F – 113 °F) Humidity : 5% – 95%, non-condensing	

- This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
- For detailed device specifications, visit the Samsung Electronics website.
- The PVC Free (except for accessory cables) logo is the self-declared trademark of Samsung.
- * Accessory cables: signal cables and power cords



Warning! Important Safety Instructions

(Please read the appropriate section that corresponds to the marking on your Samsung product before attempting to install the product.)

CAUTION	
RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.	

	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

» If your equipment uses an AC adapter:

- Only use the AC adapter with your product by Samsung.
- Do not use the power cord with other products.
- » Do not install this equipment in a confined space such as a case or similar.
- » The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. The slots and openings must never be blocked or covered.
- » The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.



This product is RoHS compliant.
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
For more information on safe disposal and recycling visit our website www.samsung.com/in or contact our Helpline numbers - 18002668282, 180030008282.

- » Do not place a water containing vessel (vases etc.) on this apparatus, as this can result in a risk of fire or electric shock. (Apparatus shall not be exposed to dripping or splashing)
- » The apparatus must be connected to an earthed MAINS socket-outlet (Class I Equipment only). Or Use only a properly grounded plug and receptacle (Class I Equipment only).
- » To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- » As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by POWER.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Tel. 1800 3000 8282 - Toll Free

1800 266 8282 - Toll Free

www.samsung.com/in/support