

Getting started with the STEVAL-STLKT01V1 SensorTile integrated development platform

Introduction

The STEVAL-STLKT01V1 development kit for the STEVAL-STLCS01V1 SensorTile board is a highly integrated development platform with a broad range of functions aimed at improving system design cycles and accelerating the delivery of results.

The tiny SensorTile core system board (13.5 x 13.5 mm) embeds high-accuracy and very-low-power inertial sensors, a barometric pressure sensor and a digital MEMS top-port microphone. The onboard 80-MHz MCU features a dedicated hardware microphone interface and ultra-low-power support. The wireless network processor provides Bluetooth Smart connectivity and the integrated balun maximizes RF performance for minimum size and design effort.

The kit includes a cradle expansion board for software and system architecture design support and a compact cradle host featuring a battery charger and SD card interface for on-field testing and data acquisition; both boards come complete with SWD programming interfaces.

It contains FCC ID: S9NSTILE01 and module IC 8976C-STILE01 certified with PMN: STEVAL-STLKT01V1; HVIN: STEVAL-STLCS01V1; HMN: STEVAL-STLCX01V1; FVIN: bluenrg_7_1_e_Mode_2-32MHz-XO32K_4M.img.

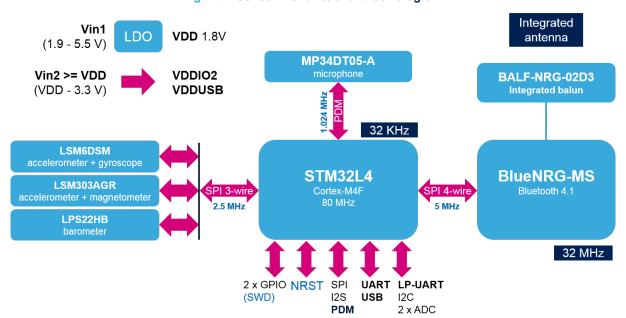


Figure 1. SensorTile functional block diagram

The FP-SNS-ALLMEMS1 firmware provides a complete framework to build wearable applications. The BlueMS™ application based on the BlueST-SDK protocol allows data streaming and a serial console over BLE controls the configuration parameters for the connected boards.

It is recommended to upgrade the SensorTile firmware to the latest available version on www.st.com.



1 Getting started

1.1 Overview

The STEVAL-STLKT01V1 development kit includes everything you need to remotely sense and measure motion, environmental and acoustic parameters. It is designed to support the prototyping phases of new projects and can be used in the contexts below.

An evaluation system

- Evaluate high accuracy and very low power ST sensors in an optimized system architecture
- Field-test data fusion and embedded signal processing algorithms
- · Deploy data collection campaigns to support custom algorithm development

Reference design

- Compact solution for high-accuracy, low-power motion, environmental and audio sensor data in compact form-factor designs
- Complete hardware and software examples form the starting point for new designs with:
 - hardware: schematics, Gerber, BoM, 3D CAD
 - software: from basic examples (STSW-STLKT01) to complete function packs (FP-SNS-ALLMEMS1, FP-AUD-BVLINK1)

Embedded software development kit

- Source code project examples based on the STM32Cube architecture
- Fully compatible with the Open.Software embedded processing libraries, and supported by the STM32 ODE
- Host board implements the Arduino UNO R3 expansion connector to enable bridging to well-known development ecosystems such as STM32 ODE and Arduino

Fast prototyping tool

- Plug or solder onto your prototype motherboard to instantly add its embedded sensing and communication functions to your design
- Use the 3D CAD files to integrate the SensorTile in your mechanical design

1.2 Package components

Inside the STEVAL-STLKT01V1 package, you will find all the components needed to experience the demo on this optimized platform and to start developing you application

UM2101 - Rev 4 page 2/37





Figure 2. SensorTile kit blister

1.3 Initial setup with pre-loaded demo

The easiest thing to do after unpacking is to run the preloaded software using the SensorTile board together with the cradle expansion (STLCX01V1).

Step 1. Take the SensorTile and plug it on the cradle expansion through the dedicated connector. Take care to match the orientation shown below.

UM2101 - Rev 4 page 3/37



Figure 3. Orientation of SensorTile and cradle expansion connectors

Figure 4. SensorTile mounted on cradle expansion



- Step 2. Connect a USB type A to mini-B USB cable to turn ON the board for the first time, verify that the J2 jumper is in position 2-3 (power supply from USB). If everything works fine then you'll see the SensorTile LED blinking approximately every 2 seconds.
- Step 3. The board is now ready to connect to the ST BlueMS mobile app: available on official stores for Android or iOS.

Note: To exploit the newest features, upgrade the default firmware version to the new version of the FP-SNS-ALLMEMS1 function pack.

UM2101 - Rev 4 page 4/37



1.4 System requirements

As the STEVAL-STLKT01V1 is already programmed with BLUEMICROSYSTEM firmware, to run the demo, you only need:

- a smartphone or tablet with minimum Android[™] 4.4 or iOS[™] 8.0 operating systems and minimum BLE technology 4.0
- a USB type A to mini-B USB cable for power supply (connected to a PC, AC adapter or any other source)

To start designing your own project, you will need:

- a Windows™ PC (ver. 7 or higher) with an IAR, KEIL or AC6 firmware development environment
- a USB type A to Micro USB male cable to connect the STEVAL-STLKT01V1 to the PC for power supply
- an STM32 Nucleo board with ST-LINK V2.1 in-circuit debugger/programmer (preferred) or other compatible device
- the ST-LINK Utility for firmware download (latest embedded software version on www.st.com)

UM2101 - Rev 4 page 5/37



2 STEVAL-STLCS01V1 hardware description

The STEVAL-STLCS01V1 (SensorTile) is a highly integrated reference design that can be plugged into form-factor prototypes, adding sensing and connectivity capabilities to new designs through a smart hub solution. It can also easily support development of monitoring and tracking applications as standalone sensor nodes connected to iOS™/Android™ smartphone applications.

The SensorTile occupies a very small 13.5x13.5 mm square outline, with all the electronic components on the top side and small connector on the bottom side to plug it onto the cradle expansion board. The connector pinout is repeated on 18 PCB pads that render the SensorTile a solderable system on module as well.

The figure below and following two tables provide the main board component and pinout details.

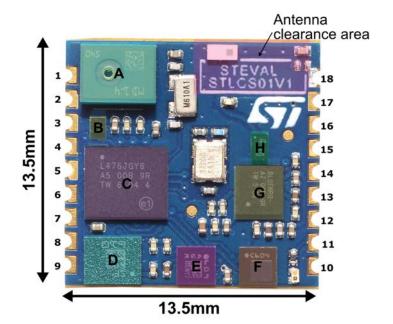


Figure 5. STEVAL-STLCS01V1 main components and pinout

Table 1. STEVAL-STLCS01V1 main components

| Reference | Device | Description | | | |
|-----------|---------------|------------------------------------------------------------------------------------------------------|--|--|--|
| Α | MP34DT05-A | MEMS audio sensor digital microphone | | | |
| В | LD39115J18R | 150 mA low quiescent current low noise LDO 1.8 V | | | |
| С | STM32L476 MCU | ARM Cortex-M4 32-bit microcontroller | | | |
| D | LSM6DSM | iNEMO inertial module: low-power 3D accelerometer and 3D gyroscope | | | |
| E | LSM303AGR | Ultra-compact high-performance eCompass module: ultra-low power 3D accelerometer and 3D magnetometer | | | |
| F | LPS22HB | MEMS nano pressure sensor: 260-1260 hPa absolute digital output barometer | | | |
| G | BlueNRG-MS | Bluetooth low energy network processor | | | |
| Н | BALF-NRG-02D3 | 50 Ω balun with integrated harmonic filter | | | |

UM2101 - Rev 4 page 6/37



| Board pin | CONN pin | Pin name | MCU pin | Main functions ⁽¹⁾ | |
|-----------|----------|------------|---------------------|--------------------------------------------------------|--|
| 1 | 2 | MIC_CLK | PC2 | DFSDM1_CKOUT, ADC | |
| 2 | 4 | VDD_OUT | VDD/VBAT | 1.8V from onboard LDO | |
| 3 | 6 | VIN | 1 | Power supply for LDO [2V-5.5V] | |
| 4 | 8 | VDDUSB | VDDIO2 VDDUSB | Power supply for USB peripheral and VDDIO2 [1.8V-3.3V] | |
| 5 | 10 | GND | VSS | Ground | |
| 6 | 12 | RXD/USB_DP | PD2/PA12 | USART5 RX or USB_OTG_FS DP (2) | |
| 7 | 14 | TXD/USB_DM | PC12/PA11 | USART5 TX or USB_OTG_FS DM 1 | |
| 8 | 16 | SAI_CLK | PG9 ⁽³⁾ | SAI2_SCK_A, SPI3_SCK | |
| 9 | 15 | SAI_FS | PG10 ⁽³⁾ | SAI2_FS_A, SPI3_MISO | |
| 10 | 13 | SAI_MCLK | PG11 ⁽³⁾ | SAI2_MCLK_A, SPI3_MOSI | |
| 11 | 11 | SAI_SD | PG12 ⁽³⁾ | SAI2_SD_A, SPI3_NSS | |
| 12 | 9 | GPIO2 | PB8/PB9/PC1 | DFSDM_DATIN6, I2C3_SDA | |
| 13 | 7 | GPIO3 | PC0 | DFSDM_DATIN4, I2C3_SCL | |
| 14 | 5 | NRST | NRST | STM32 Reset | |
| 15 | 3 | SWD_CLK | | SWD Programming interface clock | |
| 16 | 1 | SWD_IO | | SWD Programming interface IO | |
| 17 | 1 | GND | | Ground | |
| 18 | 1 | GND | | Ground | |

- 1. Refer to STM32L476 Datasheet on www.st.com for the complete set of functions of each pin
- 2. USB_OTG_FS Peripheral is functional for VDDUSB ≥ 3V
- 3. Logic level of this pins is referred to VDDIO2

2.1 Power supply

The SensorTile board has the following input supply pins:

- 1. VIN is the input for the onboard voltage regulator generating 1.8 V (150 mA max).
- 2. VDDUSB is an input for the STM32L4 VDDUSB and VDDIO2 pins (to use the STM32L4 USB OTG peripheral, VDDUSB must be ≥ 3 V)

VDD is an output for 1.8 V.

If the USB peripheral and other 3.3 V signals are not needed for a particular application, you can connect VDD to VDDUSB so that one power supply can power the whole system. This connection can be done externally (e.g., SB8 on STLCX01V1) or by soldering a 0 Ω resistor on R2 (bottom layer).

UM2101 - Rev 4 page 7/37


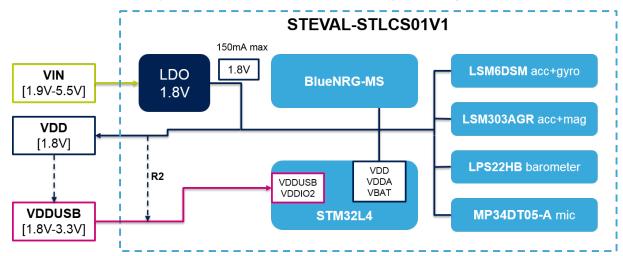


Figure 6. STEVAL-STLCS01V1 power supply block diagram

Figure 7. STEVAL-STLCS01V1 component placement (top side)

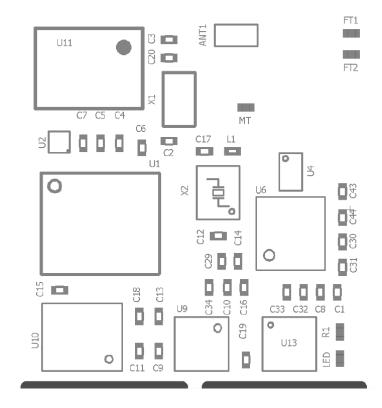

2.2 Differences among the STEVAL-STLCS01V1 generations

There are two slightly different generations of SensorTile (STEVAL-STLCS01V1). To distinguish among the two, you need to observe the Balun package (U4):

• if the package is black (opaque), it is "First generation"

UM2101 - Rev 4 page 8/37





Figure 8. SensorTile first generation

· if the package is transparent, it is "Second generation"



Figure 9. SensorTile second generation

The difference among the two generations is in the part numbers used for U4 and U11:

- First generation: U4 →BALF-NRG-01D3, U11→MP34DT04
- Second generation: U4 →BALF-NRG-02D3, U11→ MP34DT05-A

UM2101 - Rev 4 page 9/37



3 STLCX01V1 hardware description

The SensorTile cradle expansion is an easy-to-use companion board for SensorTile and the SensorTile cradle boards included in the SensorTile Kit. The SensorTile board does not need to be soldered onto the cradle expansion board, but can be plugged onto the dedicated connector (see Figure 3. Orientation of SensorTile and cradle expansion connectors and Figure 4. SensorTile mounted on cradle expansion.

Apart from being a standalone host for the SensorTile board, the cradle expansion board can be connected to an STM32 Nucleo or other expansion board via the Arduino UNO R3 connectors to easily expand functionality.

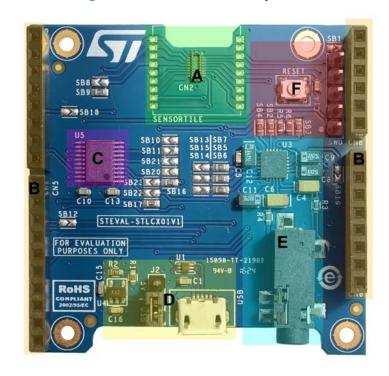


Figure 10. STLCX01V1 main components

Table 3. STLCX01V1 main components

| Reference | Device | Description | | |
|-----------|---------------------------------------------------------|-------------------------------------------------------------------------|--|--|
| Α | SensorTile connector and footprint | To plug or solder the SensorTile board | | |
| В | Arduino UNO R3 UNO R3 connector | For STM32 Nucleo board compatibility | | |
| С | ST2378ETTR | 8-bit dual supply 1.71 V to 5.5 V level translator | | |
| D | micro-USB connector, USBLC6-2P6 (U1), LDK120M-R (U4) | micro USB power supply /communication port and 3.3 V voltage regulation | | |
| Е | Audio DAC, phono jack | 16-Bit, low-power stereo audio DAC and 3.5 mm stereo phono jack | | |
| F | SWD connector, Reset button | 5-pin SWD connector for programming debugging and board reset button | | |

3.1 Power supply

The power is either supplied by the host PC via USB or by an external source through the Arduino UNO R3 connector (CN6.5).

Jumper J2 selects the power source for the onboard 3.3 V regulator (U4) and the SensorTile VIN pin:

UM2101 - Rev 4 page 10/37

- position 1-2: 5 V external
- position 2-3: 5 V via USB (default)

The 3.3 V output of the regulator can be routed to the Arduino UNO R3 connector to power on other external components by soldering SB18 (default OFF).

The VDDUSB pin of the SensorTile can be connected to two different power sources:

- 3.3 V SB9 (default ON)
- 1.8 V (SensorTile VDD) SB8 (default OFF)

3.2 USB device

The USB connector on the board can be used to supply power and for communication (USB_OTG_FS). To use the USB peripheral, use the following solder bridge configuration:

- SB10, SB11, SB20 and SB21 OFF (disconnect the signals from U5)
- SB9 ON (supply 3.3 V to the USB peripheral of the STM32 MCU)

3.3 Audio DAC

The PCM1774 is a low-power stereo DAC designed for portable digital audio applications, and can be driven by the SensorTile to play any kind of Audio stream. A dedicated 3.5 mm audio jack makes it easy to connect headphones or active loudspeakers.

In order to use the onboard audio DAC (U3), the SAI (serial audio interface) and I²C signals must be routed to the component using the following configuration:

- SB12, SB13, SB14, SB15, SB16 and SB17 OFF (disconnect the signals from Arduino UNO R3 connector)
- SB2, SB3, SB4, SB5, SB6, SB7 ON (connect the signals to the DAC)

3.4 Solder bridge details

Table 4. STLCX01V1 solder bridge details

| Solder Bridge | SensorTile signal | Onboard signal | Arduino signal |
|---------------------|-------------------|---------------------------------|----------------|
| SB1 | Reset | | CN8.2 |
| SB2 ⁽¹⁾ | GPIO3 | DAC control – I2C SCL (pull-up) | |
| SB3 ⁽¹⁾ | GPIO2 | DAC control – I2C SDA (pull-up) | |
| SB4 ⁽¹⁾ | SAI_SD | DAC Audio – I2S_SD | |
| SB5 ⁽¹⁾ | SAI_SCK | DAC Audio – I2S_SCK | |
| SB6 ⁽¹⁾ | SAI_FS | DAC Audio – I2S_WS | |
| SB7 ⁽¹⁾ | SAI_MCLK | DAC Audio – I2S_MCLK | |
| SB8 | VDDUSB | VDD – 1.8V from SensorTile | |
| SB9 ⁽¹⁾ | VDDUSB | 3V3 from regulator | |
| SB10 | RXD-USB_DP | Level Translator - UART_RX | CN9.2 |
| SB11 | RXD-USB_DP | Level Translator - UART_TX | CN9.1 |
| SB12 | SAI_SD | SPI_CS | CN5.3 |
| SB13 | SAI_MCLK | SPI_MOSI | CN5.4 |
| SB14 | SAI_FS | SPI_MISO | CN5.5 |
| SB15 | SAI_SCK | SPI_SCK | CN5.6 |
| SB16 ⁽¹⁾ | GPIO3 | | CN5.10 |


UM2101 - Rev 4 page 11/37



| Solder Bridge | SensorTile signal | Onboard signal | Arduino signal |
|---------------------|-------------------|--------------------------------|----------------|
| SB17 ⁽¹⁾ | GPIO2 | | CN5.9 |
| SB18 | MIC_CLK | Level Translator - MIC_CLK_3V3 | CN9.5 |
| SB19 | | 3V3 – 3V3_Nucleo | CN6.2 CN6.3 |
| SB20 | TXD-USB_DM | Level Translator - UART_RX | CN9.2 |
| SB21 | TXD-USB_DM | Level Translator - UART_TX | CN9.1 |
| SB22 | GPIO2 | Level Translator - GPIO2_3V3 | CN9.6 |
| SB23 | GPIO3 | Level Translator – GPIO3_3V3 | CN9.7 |

^{1.} closed by default

Figure 11. STLCX01V1 component placement (top side)

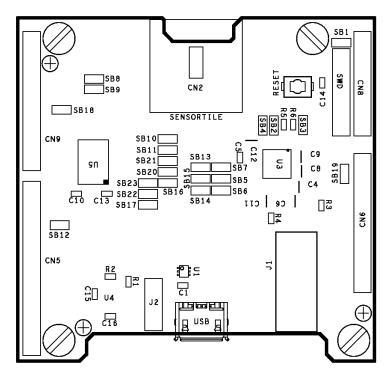

UM2101 - Rev 4 page 12/37



4 STLCR01V1 hardware description

The SensorTile cradle is a small companion board for SensorTile, geared at the development of form factor prototypes. You need to solder the SensorTile board to this board to render the system robust.

The small cradle is ideal for applications requiring small, standalone, battery-powered sensor nodes.

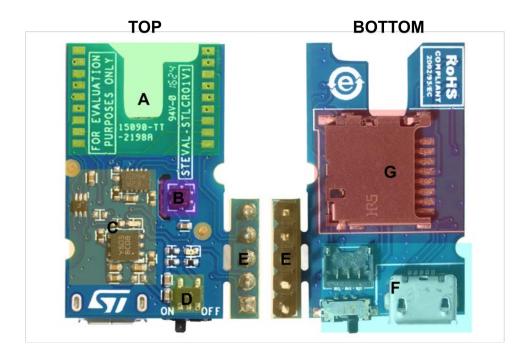


Figure 12. STLCR01V1 cradle main components

Table 5. STLCR01V1 main components

| Reference | Device | Description |
|-----------|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Α | SensorTile footprint | To solder the SensorTile board |
| В | HTS221 | Capacitive digital sensor for relative humidity and temperature |
| С | STBC08PMR, STC3115, LDK120M- R, USBLC6-2P6 | 800 mA standalone linear Li-lon battery charger with thermal regulation, Gas gauge IC, 200 mA low quiescent current very low noise LDO, very low capacitance ESD protection |
| D | Power on/off switch | |
| Е | SWD connector | 5-pin SWD connector for programming and debugging |
| F | Micro USB connector, 3-pin battery connector | micro USB battery charging supply /communication port and connector for Li-lon battery power supply |
| G | micro-SD card socket | |

Solder the SensorTile board onto the cradle board as shown in the figure below.

UM2101 - Rev 4 page 13/37





Figure 13. SensorTile soldered onto cradle board

4.1 Power supply

The main board power supply is the 100 mAh lithium-lon polymer battery attached to the appropriate connector on the PCB.

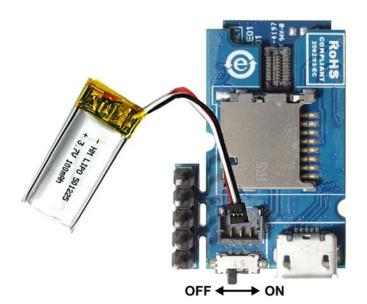


Figure 14. Battery connection and power switch

The battery can be recharged via USB connected to a PC or any micro-USB battery charger. A red LED indicates the charging status:

- steady ON: the USB plug is correctly connected and the board is charging
- steady OFF: charging complete
- blinking: battery not present

UM2101 - Rev 4 page 14/37



The onboard STBC08 battery charger IC is configured by default with a maximum charging current of 50 mA. It is possible to modify this current by changing the R5 resistor value.

Equation 1:

$$I_{chrg} = \frac{1V}{R5} \cdot 1000 \tag{1}$$

The default 20 k Ω value for R5 hence gives:

$$\frac{1V}{20K} \cdot 1000 = 50mA \tag{2}$$

During normal usage, the battery needs to be connected to the board for proper operation. When the battery is plugged, the board is turned ON via the SW1 switch. This switch enables LDK120 3V3 voltage regulator pin, which powers all board components.

4.2 SensorTile and cradle assembly in form factor case

Refer to the following image for the orientation of the soldered SensorTile and cradle boards in the dedicated form factor case.

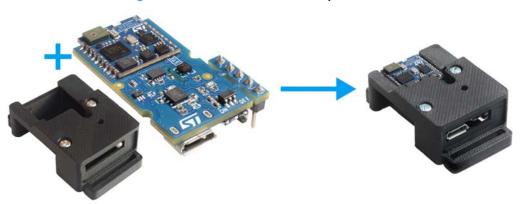


Figure 15. SensorTile and cradle in plastic case

UM2101 - Rev 4 page 15/37



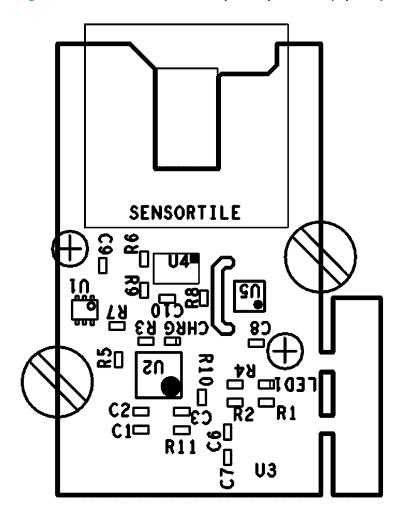


Figure 16. STEVAL-STLCR01V1 component placement (top side)

UM2101 - Rev 4 page 16/37



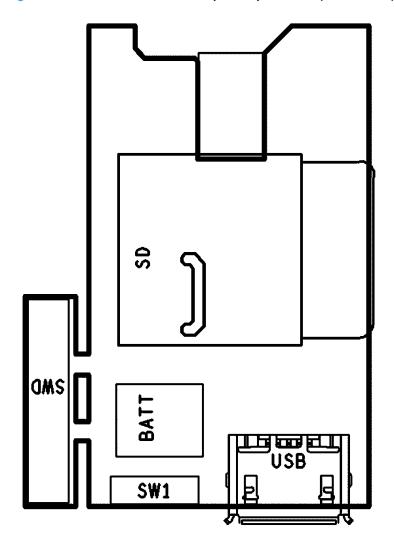


Figure 17. STEVAL-STLCR01V1 component placement (bottom side)

UM2101 - Rev 4 page 17/37



5 SensorTile programming interface

To program the board, connect an external ST-LINK to the SWD connector on the cradle; a 5-pin flat cable is provided in the SensorTile Kit package.

The easiest way to obtain an ST-LINK device is to get an STM32 Nucleo board, which bundles an ST-LINK V2.1 debugger and programmer.

Ensure that CN2 jumpers are OFF and connect your STM32 Nucleo board to the SensorTile cradle via the cable provided, paying attention to the polarity of the connectors. Pin 1 is identified by:

- a small circle on the PCB silkscreen STM32 Nucleo board and SensorTile cradle expansion
- the square shape of the soldering pad connector on the SensorTile cradle.

Figure 18. STM32 Nucleo board, cradle and cradle expansion SWD connectors


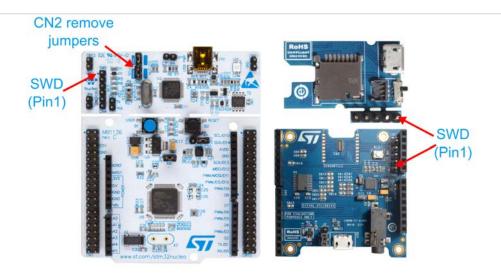


Figure 19. SWD connections with 5-pin flat cable



UM2101 - Rev 4 page 18/37

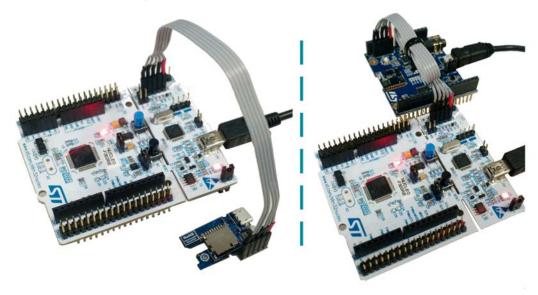

6 Sensors and Bluetooth low energy connectivity

6.1 LSM6DSM

The LSM6DSM is a system-in-package featuring a 3D digital accelerometer and a 3D digital gyroscope performing at 0.65 mA in high-performance mode and enabling always-on low-power features for an optimal motion experience for the consumer. The LSM6DSM supports main OS requirements, offering real, virtual and batch sensors with 4 Kbytes for dynamic data batching.

ST's family of MEMS sensor modules leverages the robust and mature manufacturing processes already used for the production of micromachined accelerometers and gyroscopes. The various sensing elements are manufactured using specialized micromachining processes, while the IC interfaces are developed using CMOS technology that allows the design of a dedicated circuit which is trimmed to better match the characteristics of the sensing element.

The LSM6DSM has a full-scale acceleration range of $\pm 2/\pm 4/\pm 8/\pm 16$ g and an angular rate range of $\pm 125/\pm 245/\pm 500/\pm 1000/\pm 2000$ dps. The LSM6DSM fully supports EIS and OIS applications as the module includes a dedicated configurable signal processing path for OIS and auxiliary SPI configurable for both gyroscope and accelerometer.

High robustness to mechanical shock makes the LSM6DSM the preferred choice of system designers for the creation and manufacturing of reliable products.

6.2 LSM303AGR

The LSM303AGR is an ultra-low-power high-performance system-in-package featuring a 3D digital linear acceleration sensor and a 3D digital magnetic sensor. The device has linear acceleration full scales of ±2g/±4g/±8g/±16g and a magnetic field dynamic range of ±50 gauss.

The LSM303AGR includes an I²C serial bus interface that supports standard, fast mode, fast mode plus, and high-speed (100 kHz, 400 kHz, 1 MHz, and 3.4 MHz) and an SPI serial standard interface. The system can be configured to generate an interrupt signal for free-fall, motion detection and magnetic field detection.

The magnetic and accelerometer blocks can be enabled or put into power-down mode separately.

6.3 LPS22HB

The LPS22HB is an ultra-compact piezoresistive absolute pressure sensor which functions as a digital output barometer. The device comprises a sensing element and an IC interface which communicates through I²C or SPI from the sensing element to the application.

The sensing element, which detects absolute pressure, consists of a suspended membrane manufactured using a dedicated process developed by ST.

The LPS22HB is available in a full-mold, holed LGA package (HLGA). It is guaranteed to operate over a temperature range extending from -40 °C to +85 °C. The package is holed to allow external pressure to reach the sensing element.

LPS22HB is factory calibrated but a residual offset could be introduced by the soldering process. This offset can be removed with a one-point calibration.(For further details, refer to application note AN4833, "Measuring pressure data from ST's LPS22HB digital pressure sensor", on www.st.com.)

6.4 MP34DT05-A

The MP34DT05-A is an ultra-compact, low power, omnidirectional, digital MEMS microphone built with a capacitive sensing element and an IC interface.

The sensing element, capable of detecting acoustic waves, is manufactured using a specialized silicon micromachining process dedicated to producing audio sensors.

The IC interface is manufactured using a CMOS process that allows designing a dedicated circuit able to provide a digital signal externally in PDM format.

UM2101 - Rev 4 page 19/37



The MP34DT05-A is a low-distortion digital microphone with a 64 dB signal-to-noise ratio and –26 dBFS ±3 dB sensitivity.

6.5 BLUENRG-MS

The BlueNRG-MS is a very low power Bluetooth low energy (BLE) single-mode network processor, compliant with Bluetooth specification v4.1. The BlueNRG-MS supports multiple roles simultaneously and can act at the same time as Bluetooth smart sensor and hub device.

The Bluetooth Low Energy stack runs on the embedded ARM Cortex-M0 core. The stack is stored on the on-chip non-volatile Flash memory and can be easily upgraded via SPI.

The device comes pre-programmed with a production-ready stack image(Its version could change at any time without notice). A different or more up-to-date stack image can be downloaded from the ST website and programmed on the device through the ST provided software tools.

The BlueNRG-MS allows applications to meet the tight advisable peak current requirements imposed by standard coin cell batteries.

The maximum peak current is only 10 mA at 1 dBm output power. Ultra low-power sleep modes and very short transition times between operating modes allow very low average current consumption, resulting in longer battery life.

The BlueNRG-MS offers the option of interfacing with external microcontrollers via SPI transport layer.

6.6 BALF-NRG-02D3

This device is an ultra-miniature balun which integrates matching network and harmonics filter.

Matching impedance has been customized for the BlueNRG transceiver.

The BALF-NRG-02D3 uses STMicroelectronics IPD technology on non-conductive glass substrate which optimizes RF performance.

UM2101 - Rev 4 page 20/37



7 Bill of materials

Table 6. STEVAL-STLCS01V1 bill of materials

| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|----------|---------------------------------|--------------------------------------------------|--------------------------|------------------------|
| 1 | 1 | U1 | | ARM Cortex- M4 32b MCU Microcontrolle r | STM32L476JGY6TR | ST |
| 2 | 1 | U2 | 150 mA, 1.8 V | low quiescent current low noise LDO | LD39115J18R | ST |
| 3 | 1 | U9 | | Ultra-low Power Acc + Magn | LSM303AGRTR | ST |
| 4 | 1 | U10 | | Low-Power Acceleromete r + Gyroscope | LSM6DSMTR | ST |
| 5 | 1 | U6 | | Bluetooth Low-Energy Chip V4.1 - MS | BlueNRG-MSCSP | ST |
| 6 | 1 | U13 | | Low-power pressure sensor | LPS22HBTR | ST |
| 7 | 1 | U11 | | MEMS audio sensor digital microphone | MP34DT05-A | ST |
| 8 | 1 | U4 | | Bluetooth Low-Energy Balun chip | BALF-NRG-02D3 | ST |
| 9 | 1 | X2 | | CRYSTAL 32MHZ 8PF SMD | CX2016DB32000D0FLJC C | AVX |
| 10 | 1 | X1 | 32.7680kHz, 20ppm, 4pF, 60kΩ | Crystal | ABS06-107-32.768KHZ-T | Abracon |
| 11 | 2 | C2, C20 | 4pF 25V | CAP CER NP0 0201 | CBR02C409B3GAC | Kemet |
| 12 | 2 | C12, C17 | 15pF 25V | CAP 0201 NP0 | 02013A150JAT2A | AVX |
| 13 | 1 | FT1 | 10pF 25V | CAP CER NP0 0201 | 250R05L100GV4T | Johanson Technology |
| 14 | 1 | R2 | 0 Ω | Resistor SMD R0402 | Any | |
| 15 | 1 | FT2 | | | Any | |
| 16 | 1 | MT | 0.40pF 25V | CAP CER NP0 0201 | 250R05L0R4AV4T | Johanson Technology |
| 17 | 2 | C32, C34 | 2.2µF 6.3V | CAP CERAMIC X5R, 0201 | 02016D225MAT2A | AVX |
| 18 | 1 | C9 | 0.22µF 6.3V | CAP CER X7S 0201 | C0603X7S0J224K030BC | TDK |

UM2101 - Rev 4 page 21/37



| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|-------------------------------------------------|-------------------------------|---------------------------------|-------------------------------|------------------------|
| 19 | 1 | C30 | 150nF, 10V | CAP, MLCC, X5R, 0201 | C0603X5R1A154K030BB | TDK |
| 20 | 2 | C14, C31 | 100pF 25V | CAP CER NP0 0201 | 250R05L101JV4T | Johanson Technology |
| 21 | 1 | ANT1 | 2.4GHZ | ANTENNA SMD | ANT016008LCS2442MA1 | TDK |
| 22 | 9 | C4, C5, C10, C11, C13, C18, C29, C33, C43 | 0.1µF 6.3V ±10% | CAP CER X5R 0201 | GRM033R60J104KE19D | Murata |
| 23 | 1 | R1 | 560 Ω | Resistor SMD | Any | |
| 24 | 9 | C1, C3, C6, C7, C8, C15, C16, C19, C44 | 1μF 6.3V | CAP CER X5R 0201 | CL03A105KQ3CSNC | Samsung |
| 25 | 1 | LED | 605 nm, 2 V, 10 mA, 50 mcd | LED, Low Power, Orange | KPG-0603SEC-TT | KINGBRIGHT |
| 26 | 1 | CONN | 0.4mm | Connector Board-to- Board | BM10NB(0.8)-16DS-0.4V(51) | Hirose |
| 27 | 1 | L1 | 3.9nH 400mA 300 MΩ | FIXED IND | LQP03TN3N9B02D | Murata |
| 28 | 1 | SWD Cable | 2.54mm, L=15cm | 5 pin ribbon cable | Any | |

Table 7. STLCX01V1 bill of materials

| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|-----------------------|---------------------------|---------------------|----------------------|-------------------|
| 1 | 1 | CN2 | | BM10JC-16DP-0.4V(53 | BM10JC-16DP-0.4V(53) | Hirose |
| 2 | 1 | CN5 | | HEADER 10 | SSQ-110-03-L-S | Samtec |
| 3 | 2 | CN6,CN9 | | HEADER 8 | SSQ-108-03-L-S | Samtec |
| 4 | 1 | CN8 | | HEADER 6 | SSQ-106-03-L-S | Samtec |
| 5 | 5 | C1,C5,C10,C 13,C14 | 100nF | X7R | Any | |
| 6 | 2 | C4,C6 | 47uF, 6.3V | Tantal | Any | |
| 7 | 4 | C8,C9,C11,C 12 | 4.7uF, >6.3V, <2 Ω ESR | Tantal | Any | |
| 8 | 2 | C15,C16 | 4.7uF, 10V | X5R | Any | |
| 9 | 1 | J1 | | PHONOJACK STEREO | 35RASMT4BHNTRX | Switchcraft |
| 10 | 1 | J2 | | Header M 3x1 | Any | |
| 11 | 4 | J3,J4,J5,J6 | | PCB Hole | Any | |
| 12 | 1 | RESET | | SYS_MODE | PTS820 J20M SMTR LFS | C&K Components |
| 13 | 1 | R1 | 47kΩ ±1% | | Any | |
| 14 | 1 | R2 | 147kΩ±1% | | Any | |

UM2101 - Rev 4 page 22/37



| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|---------------------------------------------------------------------------------------------|-------|-------------|--------------|--------------|
| 15 | 11 | SB2,SB3,R3, SB4,R4,SB5, SB6,SB7,SB 9,SB16,SB17 | 0R | | Any | |
| 16 | 2 | R5,R6 | | 4K7 | Any | |
| 17 | 14 | SB1,SB8,SB 10,SB11,SB1 2,SB13,SB14 ,SB15,SB18, SB19,SB20, SB21,SB22, SB23 | | NC | Any | |
| 18 | 1 | SWD | | CON5 | Any | |
| 19 | 1 | USB | | USB-MICRO | USB3075-30-A | GCT |
| 20 | 1 | U1 | | USBLC6-2P6 | USBLC6-2P6 | ST |
| 21 | 1 | U3 | | PCM1774RGP | PCM1774RGP | TI |
| 22 | 1 | U4 | | LDK120M-R | LDK120M-R | ST |
| 23 | 1 | U5 | | ST2378ETTR | ST2378ETTR | ST |

Table 8. STLCR01V1 bill of materials

| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|-------------|---------------------|-------------------|--------------|----------------------|
| 1 | 1 | BATT | | Battery Connector | 78171-0003 | Molex |
| 2 | 1 | CHRG | | Red LED | Any | |
| 3 | 3 | C1,C8,C9 | 100nF | X7R | Any | |
| 4 | 4 | C2,C3,C6,C7 | 10V, 4.7μF | X5R | Any | |
| 6 | 1 | C10 | 10V, 1µF | X5R | Any | |
| 7 | 1 | LED1 | | LED Green | Any | |
| 8 | 1 | R1 | 47kΩ±1% | | Any | |
| 9 | 1 | R2 | 147kΩ±1% | | Any | |
| 10 | 1 | R3 | 2kΩ | | Any | |
| 11 | 2 | R4,R8 | 1kΩ | | Any | |
| 12 | 1 | R5 | 20kΩ±1% | | Any | |
| 13 | 3 | R6,R7,R11 | | NC | Any | |
| 14 | 1 | R10 | 0 Ω | | Any | |
| 15 | 1 | R9 | 50mΩ±1%, >=1/16W | | Any | |
| 16 | 1 | SD | | Micro-SD | DM3D-SF | Hirose |
| 17 | 1 | SWD | | CON5 | Any | |
| 18 | 1 | SW1 | | PWR | SSAJ120100 | Alps Electric Co. |
| 19 | 1 | USB | | USB-MICRO | USB3075-30-A | GCT |
| 20 | 1 | U1 | | USBLC6-2P6 | USBLC6-2P6 | ST |
| 21 | 1 | U2 | | STBC08PMR | STBC08PMR | ST |
| 22 | 1 | U3 | | LDK120M-R | LDK120M-R | ST |

UM2101 - Rev 4 page 23/37




| Item | Q.ty | Ref. | Value | Description | Order code | Manufacturer |
|------|------|-------------|------------------------|-----------------------------------------|-------------|-------------------|
| 23 | 1 | U4 | | STC3115IQT | STC3115IQT | ST |
| 24 | 1 | U5 | | HTS221 | HTS221 | ST |
| 25 | 1 | Battery | 3.7V 100mAh | LiPO-501225 3pin connector | LiPO-501225 | Himax electronics |
| 26 | 1 | Plastic Box | | Plastic Box | Any | |
| 27 | 2 | M2-Nut | HEX shape | HEX Nut M2 - steel | Any | |
| 28 | 1 | M2-Screw | Pan head - Phillips | 10mm M2 Pan head Phillips - steel | Any | |
| 29 | 1 | M2-Screw | Pan head - Phillips | 12mm M2 Pan head Phillips - steel | Any | |

UM2101 - Rev 4 page 24/37




8 Schematic diagrams

Figure 20. STEVAL-STLCS01V1 schematic diagram (1 of 2)

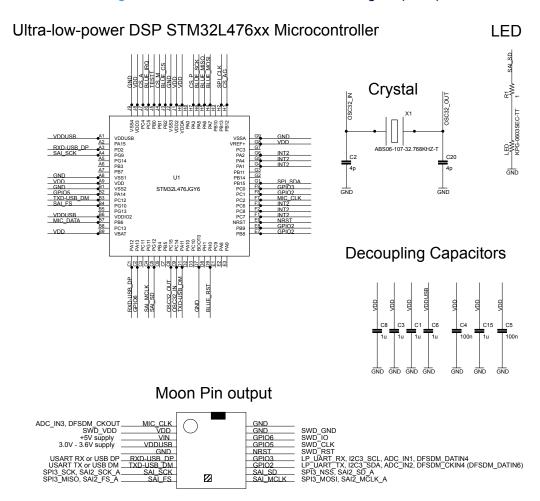

Low-Drop Out Voltage Regulator

Hirose bottom connector (optional)

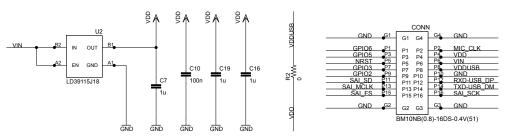

UM2101 - Rev 4 page 25/37



BlueNRG - Bluetooth low energy chip Accelerometer + Magnetometer P11 NT2 NT3 CS_MAG SDA TESTS TESTS TESTS VODIV8 TESTS TESTS TESTS GND1 GND Tuning Accelerometer + Gyroscope SCL SCL SS Balun + chip antenna GND Pressure Sensor Digital Microphone GND P8 GND 8 B3 MIC_CLK GND CLK B4 MIC_DATA

Figure 21. STEVAL-STLCS01V1 schematic diagram (2 of 2)

UM2101 - Rev 4 page 26/37



SensorTile Connector USB, SWD, Power BM10B(0.8)-16DP-0.4V(51) CN2 SensorTile Footprint Fixing holes On the corners Hole: 2,2mm Head: 4mm <u></u> 1 1 SB5 SAL SCK SB7 SAL MCLK STM32 Nucleo TILE_RESET >>> VCC


Figure 22. STLCX01V1 schematic diagram

UM2101 - Rev 4 page 27/37




Figure 23. STLCR01V1 schematic diagram

USB, SWD, Power switch

 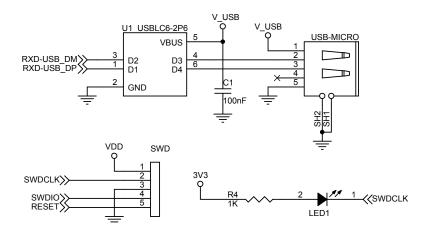


 
SensorTile footprint

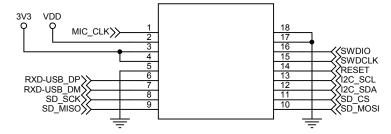


Battery Charger








micro-SD card socket

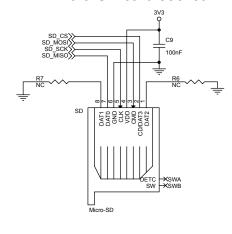

HTS221 sensor

 

UM2101 - Rev 4 page 28/37



Formal notices required by the U.S. Federal Communications Commission ("FCC")

FCC NOTICE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Additional warnings for FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference's by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

UM2101 - Rev 4 page 29/37



10 Formal product notice required by the Industry Canada ("IC")

Innovation, Science and Economic Development Canada Compliance - This device complies with Innovation, Science and Economic Development RSS standards. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Conformité à Innovation, Sciences et Développement Économique Canada - Cet appareil est conforme aux normes RSS d'Innovation, Science et Développement économique. L'utilisation est soumise aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter de recevoir tous les types d'interférence, y comprises les interférences susceptibles d'entraîner un fonctionnement indésirable. Les changements ou les modifications non expressément approuvés par le fabricant pourraient annuler le permis d'utiliser l'équipement.

UM2101 - Rev 4 page 30/37



11 TYPE certification

The module has been tested according to the following TYPE certification rules:

- Type of specified radio equipment:
 - radio equipment according to the certification ordinance article 2-1-9
 - sophisticated low power data communication system in a 2.4 GHz band
- Class of emissions, assigned frequency and antenna power:
 - F1D, 2402 to 2480 MHz, channel separation 2 MHz/40 channels, 0.006 W
- Certification number:
 - 006-000482

The design and manufacturing are certified on the basis of the Japan Radio Law 38-24.

UM2101 - Rev 4 page 31/37



Revision history

Table 9. Document revision history

| Date | Version | Changes |
|-------------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 17-Aug-2016 | 1 | Initial release. |
| 28-Aug-2017 | 2 | Updated Section "Introduction", Section 1.1: "Overview", Section 1.3: "Initial setup with pre-loaded demo", Section 6.4: "MP34DT04", Section 6.5: "BLUENRG-MS" and Section 9: "Formal product notice required by the Industry Canada ("IC")" |
| 30-Oct-2017 | 3 | Added Figure 7: "STEVAL-STLCS01V1 component placement (top side)", Figure 9: "STLCX01V1 component placement (top side)", Figure 14: "STEVAL-STLCR01V1 component placement (top side)", Figure 15: "STEVAL-STLCR01V1 component placement (bottom side)" and Section 10: "TYPE certification". |
| | | Updated Figure 21: "STLCR01V1 schematic diagram". |
| 18-Jul-2018 | 4 | Added Section 2.2 Differences among the STEVAL-STLCS01V1 generations, Section 6.4 MP34DT05-A and Section 6.6 BALF-NRG-02D3. |
| 10-Jul-2010 | 4 | Updated Figure 1. SensorTile functional block diagram and Figure 6. STEVAL-STLCS01V1 power supply block diagram. |

UM2101 - Rev 4 page 32/37



Contents

| 1 | Gett | ing started | 2 |
|----|------|--------------------------------------------------------------------------|------|
| | 1.1 | Overview | 2 |
| | 1.2 | Package components | 2 |
| | 1.3 | Initial setup with pre-loaded demo | 3 |
| | 1.4 | System requirements | 4 |
| 2 | STE | VAL-STLCS01V1 hardware description | 6 |
| | 2.1 | Power supply | 7 |
| | 2.2 | Differences among the STEVAL-STLCS01V1 generations | 8 |
| 3 | STL | CX01V1 hardware description | .10 |
| | 3.1 | Power supply | . 10 |
| | 3.2 | USB device | 11 |
| | 3.3 | Audio DAC | 11 |
| | 3.4 | Solder bridge details | 11 |
| 4 | STL | CR01V1 hardware description | 13 |
| | 4.1 | Power supply | . 14 |
| | 4.2 | SensorTile and cradle assembly in form factor case | 15 |
| 5 | Sen | sorTile programming interface | .18 |
| 6 | Sen | sors and Bluetooth low energy connectivity | .19 |
| | 6.1 | LSM6DSM | . 19 |
| | 6.2 | LSM303AGR | . 19 |
| | 6.3 | LPS22HB | 19 |
| | 6.4 | MP34DT05-A | . 19 |
| | 6.5 | BLUENRG-MS | . 20 |
| | 6.6 | BALF-NRG-02D3 | 20 |
| 7 | Bill | of materials | .21 |
| 8 | Sch | ematic diagrams | .25 |
| 9 | For | nal notices required by the U.S. Federal Communications Commission ("FCC | - |
| 10 | For | nal product notice required by the Industry Canada ("IC") | .30 |





| 11 | TYPE certif | ication | | 3 | 1 |
|-----|---------------|---------|------|------|------|------|------|------|------|------|------|-------|---|
| Rev | ision history | · | | 3 | 2 |



List of tables

| Table 1. | STEVAL-STLCS01V1 main components | . 6 |
|----------|------------------------------------|-----|
| | STEVAL-STLCS01V1 pinout | |
| Table 3. | STLCX01V1 main components | 10 |
| Table 4. | STLCX01V1 solder bridge details | 11 |
| Table 5. | STLCR01V1 main components | 13 |
| Table 6. | STEVAL-STLCS01V1 bill of materials | 21 |
| Table 7. | STLCX01V1 bill of materials | 22 |
| Table 8. | STLCR01V1 bill of materials | 23 |
| Table 9. | Document revision history | 32 |



List of figures

| Figure 1. | SensorTile functional block diagram | . 1 |
|------------|----------------------------------------------------------------|-----|
| Figure 2. | SensorTile kit blister | . 3 |
| Figure 3. | Orientation of SensorTile and cradle expansion connectors | . 4 |
| Figure 4. | SensorTile mounted on cradle expansion | . 4 |
| Figure 5. | STEVAL-STLCS01V1 main components and pinout | . 6 |
| Figure 6. | STEVAL-STLCS01V1 power supply block diagram | . 8 |
| Figure 7. | STEVAL-STLCS01V1 component placement (top side) | . 8 |
| Figure 8. | SensorTile first generation | . 9 |
| Figure 9. | SensorTile second generation | . 9 |
| Figure 10. | STLCX01V1 main components | 10 |
| Figure 11. | STLCX01V1 component placement (top side) | 12 |
| Figure 12. | STLCR01V1 cradle main components | 13 |
| Figure 13. | SensorTile soldered onto cradle board | 14 |
| Figure 14. | Battery connection and power switch | 14 |
| Figure 15. | SensorTile and cradle in plastic case | 15 |
| Figure 16. | STEVAL-STLCR01V1 component placement (top side) | 16 |
| Figure 17. | STEVAL-STLCR01V1 component placement (bottom side) | 17 |
| Figure 18. | STM32 Nucleo board, cradle and cradle expansion SWD connectors | 18 |
| Figure 19. | SWD connections with 5-pin flat cable | 18 |
| Figure 20. | STEVAL-STLCS01V1 schematic diagram (1 of 2) | 25 |
| Figure 21. | STEVAL-STLCS01V1 schematic diagram (2 of 2) | 26 |
| Figure 22. | STLCX01V1 schematic diagram | 27 |
| Figure 23. | STLCR01V1 schematic diagram | 28 |

UM2101 - Rev 4 page 36/37



IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2018 STMicroelectronics - All rights reserved

UM2101 - Rev 4 page 37/37