

Customer Tips


dc99cc19
October 31, 2003

... for the user

Basic Solaris Print Queue Configuration

Issue

Because a Xerox multifunction device is a BSD style UNIX printer and a Solaris 2.x workstation uses System V UNIX, you must complete a special installation process so that the two devices can communicate.

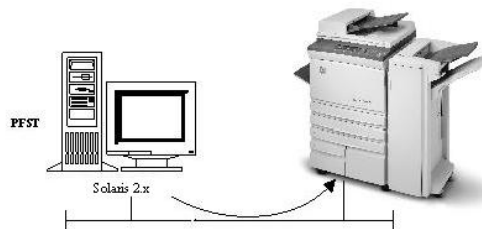

Recommendation^{TCP/IP}

Set up the Solaris 2.x workstation to print to a BSD print server. The name of the remote print queue must be lp.

Customer Expectations

- CentreWare Network Services is not available in this environment.
- No job status is available.
- Use the administration tool, Printer Manager, to add/set default printers.
- XPXX Tool is designed for this environment and therefore is fully functional (Postscript and ASCII only).
- Use the lp command to submit Postscript and ASCII text files directly to the multifunction device.

Printing ASCII text, without running CWPrint, may cause text staircasing. Reference the Customer Tip *Printing ASCII Text from a UNIX Client*.

GUI Method of Installation for Solaris 2.51

Verify the items in the following list are in place before installation.

- Correctly add the multifunction device hostname to the "/etc/hosts" file.
- Ensure you can ping multifunction device using its hostname found in "/etc/hosts" file.
- Familiarity with the X Windows environment.

This document applies to these **Xerox** products:

x	WC Pro 32/40 Color
x	WC Pro 65/75/90
x	WC Pro 35/45/55
	WC M35/M45/M55
x	DC 555/545/535
x	DC 490/480/470/460
x	DC 440/432/425/420
x	DC 340/332
x	DC 265/255/240
x	DC 230/220
	DCCS 50

1. Open a command window from the desktop.
2. Type `su` to become super user.
3. Type `admintool` to run the System Administrator Tool.
4. Select **[Browse: Printers]**.
5. Select **[Edit: Add: Access to Printer...]**.
6. Enter the following information into the "Access to Remote Printer" form:
Printer Name: **queuename**
Where **queuename** is the name of the queue being created.

Print Server: **hostname**
Where **hostname** is the multifunction device hostname from the "/etc/hosts" file.
7. Press **<OK>** to complete the form.
8. Select **[File: Exit]**.
9. Type `sh` to run the Bourne shell.
10. Type `lpadmin -p queuename -s hostname!lp` to modify the remote queuename.
11. Type `exit` to exit the Bourne shell and `exit` to exit super user mode.

tty Method of Installation

Verify the items in the following list are in place prior to installation.

- Correctly add the Xerox multifunction device hostname to the "/etc/hosts" file.
 - Ensure you are able to ping multifunction device using the multifunction device hostname found in "/etc/hosts" file.
1. Type `su` to become super user.
 2. Type `sh` to run the Bourne shell.
 3. To define the Document Centre as a BSD style printer, type:
`lpsystem -t bsd hostname`, where *hostname* is the Document Centre hostname from the "/etc/hosts" file.
 4. To create the queue, type:
`lpadmin -p queuename -s hostname!lp -T unknown -I any`, where **queuename** is the name of the queue being created.
 5. To enable printing for the queue, type: `enable queuename`
 6. To allow the queue to accept print requests, type: `accept queuename`
 7. Type `exit` to exit the Bourne shell and `exit` to exit super user mode.

Additional Information

Xerox Customer Service welcomes feedback on all documentation - send feedback via e-mail to: USA.DSSC.Doc.Feedback@mc.usa.xerox.com.

You can reach Xerox Customer Support at 1-800-821-2797 (USA), TTY 1-800-855-2880 or at <http://www.xerox.com>.

Other Tips about Xerox multifunction devices are available at the following URL: <http://www.xerox.com/DocumentCentreFamily/Tips>.

XEROX®, The Document Company®, the digital X®, and all Xerox product names are trademarks of XEROX CORPORATION. Other trademarks belong to their respective owners.

Copyright © XEROX CORPORATION 2003. All Rights Reserved.

