 


CI C

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco



Contents

- Getting Started** 1
- Using this Guide 1

Viewing Multiple Calls

Getting Started

Using this Guide

This guide provides you with an overview of the features available on your Cisco Unified IP

Connecting Your Conference Station

Your system administrator will likely connect your new Cisco Unified IP Conference Station 7937G to the corporate IP telephony network. If that is not the case, refer to the following graphics and tables to connect the conference station.

Connecting the Conference Station to the Network

Connecting Conference Station Using an Optional External Power Source
If you connect the conference station to the network

Registering with TAPS

After the conference station is connected to the network, your system administrator might ask you to auto-register the conference station using TAPS (Tool for Auto-Registered Phones Support). TAPS might be used either for a new conference station or

An Overview of Your Conference Station

Your Cisco Unified IP Conference Station 7937G is a full-feature conference station that provides voice communication over the same data network that your computer uses. It allows you to place and

8 Volume Down

Placing a Call—Additional Options

You can place calls using special features and services

Tips

- Engaging the Hold feature typically generates music or a beeping tone.
- A held call is indicated by the Hold icon:

Transferring Calls

Transfer redirects a connected call. The **Transfer** key is the number to which you want to transfer the call.

Tips

- If on-hook transfer is enabled on the conference station, you can either hang up to complete the call, or press **Transfer**, and then hang up.

Tips

- Enter the call forward target number exactly as you

Privacy

Directory Dialing

Configuring Fast Dials on the Web

This section describes how to assign Fast Dials from your User Options web pages. To access your User Options web pages, see [Accessing Your User Options Web Pages](#), page

Log out of
Cisco WebDioMC.4y/Span <.0048 Tdb

Understanding Additional Configuration Options

Viewing Conference Station Administration Data

Your system administrator might as

U

User Options web pages [37–47](#)

V

