

How to Telnet to a Crown Printer

Telnet From a PC:

1. Go to Start-Programs-MS-DOS Prompt (Start-Programs-Command Prompt for NT).
2. In the DOS window, type:

telnet IP address of the printer

and press Enter. for Example: telnet 161.33.131.62

You will see output like the following if everything is working correctly:

```
QMS CrownNet Rev 4.61
QMS magicolor 2; Release 1.1; Firmware 1; Processor R4300; OS; 0;

Console Manager
QMS Magicolor 2->
QMS Magicolor 2->Idle
QMS Magicolor 2->█
```

Telnet From a UNIX Box:

1. Open a window on your UNIX box.
2. In the window, type:

telnet IP address of the printer

and press Enter. For example: telnet 161.33.131.62