

Manages black and white



→ How to use the machine Panel

TOUCH SCREEN

- Change to the mode
- Adjust brightness of the touch screen
- Click to login/logout
- Energy saving ON/OFF
- Specify panel settings
- Switch to Enlarge display mode
- Open **HELP** screen

Buttons:

- Main Power
- Power ON/OFF
- Mode Memory
- Utility/Counter
- RESET the settings
- Interrupt a copy job
- STOP a process
- START a process
- Input a value or a number
- CLEAR a value

Touch Screen Labels:



- Job List
- Check Job
- Basic
- Original Setting
- Original Type
- Application
- Density Auto
- Paper
- Zoom
- Finishing
- Separate Scan
- Auto Rotate OFF
- Job Details
- 02/02/2008
- 10:10
- 100%

→ Touch Screen (Basic screen)

Labels and Functions:

- Open Job list screen
- Message display
- Number of copies
- Change to the functions of the tab
- Choose function of the **BASIC** tab
- Displays the result of specified settings
- Displays job details
- Icons indicating Machine/Job status
- Open **FINISHING** screen
- Indication of free memory
- Start Separate scan function
- Activate/Deactivate automatic rotation of the scanned image.

→ Basic functions Make a copy

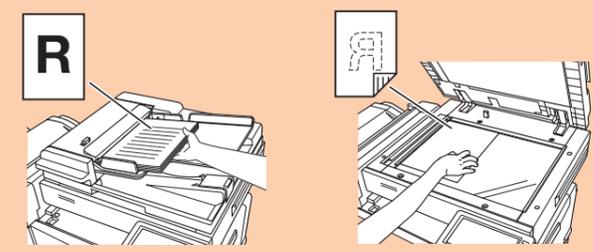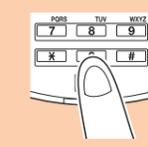- Position the original(s).
 
- Type in the number of copies.
 
- Press the **START** key.
 

→ Stop a copy process

- Press the **STOP** key.
 

→ Clear a value

- Press the **CLEAR** key.
 




Manages black and white

Basic functions

Zoom


1. Position the original(s).
2. Touch **ZOOM** in the basic screen.
3. Touch the desired function.
4. Touch **OK**.
5. Press the **START** key.

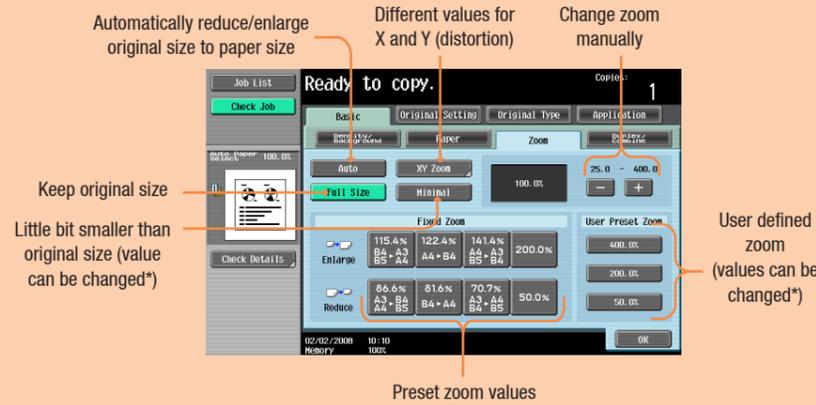

*refer to User Manual for Copy Operations

Density/Background

1. Position the original(s).
2. Touch **DENSITY/BACKGROUND** in the basic screen.
3. Touch the desired function.
4. Touch **OK**.
5. Press the **START** key.

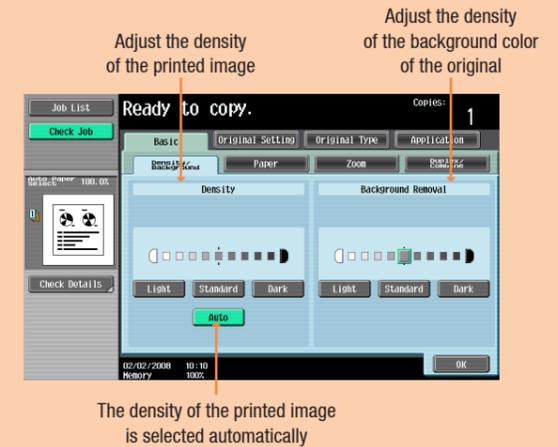

The density of the printed image is selected automatically

Duplex

1. Position the original(s).
2. Touch **DUPLEX/COMBINE** in the basic screen.
3. Touch the desired function.



4. Touch **OK**.
5. Press the **START** key.

Finishing (only with Finisher)

1. Position the original(s).
2. Touch **FINISHING** in the basic screen.
3. Touch the desired function.*



4. Touch **OK**.
5. Press the **START** key.

*available functions depend on machine/finisher

Create a booklet

1. Position the original(s).
2. Touch **FINISHING** in the basic screen.
3. Touch **FOLD/BIND**.
4. Touch the desired function.*



5. Touch **OK** (2x).
6. Press the **START** key.

*available functions depend on machine/finisher

Application functions

Image adjust

Centers the original image on copy paper.




1. Position the original(s).



2. Touch **IMAGE ADJUST** in the application screen.



3. Touch **CENTERING**.
4. Touch **OK**.
5. Press the **START** key.

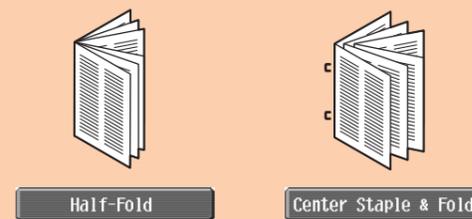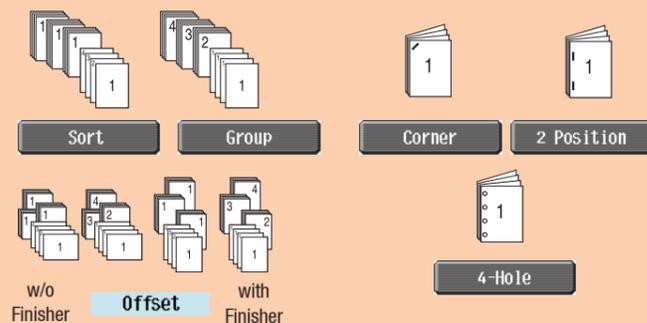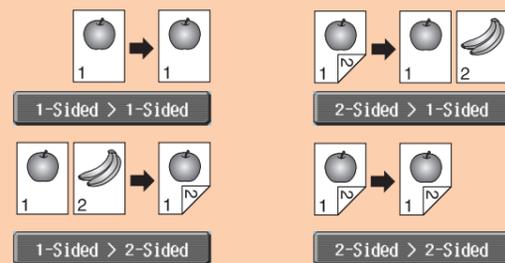




Manages black and white

→ Fax operations

Send a fax (only with Fax option)

1. Position the original(s).
2. Press the **FAX/SCAN** key on the panel.
3. Enter the fax number and press the **START** key.

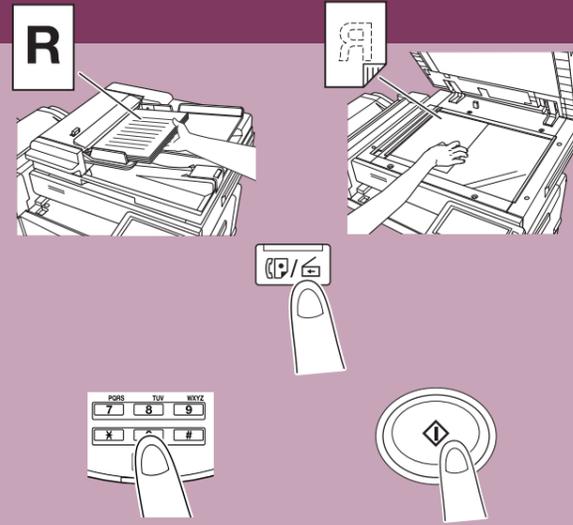

→ Network scan operations

Search for an e-mail address (LDAP)

1. Press the **FAX/SCAN** key on the panel.
2. Touch **ADDRESS SEARCH**.
3. Touch **SEARCH**.
4. Input a keyword.
5. Touch **START SEARCH**.
6. Touch **OK**.



→ Application functions

Save in user box

1. Position the original(s).
2. Touch **SAVE IN USER BOX** in the application screen.



3. Touch **USER BOX**.



4. Touch the desired box.
5. Touch **OK**.
6. Touch **DOCUMENT NAME**.
7. Enter a document name.
8. Touch **OK** (2x).
9. Press the **START** key.

→ Box operations

Print from user box

1. Press the **BOX** key on the panel.
2. Touch **USE DOCUMENT**.



3. Touch the desired box. Input a password if required.
4. Touch the desired document.



5. Touch **PRINT**.
6. Press the **START** key.

→ Scan to e-mail (Direct input)

1. Position the original(s).
2. Press the **FAX/SCAN** key on the panel.
3. Touch **DIRECT INPUT**.
4. Touch **E-MAIL**.



5. Enter the destination address.
6. Touch **OK**.
7. Press the **START** key.

→ Sending data to multiple destinations

1. Position the original(s).
2. Press the **FAX/SCAN** key on the panel.
3. Touch **ADDRESS BOOK**.



4. Specify two or more recipients.
5. Press the **START** key.