




KONICA MINOLTA

# **bizhub** 500/420/360

**User Manual [Network Scanner Operations]**

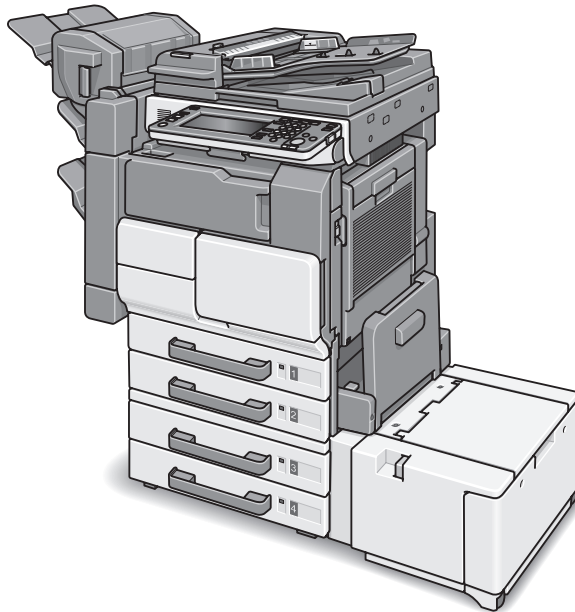

The essentials of imaging







---

# Contents

## 1 Introduction

<b>1.1</b>	<b>Trademarks and Registered Trademarks .....</b>	<b>1-4</b>
	License information.....	1-4
	OpenSSL Statement .....	1-5
	NetSNMP License.....	1-7
<b>1.2</b>	<b>About This Manual.....</b>	<b>1-11</b>
	Structure of the Manual .....	1-11
	Notation.....	1-11
<b>1.3</b>	<b>Explanation of manual conventions.....</b>	<b>1-12</b>
	Safety advices.....	1-12
	Sequence of action.....	1-12
	Tips .....	1-13
	Special text markings.....	1-13
<b>1.4</b>	<b>User manuals .....</b>	<b>1-14</b>
	User manual – Copy Operations.....	1-14
	User manual – Network Scanner Operations <this manual> .....	1-14
	User manual – Box Operations .....	1-14
	User manual – Enlarge Display Operations.....	1-14
	User manual – FK-502 Facsimile Operations .....	1-14
	User manual – Network Fax Operations .....	1-14
	IC-204 User manual .....	1-15

## 2 Before Using the Scan Functions

<b>2.1</b>	<b>Environment Required for Using the Scan Functions.....</b>	<b>2-3</b>
<b>2.2</b>	<b>Available Scanning Functions .....</b>	<b>2-4</b>
	Sending the Scanned Data in an E-Mail Message.....	2-5
	Sending the Scanned Data as Files (FTP).....	2-6
	Sending the Scanned Data to a Computer on the Network (SMB) .....	2-7
	Saving the Scanned Data in Boxes.....	2-8
<b>2.3</b>	<b>Settings for Using Network/Scanning Functions .....</b>	<b>2-9</b>
	Specifying Network Settings.....	2-9
	Registering Destinations and Specifying Their Settings .....	2-10
	Setting the From Address .....	2-11
	Specifying the Scan Settings .....	2-11
	Specifying Program Settings .....	2-12
	Specifying Default Scan Settings.....	2-12



<b>2.4</b>	<b>Connecting to the Network .....</b>	<b>2-13</b>
	Network Connection .....	2-13
<b>2.5</b>	<b>Flow Chart of Setup and Scanning Operations .....</b>	<b>2-14</b>

### **3 Scanning Documents**

<b>3.1</b>	<b>Control Panel .....</b>	<b>3-3</b>
<b>3.2</b>	<b>Displaying the Scan Screen.....</b>	<b>3-6</b>
<b>3.3</b>	<b>Sending Data in an E-Mail Message (Scan to E-Mail).....</b>	<b>3-8</b>
	Scan to E-Mail .....	3-8
	Using Programs .....	3-9
	Selecting Group Addresses .....	3-11
	Selecting Destinations From the Address Book .....	3-14
	Searching the Destination.....	3-16
	Entering the Addresses Directly .....	3-19
<b>3.4</b>	<b>Sending Data to a Server (Scan to FTP).....</b>	<b>3-22</b>
	Scan to FTP .....	3-22
	Using Programs .....	3-23
	Selecting Group Addresses .....	3-25
	Selecting Destinations From the Address Book .....	3-28
	Entering the Addresses Directly .....	3-31
<b>3.5</b>	<b>Sending Data to a PC on the Network (Scan to SMB) .....</b>	<b>3-35</b>
	Scan to SMB.....	3-35
	SMB Transmission to Windows File Sharing (Mac OS X)/Samba (Linux/Unix) .....	3-36
	SMB Transmission to Windows 98 SE/Windows Me .....	3-36
	Using Programs .....	3-37
	Selecting Group Addresses .....	3-39
	Selecting Destinations From the Address Book .....	3-42
	Entering the Addresses Directly .....	3-45
<b>3.6</b>	<b>Specifying the Scan Settings.....</b>	<b>3-49</b>
	Available Settings .....	3-49
	File Type.....	3-51
	Resolution .....	3-54
	Simplex/Duplex.....	3-55
	Original Type.....	3-56
	Scan Size .....	3-57
	To enlarge/reduce the scan to a preset zoom ratio (Zoom setting) .....	3-59
	To specify the zoom ratio for scanning (Zoom setting) .....	3-61
	Density .....	3-63
	Original Setting .....	3-64
	Book Scanning (Application).....	3-67
	Booklet Pagination (Application).....	3-70



Annotations (Application) .....	3-72
Frame Erase (Application) .....	3-74
Center Erase (Application) .....	3-76
Non-Image Area Erase (Application) .....	3-78
Neg-/Pos. Reverse (Application) .....	3-79
Separate Scan.....	3-80
File Name .....	3-82
To change the file name.....	3-83
<b>3.7 Checking the Settings .....</b>	<b>3-84</b>
Checking the Settings.....	3-84
To check a job.....	3-85
Deleting Unneeded Destinations .....	3-89
Specifying E-Mail Settings .....	3-91
To change the e-mail settings.....	3-93
<b>3.8 Checking the Scanner Transmission Log .....</b>	<b>3-94</b>
Displaying the Current Jobs List .....	3-94
Displaying the Job History List .....	3-95
Displayed Information .....	3-96

## 4 Specifying Settings From the Control Panel

<b>4.1 Settings on the Control Panel .....</b>	<b>4-3</b>
Utility Types .....	4-3
Other Related Settings.....	4-5
<b>4.2 Displaying Setup Screens .....</b>	<b>4-6</b>
To display the Scan screen.....	4-6
To display the User Setting screen.....	4-8
To display the Administrator Setting screen .....	4-10
<b>4.3 Registering Abbreviated Destinations.....</b>	<b>4-12</b>
E-Mail Destinations .....	4-12
FTP Destinations .....	4-15
SMB Destinations .....	4-19
Box Destinations .....	4-23
<b>4.4 Registering Group Destinations .....</b>	<b>4-25</b>
To register a group destination .....	4-25
<b>4.5 Registering Program Destinations.....</b>	<b>4-27</b>
To register a program destination.....	4-27
<b>4.6 Specifying E-Mail Settings.....</b>	<b>4-30</b>
Subject.....	4-30
Text .....	4-32



<b>4.7</b>	<b>Setting the Main Scan Mode Screen .....</b>	<b>4-34</b>
	Default Tab.....	4-34
	Program Default.....	4-35
	Address Book Default Index .....	4-37
	Address Type Symbol Display .....	4-39
<b>4.8</b>	<b>Setting the Save Format of the Data to Be Scanned .....</b>	<b>4-40</b>
	Black Compression Level .....	4-40
	To specify the compression level .....	4-40
<b>4.9</b>	<b>One-Touch Registration List .....</b>	<b>4-42</b>
	Address Book List.....	4-42
	Group List .....	4-44
	Program List .....	4-46
	E-Mail Subject/Text List.....	4-48
<b>4.10</b>	<b>Creating Annotation User Boxes .....</b>	<b>4-50</b>
	To create annotation user boxes .....	4-52
<b>4.11</b>	<b>Specifying Network Settings .....</b>	<b>4-55</b>
	To specify network settings .....	4-55
<b>4.12</b>	<b>TCP/IP Settings .....</b>	<b>4-56</b>
	Before Specifying the Settings .....	4-56
	Items To Be Specified.....	4-57
	To specify TCP/IP settings .....	4-59
	IP Filtering .....	4-63
	RAW Port No.....	4-65
<b>4.13</b>	<b>NetWare Settings.....</b>	<b>4-66</b>
	NetWare Parameters.....	4-66
	To specify NetWare settings.....	4-68
	Status.....	4-71
<b>4.14</b>	<b>http Server Settings .....</b>	<b>4-72</b>
	IPP and http Parameters.....	4-72
	To specify IPP and http settings.....	4-73
	Support Operation .....	4-75
	Printer Information .....	4-76
<b>4.15</b>	<b>FTP Settings.....</b>	<b>4-80</b>
	FTP Parameters .....	4-80
	To specify FTP settings .....	4-81
<b>4.16</b>	<b>SMB Settings .....</b>	<b>4-83</b>
	SMB Parameters.....	4-83
	To specify SMB settings .....	4-85
<b>4.17</b>	<b>AppleTalk Settings .....</b>	<b>4-88</b>
	AppleTalk Parameters.....	4-88
	To specify AppleTalk settings.....	4-88



<b>4.18</b>	<b>Enabling LDAP Settings .....</b>	<b>4-90</b>
	Enabling LDAP Parameters.....	4-90
	To specify Enabling LDAP settings.....	4-90
<b>4.19</b>	<b>Setting Up LDAP Settings .....</b>	<b>4-92</b>
	LDAP Server Registration Parameters.....	4-92
	To specify Setting Up LDAP settings.....	4-95
	Initial Setting for Search Details.....	4-100
<b>4.20</b>	<b>Search Default Setting .....</b>	<b>4-102</b>
	To specify the detect default server settings.....	4-102
<b>4.21</b>	<b>E-Mail TX (SMTP) Settings.....</b>	<b>4-103</b>
	E-Mail TX (SMTP) Parameters.....	4-103
	To specify E-Mail TX (SMTP) settings.....	4-105
	SMTP Server Address.....	4-107
	SMTP Detail .....	4-109
	SMTP Authentication .....	4-110
<b>4.22</b>	<b>E-Mail RX (POP) Settings .....</b>	<b>4-113</b>
	E-Mail RX (POP) Parameters.....	4-113
	To specify E-Mail RX (POP) settings.....	4-114
	POP Server Address .....	4-116
<b>4.23</b>	<b>Device Settings .....</b>	<b>4-117</b>
	Device Parameters.....	4-117
	To specify device settings .....	4-118
<b>4.24</b>	<b>Time Adjustment Settings .....</b>	<b>4-119</b>
	Time Adjustment Parameters.....	4-119
	To specify time adjustment settings .....	4-120
	NTP Server Address.....	4-121
<b>4.25</b>	<b>Status Notification Settings.....</b>	<b>4-123</b>
	Status Notification Parameters .....	4-123
	To specify status notification settings .....	4-124
	Notification Item Setting .....	4-125
<b>4.26</b>	<b>Total Counter Report Setting .....</b>	<b>4-126</b>
	To specify the total counter report settings .....	4-127
	Schedule Setting.....	4-128
	To specify the notification address settings .....	4-129
	Notification Address Setting .....	4-130
<b>4.27</b>	<b>PING Confirmation.....</b>	<b>4-132</b>
	PING Confirmation Parameters .....	4-132
	To specify PING confirmation settings .....	4-132
	PING TX Address .....	4-134
<b>4.28</b>	<b>SLP Settings.....</b>	<b>4-136</b>
	To specify SLP settings .....	4-136



<b>4.29</b>	<b>LPD Settings .....</b>	<b>4-137</b>
	To specify LPD settings .....	4-137
<b>4.30</b>	<b>Prefix/Suffix Settings .....</b>	<b>4-138</b>
	Prefix/Suffix Parameters .....	4-138
	To specify the prefix/suffix settings .....	4-139
	Prefix/Suffix Setting .....	4-141
<b>4.31</b>	<b>Action for Invalid Certificate.....</b>	<b>4-143</b>
	To specify the Action for Invalid Certificate settings .....	4-143
<b>4.32</b>	<b>SNMP Settings.....</b>	<b>4-145</b>
	SNMP Parameters .....	4-145
	To specify SNMP settings .....	4-146
	v1/v2c Setting .....	4-147
	v3 Setting .....	4-148
	To specify the v3 settings .....	4-149
<b>4.33</b>	<b>Bonjour Setting .....</b>	<b>4-151</b>
<b>4.34</b>	<b>TCP Socket Setting .....</b>	<b>4-153</b>
<b>4.35</b>	<b>OpenAPI Settings .....</b>	<b>4-155</b>
	Access Setting .....	4-155
	Port No.....	4-156
	SSL .....	4-157
	Authentication .....	4-158
<b>4.36</b>	<b>External Server Authentication .....</b>	<b>4-160</b>
	Using Active Directory .....	4-161
	To specify the external server authentication settings .....	4-162
	Using Novell NDS .....	4-167
	To specify the settings for using Novell NDS .....	4-168
	Using NTLM v1/NTLM v2 .....	4-170
	To specify the settings for using NTLM v1/NTLM v2 .....	4-170

## 5 Specifying Settings Using PageScope Web Connection

<b>5.1</b>	<b>Items That Can Be Specified Using PageScope Web Connection .....</b>	<b>5-3</b>
	User Mode .....	5-3
	Administrator Mode .....	5-4
<b>5.2</b>	<b>Using PageScope Web Connection.....</b>	<b>5-6</b>
	Operating Environment .....	5-6
	Accessing PageScope Web Connection .....	5-7
	Page Structure .....	5-8
	Web Browser Cache.....	5-10
	For Internet Explorer .....	5-10
	For Netscape Navigator.....	5-10



<b>5.3</b>	<b>Logging On and Logging Off .....</b>	<b>5-11</b>
	Logging Off .....	5-11
	Logging On to User Mode (Public User) .....	5-13
	Logging On to User Mode (Registered User/ Box Administrator) .....	5-15
	Logging On to Administrator Mode .....	5-17
<b>5.4</b>	<b>User Authentication (User Mode).....</b>	<b>5-20</b>
	Changing the User Password .....	5-20
	Checking the User Registration Information .....	5-21
<b>5.5</b>	<b>Account Track (User Mode).....</b>	<b>5-22</b>
	To check the account track information .....	5-22
<b>5.6</b>	<b>Address Book.....</b>	<b>5-23</b>
	Registering New Destinations .....	5-23
	To register new destinations .....	5-26
	Editing abbreviated destinations.....	5-27
	Deleting the Address Book .....	5-28
<b>5.7</b>	<b>Group Destination.....</b>	<b>5-29</b>
	To register group destinations .....	5-30
<b>5.8</b>	<b>Program Registration .....</b>	<b>5-32</b>
	To register new destinations .....	5-43
<b>5.9</b>	<b>Temporary One-Touch Registration .....</b>	<b>5-45</b>
	To register temporary destinations .....	5-46
<b>5.10</b>	<b>Subject Registration.....</b>	<b>5-47</b>
	To register the subject .....	5-48
<b>5.11</b>	<b>Text Registration .....</b>	<b>5-49</b>
	To register text.....	5-50
<b>5.12</b>	<b>Administrator Mode.....</b>	<b>5-51</b>
	Basic Operation .....	5-51
<b>5.13</b>	<b>Time Adjustment Setting .....</b>	<b>5-52</b>
	To adjust the time .....	5-52
<b>5.14</b>	<b>User Authentication (Administrator Mode) .....</b>	<b>5-53</b>
	User Registration .....	5-53
	To register a user .....	5-54
	Checking or Changing the Registered User Information .....	5-56
	To check or change the registered user information .....	5-57
	To delete a registered user .....	5-59
	Default Function Permission .....	5-61
	To specify the default function permission settings .....	5-62



<b>5.15</b>	<b>Account Track Registration (Administrator Mode)</b>	<b>5-63</b>
	Account Track Registration	5-63
	To register an account	5-64
	Checking or Changing the Registered Account Information	5-66
	To check or change the registered account information	5-66
	To delete registered accounts	5-68
<b>5.16</b>	<b>Administrator Password</b>	<b>5-70</b>
	To change the administrator password	5-70
<b>5.17</b>	<b>Application Registration</b>	<b>5-71</b>
	Registering an Application	5-71
	New Registration Items of an Application	5-73
	To register an application	5-75
	Items that can Be Specified in Edit Application	5-79
	To edit a registered application	5-84
	To delete a registered application	5-87
<b>5.18</b>	<b>Prefix/Suffix</b>	<b>5-88</b>
	To register prefixes and suffixes	5-89
<b>5.19</b>	<b>Import/Export</b>	<b>5-90</b>
	Importing	5-90
	Exporting	5-90
<b>5.20</b>	<b>Other</b>	<b>5-91</b>
<b>5.21</b>	<b>TCP/IP</b>	<b>5-92</b>
	TCP/IP	5-93
	IP Address Filtering	5-95
<b>5.22</b>	<b>NetWare</b>	<b>5-96</b>
	NetWare Status	5-98
<b>5.23</b>	<b>IPP</b>	<b>5-99</b>
<b>5.24</b>	<b>FTP</b>	<b>5-101</b>
	FTP TX	5-101
	FTP Server	5-102
<b>5.25</b>	<b>SNMP</b>	<b>5-103</b>
<b>5.26</b>	<b>SMB</b>	<b>5-105</b>
	WINS Setting	5-105
	Client Setting	5-106
	Print Setting	5-108
<b>5.27</b>	<b>AppleTalk</b>	<b>5-109</b>
<b>5.28</b>	<b>Bonjour Setting</b>	<b>5-110</b>
<b>5.29</b>	<b>LDAP Setting</b>	<b>5-111</b>
	LDAP Setting	5-111
	LDAP Server Registration	5-112



<b>5.30</b>	<b>E-Mail Setting.....</b>	<b>5-115</b>
	E-Mail RX (POP).....	5-115
	E-Mail TX (SMTP).....	5-117
<b>5.31</b>	<b>SSL/TLS.....</b>	<b>5-120</b>
	SSL/TLS Setting.....	5-122
	To create a certificate .....	5-124
	SSL/TLS Setting — Install a Certificate .....	5-126
	Set an Encryption Strength.....	5-127
	Remove a Certificate.....	5-129
	Set Mode using SSL .....	5-131
	Processing Mode .....	5-133
	To specify the mode using SSL .....	5-134
<b>5.32</b>	<b>Authentication.....</b>	<b>5-135</b>
	User Authentication/Account Track.....	5-135
	To specify the User Authentication and Account	
	Track settings.....	5-136
	Auto Logout .....	5-137
<b>5.33</b>	<b>OpenAPI.....</b>	<b>5-138</b>
<b>5.34</b>	<b>TCP Socket Setting .....</b>	<b>5-139</b>
	To specify the TCP Socket Settings .....	5-140
<b>6</b>	<b>Scan Function Troubleshooting</b>	
<b>6.1</b>	<b>Error List.....</b>	<b>6-3</b>
<b>7</b>	<b>Appendix</b>	
<b>7.1</b>	<b>Product Specifications.....</b>	<b>7-3</b>
	Scanning Functions .....	7-3
	Network Function.....	7-4
	Status Indicators .....	7-4
	10/100Base-T UTP Cable Specifications .....	7-5
<b>7.2</b>	<b>Entering text.....</b>	<b>7-6</b>
	To type text .....	7-8
	List of Available Characters .....	7-8
<b>7.3</b>	<b>Glossary.....</b>	<b>7-9</b>
<b>7.4</b>	<b>Index .....</b>	<b>7-15</b>









# Introduction







# 1 Introduction

Thank you for choosing this machine.

This user manual contains details on the operation of the network connection and scanner functions of the bizhub 500/420/360, precautions on its use, and basic troubleshooting procedures. In order to ensure that this machine is used correctly and efficiently, carefully read this user manual before using the machine. After reading the manual, store it in the designated holder so that it can easily be referred to when questions or problems arise during operation.

The illustrations used in this manual may appear slightly different from views of the actual equipment.



## 1.1 Trademarks and Registered Trademarks

KONICA MINOLTA, KONICA MINOLTA Logo, and The essentials of imaging are registered trademarks or trademarks of KONICA MINOLTA HOLDINGS, INC.

PageScope and bizhub are registered trademarks or trademarks of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

Netscape Communications, the Netscape Communications logo, Netscape Navigator, Netscape Communicator, and Netscape are trademarks of Netscape Communications Corporation.

This machine and PageScope Box Operator are based in part on the work of the Independent JPEG Group.

Compact-VJE  
Copyright 1986-2003 VACS Corp.

RC4<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.

RSA<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. RSA BSAFE<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.

### License information

This product includes RSA BSAFE  
Cryptographic software from RSA Security  
Inc.





## OpenSSL Statement

### *OpenSSL License*

Copyright © 1998-2000 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:  
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:  
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young ([ey@crypt-Soft.com](mailto:ey@crypt-Soft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).



### ***Original SSLeay License***

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved. This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code.

The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:  
"This product includes cryptographic software written by Eric Young (eay@crypt-soft.com)"  
The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related.
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:  
"This product includes software written by Tin Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT



(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

All other product names mentioned are trademarks or registered trademarks of their respective companies

## **NetSNMP License**

Part 1: CMU/UCD copyright notice: (BSD like)

Copyright 1989, 1991, 1992 by Carnegie Mellon University Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Part 2: Networks Associates Technology, Inc copyright notice (BSD)

Copyright © 2001-2003, Networks Associates Technology, Inc All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.



\* Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### Part 3: Cambridge Broadband Ltd. copyright notice (BSD)

Portions of this code are copyright © 2001-2003, Cambridge Broadband Ltd. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- \* The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



#### Part 4: Sun Microsystems, Inc. copyright notice (BSD)

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- \* Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Part 5: Sparta, Inc copyright notice (BSD)

Copyright © 2003-2004, Sparta, Inc All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- \* Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.



THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Part 6: Cisco/BUPTNIC copyright notice (BSD)

Copyright © 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- \* Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



## 1.2 About This Manual

This user manual covers the bizhub 500/420/360 network and scanning functions.

This section introduces the structure of the manual and notations used for product names, etc.

This manual is intended for users who understand the basic operations of computers and the machine. For operating procedures of the Windows or Macintosh operating system and application programs, refer to the respective manuals.

### Structure of the Manual

This manual consists of the following chapters.

Chapter 1 Introduction

Chapter 2 Before Using the Scan Functions

Chapter 3 Scanning Documents

Chapter 4 Specifying Settings From the Control Panel

Chapter 5 Specifying Settings Using PageScope Web Connection

Chapter 6 Scan Function Troubleshooting

Chapter 7 Appendix

Lists the product specifications and the characters that can be entered from the control panel.

### Notation

Product Name	Notation in the Manual
bizhub 500/420/360	This machine, 500/420/360
Microsoft Windows 98	Windows 98
Microsoft Windows Me	Windows Me
Microsoft Windows NT 4.0	Windows NT 4.0
Microsoft Windows 2000	Windows 2000
Microsoft Windows XP	Windows XP
When the operating systems above are written together	Windows 98/Me Windows NT 4.0/2000/XP Windows 98/Me/NT 4.0/2000/XP



## 1.3 Explanation of manual conventions

The marks and text formats used in this manual are described below.

### Safety advices



## DANGER

**Failure to observe instructions highlighted in this manner may result in fatal or critical injuries in fact of electrical power.**

→ Observe all dangers in order to prevent injuries.

---



## WARNING

**Failure to observe instructions highlighted in this manner may result in serious injuries or property damage.**

→ Observe all warnings in order to prevent injuries and to ensure safe use of the machine.

---



## CAUTION

**Failure to observe instructions highlighted in this manner may result in slight injuries or property damage.**

→ Observe all cautions in order to prevent injuries and to ensure safe use of the machine.

---

### Sequence of action

**1** The number 1 as formatted here indicates the first step of a sequence of actions.

**2** Subsequent numbers as formatted here indicate subsequent steps of a sequence of actions.

**?** Text formatted in this style provides additional assistance.

→ Text formatted in this style describes the action that will ensure the desired results are achieved.

An illustration inserted here shows what operations must be performed.



## Tips



...

### Note

*Text highlighted in this manner contains useful information and tips to ensure safe use of the machine.*



...

### Reminder

*Text highlighted in this manner contains information that should be reminded.*



### Detail

*Text highlighted in this manner contains references for more detailed information.*

## Special text markings

[Stop] key

The names of keys on the control panel are written as shown above.

### MACHINE SETTING

Display texts are written as shown above.



## 1.4 User manuals

The following user manuals have been prepared for this machine.

### **User manual – Copy Operations**

This manual contains details on basic operations and the operating procedures for the various copy functions.

- Refer to this user manual for details on operating procedures for copy functions, including precautions on installation/use, turning the machine on/off, loading paper, and troubleshooting operations such as clearing paper misfeeds.

### **User manual – Network Scanner Operations <this manual>**

This manual contains details on specifying network settings for standard equipment and on operations for scanning functions.

- Refer to this user manual for details on operating procedures for network functions and for using Scan to E-Mail, Scan to FTP and Scan to SMB.

### **User manual – Box Operations**

This manual contains details on operating procedures for using the boxes.

- Refer to this user manual for details on operating procedures for using the boxes on the hard disk.

### **User manual – Enlarge Display Operations**

This manual contains details on operating procedures for using copy, network scanner and fax functions in Enlarge Display mode.

- Refer to this user manual for details on operating procedures in Enlarge Display mode.

### **User manual – FK-502 Facsimile Operations**

This manual contains details on operating procedures for faxing.

- Refer to this user manual for details on operating procedures for fax functions when the fax kit is installed.

### **User manual – Network Fax Operations**

This manual contains details on operating procedures for network faxing.

- Refer to this user manual for details on operating procedures for network fax functions (Internet Fax/IP Address Fax).



**IC-204 User manual**

This manual contains details on operating procedures using the optional image controller (IC-204).

- For details on the procedures for using the printer functions, refer to the user manual (PDF file) provided on the User Software CD-ROM included with IC-204.









## **Before Using the Scan Functions**







## 2 Before Using the Scan Functions

### 2.1 Environment Required for Using the Scan Functions

The following conditions are required to use the network and scanning functions of this machine.

- The machine is connected to the network. (required)  
The functions can be used over a TCP/IP network. For details on the connection, refer to "Connecting to the Network" on page 2-13. Also, network parameters such as the IP address of this machine must be specified in order to use the machine on the network. For details, refer to "Settings for Using Network/Scanning Functions" on page 2-9.



## 2.2 Available Scanning Functions

"Scanning" refers to the operation of reading the image of a document fed through the ADF or placed on the original glass. The scanning functions can be used to temporarily store the scanned data in the internal memory of the machine and transmit the data in an e-mail message over the network or upload the data to a file server.

With the scanning functions, data can be sent to up to 516 destinations at the same time.

In addition, if an optional hard disk is installed, the data can be stored on the hard disk of this machine. This function can be used from the Box mode, which is described in the User manual [Box Operations].

**Note**


*The maximum number of destinations that can be selected at the same time is 516 (500 programmed destinations, 5 e-mail, FTP and SMB destinations entered directly and 1 box destination (Only when the hard disk is installed)).*



### **Sending the Scanned Data in an E-Mail Message**

The scanned data can be sent to a specified e-mail address. The destination is specified from the touch panel of this machine, and the scanned data is sent as an e-mail attachment.

For details, refer to "Sending Data in an E-Mail Message (Scan to E-Mail)" on page 3-8.

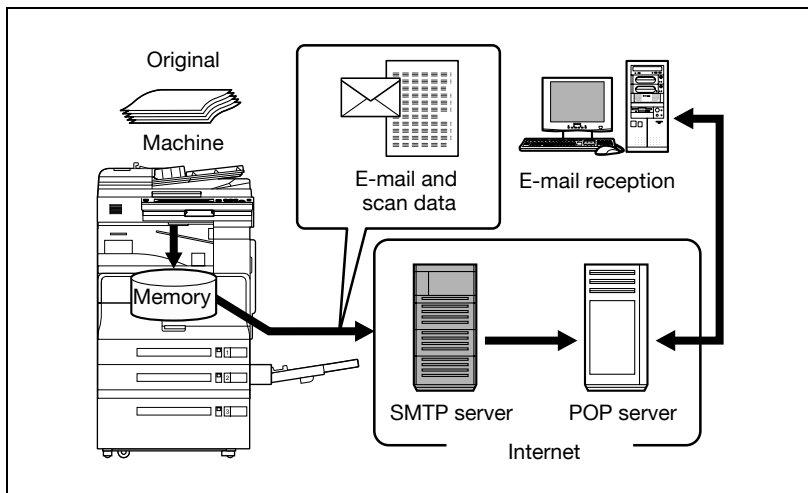




## **Sending the Scanned Data as Files (FTP)**

The scanned data is uploaded to a specified FTP server. The FTP server address, login password, and other information are entered from the touch panel of this machine.

The data files uploaded to the FTP server can be downloaded from a computer on the network.

For details, refer to "Sending Data to a Server (Scan to FTP)" on page 3-22.

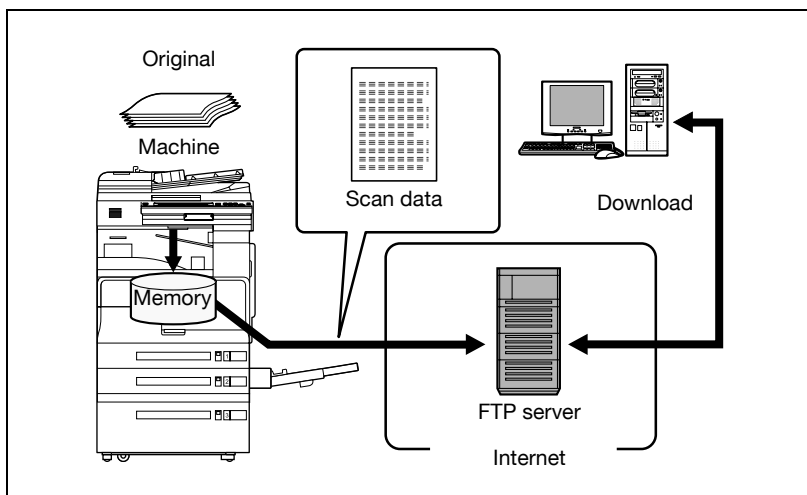




### **Sending the Scanned Data to a Computer on the Network (SMB)**

The scanned data can be sent to a shared folder on a specified computer. The name of the destination computer, login password, and other information are entered from the touch panel of this machine.

For details, refer to "Sending Data to a PC on the Network (Scan to SMB)" on page 3-35.

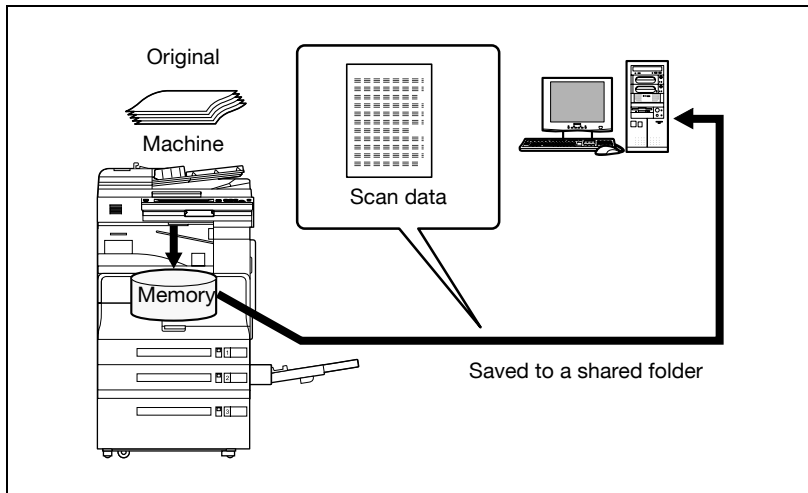




## Saving the Scanned Data in Boxes

The scanned data can be saved in boxes created on the machine's internal hard disk. The data can be used in other applications. The file name can be entered from the touch panel of the machine.

In addition, if the scanned data is saved in "Annotation User box", you can deliver it over the Internet by adding any domain name and the delivery date and time.

For the procedure to save in an annotation user box, refer to "Annotations (Application)" on page 3-72. For saving other data in a box or reusing the data that has been saved, refer to User manual [Box Operations].

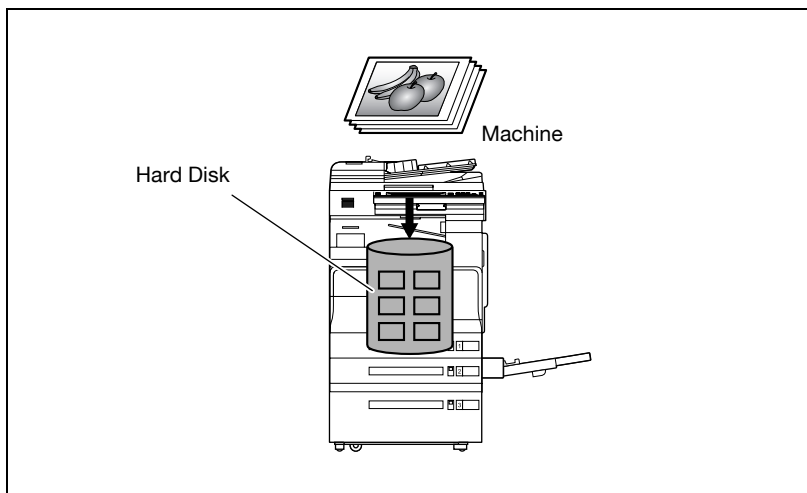



## 2.3 Settings for Using Network/Scanning Functions

It is recommended that the settings described below be specified before using the network/scanning functions. The network settings described in "Specifying Network Settings" must be specified first. Set other items as necessary.



### **Detail**

*For details on specifying network settings, refer to the chapters listed below.*

*"TCP/IP Settings" on page 4-56*

*"E-Mail TX (SMTP) Settings" on page 4-103*

*"Specifying Settings Using PageScope Web Connection" on page 5-3*

### **Specifying Network Settings**

An IP address must be assigned to the machine and settings such as the SMTP server must be specified to use the machine on the network. Be sure to set them.

There are two methods for specifying settings. One method is to specify the settings from the touch panel of this machine. The other method is to use PageScope Web Connection from a Web browser on a computer on the network.



## Registering Destinations and Specifying Their Settings

The destinations (recipients) of scanned data must be registered.

The following registration methods are available.

- Register from the touch panel of the machine.
- Use PageScope Web Connection from a computer on the network.

The following types of destinations can be registered.

Type	Description
Abbreviated Destination	The destination can be selected with one button.
Group	Multiple destinations can be registered in groups. E-mail, FTP, SMB, and box destinations can be registered together in a single group.



### Note

*The destination can also be entered before scanning. This is called "direct input". For details, refer to "Entering the Addresses Directly" on page 3-19.*



### Detail

*For details on registering destinations and specifying settings, refer to the sections listed below.*

*"Registering Abbreviated Destinations" on page 4-12*

*"Registering Group Destinations" on page 4-25*



Setting the From Address

To perform Scan to E-Mail, the From address must be registered. The From address is the address that indicates the sender when data is sent. Normally, it is recommended that the e-mail address of administrator registration be used.

If the e-mail address of administrator registration is not specified, the sender e-mail address must be entered for each Scan to E-mail operation. Note that Scan to E-Mail is not possible if the From address is not entered.



Note

*When the user authentication setting is enabled, the e-mail address that is specified for each user becomes the From address.*

Specifying the Scan Settings

The following scan settings can be specifying when scanning a document. These settings are specified from the touch panel of the machine.

Item	Description
File Type	Selects the file type for saving the scanned data.
Resolution	Selects the scan resolution.
Simplex/Duplex	Selects whether to scan one side of the document or both sides.
Original Type	Sets the image type of the scanned document.
Scan Size	Sets the paper size to be scanned.
Zoom	Sets the zoom ratio for scanning. Frequently used zoom ratios can be stored.
Density	Specify the density for scanning.
Original Setting	Specifies the type of document that is loaded, for example, if it contains mixed page sizes or is folded in a zigzag.
Application	Provides functions for adjusting the image to be scanned, for example, for scanning books and for scanning pages.



Detail

*For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.*



## Specifying Program Settings

The destination and scan settings can be registered together as a single program. This is convenient for frequently scanning documents and sending data under the same conditions.

These settings are specified from the touch panel of the machine.



### Detail

*For details, refer to "Registering Program Destinations" on page 4-27.*

## Specifying Default Scan Settings

The settings that are selected when [Scan] in the control panel is touched can be specified.



### Detail

*For details, refer to "Setting the Save Format of the Data to Be Scanned" on page 4-40.*



## 2.4 Connecting to the Network

The machine can be connected to the network.




### Reminder

*The machine can be connected via a parallel or USB connection.*

*However, be sure to connect to the network to use the scanner function.*

### Network Connection


Connect a UTP cable (category 5 or later recommended) from the network to the Ethernet connector on the machine.

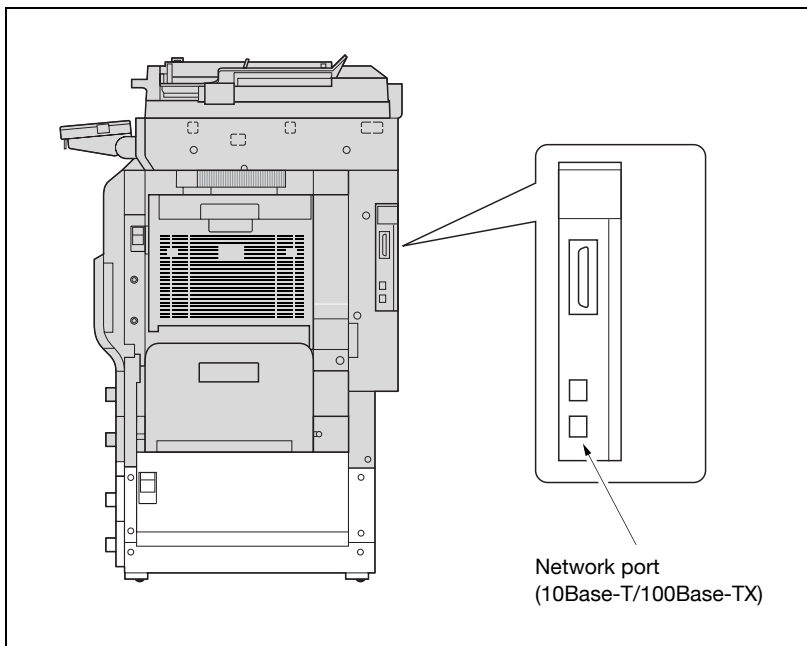



## 2.5 Flow Chart of Setup and Scanning Operations

The sequence from the setup operations required to use the scanning functions to the scanning operation is shown below.

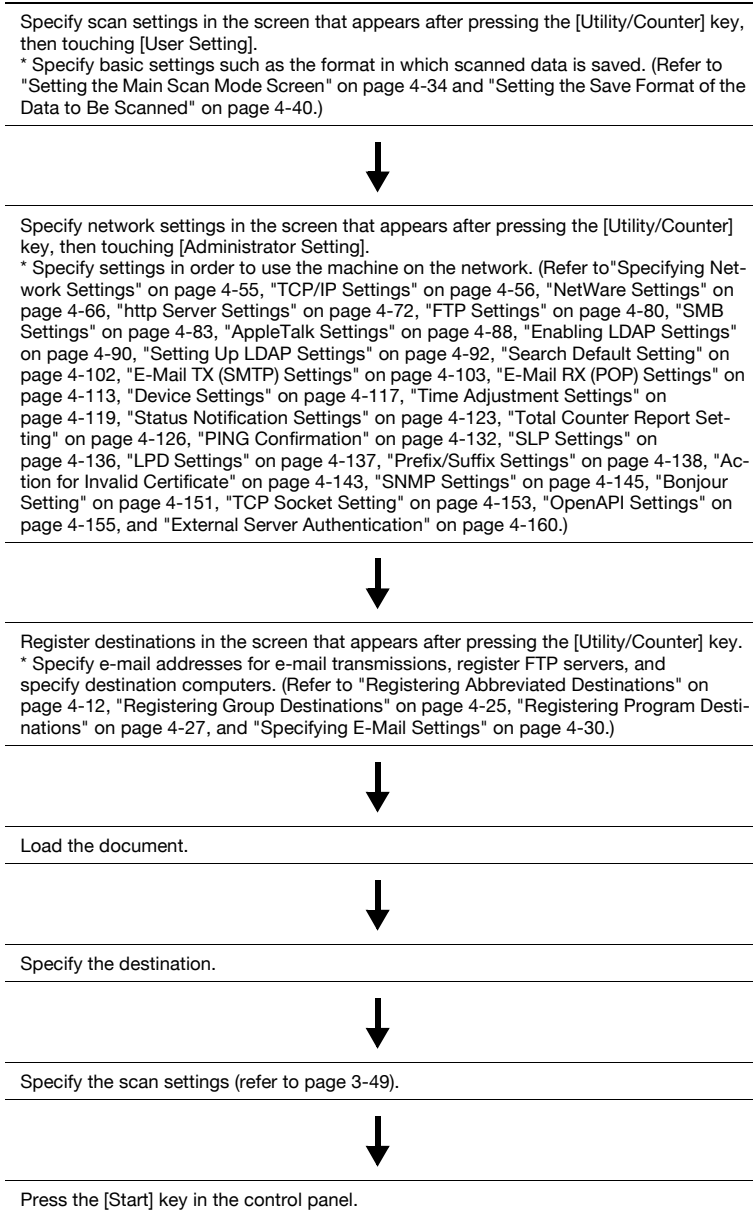





---

The document is scanned, and the data is transmitted.

---

**Note**

*Some settings that can be specified on the control panel can also be specified from a computer over a network using PageScope Web Connection. For details, refer to "Specifying Settings Using PageScope Web Connection" on page 5-3.*









# Scanning Documents








# 3 Scanning Documents

## 3.1 Control Panel

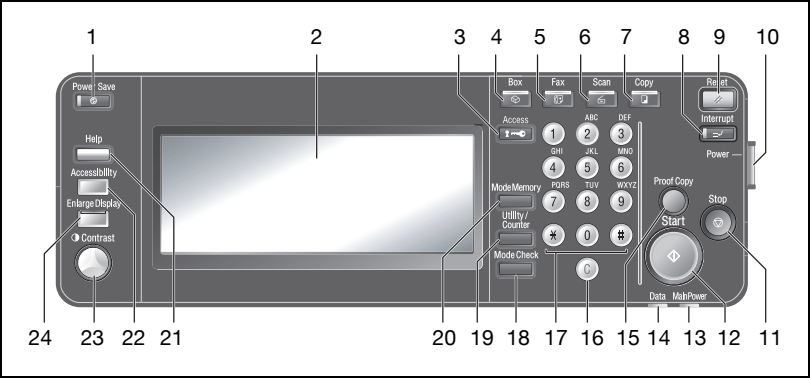

No.	Name	Description
1	[Power Save] key	Press to enter Low Power mode. While the machine is in Low Power mode, the indicator on the [Power Save] key lights up in green and the touch panel goes off. To cancel Low Power mode, press the [Power Save] key again.
2	Touch panel	Displays various screens and messages. Specify the various settings by directly touching the panel.
3	[Access] key	If user authentication or account track settings have been applied, press this key after entering the user name and password (for user authentication) or the account name and password (for account track) in order to use this machine.
4	[Box] key	Press to enter Box mode. While the machine is in Box mode, the indicator on the [Box] key lights up in green. For details, refer to the User manual [Box Operations].
5	[Fax] key	Press to enter Fax mode. While the machine is in Fax mode, the indicator on the [Fax] key lights up in green. For details, refer to the User manual [Facsimile Operations].
6	[Scan] key	Press to enter Scan mode. While the machine is in Scan mode, the indicator on the [Scan] key lights up in green.



No.	Name	Description
7	[Copy] key	Press to enter Copy mode. (As a default, the machine is in Copy mode.) While the machine is in Copy mode, the indicator on the [Copy] key lights up in green. For details, refer to the User manual [Copy Operations].
8	[Interrupt] key	Press to enter Interrupt mode. While the machine is in Interrupt mode, the indicator on the [Interrupt] key lights up in green and the message "Now in Interrupt mode." appears on the touch panel. To cancel Interrupt mode, press the [Interrupt] key again.
9	[Reset] key	Press to clear all settings (except programmed settings) entered in the control panel and touch panel.
10	Auxiliary power button	Pressed to turn on/off machine operations, for example, for copying, printing or scanning. When turned off, the machine enters a state where it conserves energy.
11	[Stop] key	Stops reading the original.
12	[Start] key	Press to start the operation that is selected Box mode, Fax mode, Scan mode or Copy mode. While in Fax mode, fax transmission is started. When this machine is ready to begin operation, the indicator on the [Start] key lights up in green. If the indicator on the [Start] key lights up in orange, operation cannot begin.
13	Main Power indicator	Lights up in green when the machine is turned on with the main power switch.
14	Data indicator	Flashes in green while a print job is being received. Lights up in green when data is being printed.
15	[Proof Copy] key	Not used for Scan mode.
16	[C] (clear) key	Press to erase a value entered using the keypad.
17	Keypad	Use to type in the number. Use to type in the telephone numbers and various set values.
18	[Mode Check] key	Press to display screens showing the specified settings.
19	[Utility/Counter] key	Press to display the Meter Count screen and the Utility screen.
20	[Mode Memory] key	Not used for Scan mode.
21	[Help] key	Press to display the Help Main Menu screen, where descriptions of the various functions and details of operations can be displayed. For details, refer to User manual (Copy Operations).
22	[Accessibility] key	Press to display the screen for specifying user accessibility functions.
23	Contrast dial	Use to adjust the contrast of the touch panel.
24	[Enlarge Display] key	Press to enter Enlarge Display mode.





## CAUTION

**To prevent damage to the touch panel, do not push down on the touch panel with force.**

→ Also, do not push down on the touch panel using hard or sharp objects.

---




## 3.2 Displaying the Scan Screen

Display the Scan mode screen in order to perform scanning operations.

Turn the machine on. When the machine is ready to make copies, the Basic screen appears.

Press the [Scan] key in the control panel to display the Scan mode screen.

The displayed functions and modes can be selected by gently touching the buttons that are displayed in the screen.

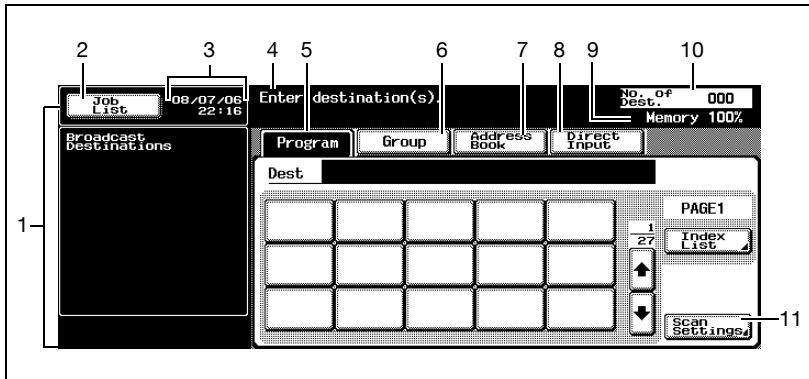

No	Name	Description
1	Sub display area	This area displays destinations, etc.
2	[Job List] button	Displays jobs being performed and jobs being stored. Various commands for checking and managing jobs are available.
3	Date/Time display area	Displays the current date/time.
4	Message display area	Displays the machine status and details on operations that must be performed.
5	[Program] button	Displays destinations that are registered in programs.
6	[Group] button	Displays destinations that are registered in groups.
7	[Address Book] button	Used to Search for destinations that are registered in the address book.
8	[Direct Input] button	Used to type in the destination when performing Scan to E-mail, Scan to FTP, or Scan to SMB operations or to select the box where the job is to be stored. This button does not appear if the [Manual Destination Input] on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to "Restrict".
9	Available memory display	Shows the amount of available memory that is used during the scanning operation.



No	Name	Description
10	Address number display area	Shows the number of specified addresses.
11	[Scan Settings] button	Used to specify scan settings.



### 3.3 Sending Data in an E-Mail Message (Scan to E-Mail)

#### Scan to E-Mail

The Scan to E-mail operation is used to send images scanned on this machine to an e-mail address as an attachment.

The methods described below are available for specifying the destination. The methods can also be combined, for example, by selecting a group destination, then adding other destinations through direct input.

**Note**

*For the procedure for sending e-mail, refer to "Sending the Scanned Data in an E-Mail Message" on page 2-5.*




## Using Programs

"Program" refers to a set of destination addresses and scan settings that are registered together. This feature is convenient for frequently scanning documents and sending data under the same conditions. The following procedure describes how to send data by selecting a program that has been registered in advance.

For details on registering programs, refer to "Registering Program Destinations" on page 4-27.

- 1 Press the [Scan] key on the control panel.


The Scan mode screen appears.

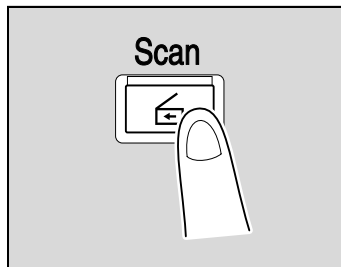

- 2 Touch [Program].


The selected destinations are listed under "Broadcast Destinations". Other destination addresses can be added using the address book or through direct input.

Only the destinations that can be specified are displayed. For example, fax destinations are not displayed.

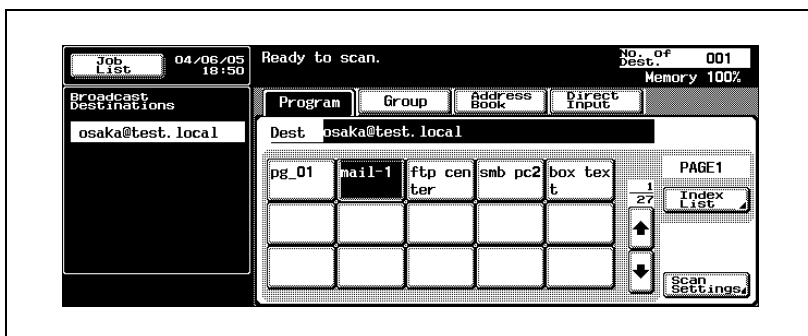




- 3 Touch [Scan Settings] to check the specified scan settings. The specified settings can also be changed.

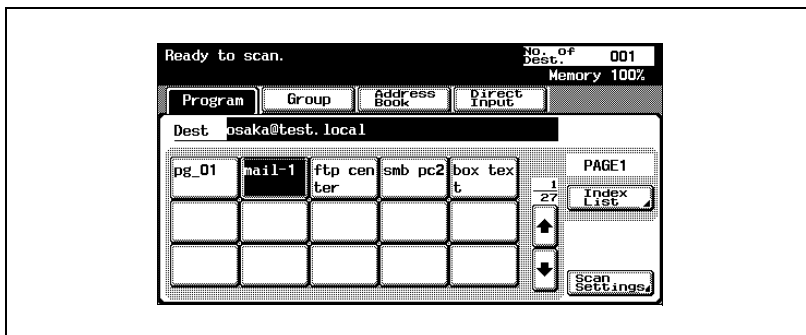

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 4 After checking the settings, touch [OK].

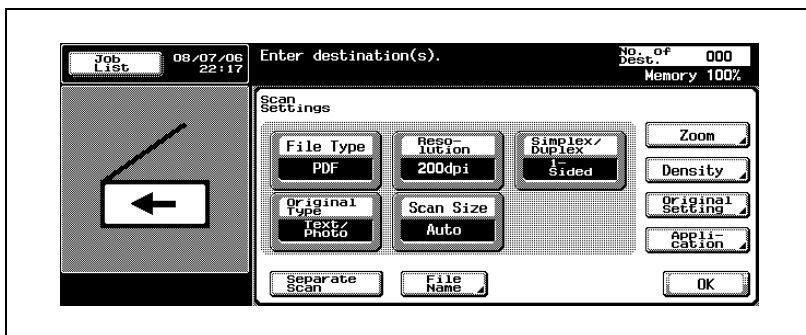

- 5 Load the document into the ADF or position it on the original glass of the machine.
- 6 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



#### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*




Selecting Group Addresses


"Group" refers to multiple destinations that are registered collectively. The following procedure describes how to send data by selecting a group that has been registered in advance.

For details on registering groups, refer to "Registering Program Destinations" on page 4-27.

- 1
- Press the [Scan] key on the control panel.  
The Scan mode screen appears.

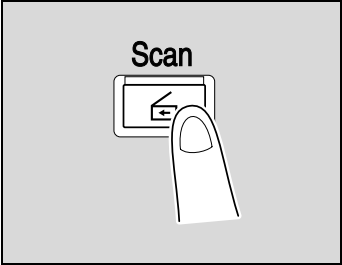


- 2
- Touch [Group].  
Touching the button for a group displays the list of members registered in the group.

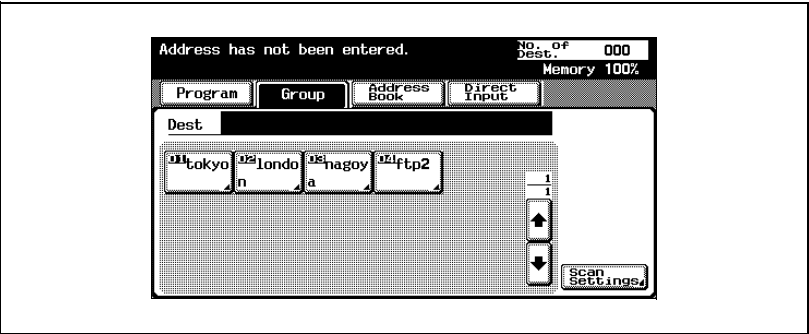





- 3 Select the desired destinations, and then touch [OK].

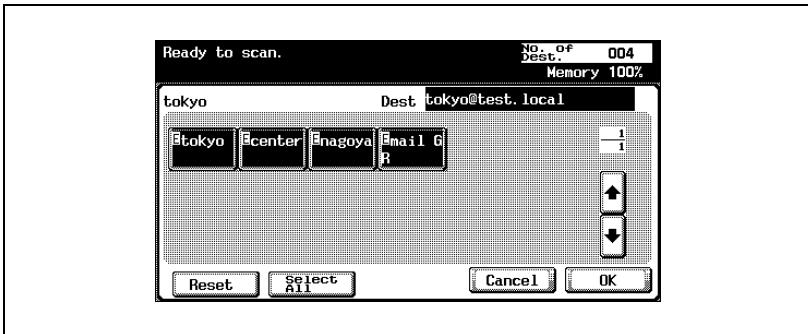

- 4 Touch [Scan Settings], and then specify the scan settings.
- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

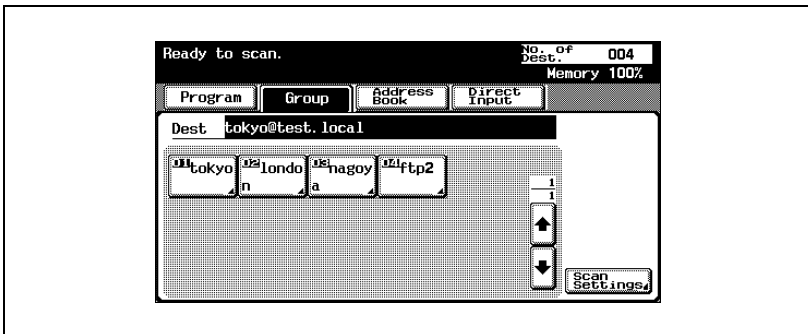

- 5 After specifying the settings, touch [OK].

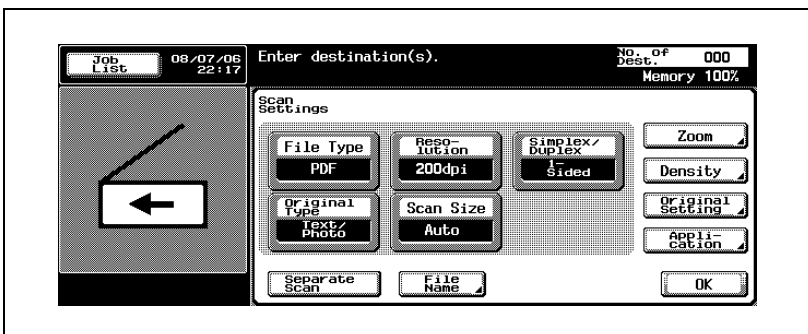



- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



...

**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Selecting Destinations From the Address Book

"Address book" refers to the collection of destination addresses that were registered in advance. The following procedure describes how to send data by selecting destinations from the address book. Multiple addresses can be specified simultaneously from the address book.


For details on registering addresses in the address book, refer to "Registering Abbreviated Destinations" on page 4-12.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

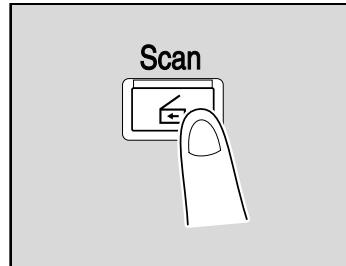


- 2 Touch [Address Book].  
The address book is displayed, and registered address names are displayed by touching the corresponding index button.

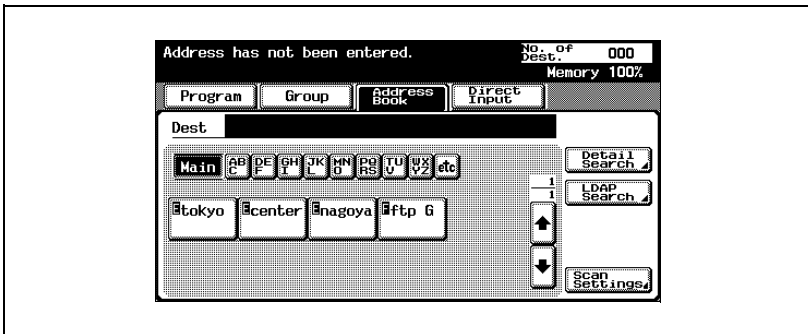

- ? Why is [LDAP Search] not displayed on the Address Book tab?
- If the [Manual Destination Input] on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to [Restrict], [LDAP Search] does not appear on the Address Book tab.
- ? To perform LDAP searches, what settings are required?
- Administrator settings such as the LDAP sever setting are required. For details, refer to "Enabling LDAP Settings" on page 4-90.



- 3 Touch the button for a destination to select it.  
The selected buttons are highlighted, and the selected destinations are listed under "Broadcast Destinations". Other destination addresses can be added through direct input.
- If necessary, you can search for the destination. For details, refer to "Searching the Destination" on page 3-16.

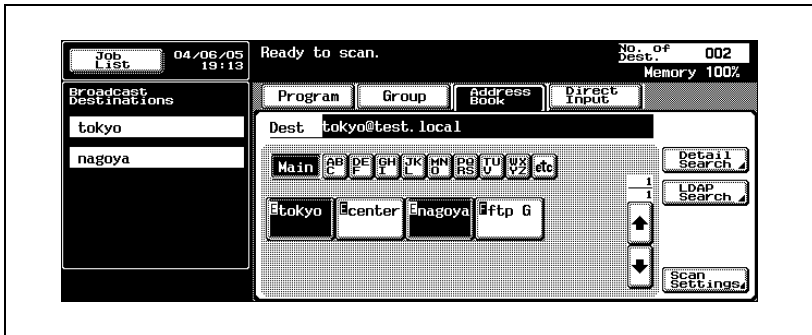



## Searching the Destination

The following methods are available for searching the destination.

- Detail Search: Searches the address by entering a section of the name or description of the address.
- LDAP search: Searches the address that meets the conditions from the addresses registered on the LDAP server.

A "Basic Search" in which a keyword is entered and an "Advanced Search" in which multiple conditions are used to narrow down the search are available.



### **Detail**

*To perform LDAP searches, the LDAP server settings that are specified in Administrator Setting are required. For details, refer to "Enabling LDAP Settings" on page 4-90.*

*Up to five destinations can be combined from the results of an LDAP search and from those entered directly.*



*If "Manual Destination Input" on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to "Restrict", an LDAP search cannot be performed.*

Basic Search

LDAP Basic Search

Enter keyword to search.

Name

←

→

De-lete

Space

1

2

3

4

5

6

7

8

9

0

-

^

q

w

e

r

t

y

u

i

o

p

@

[

a

s

d

f

g

h

j

k

l

:

:

]

z

x

c

v

b

n

m

,

.

/

\

Shift

Sym-bols

Cancel

OK

Advanced Search

Search conditions can be combined. Set the conditions and execute the search.

Detail Search

1/2

◀Back

Fwd. ▶

☒

Name

OR

☒

E-Mail

OR

☒

Fax Number

OR

☒

Last Name

OR

☒

First Name

OR

Cancel

OK

Search conditions can be combined. Set the conditions and execute the search.

Detail Search

2/2

◀Back

Fwd. ▶

☒

City

OR

☒

Company Name

OR

☒

Department


OR

Cancel


OK



- 1 Touch [Scan Settings], and then specify the scan settings.
  - For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

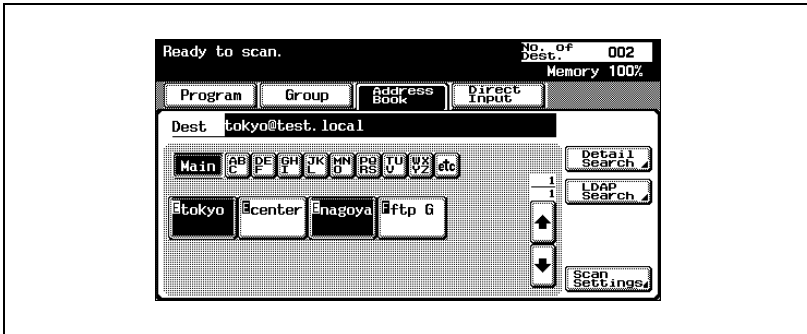

- 2 After specifying the settings, touch [OK].

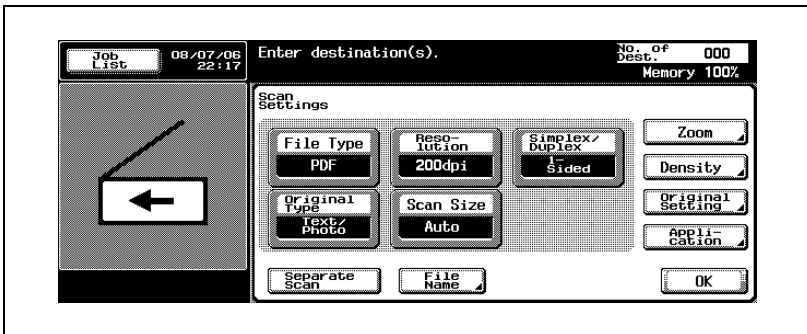

- 3 Load the document into the ADF or position it on the original glass of the machine.
- 4 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



#### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Entering the Addresses Directly

"Direct input" refers to the operation of directly entering the destination address from the machine's control panel.


Up to five destinations can be combined from those entered directly and from the results of an LDAP search.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

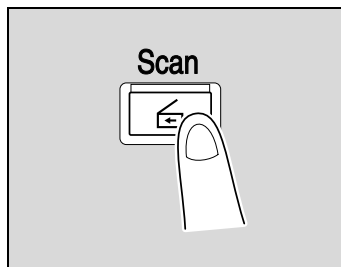

- 2 Touch [Direct Input], then [Scan to E-Mail].

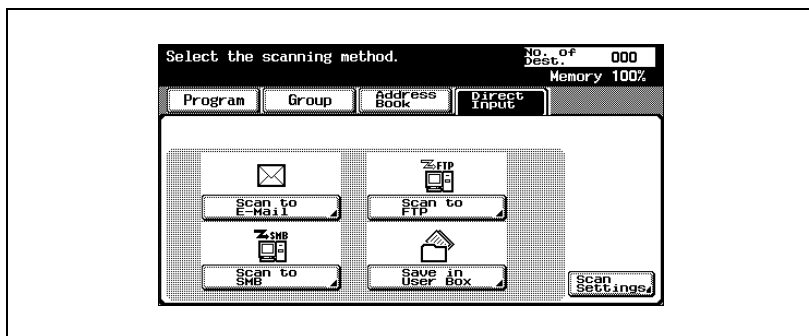


A screen for entering the destination address appears.

? Why is the Direct Input tab not displayed?

→ If the [Manual Destination Input] on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to [Restrict], the Direct Input tab does not appear.



### 3 Enter the destination address, and then touch [OK].

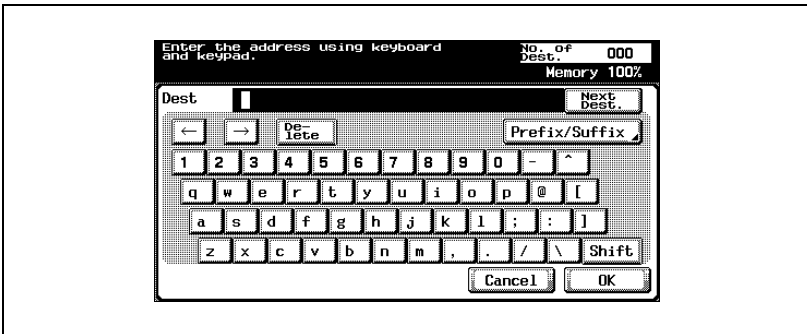


- To specify an additional address, touch [Next Dest.], and then specify the address.
- Frequently entered user names and domain names can be registered to be recalled and used again. First, prefixes and suffixes must be registered in Administrator mode.

The addresses that were entered are listed under "Broadcast Destinations".






- 4 Touch [Scan Settings], and then specify the scan settings.

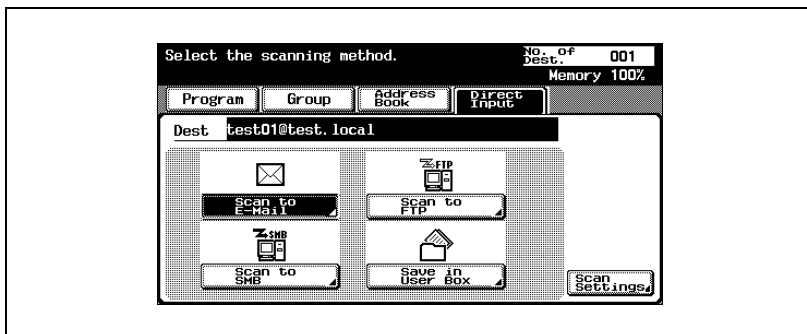

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 5 After specifying the settings, touch [OK].

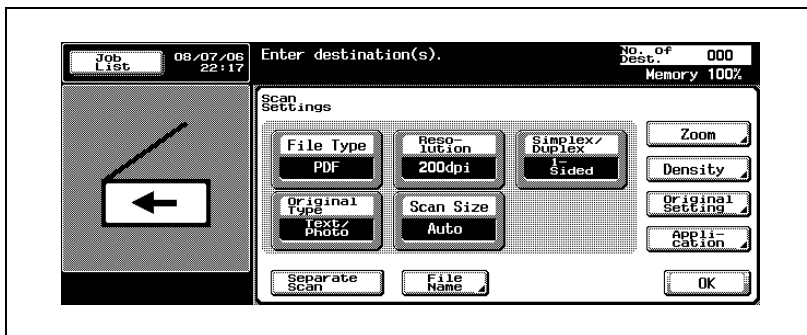

- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.
- The document is scanned, and the data is sent.



### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*



## 3.4 Sending Data to a Server (Scan to FTP)

### Scan to FTP

The Scan to FTP operation can be used in a network environment with an FTP server. The scanned data is sent to a specified folder in an FTP server on the network.

This function is suitable for sending data of a large size such as high-resolution images.

The methods described below are available for specifying the destination. The methods can also be combined, for example, by selecting a group destination, then adding other destinations through direct input.

Transmission may not be possible if the destination server has placed limitations on the document name. Because the document name becomes the file name at the time of transmission, consult your network administrator when specifying the document name.



#### Note

*If a mail server is available on the network, the e-mail notification function can be used to send an e-mail message containing notification of the storage location of the scan data. For details on the e-mail notification function, refer to "Specifying E-Mail Settings" on page 3-91.*



#### Note

*For the FTP transmission procedure, refer to "Sending the Scanned Data as Files (FTP)" on page 2-6.*



Using Programs


"Program" refers to a set of destination FTP servers and scan settings that are registered together. The following procedure describes how to send data by selecting a program that has been registered in advance.

If a proxy server is available on the network, FTP servers on the Internet can be accessed via a proxy server.

For details on registering programs, refer to "Registering Program Destinations" on page 4-27.

- 1
- Press the [Scan] key on the control panel.


The Scan mode screen appears.

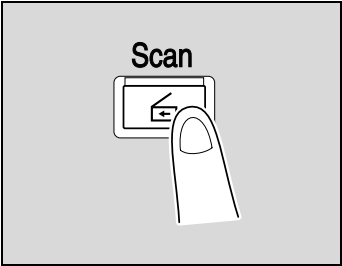

- 2
- Touch [Program].


The selected destinations are listed under "Broadcast Destinations". Other destination addresses can be added using the address book or through direct input.

Only the destinations that can be specified are displayed. For example, fax destinations are not displayed.

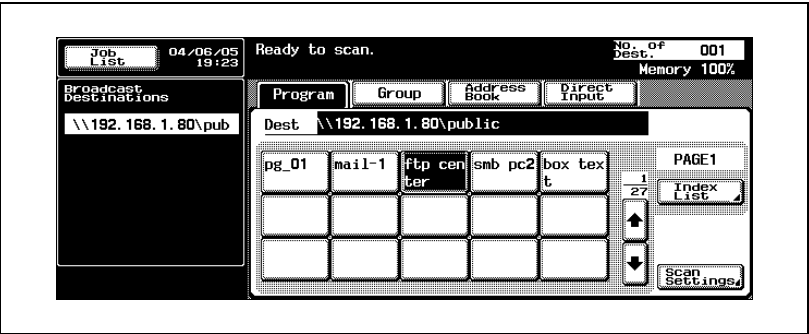




- 3 Touch [Scan Settings] to check the specified scan settings. The specified settings can also be changed.

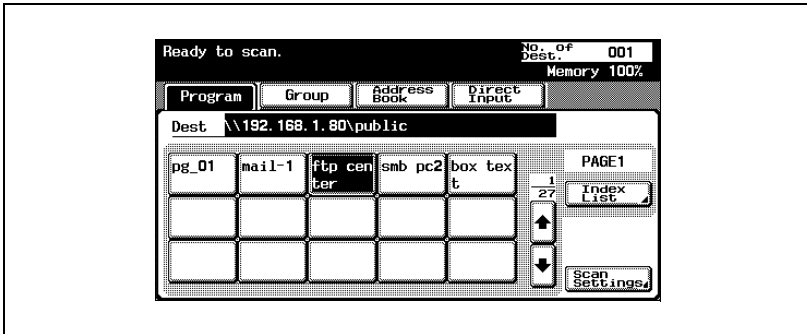

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 4 After specifying the settings, touch [OK].

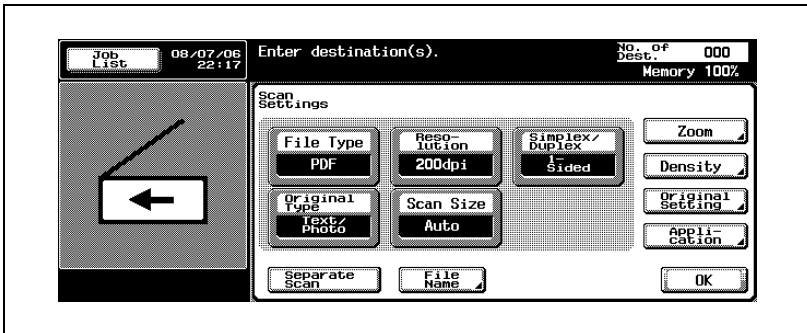

- 5 Load the document into the ADF or position it on the original glass of the machine.
- 6 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



#### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*




Selecting Group Addresses


"Group" refers to multiple destinations that are registered collectively. The following procedure describes how to send data by selecting a group that has been registered in advance.

For details on registering groups, refer to "Registering Group Destinations" on page 4-25.

- 1 Press the [Scan] key on the control panel.  
The Scan mode screen appears.

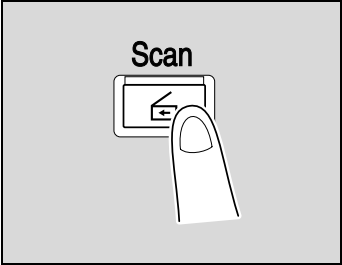


- 2 Touch [Group].  
Touching the button for a group displays the list of members registered in the group. Other destination addresses can be added using the address book or through direct input.

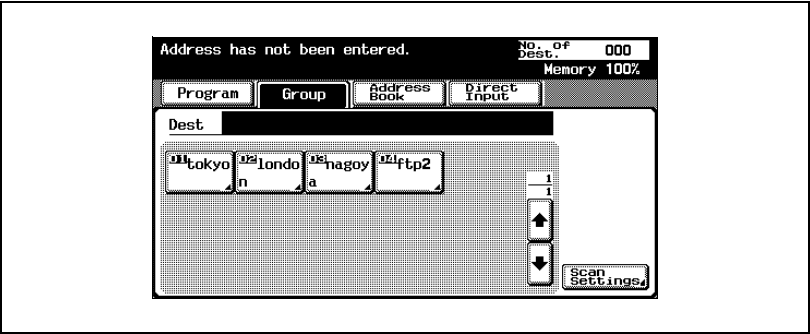




- 3 Select the desired destination, and then touch [OK].

The selected destinations are listed under "Broadcast Destinations".

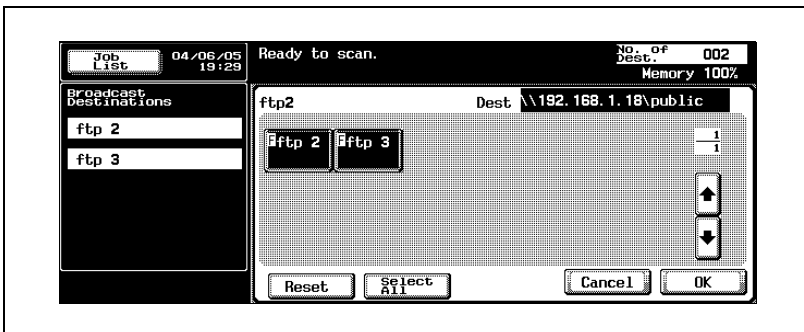


- 4 Touch [Scan Settings], and then specify the scan settings.

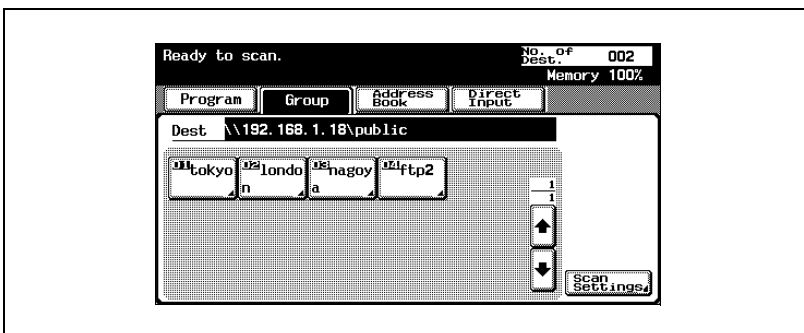

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 5 After specifying the settings, touch [OK].

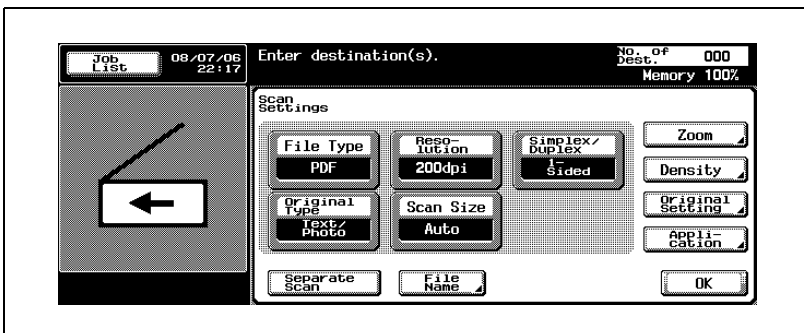



- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



...

**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Selecting Destinations From the Address Book

"Address book" refers to the collection of destination addresses that were registered in advance. The following procedure describes how to send data by selecting destinations from the address book. Multiple addresses can be specified simultaneously from the address book.


For details on registering addresses in the address book, refer to "Registering Abbreviated Destinations" on page 4-12.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

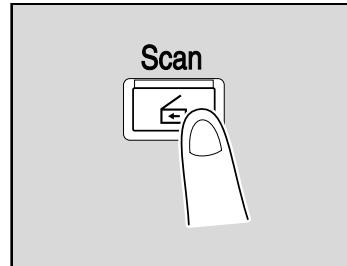

- 2 Touch [Address Book].  
The address book is displayed, and registered address names are displayed by touching the corresponding index button.

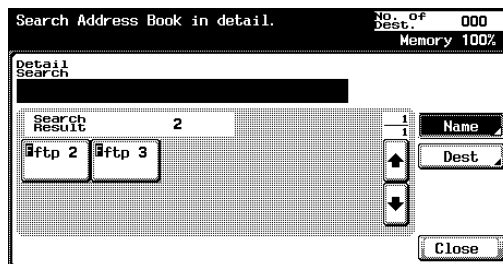





- ? How can the address book be searched for the desired address?
- Touch [Detail Search] to search for addresses. The address book can be searched for names or addresses.

### 3 Touch the button for a destination to select it.

The buttons are highlighted, and the selected destinations are listed under "Broadcast Destinations". Other destinations can be added through direct input.

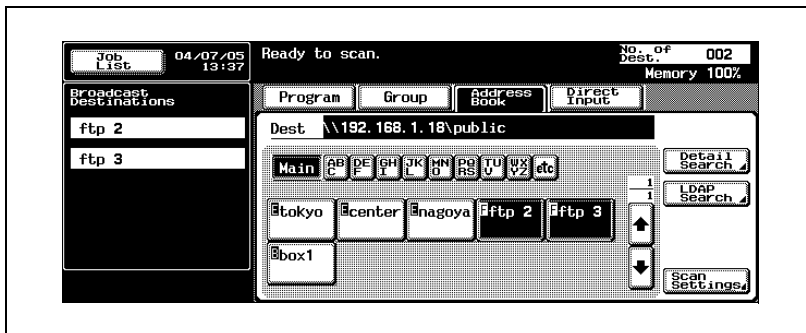


### 4 Touch [Scan Settings], and then specify the scan settings.

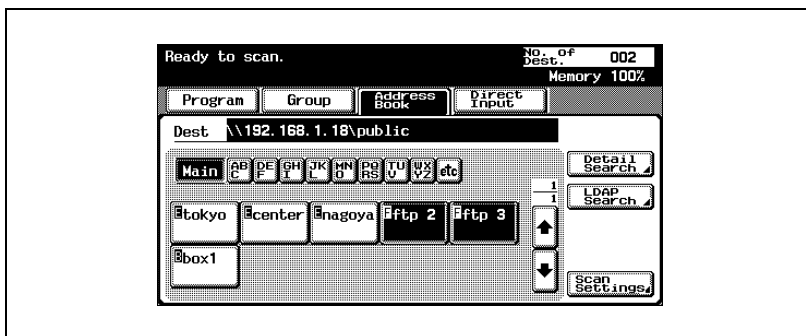

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.



- 5 After specifying the settings, touch [OK].

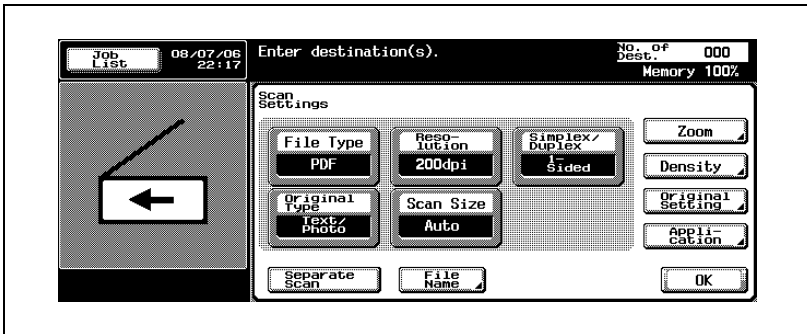

- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*



## Entering the Addresses Directly


"Direct input" refers to the operation of directly inputting the destination address from the machine's control panel.

Up to five destinations can be specified through direct input.


The following procedure describes how to directly specify an address.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

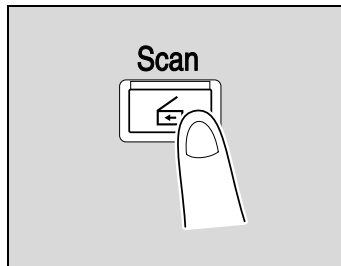

- 2 Touch [Direct Input], then [Scan to FTP].
  - To access an FTP server anonymously, touch [Anonymous] in the screen where the user name is entered.

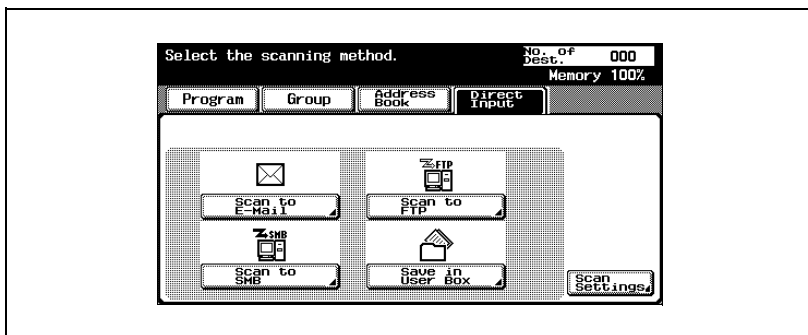

A screen for entering the destination host name, destination folder, and other information appears.

? Why is the Direct Input tab not displayed?

→ If the [Manual Destination Input] on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to [Restrict], the Direct Input tab does not appear.



- 3 Enter the host name, destination folder, user name, and password.

The screenshot shows a dialog box titled "Enter each settings." with a status bar at the top indicating "No. of Dest. 000" and "Memory 100%". The main area is labeled "Scan to FTP" and contains four input fields: "Host Name", "Destination Folder", "User Name", and "Password". Each field has a small keyboard icon to its right. To the right of the "Host Name" field is a "Next Dest." button. At the bottom of the dialog are "Detail Setting", "Cancel", and "OK" buttons.

- Host Name: Use the keyboard that appears in the touch panel to specify the destination host name or IP address, and then touch [OK].
- Destination Folder: Use the keyboard that appears in the touch panel to specify the path to the destination folder, and then touch [OK].
- User Name: Use the keyboard that appears in the touch panel to specify the login user name, and then touch [OK]. To access an FTP server anonymously, touch [Anonymous].
- Password: Use the keyboard that appears in the touch panel to specify the password, and then touch [OK].

- 4 Touch [Detail Setting], and then specify detailed FTP settings.

The screenshot shows a dialog box titled "Enter detail settings for FTP." with a status bar at the top indicating "No. of Dest. 000" and "Memory 100%". The main area is labeled "Detail Setting" and contains three settings: "Port Number" (set to 21), "PASV mode" (with Yes/No buttons), and "Proxy" (with Yes/No buttons). Below the "Port Number" field is a range indicator "1~65535". At the bottom of the dialog are "Cancel" and "OK" buttons.

- Port Number: The Port Number can be checked and changed.
- PASV mode: Select whether the PASV (passive) mode is used. Touch [Yes] or [No].
- Proxy: Select whether a proxy server is used. Touch [Yes] or [No].

- 5 Touch [OK].



## 6 Enter the destination Information, and then touch [OK].

The screenshot shows a dialog box titled "Enter each settings." with a status bar at the top right indicating "No. of Dest. 000" and "Memory 100%". The main heading is "Scan to FTP". Below this, there are four input fields: "Host Name" with the value "192.168.1.50", "Destination Folder" with the value "\public", "User Name" with the value "test02", and "Password" with the value "\*\*\*\*\*". At the bottom left is a "Detail Setting" button, and at the bottom right are "Cancel" and "OK" buttons. A "Next Dest." button is located at the top right of the input fields.


- To specify an additional address, touch [Next Dest.], and then specify the address.

The addresses that were entered are listed under "Broadcast Destinations".

The screenshot shows a dialog box titled "Select the scanning method." with a status bar at the top right indicating "No. of Dest. 001" and "Memory 100%". On the left, there is a "Broadcast Destinations" list containing the entry "\\192.168.1.50\pub". The main area has a "Dest" field showing "\\192.168.1.50\public". Below this, there are four large buttons with icons: "Scan to E-Mail" (envelope icon), "Scan to FTP" (FTP icon), "Scan to SMB" (SMB icon), and "Save in User Box" (box icon). At the bottom right is a "Scan Settings" button. The top of the dialog has tabs for "Program", "Group", "Address Book", and "Direct Input".




- 7 Touch [Scan Settings], and then specify the scan settings.

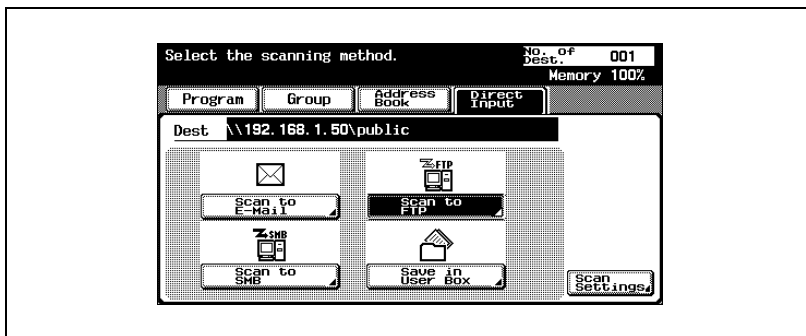

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 8 After specifying the settings, touch [OK].

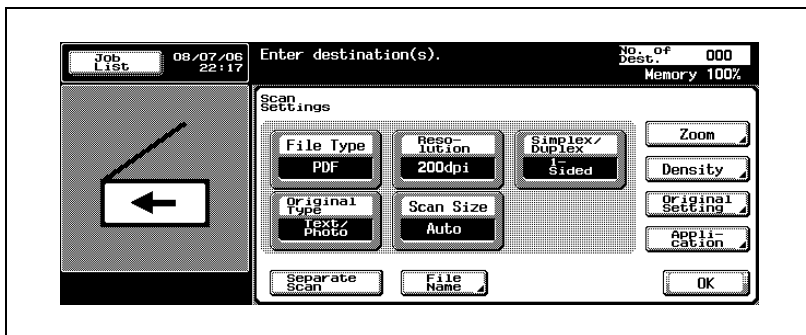

- 9 Load the document into the ADF or position it on the original glass of the machine.
- 10 Press the [Start] key on the control panel.
- The document is scanned, and the data is sent.



#### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*



## 3.5 Sending Data to a PC on the Network (Scan to SMB)

### Scan to SMB

The Scan to SMB operation can be used to directly send the scanned data to a specific computer on the network.

To use the Scan to File (SMB) function, specify the Windows shared file setting on the computer that is to receive the data in advance.



#### **Reminder**

*To send to a Windows shared folder, enter the host name and folder name using capital letters when registering the destination.*



#### **Note**

*For the SMB transmission procedure, refer to "Sending the Scanned Data to a Computer on the Network (SMB)" on page 2-7.*



### **SMB Transmission to Windows File Sharing (Mac OS X)/Samba (Linux/Unix)**

When performing SMB transmission to Mac OS X, Linux, or Unix, the conditions described below must be met for the network settings and user name. Change the settings according to the transmission environment.

Settings on this machine

- From [Administrator Setting] — [Network Setting] — [SMB Setting], specify "v1" for the NTLM setting.

Settings on the server

- For the user name and shared folder names, enter 12 characters or less.
- When looking up a destination, the shared folder names are shown in alphanumeric characters only. Sub-folder names can be shown in characters other than alphanumeric characters.
- To lookup a destination, enter the user ID and password first.



#### **Note**

*Samba is a program that provides services for SMB clients using Unix or Linux. In Mac OS X, Samba is called "Windows File Sharing".*

### **SMB Transmission to Windows 98 SE/Windows Me**

When SMB transmitting to Windows 98 SE/Windows Me, the network settings must meet the conditions described below.

Settings on this machine

- From [Administrator Setting] — [Network Setting] — [SMB Setting], specify "v1/v2" or "v1" for the NTLM setting.




## Using Programs

"Program" refers to a set of destination computers and scan settings that are registered together. The following procedure describes how to send data by selecting a program that has been registered in advance.

For details on registering programs, refer to "Registering Program Destinations" on page 4-27.

- 1 Press the [Scan] key on the control panel.


The Scan mode screen appears.

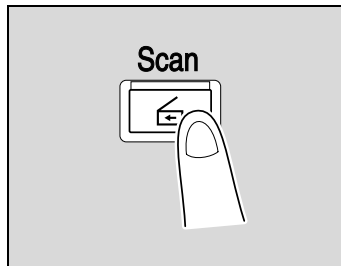

- 2 Touch [Program].


The selected destinations are listed under "Broadcast Destinations". Other destination addresses can be added using the address book or through direct input.

Only the destinations that can be specified are displayed. For example, fax destinations are not displayed.

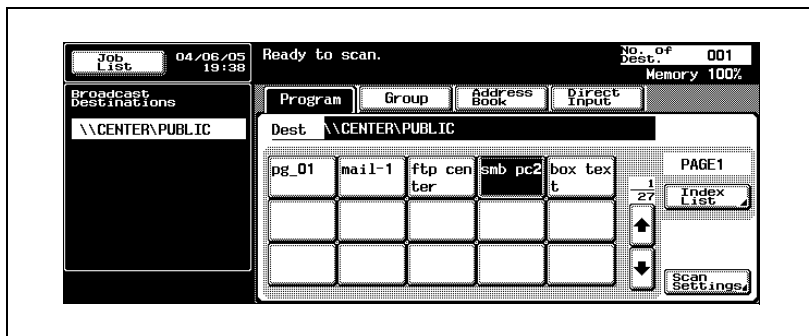




- 3 Touch [Scan Settings] to check the specified scan settings. The specified settings can also be changed.

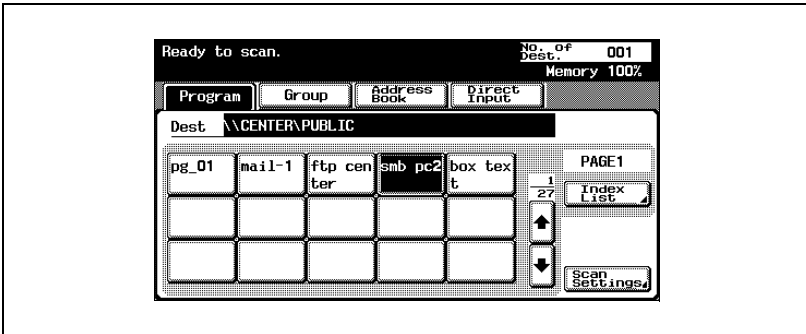

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 4 After checking the settings, touch [OK].

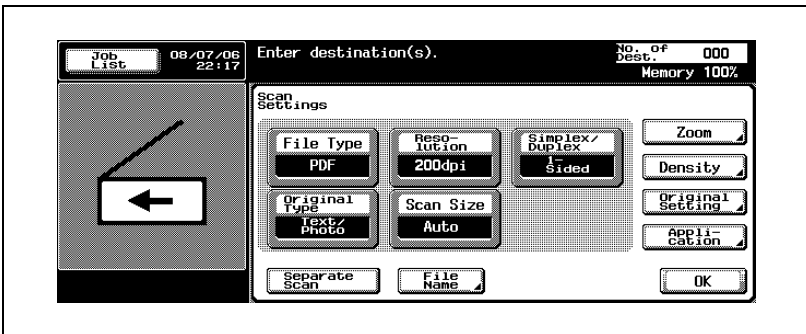

- 5 Load the document into the ADF or position it on the original glass of the machine.
- 6 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



#### Note

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Selecting Group Addresses

"Group" refers to multiple destinations that are registered collectively. The following procedure describes how to send data by selecting a group that has been registered in advance.


For details on registering groups, refer to "Registering Group Destinations" on page 4-25.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

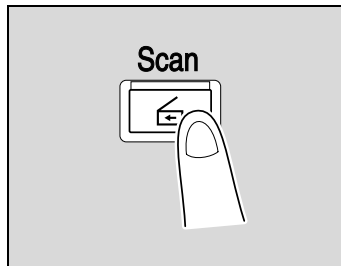


- 2 Touch [Group].

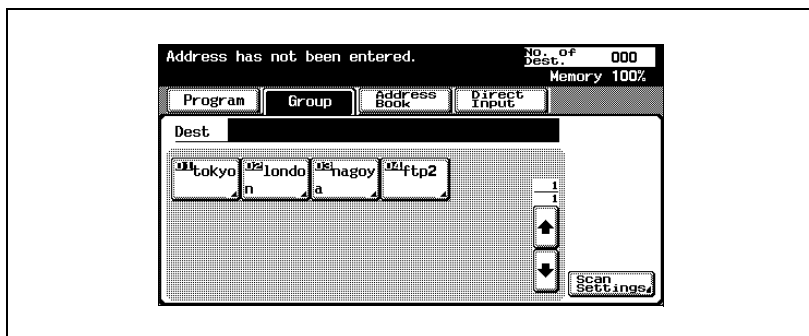


Touching the button for a group displays the list of members registered in the group. Other destination addresses can be added using the address book or through direct input.



- 3 Select the desired destinations, and then touch [OK].

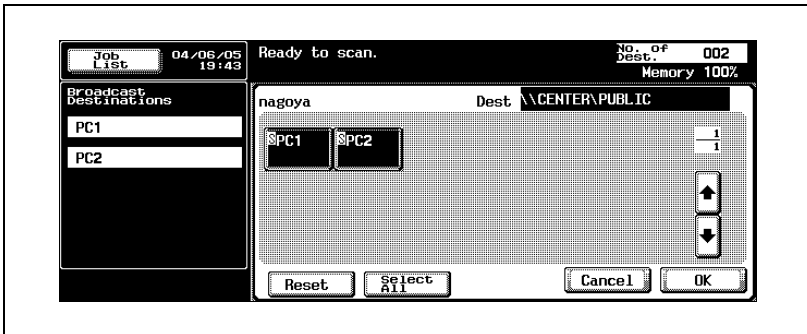


- 4 Touch [Scan Settings], and then specify the scan settings.

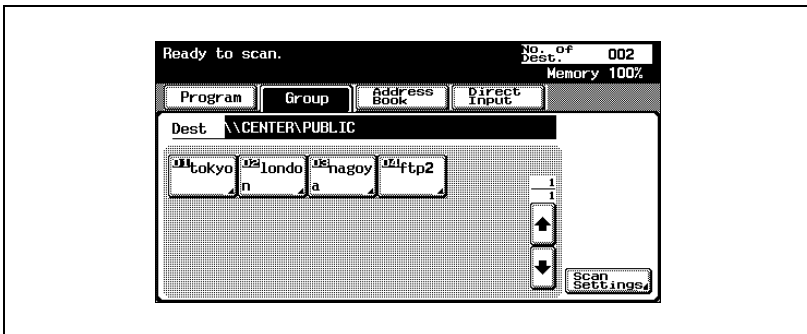

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 5 After specifying the settings, touch [OK].

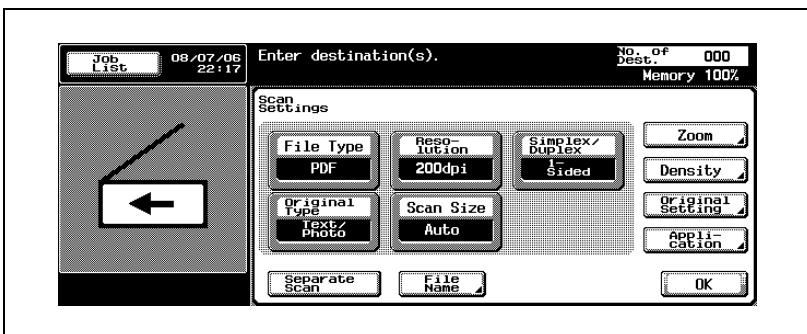



- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



...

**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Selecting Destinations From the Address Book

"Address book" refers to the collection of destination addresses that were registered in advance. The following procedure describes how to send data by selecting destinations from the address book. Multiple addresses can be specified simultaneously from the address book.


For details on registering addresses in the address book, refer to "Registering Abbreviated Destinations" on page 4-12.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

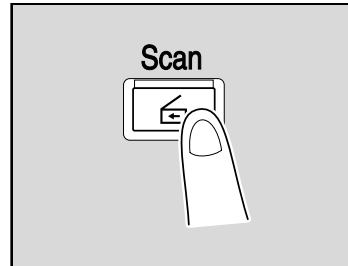

- 2 Touch [Address Book].  
The address book is displayed, and registered address names are displayed by touching the corresponding index button.

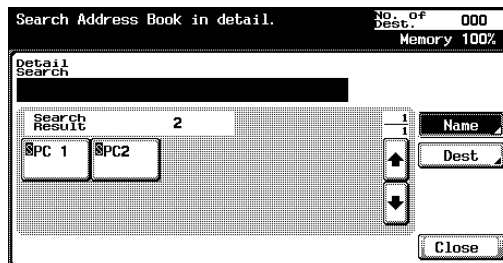





- ? How can the address book be searched for the desired address?
- Touch [Detail Search] to search for addresses. The address book can be searched for names or addresses.

### 3 Touch the button for a destination to select it.

The selected buttons are highlighted, and the selected destinations are listed under "Broadcast Destinations". Other destinations can be added through direct input.

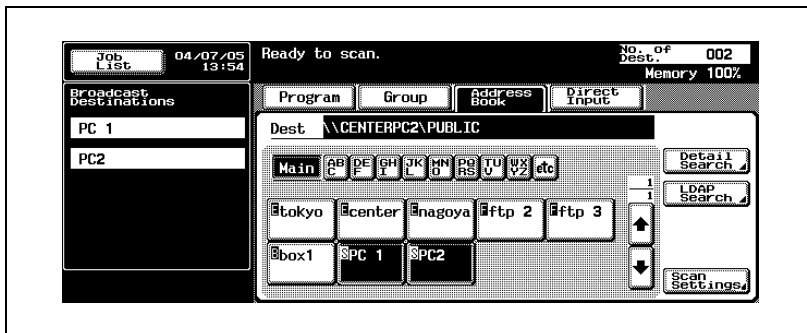


### 4 Touch [Scan Settings], and then specify the scan settings.

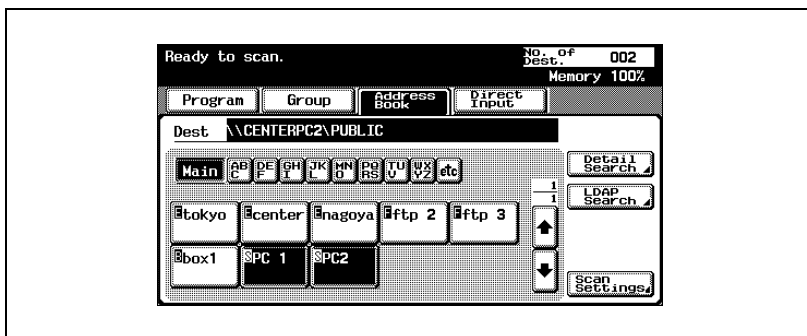

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.



- 5 After specifying the settings, touch [OK].

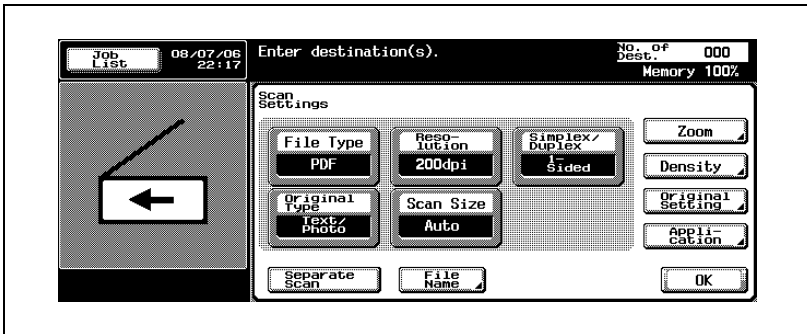

- 6 Load the document into the ADF or position it on the original glass of the machine.
- 7 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.



**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*




## Entering the Addresses Directly

"Direct input" refers to the operation of directly inputting the destination address from the machine's control panel.


Up to five destinations can be specified through direct input.

- 1 Press the [Scan] key on the control panel.

The Scan mode screen appears.

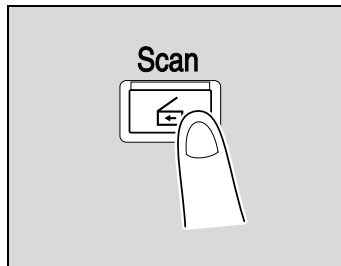

- 2 Touch [Direct Input], then [Scan to SMB].

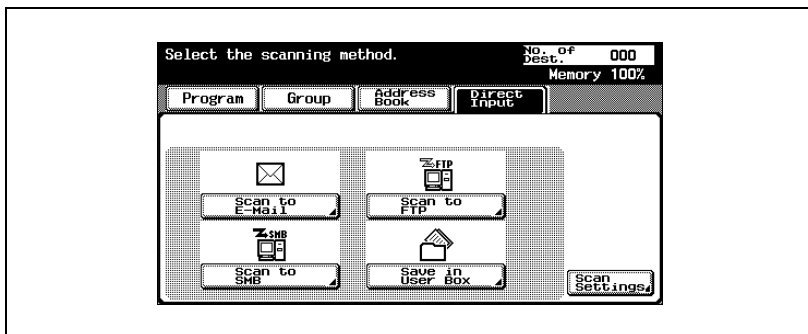

A screen for entering the destination host name, destination folder, and other information appears.

? Why is the Direct Input tab not displayed?

→ If the [Manual Destination Input] on the Security Details screen (displayed by touching [Security Setting] on the Administrator Setting screen) is set to [Restrict], the Direct Input tab does not appear.



### 3 Enter the destination information.

The screenshot shows a dialog box titled "Enter each settings." with a status bar at the top right indicating "No. of Dest. 000" and "Memory 100%". The main area is titled "Scan to SMB" and contains four input fields: "Host Name" (PC3), "Destination Folder" (\\PUBLIC\\DOC), "User Name" (TEST03), and "Pass-word" (\*\*\*\*\*). To the right of these fields are two buttons: "Next Dest." and "Reference". At the bottom right are "Cancel" and "OK" buttons.

- Host Name: Specify the destination host name (enter using capital letters) or the IP address. Type in the destination name using the keyboard, and then touch [OK].
- Destination Folder: Enter the path to the destination folder using capital letters.
- User Name: Use the keyboard that appears in the touch panel to specify the login user name, and then touch [OK].
- Password: Use the keyboard that appears in the touch panel to specify the password, and then touch [OK].
- To specify an additional address, touch [Next Dest.], and then specify the address.
- To check the contents of the shared folders, touch [Reference].


### 4 Touch [OK].

The specified addresses are listed under "Broadcast Destinations".

The screenshot shows a screen titled "Select the scanning method." with a status bar at the top right indicating "No. of Dest. 001" and "Memory 100%". On the left is a "Broadcast Destinations" list containing the entry "\\PC3\\PUBLIC\\DOC". The main area has tabs for "Program", "Group", "Address Book", and "Direct Input". Below the tabs, the "Dest" field shows "\\PC3\\PUBLIC\\DOC". There are four large buttons with icons: "Scan to E-Mail" (envelope), "Scan to FTP" (FTP icon), "Scan to SMB" (SMB icon), and "Save in User Box" (box icon). A "Scan Settings" button is at the bottom right.




- 5 Touch [Scan Settings], and then specify the scan settings.

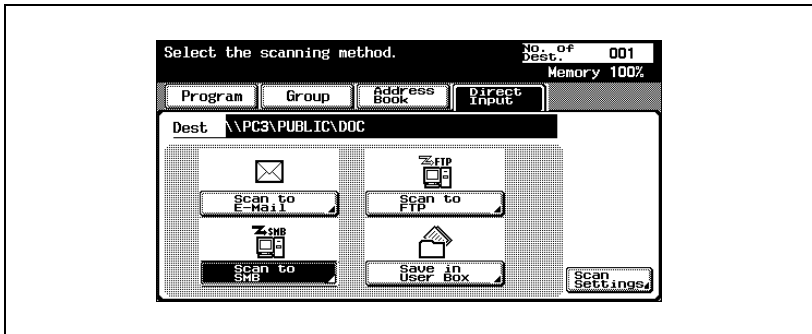

- For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.

- 6 After specifying the settings, touch [OK].

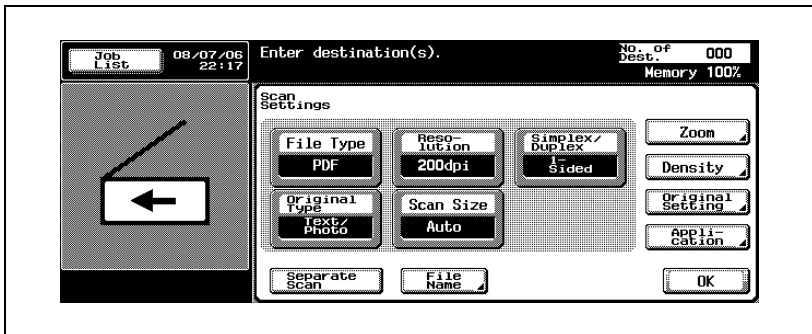

- 7 Load the document into the ADF or position it on the original glass of the machine.
- 8 Press the [Start] key on the control panel.  
The document is scanned, and the data is sent.





...

**Note**

*Do not turn off the machine until the scanned jobs disappear from the job list.*

**Detail**

*The destination folder can also be specified by touching [Reference], then browsing to a computer on the network.*

*When a work group and computer that exceed the numbers described below exist, browsing over the network (subnet) of this machine may not be performed properly.*


- Work group: 128
- Computer: 128



## 3.6 Specifying the Scan Settings

### Available Settings

Detailed scan settings can be specified by touching [Scan Settings] in the Scan mode screen.

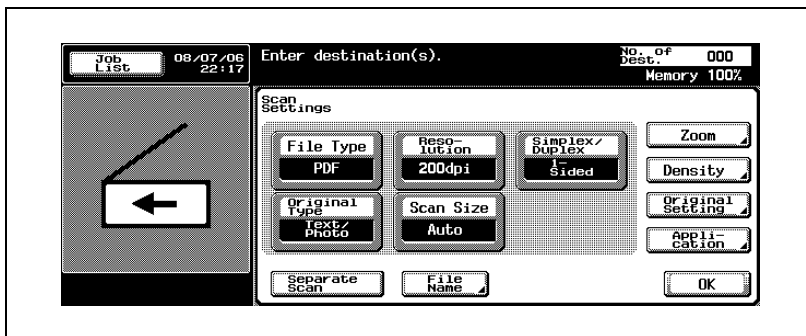

The settings that can be specified are as follows:

Item	Description	Reference
File Type	Selects the file type for saving the scanned data.	"File Type" on page 3-51
Resolution	Selects the scan resolution.	"Resolution" on page 3-54
Simplex/Duplex	Selects whether to scan one side of the document or both sides.	"Simplex/Duplex" on page 3-55
Original Type	Sets the image type of the scanned document.	"Original Type" on page 3-56
Scan Size	Sets the paper size to be scanned.	"Scan Size" on page 3-57
Zoom	Sets the zoom ratio for scanning. Frequently used zoom ratios can be stored.	"To specify the zoom ratio for scanning (Zoom setting)" on page 3-61
Density	Specify the density for scanning.	"Density" on page 3-63
Original Setting	Specifies the type of document that is loaded, for example, if it contains mixed page sizes or is folded in a zigzag.	"Original Setting" on page 3-64



Item	Description	Reference
Application	Provides functions for adjusting the image to be scanned, for example, for scanning books and for scanning pages.	"Book Scanning (Application)" on page 3-67 "Booklet Pagination (Application)" on page 3-70 "Annotations (Application)" on page 3-72 "Frame Erase (Application)" on page 3-74 "Center Erase (Application)" on page 3-76 "Non-Image Area Erase (Application)" on page 3-78 "Neg-/Pos. Reverse (Application)" on page 3-79
Separate Scan	The scan operation can be divided into several sessions when all pages of a document cannot be loaded into the ADF or when placing the document on the original glass. In addition, the documents can be scanned separately according to their type, such as when single-sided documents are mixed with double-sided documents.	"Separate Scan" on page 3-80
File Name	Changes the name of the file to be saved.	"File Name" on page 3-82



**File Type**

Select the file type for saving the scanned data. The following two file types are available.

The encryption level can be selected if "File Type" is set to "PDF".

File type

Item	Description
PDF	Saves to the PDF format.
TIFF	Saves to the TIFF format.


Also, grouping of the saved data can be specified.

Scan Setting


Item	Description
Single Page	A file is created for each page of the document. When a double-sided document is scanned, a file is created from every two pages that are scanned.
Multi Page	The entire scanned document is saved to a single file.




- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [File Type].

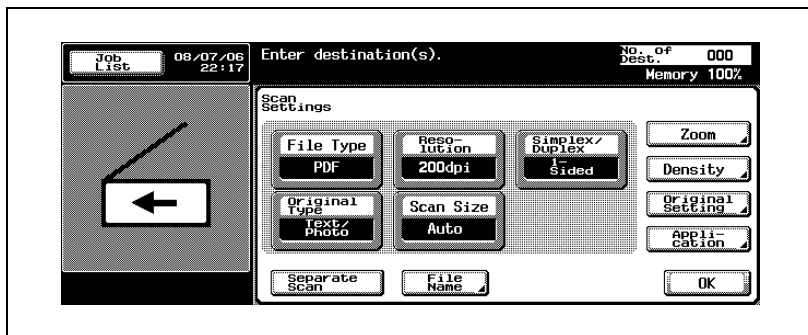

- 3 Select the file type.

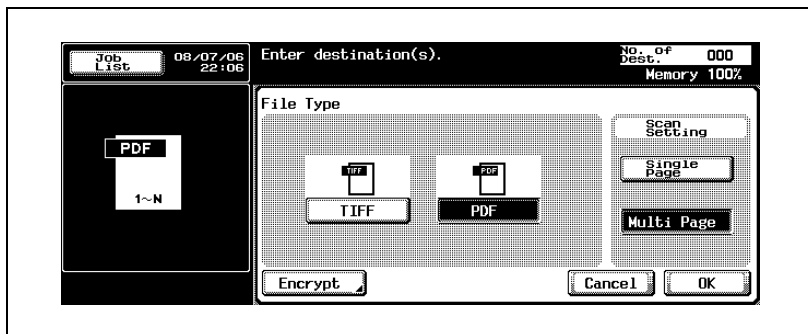


- 4 Select the scan setting.

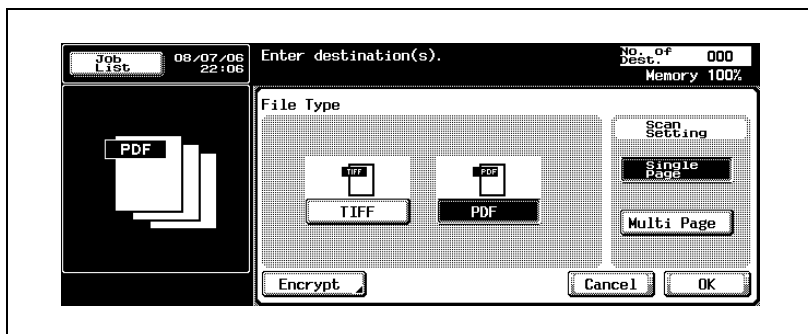



- 5 If "PDF" was selected, the encryption settings can be specified. If necessary, touch [Encrypt].
- 6 Specify the encryption settings.
  - Encryption Level1: Select the encryption level.
  - Password: Enter the password that is required for opening data that is encrypted (up to 32 alphanumeric characters). To confirm the password, enter the password again.
  - Permissions: Enter the password that is required for changing the permissions for a document (up to 32 alphanumeric characters). To confirm the password, enter the password again.

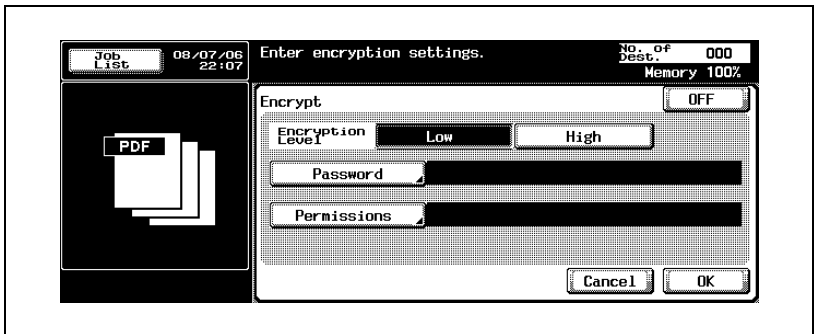


- 7 Touch [OK], and then touch [OK] in the next screen that appears.




## Resolution

Set the scanning resolution to 200 dpi, 300 dpi, 400 dpi, or 600 dpi.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Resolution].

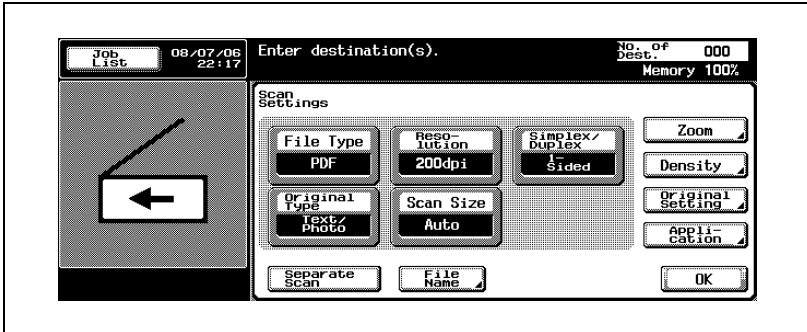

- 3 Select the resolution.

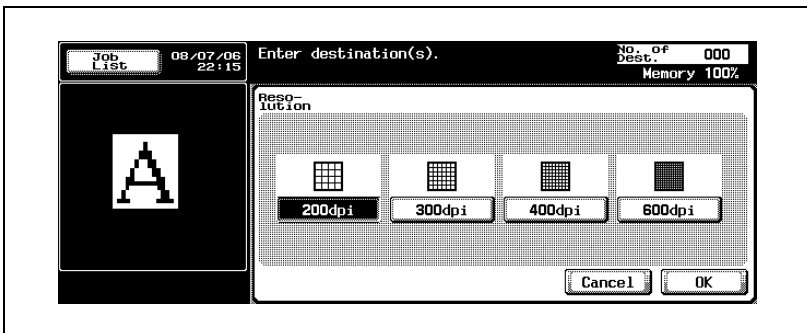

- 4 Touch [OK], and then touch [OK] in the next screen that appears.




Simplex/Duplex


Select whether to scan one side of the document or both sides.

Item	Description
1-Sided	Scans one side of the document.
2-Sided	Scans both sides of the document.
Cover + 2-Sided	Scans the first page of the document as a single-sided cover page, then scans the remaining pages as double-sided.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Simplex/Duplex].

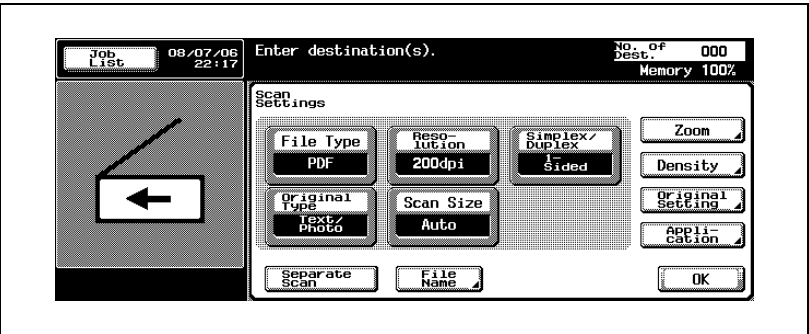

- 3 Select the scan type.

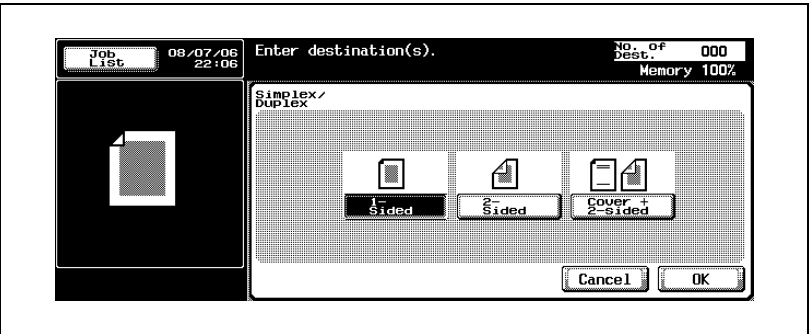

- 4 Touch [OK], and then touch [OK] in the next screen that appears.




## Original Type


Select the type according to the document. The following four image types are available.

Item	Description
Text	Select for a document consisting only of text.
Text/Photo	Select for a document containing text and photo (half tone).
Photo	Select for a document containing only photos (half tone).
Dot Matrix	Select for a document with faint text.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Original Type].

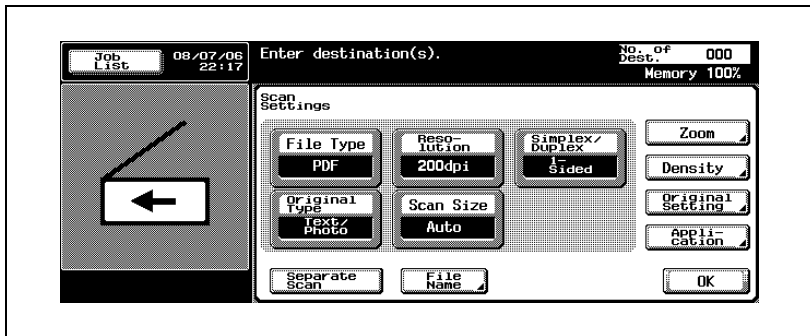

- 3 Select the image type.

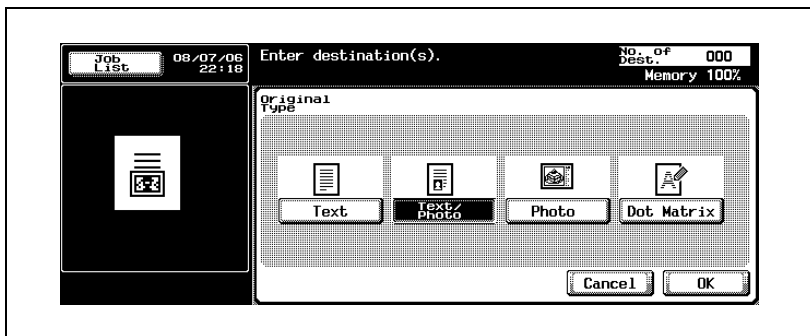

- 4 Touch [OK], and then touch [OK] in the next screen that appears.



Scan Size

Set the paper size to be scanned.

The available scan sizes are as follows:


Item	Description
Auto	Detects the size of the first page of the loaded document.
Standard sizes	Select a standard size and direction.
Custom Size	Use to enter the dimensions of a custom size not available as a standard size. The lengths in the X and Y directions can be set within the ranges of 2 in. to 17 in. and 2 in. to 11-11/16 in., respectively.



Detail


*If the document is read using the ADF, the scan size will be fixed to "Auto".*

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Scan Size].

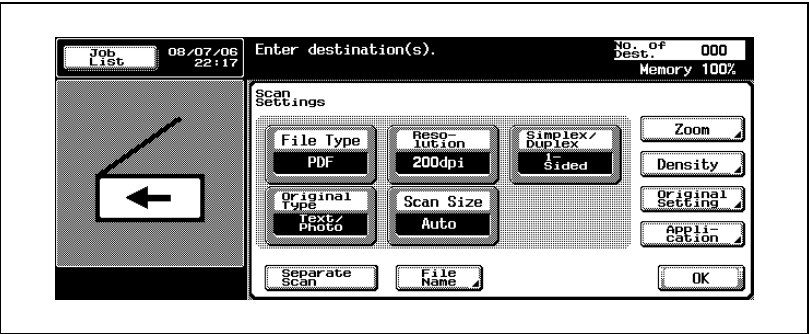




### 3 Select the size and direction.

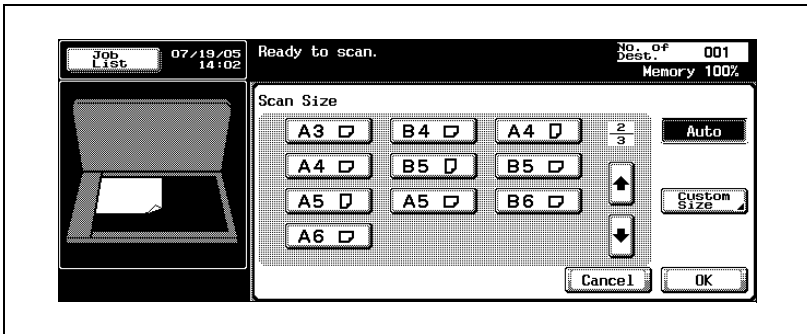

- Touch [Custom Size] to display a screen for specifying the size.

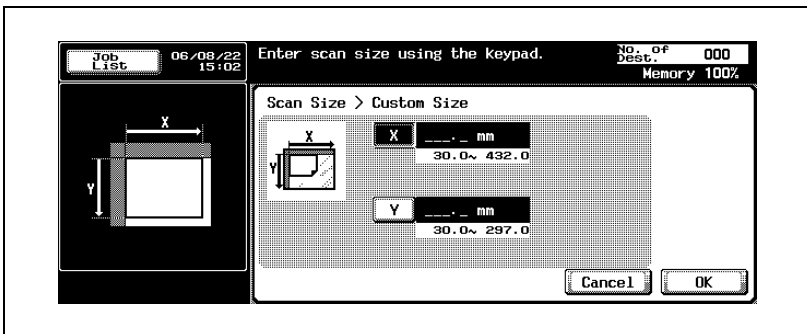

- If the values are in millimeters, use the keypad to specify the size.


### 4 Touch [OK], and then touch [OK] in the next screen that appears.




### To enlarge/reduce the scan to a preset zoom ratio (Zoom setting)

The scan can be enlarged or reduced to a preset zoom ratio, such as one of the standard sizes.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Zoom].

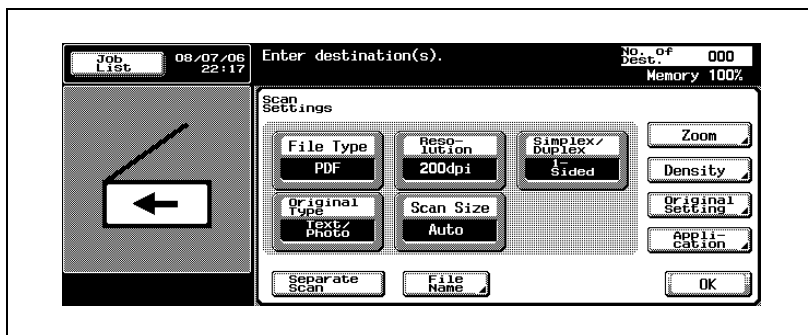


- 3 Select the zoom ratio.
  - Touch the zoom ratio button for the desired standard enlargement or reduction size.
  - To scan the image reduced slightly from the actual size, touch [Minimal]. The zoom ratio for the "Minimal" setting can be changed from the Zoom screen. For details, refer to "To specify the zoom ratio for scanning (Zoom setting)" on page 3-61.
  - To select a stored zoom ratio, touch a Set Zoom button.

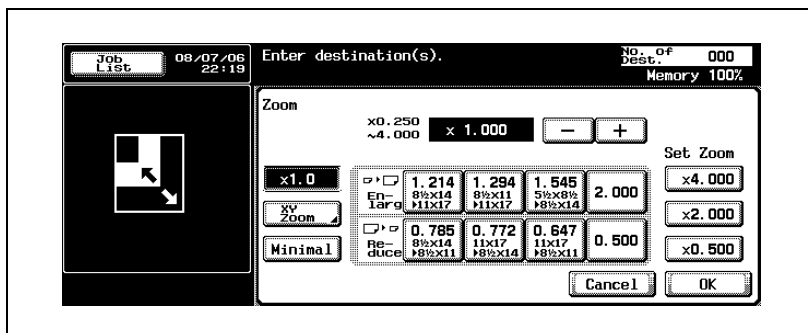



- If the values are in millimeters.

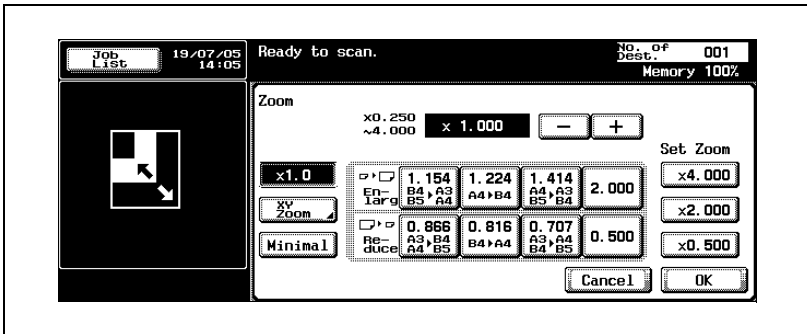


- 4 Touch [OK], and then touch [OK] in the next screen that appears.




### To specify the zoom ratio for scanning (Zoom setting)

The document can be scanned at the zoom ratio set in 0.1% increments.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Zoom].

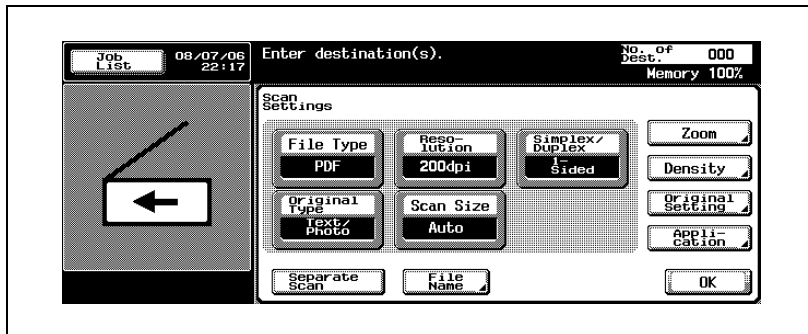


- 3 Select the zoom ratio.
  - To specify a zoom ratio near a preset ratio, touch the button for a preset zoom ratio, and then touch [+] or [-] to adjust the zoom ratio.

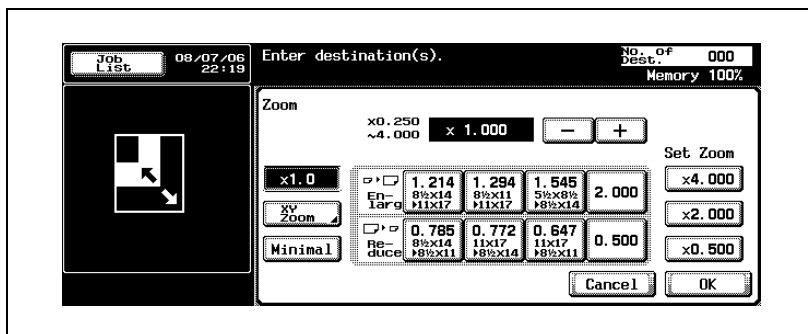

- 4 Touch [XY Zoom].



- 5 Select the desired zoom ratio type, and then use the keypad to specify the zoom ratio.
- To enlarge or reduce the scan at a zoom ratio that is the same horizontally and vertically, select a zoom ratio for "Zoom with Constant X and Y Ratio".
  - To enlarge or reduce the X and Y directions at different ratios, touch [X] or [Y] below "Individual Zoom", and then specify the corresponding zoom ratios.
  - To change the zoom ratio for one of the Set Zoom buttons, touch [Set Zoom]. Three zoom ratios can be stored. In addition, the "Minimal" zoom ratio can be changed.

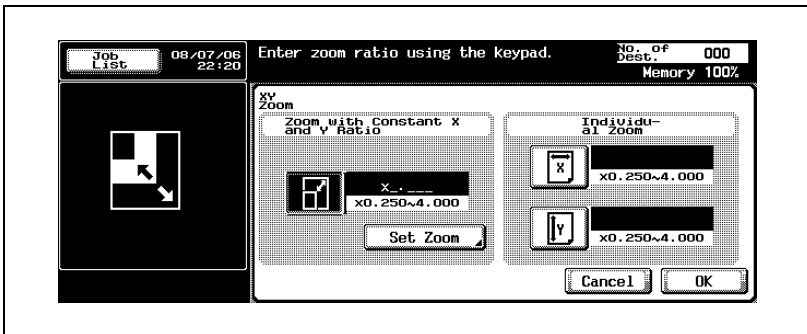


- 6 Touch [OK], and then touch [OK] in the next two screens that appear.




## Density

Specify the density for scanning.

- 1 Touch [Scan Setting] in the Scan mode screen.
- 2 Touch [Density].

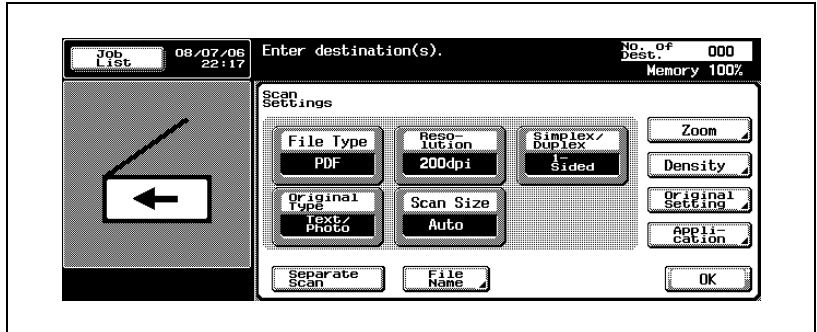

- To select a specific density, touch [Light] or [Dark].
- Touch [Std.] to select the default setting.
- To scan with the density most appropriate for the detected density of the document, touch [Auto].

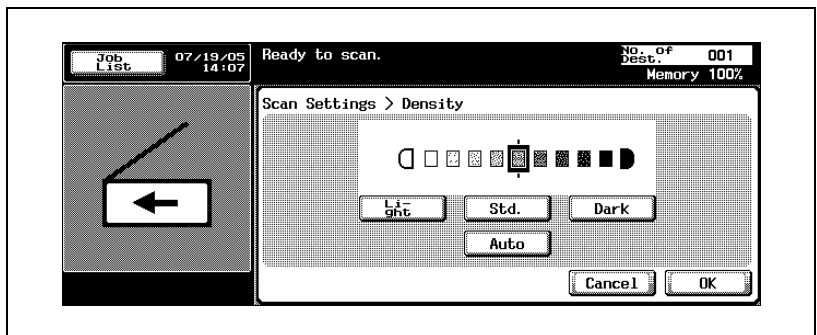

- 3 Touch [OK], and then touch [OK] in the next screen that appears.




## Original Setting

Specify the type of document that is loaded, for example, if it contains mixed sizes or is folded in a zigzag.


Item	Description
Mixed Original	Select this setting when documents of different sizes are loaded into the ADF. The scan speed is decreased since the size of each page is detected before it is scanned.
Z-Folded Original	Select this setting when the loaded document is folded in a zigzag.
Original Direction	Specifies the orientation of the document. The data is processed so that the top and bottom ends are correctly positioned when the document is scanned.
Bind	Specifies the binding position for punched holes and staples. This function adjusts the binding position so that it is not reversed when a double-sided document is scanned. Left: A document with a bind on the left side. Top: A document with a bind on the top side. Right: A document with a bind on the right side. Auto: If the length is 11-3/4 in. or less, the binding position is along the long side of the paper. If the length is more than 11-3/4 in., the binding position is along the short side of the paper.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Original Setting].

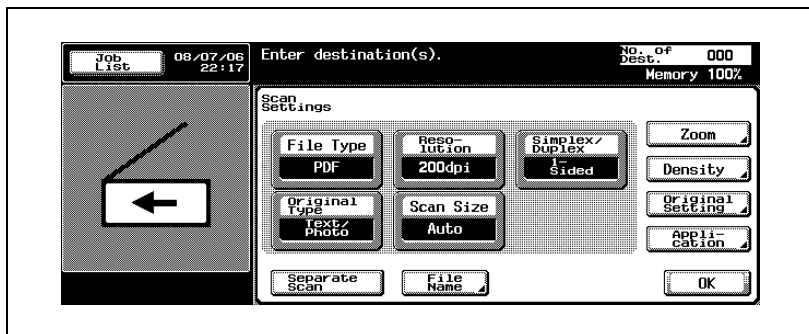





### 3 Specify the original settings.

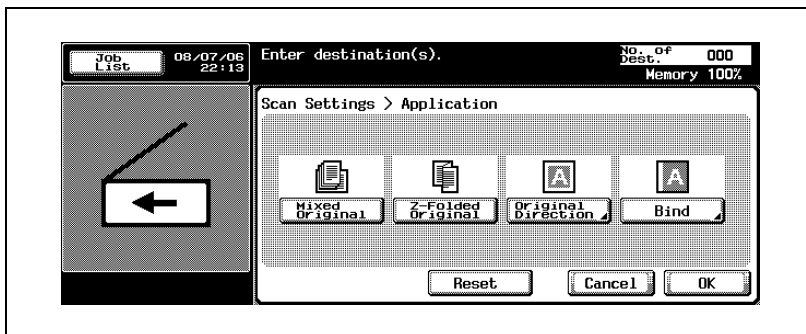

- If "Original Direction" is selected, a screen for selecting the direction appears. Select the direction, and then touch [OK].
- To select the default settings, touch [Reset].

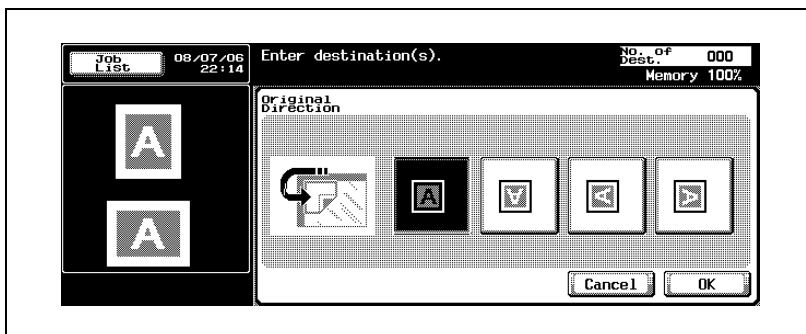

- If "Bind" is selected, a screen for selecting the document binding position appears. Select the binding position, and then touch [OK].

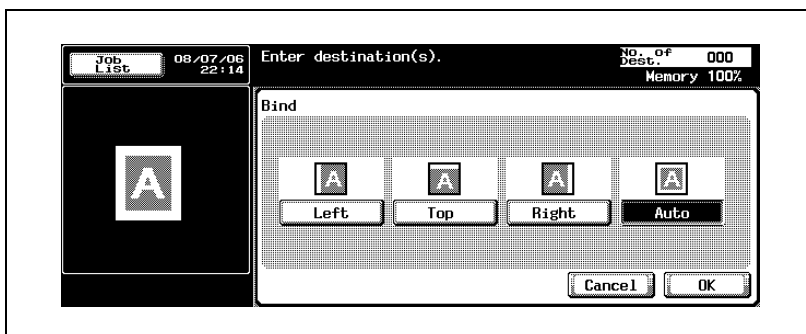



- 4 Touch [OK], and then touch [OK] in the next screen that appears.



**Book Scanning (Application)**

Select this function when scanning page spreads. The four scanning methods listed below are available. In addition, frame erasing and center erasing can be specified.

Item	Description
Book Spread	Scans a spread as one page.
Book Separation	Scans a spread as separate left and right pages (2 pages).
Front Cover	Scans the first page as a front cover.
Front and Back Cover	The 1st page is scanned as the Front cover, the 2nd page scanned as the Back cover, and those including the 3rd page and the succeeding pages are scanned as the Body of Documents.

Shadows that occur from scanning page spreads can be erased from the scans.

Item	Description
Erase	Erases the perimeter of the document. The width to be erased can also be specified separately for the top, left, right, and bottom sides within the range of 1/16 in. to 2 in.
Center Erase	Erases the shadow along the center binding. The width can be set within the range of 1/16 in. to 1-3/6 in.




**Note**


*If the width to be erased is specified using the Book Erase functions in the Book Scanning screen, the same value is set for the "Erase" function on the Application screen.*



- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

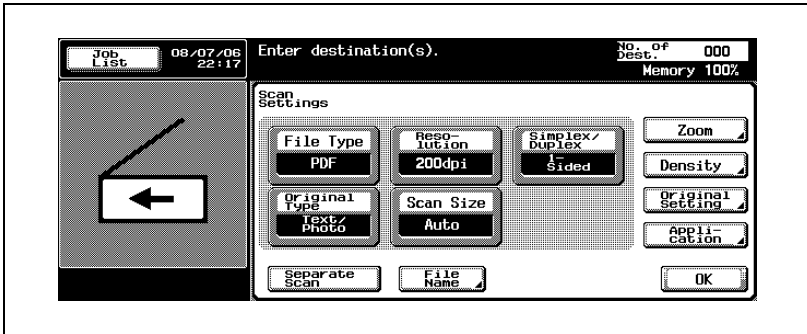


- 3 Touch [Book Scanning].

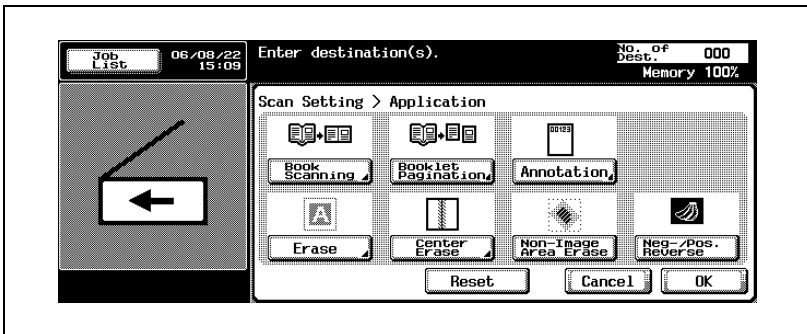



- 4 Specify the Book Scanning settings.
  - For details on the "Erase" and "Center Erase" functions, refer to "Frame Erase (Application)" on page 3-74 and "Center Erase (Application)" on page 3-76.

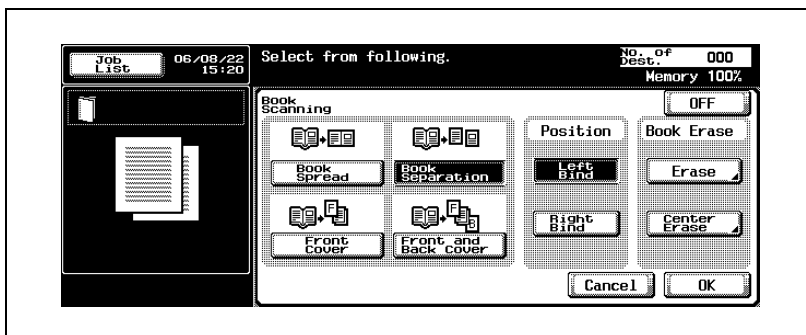

- Select the Position when [Book Separation], [Front Cover], or [Front and Back Cover] is selected.
- 5 Touch [OK], and then touch [OK] in the next two screens that appear.




## Booklet Pagination (Application)


The left and right pages of a page spread can be scanned separately.

Item	Description
Left Bind	Select this setting for documents where the pages are bound on the left side. The left page of the spread will be scanned first, then the right page.
Right Bind	Select this setting for documents where the pages are bound on the right side. The right page of the spread will be scanned first, then the left page.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

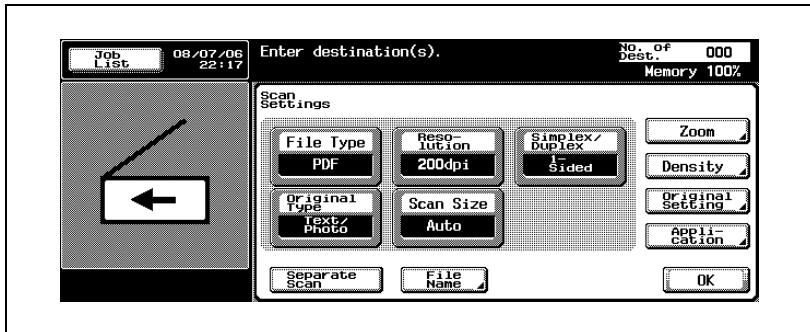


- 3 Touch [Booklet Pagination].

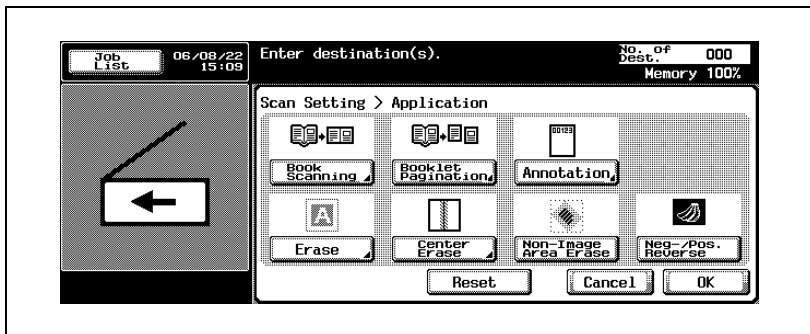



- 4 Select the binding position for the document.

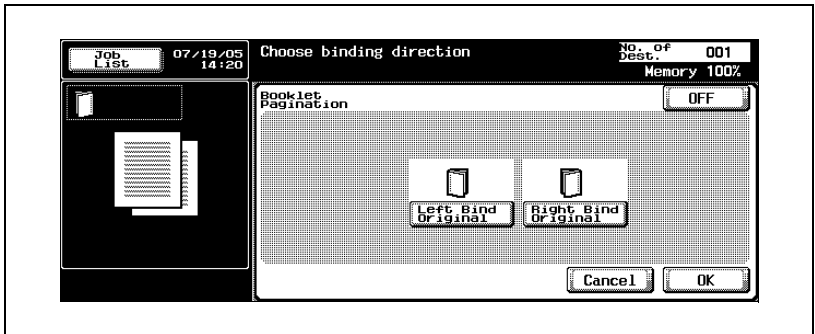


- 5 Touch [OK], and then touch [OK] in the next two screens that appear.




## Annotations (Application)

When saving a scanned document, add the preset domain name, sequence number, date, and time, and then save the document in a box.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Press [Application].

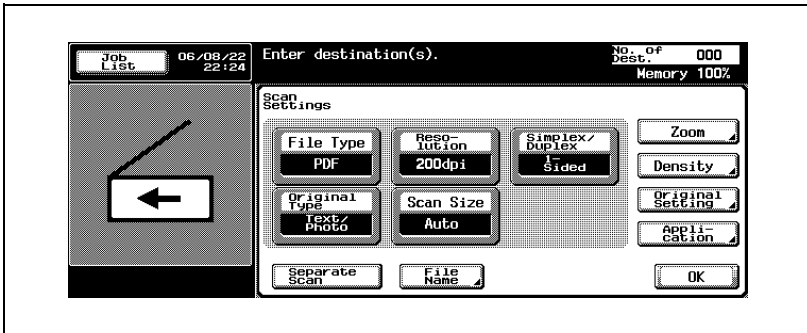


- 3 Press [Annotation].

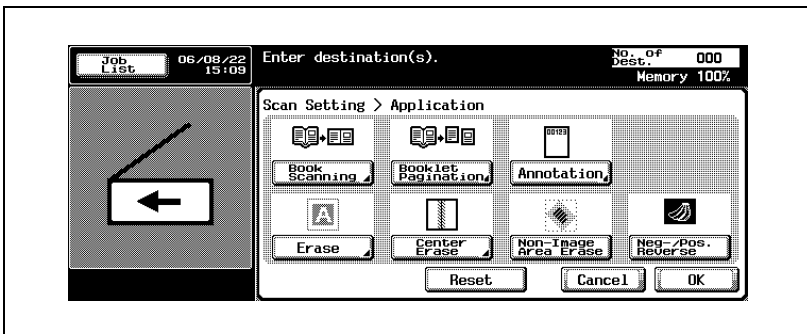



- 4 Select the saving destination for the annotation user box.

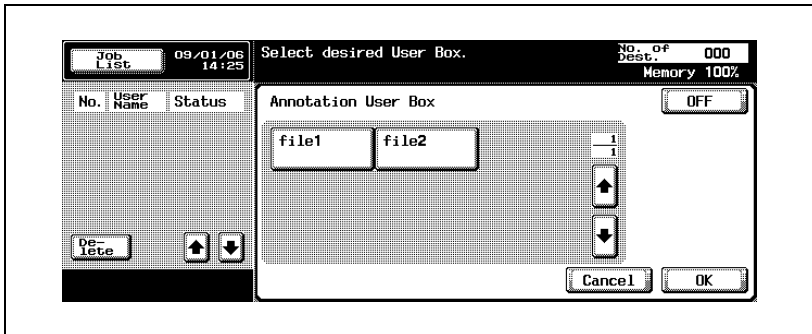

- 5 Touch [OK] three times.



#### Note

*If selecting an annotation user box, the box that was selected in [Broadcast Destinations] is added.*



#### Detail

*Only the PDF file format can be saved.*

*When saving data in an annotation user box, e-mail transmission, FTP transmission, and SMB transmission can be specified at the same time.*



#### Note

*For delivering the data that was saved in a filing number box over the Internet, refer to User manual [Box Operations].*

*For creating a filing number box, refer to "Creating Annotation User Boxes" on page 4-50*




## Frame Erase (Application)


Erases the perimeter of the document. The width to be erased can also be specified separately for the top, left, right, and bottom sides within the range of 1/16 in. to 2 in.

If the width to be erased is specified using the Book Erase functions in the Book Scanning screen, the same value is set for the "Erase" function on the Application screen.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

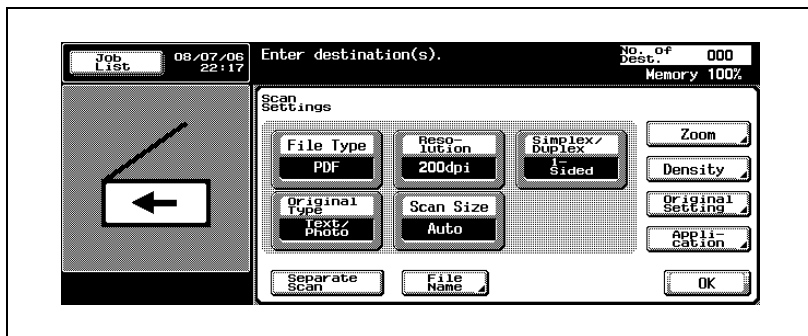


- 3 Touch [Erase].

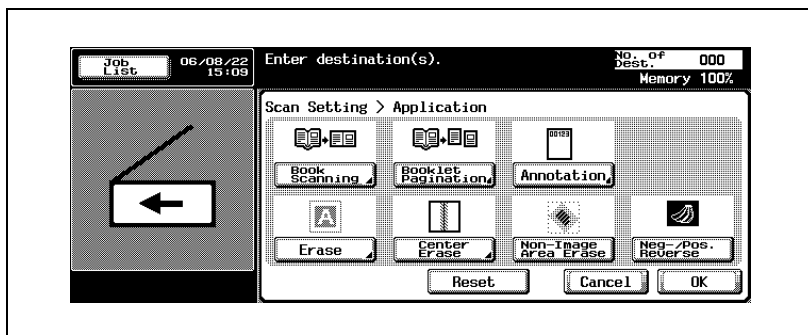



- 4 Specify the width to be erased.

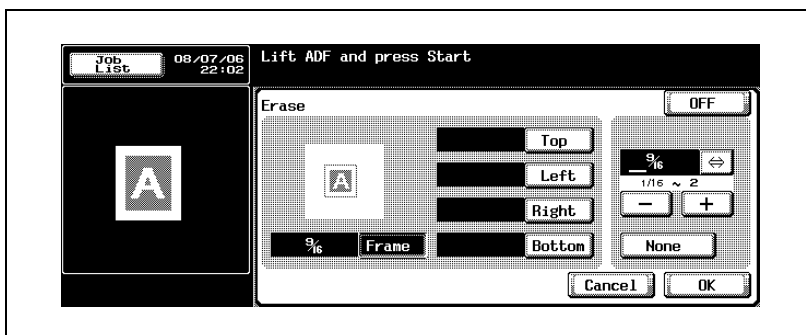

- To erase all sides with the same width, touch [Frame] and enter the value.
  - To specify the width separately for the top, left, right, and bottom sides, touch the corresponding button and enter the value. To specify that no area is erased, touch [None].
  - For North American users, touch [↔] to switch between the integer and the fraction.
- 5 Touch [OK], and then touch [OK] in the next two screens that appear.




### Center Erase (Application)


When scanning a page spread, the shadow of the binding at the center can be erased.

The width of the erased area can be set between 0.1 and 30 mm.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

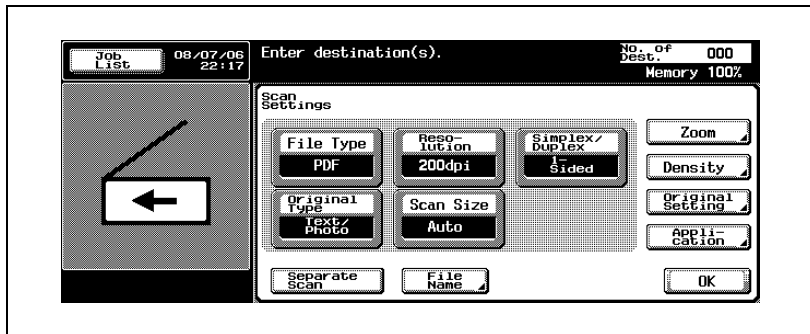


- 3 Touch [Center Erase].

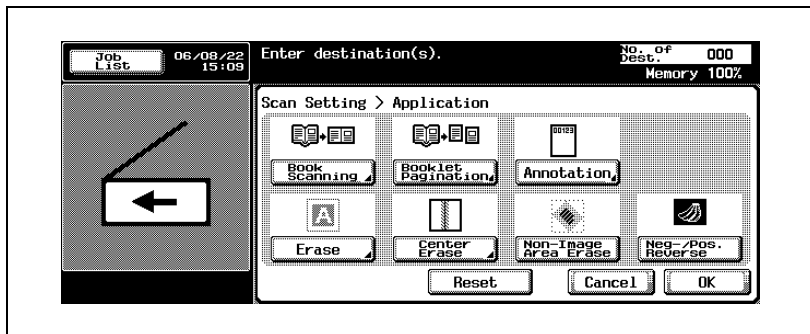




- 4 Touch [+] or [-] or use the keypad to adjust the width of the erased area.

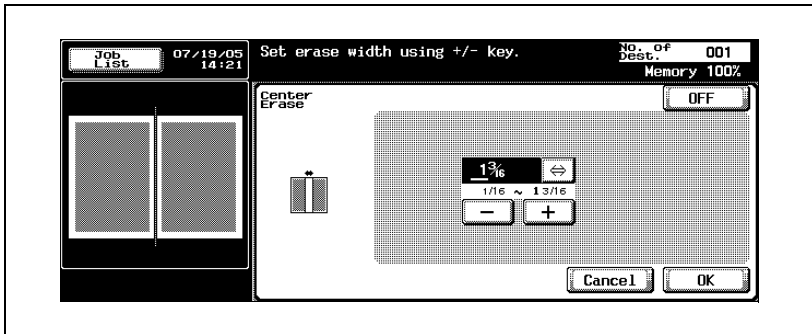

- If the values are in millimeters.

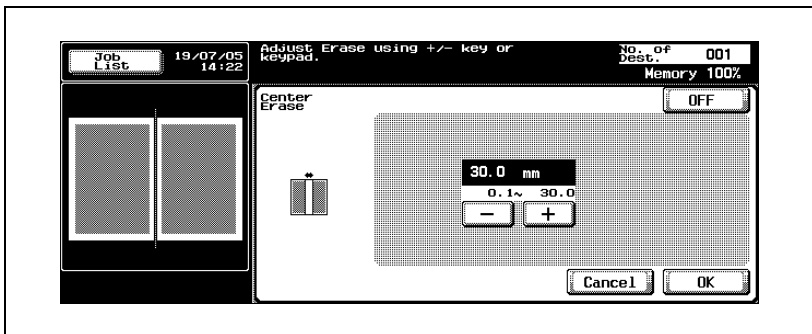


- 5 Touch [OK], and then touch [OK] in the next two screens that appear.




### Non-Image Area Erase (Application)

The shadows along the edges of a document can be erased from the scan.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

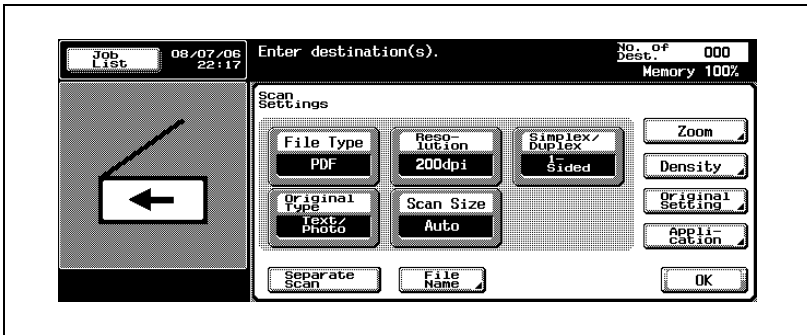

- 3 Touch [Non-Image Area Erase].
  - To cancel the function, touch [Non-Image Area Erase] again.

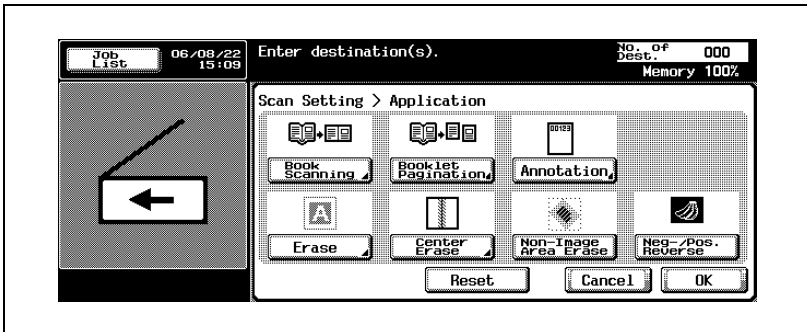


- 4 Touch [OK], and then touch [OK] in the next screen that appears.




### Neg-/Pos. Reverse (Application)

The black and white areas of the document can be reversed in the scan.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Application].

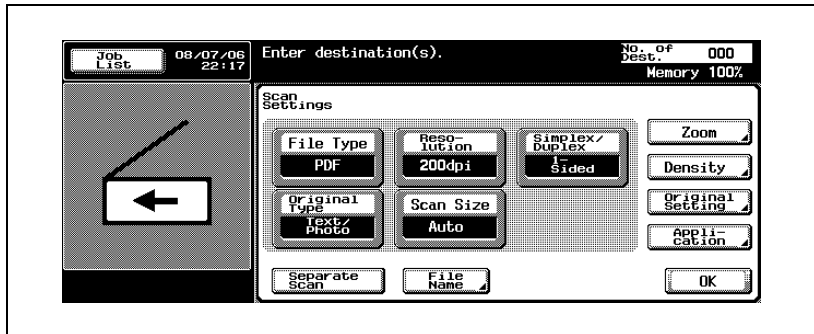

- 3 Touch [Neg-/Pos. Reverse].
  - To cancel the function, touch [Neg-/Pos. Reverse] again.

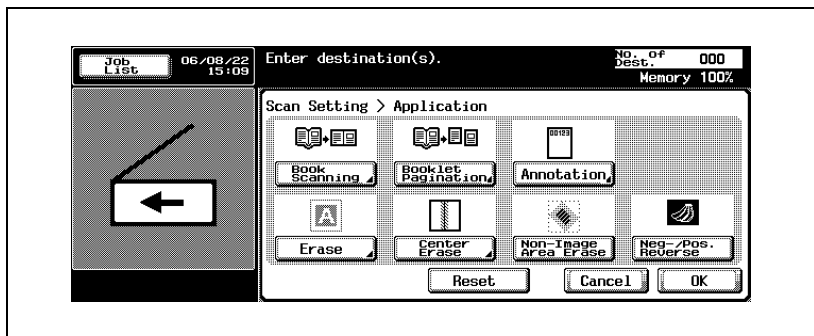


- 4 Touch [OK], and then touch [OK] in the next screen that appears.




## Separate Scan

The scan operation can be divided into several sessions for various types of documents, for example, when all pages of a document cannot be loaded into the ADF, when placing the document on the original glass, or when single-sided documents are combined with double-sided documents.

- 1 Touch [Scan Settings] in the Scan mode screen.
- 2 Touch [Separate Scan].

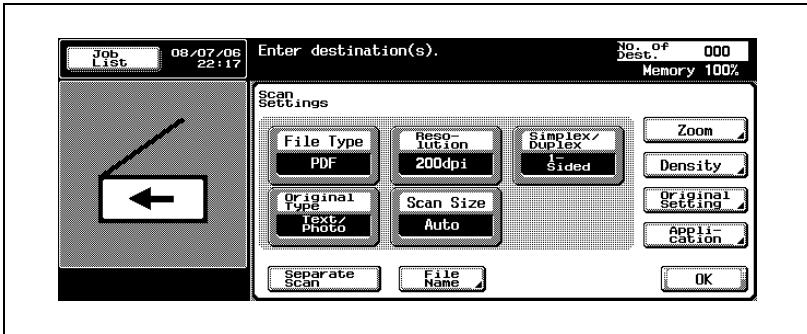

- 3 Press the [Start] key.
  - Place each part of the document into the ADF or on the original glass, and then press the [Start] key to scan it.

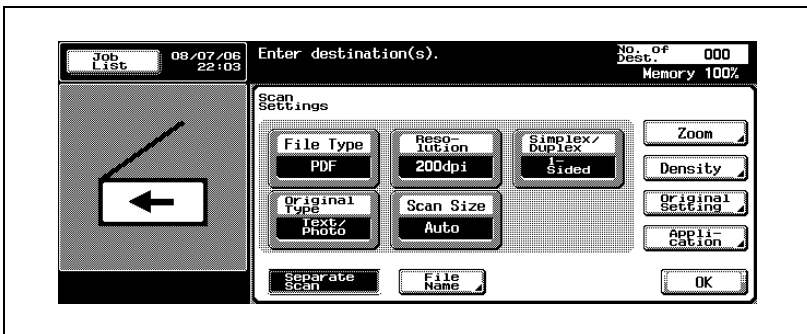




4 After all pages have been scanned, touch [Finish].



5 Press the [Start] key.

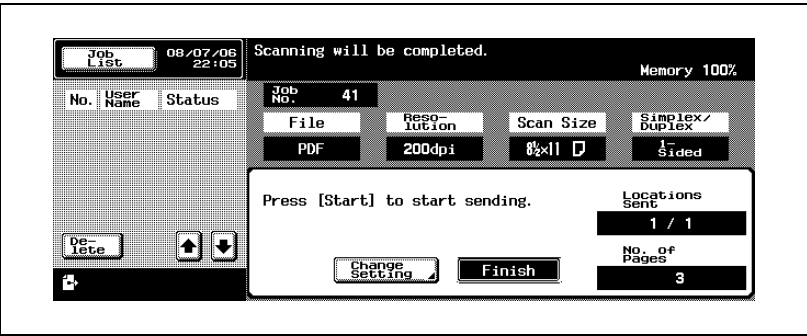



## File Name

You can change the file name to be saved.



### Detail

*If a file name is not specified when the data was scanned, it will automatically be specified by combining the mode and the date and time at the time the file was saved. For specifying the file name, refer to "Specifying E-Mail Settings" on page 3-91.*



### Note


*To clear all of the file names that are displayed, press the [C] (clear) key.*

*Up to 30 characters can be entered.*




### To change the file name

- 1 In the Scan mode screen, touch [Scan Settings].
- 2 Touch [File Name].

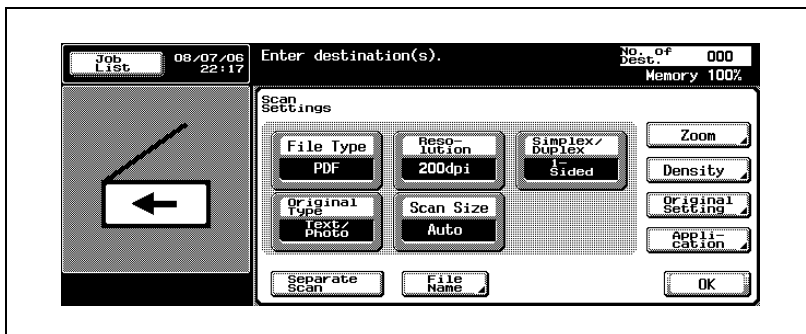

- 3 Type in the new file name using the keyboard that appears.

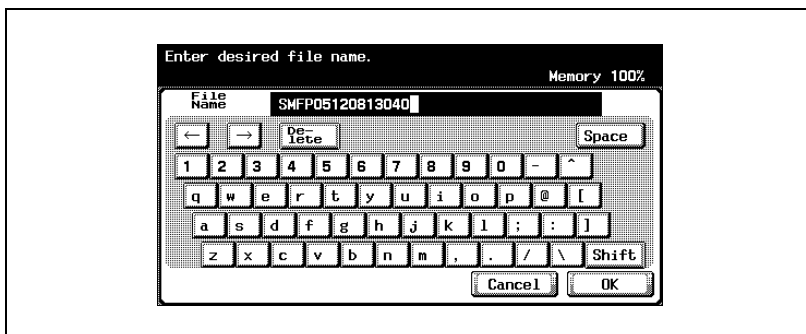

- 4 Touch [OK], and then touch [OK] in the next screen that appears.



## 3.7 Checking the Settings

### Checking the Settings

The selected setting can be checked in detail. The destination can be changed on this screen.

The settings that can be viewed and changed are as follows:

Item	Description
Type	Displays the type of transmission.
Name	Displays the registered destination name.
Dest.	Displays the destination file path or the e-mail address.
Edit	Touch to change the destination.
Set Dest.	Specify the notification destination for the e-mail message that is sent when the data is transmitted, etc.
Save in Add. Book	Touch when the address is not registered in the address book such as when the address is entered through direct input.



#### Detail

*[Edit] is not displayed when "Manual Destination Input" is set to "Restrict".*

*[Save in Add. Book] is not displayed when "Registering and Changing Address" is set to "Restrict".*

*For details on the settings for "Manual Destination Input" and "Registering and Changing Address", refer to the User manual [Copy Operations].*



#### Note

*The notification destination cannot be specified when using Scan to E-mail.*



#### Note


*If Changing the "From" Address from [Administrator Setting] — [System Setting] — [Restrict User Access] — [Restrict Access to job Setting] is specified as restricted, direct input cannot be performed.*




## To check a job

- 1 Press the [Mode Check] key in the control panel while the Scan mode screen is displayed.


The Mode Check screen appears.

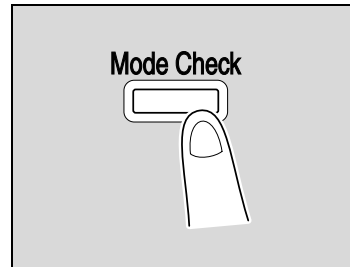

- 2 Select the desired job from the list of registered jobs.

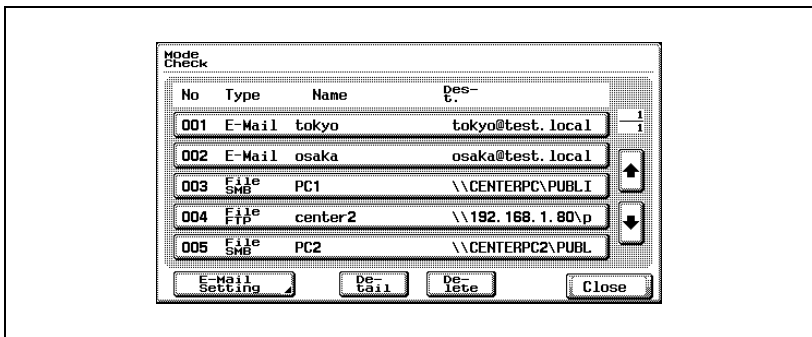


- 3 Touch [Detail].

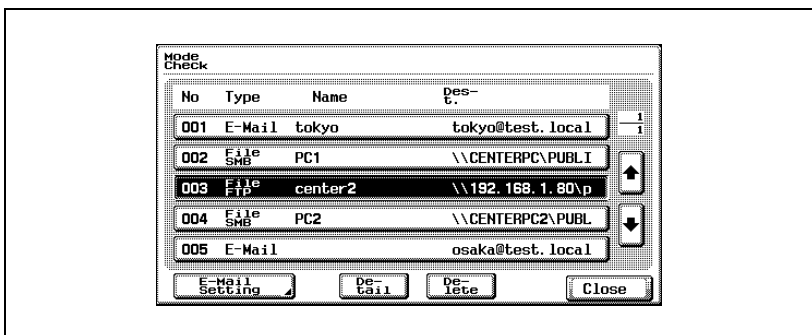




#### 4 Check the details.

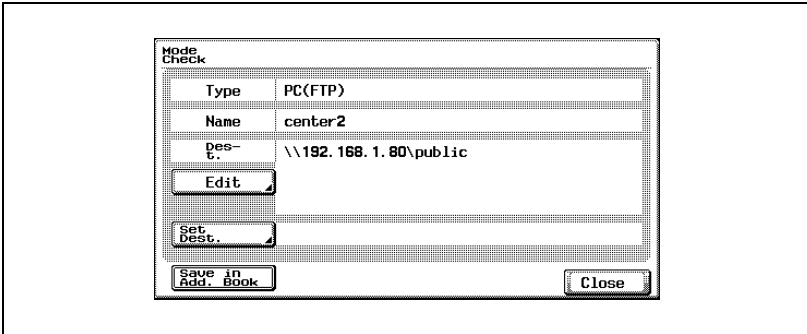


- ? How do you correct the destination?
- Touch [Edit] to display the direct input screen on which the address can be corrected. After correcting the destination, touch [OK].

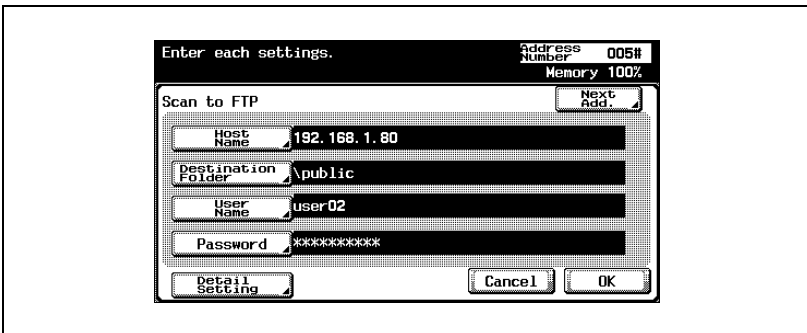



- ? How do you specify the notification destination?
- Touch [Set Dest.] to display the address book. Specify the notification e-mail address from the address book or enter the address directly, and then touch [OK].

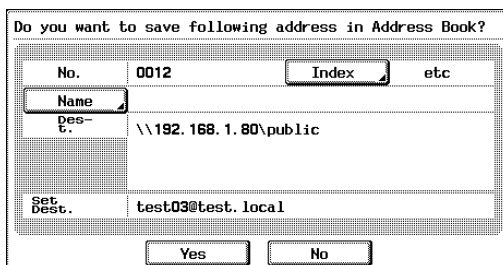

- ? Can an address that is directly entered be registered in the address book?
- To register the address to the address book, touch [Save in Add. Book].



? What type of information must be entered?

→ Touch [Index], and then specify the characters for indexing the address in the address book. Touch [Name], and then enter the name that is to be registered in the address book. After entering the name, check it, and then touch [Yes].

5 After checking the information, touch [Close].

Mode Check

Type	PC(FTP)
Name	
Des-t.	\\192.168.1.80\public
Set Des-t.	test03@test.local

Buttons: Edit, Save in Add. Book, Close

6 Touch [Close].

Mode Check

No	Type	Name	Des-t.
001	E-Mail	tokyo	tokyo@test.local
002	File	PC1	\\CENTERPC\PUBLIC
003	File	PC2	\\CENTERPC2\PUBLIC
004	File		\\192.168.1.80\p
005	E-Mail	osaka	osaka@test.local

Buttons: E-Mail Setting, De-tail, De-lete, Close



### Note

*When the settings are changed, the destination whose settings have been changed is moved to the end of the list of registered destinations.*




## Deleting Unneeded Destinations


The selected destination can be deleted.

- 1 Press the [Mode Check] key in the control panel while the Scan mode screen is displayed.


The Mode Check screen appears.

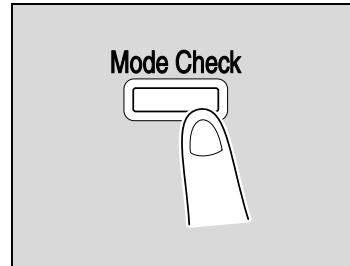

- 2 Select the desired job from the list of registered jobs.

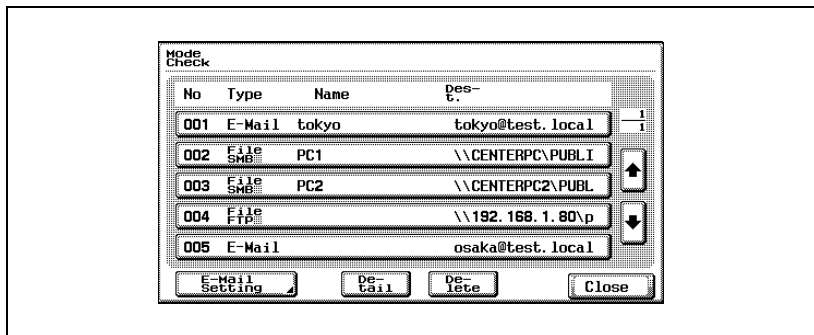


- 3 Touch [Delete].

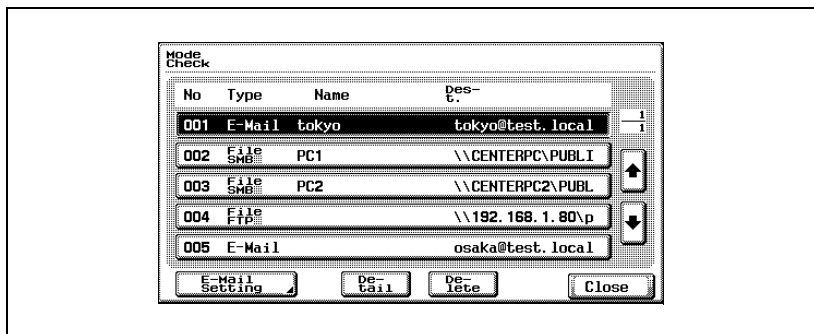


A confirmation message appears.



- 4 Touch [Yes] to delete the job.

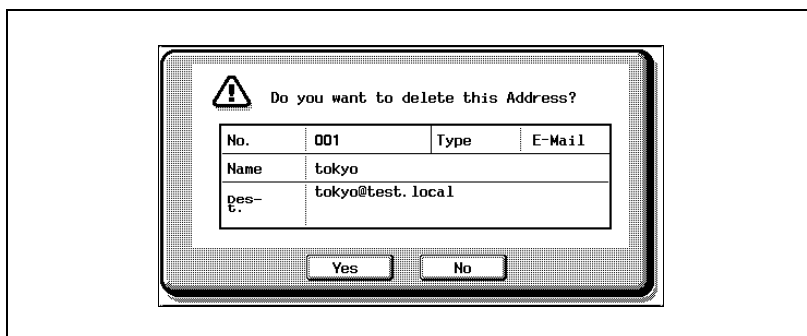

- 5 Touch [Close].

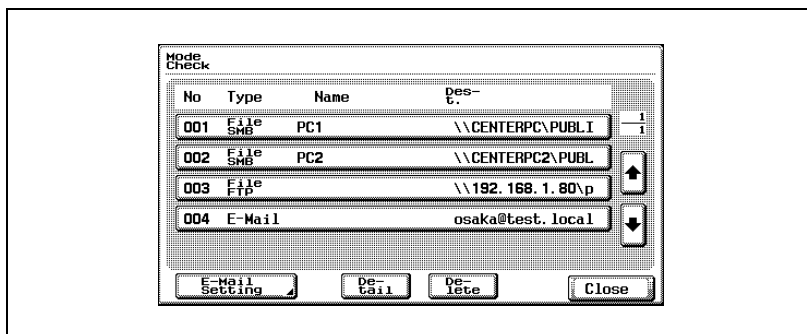



**Specifying E-Mail Settings**

When the data is sent, an e-mail containing information about the data, such as the file name, can be sent to a specified e-mail address.

The file name is also used in Scan to FTP and Scan to SMB.

The settings that can be specified are as follows:

Item	Description
File Name	The name of the saved file is displayed. This file name is automatically displayed based on the settings specified in "Administrator Setting". Up to 30 characters can be entered.
Subject	The information specified in Utility mode is automatically displayed. Touch [Direct Input] to change the information. Up to 64 characters can be entered.
From	The administrator e-mail address specified in Utility mode is automatically displayed. Touch [Direct Input] to change the information. If [Changing the "From" Address] from [Administrator Setting] - [System Setting] - [Restrict User Access] - [Restrict Access to job Setting] is specified as restricted, direct input cannot be performed.
Text	The text specified in Utility mode is displayed. Touch [Direct Input] to change the information. Up to 256 characters can be entered.



The file name is assigned by combining the information below.

The name "SKMBT\_50004102315230" is explained below as an example.


Item	Description
S	Indicates the mode when the file was saved. C: Copy F: Fax S: Scan
KMBT_500	Indicates the name of the device that scanned the data. The factory default is "KMBT_500" ("KMBT_420" on bizhub 420, "KMBT_360" on bizhub 360). This name can be changed with the [Input Machine Address] parameter on the [Administrator/Machine Setting] screen in Administrator mode. A name of up to 10 characters can be specified.
04102315230	Indicates the year (lower 2 digits), month, day, hour, and minute when the data was scanned. The last digit is a sequence number when data is scanned consecutively in 1 minute.
_0001	Indicates the page number when multiple pages of data are scanned. This number does not appear on the "File Name" screen, but is automatically attached as part of the file name when transmitted over the network. If a file name receive condition is placed on the server such as during a Scan to FTP operation, take this section of the name into account.
.TIF/.PDF	The extension of the specified data type. These characters do not appear on the "File Name" screen, but is automatically attached as part of the file name when transmitted over the network.




## To change the e-mail settings

- 1 Press the [Mode Check] key in the control panel while the Scan mode screen is displayed.

The Mode Check screen appears.

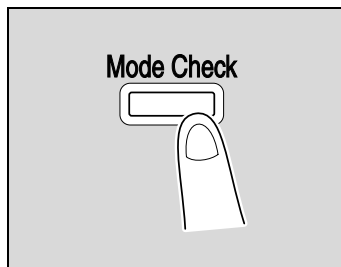


- 2 Touch [E-Mail Setting].

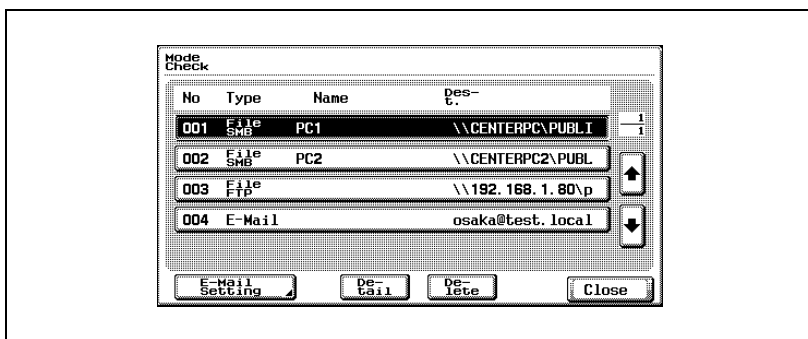

A confirmation message appears.

- 3 Check the information and change it as necessary.

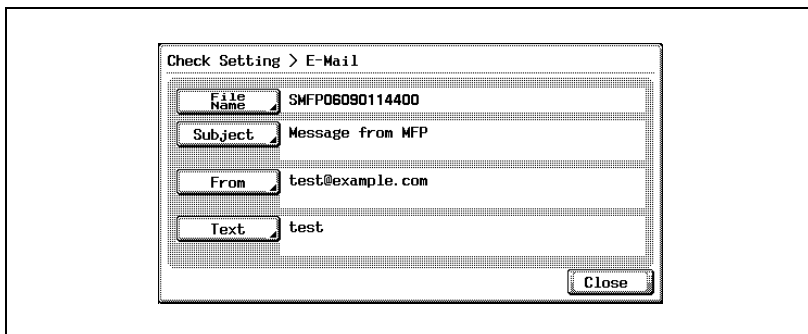

- 4 Touch [Close], and then touch [Close] in the next screen that appears.



### 3.8 Checking the Scanner Transmission Log

A job list of scanner transmissions can be displayed from the control panel.




#### Detail

*For details on the function of each button, refer to the User manual [Copy Operations].*

#### Displaying the Current Jobs List

- 1 Touch [Job List] on the control panel.  
The Print tab of the Job List screen appears.
- 2 Touch [Scan].  
The Current Jobs list of the Scan tab appears.

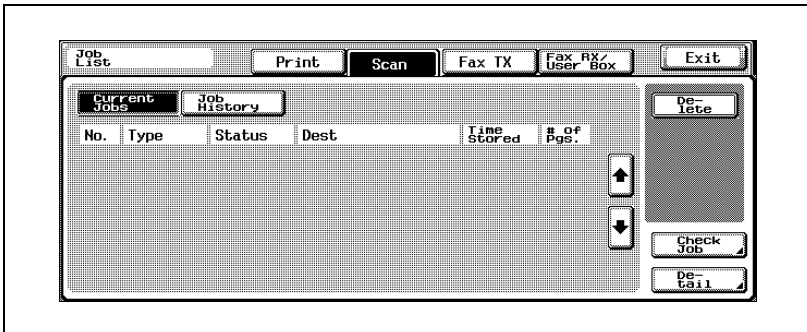

#### Note

*The job list that is displayed first when [Scan] is touched is the Current Jobs list.*

*There are no buttons for display modes in the Current Jobs list of the Scan tab.*



## Displaying the Job History List

- 1 Touch [Job List].

The Print tab of the Job List screen appears.


- 2 Touch [Scan].

The Current Jobs list of the Scan tab appears.

- 3 Touch [Job History].

The Active Jobs list appears in the Job History list of the Scan tab.

The first screen that appears when [Job History] is touched contains the Active Jobs list.

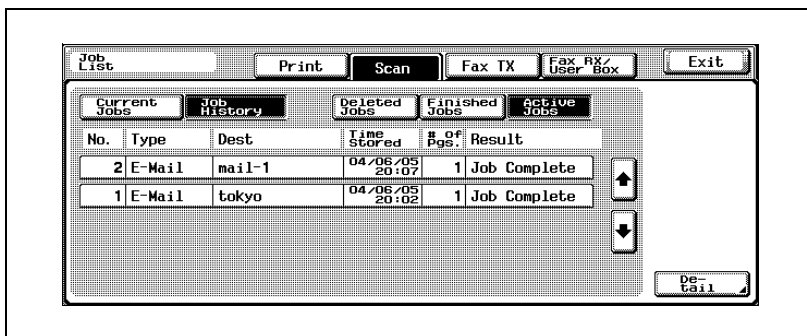

- 4 Touch the button corresponding to the desired list.

- Deleted Jobs: Displays only the jobs that were deleted before completion.
- Finished Jobs: Displays only the jobs that were completed normally.
- Active Jobs: Displays all jobs.

The Job History list is displayed.



### Detail

*Touch [Detail] to check the detailed information of the job.*



## Displayed Information

The following information is displayed on the Scan tab of the Job List screen.

Item	Description
No.	Displays the job ID number that is assigned when a job is registered.
Type	Displays the transmission type.
Status (only on the Current Jobs list)	Displays the job status.
Dest	Displays the destination.
Time Stored	Displays the time when the job was registered.
# of Pgs.	Displays the number of pages of the original.
Result (only on the Job History list)	Displays the execution result of the job.



---

# 4

## **Specifying Settings From the Control Panel**







# 4 Specifying Settings From the Control Panel

## 4.1 Settings on the Control Panel

The Utility mode is used to specify basic settings for using the machine and specifications for advanced functions.

This chapter explains how to set the scanner functions as well as utility functions related to the network.

### Utility Types

The utility settings covered in this manual are as follows:

Item	Description	Reference
One-Touch Registration	Sets the scanner destinations. Destinations such as programs, groups, and abbreviated destinations can be registered.	"Registering Abbreviated Destinations" on page 4-12 "Registering Group Destinations" on page 4-25 "Registering Program Destinations" on page 4-27 "Specifying E-Mail Settings" on page 4-30
User Setting	Specifies initial scanning settings and the format of saved data.	"Setting the Main Scan Mode Screen" on page 4-34 "Setting the Save Format of the Data to Be Scanned" on page 4-40



Item	Description	Reference
Administrator Setting	Outputs the destinations, subjects, and text that are registered in this machine in a list.	"One-Touch Registration List" on page 4-42
	Creates a filing number box.	"Creating Annotation User Boxes" on page 4-50
	Specifies basic settings to use the machine on a network.	<p>"Specifying Network Settings" on page 4-55</p> <p>"TCP/IP Settings" on page 4-56</p> <p>"NetWare Settings" on page 4-66</p> <p>"http Server Settings" on page 4-72</p> <p>"FTP Settings" on page 4-80</p> <p>"SMB Settings" on page 4-83</p> <p>"AppleTalk Settings" on page 4-88</p> <p>"Enabling LDAP Settings" on page 4-90</p> <p>"Setting Up LDAP Settings" on page 4-92</p> <p>"Search Default Setting" on page 4-102</p> <p>"E-Mail TX (SMTP) Settings" on page 4-103</p> <p>"E-Mail RX (POP) Settings" on page 4-113</p> <p>"Device Settings" on page 4-117</p> <p>"Time Adjustment Settings" on page 4-119</p> <p>"Status Notification Settings" on page 4-123</p> <p>"Total Counter Report Setting" on page 4-126</p> <p>"PING Confirmation" on page 4-132</p> <p>"SLP Settings" on page 4-136</p> <p>"LPD Settings" on page 4-137</p> <p>"Prefix/Suffix Settings" on page 4-138</p> <p>"Action for Invalid Certificate" on page 4-143</p> <p>"SNMP Settings" on page 4-145</p> <p>"Bonjour Setting" on page 4-151</p> <p>"TCP Socket Setting" on page 4-153</p> <p>"OpenAPI Settings" on page 4-155</p>



Other Related Settings

Though the setup procedure is not covered in this manual, there are items that are partially related to the scanning functions and network connection. For details on these items, refer to the corresponding section in the User manual [Copy Operations].


Item	Description	Reference
Administrator Registration	Scanned data cannot be sent by E-mail if the administrator's E-mail address is not specified.	"Administrator Registration" in the User manual [Copy Operations]
User Authentication Setting	Scan operation cannot be performed if scan operation is prohibited in "User Registration".	"User Authentication/Account Track" in the User manual [Copy Operations]




## 4.2 Displaying Setup Screens

### To display the Scan screen


- 1 Press the [Utility/Counter] key.
  - In Utility mode, an item can also be selected by pressing the key in the keypad for the number beside the desired button. For [1 One-Touch Registration], press the [1] key in the keypad.

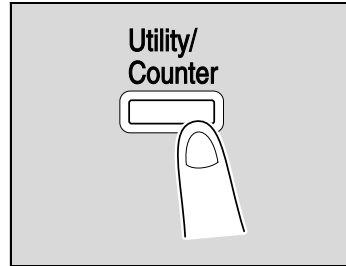

- 2 Touch [1 One-Touch Registration].

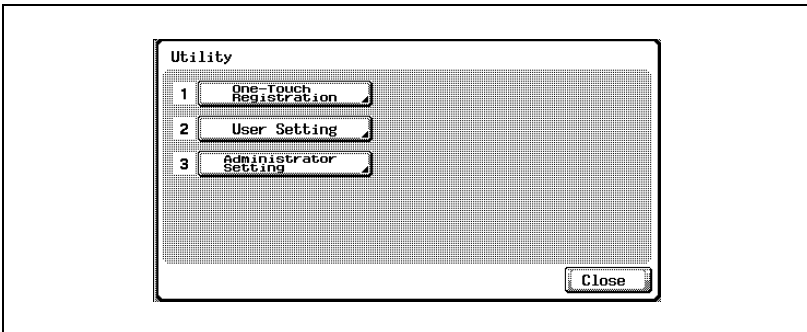


- 3 Touch [1 Scan].

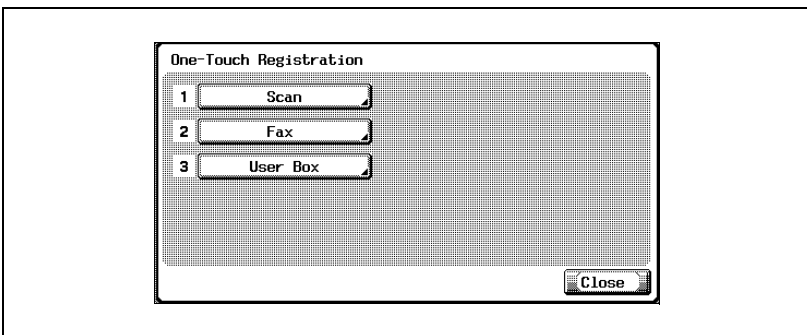



The Scan screen appears.

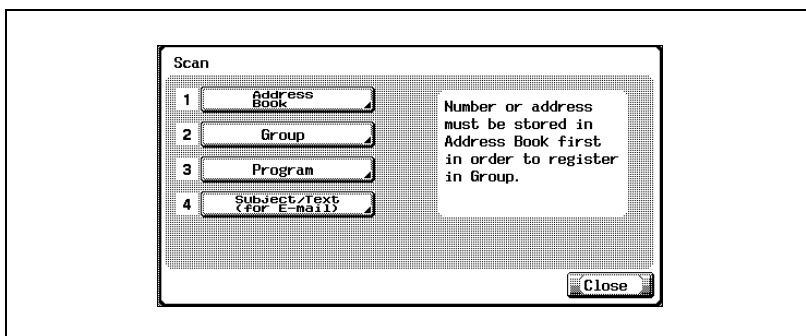
**Note**

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




## To display the User Setting screen


- 1 Press the [Utility/Counter] key.

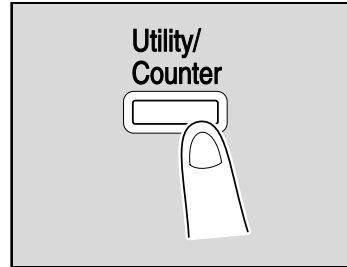

- 2 Touch [2 User Setting].
  - In Utility mode, an item can also be selected by pressing the key in the keypad for the number beside the desired button. For "2 User Setting", press the [2] key in the keypad.

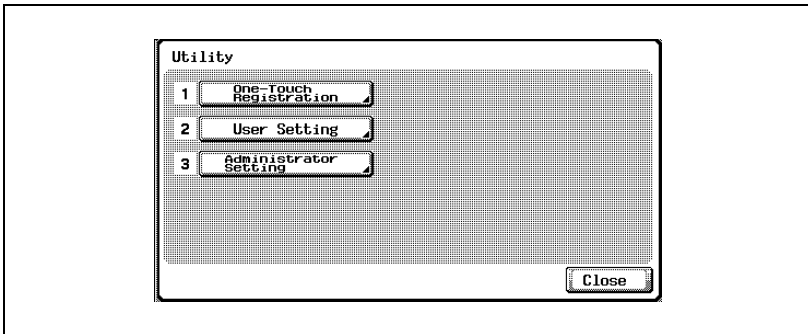

The User Setting screen appears.

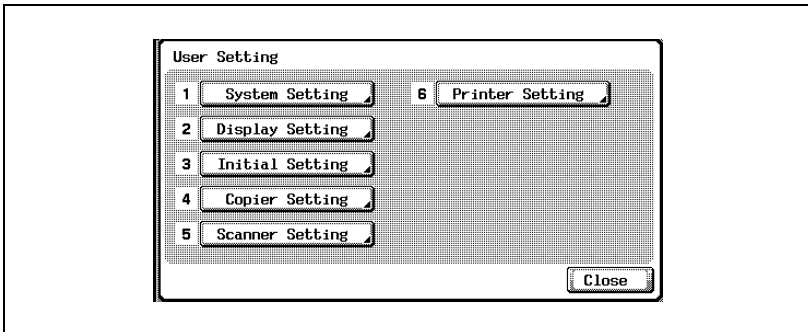





...


**Note**

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




## To display the Administrator Setting screen

- 1 Press the [Utility/Counter] key.

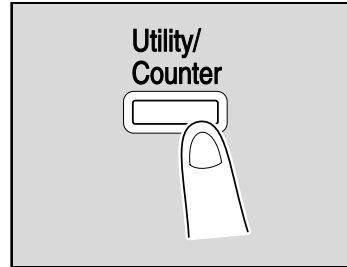


- 2 Touch [3 Administrator Setting].

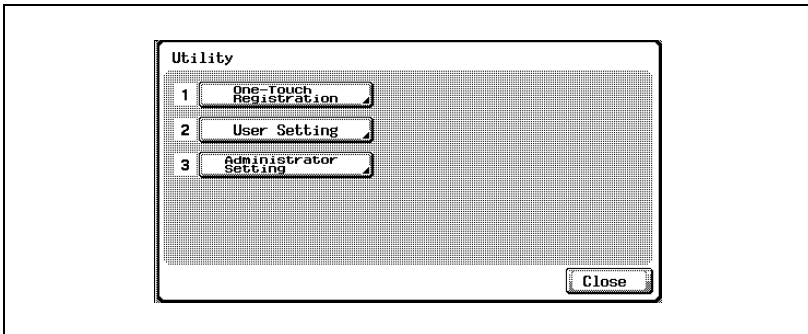


- In Utility mode, an item can also be selected by pressing the key in the keypad for the number beside the desired button. For "3 Administrator Setting", press the [3] key in the keypad.

- 3 Type in the password, and then touch [OK].

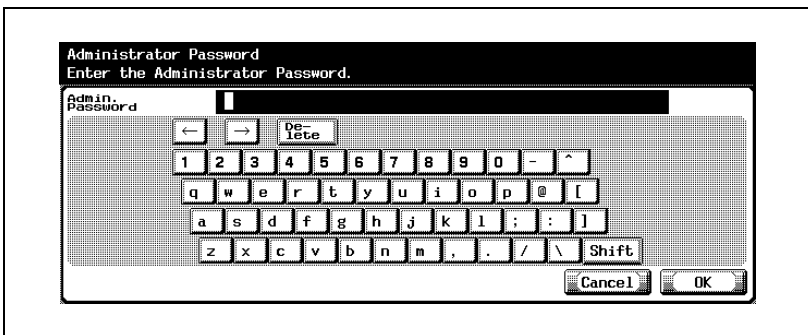



The Administrator Setting screen appears.

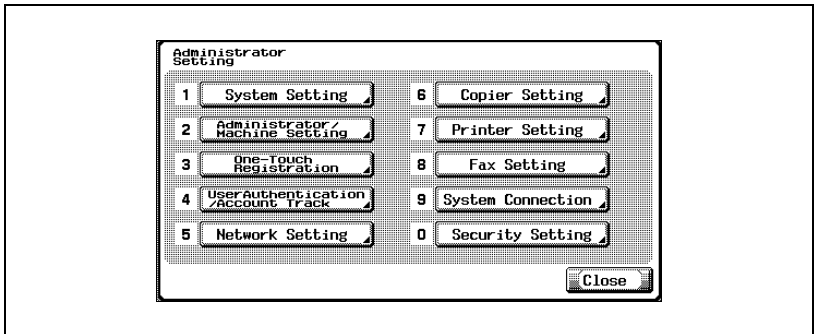

...

### Note

To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.



### Detail

For the procedure to enter characters, refer to "Entering text" on page 7-6.




### 4.3 Registering Abbreviated Destinations

Abbreviated destinations can be specified. Up to 2000 destinations can be registered when the optional hard disk drive is installed, and up to 1000 destinations can be registered if the optional hard disk drive is not installed.


#### E-Mail Destinations

E-mail addresses can be registered.

- 1 In the Scan screen, touch [1 Address Book]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [1 E-Mail].  
The E-Mail screen appears.

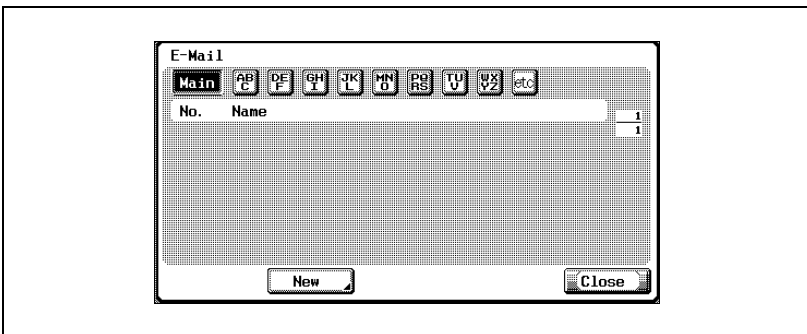


- 3 Touch [New].  
The Register E-Mail Address screen appears.

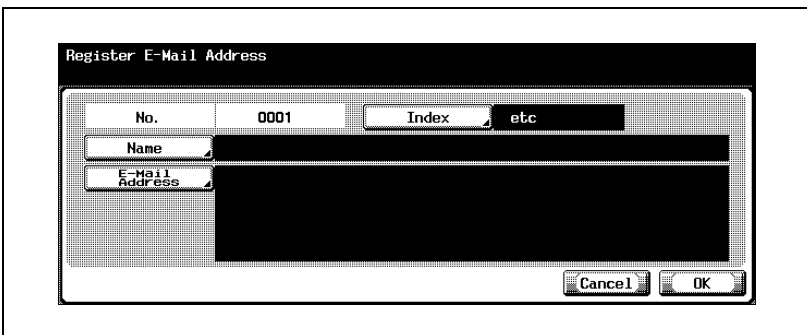

- 4 Touch [Name] and type in the name using the keyboard that appears on the screen.



- 5 Touch [OK].
- 6 Touch [E-Mail Address] and type in the e-mail address using the keyboard that appears on the screen.
- 7 Touch [OK].
- 8 Touch [Index] and touch the desired button.
  - This specifies the characters used to index the destination.
  - For destinations that are often used, specify [Main] at the same time, and it will be easier to search.
  - If the first character of the name is a letter, the first character is automatically registered as the indexing character.
  - The registration cannot be completed unless settings have been specified for "Name" and "E-Mail Address".

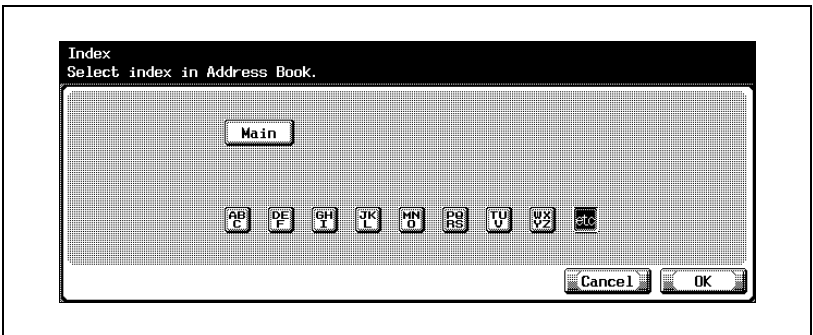

- 9 Touch [OK], and then touch [OK] in the next screen that appears.  
The e-mail destination is registered.



**Detail**

*To check the registered destination, touch the button for the destination, and then touch [Check].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*

**Note**

*If [Registering and Changing Address] is restricted, use [One-Touch Registration] in [Administrator Setting].*

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Detail**


*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




FTP Destinations

FTP destinations can be registered.

- 1 In the Scan screen, touch [1 Address Book]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [2 FTP].  
The FTP screen appears.

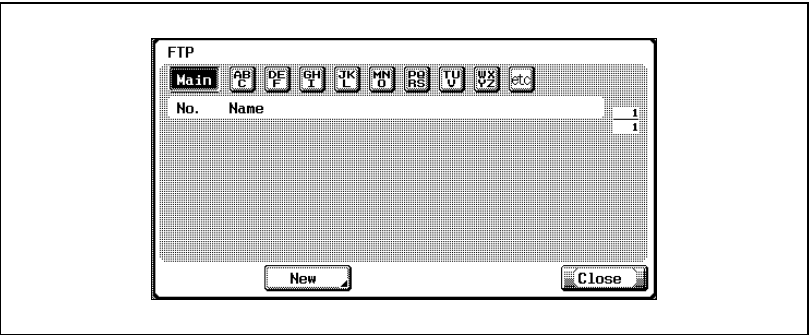

- 3 Touch [New].  
The Register FTP screen appears.

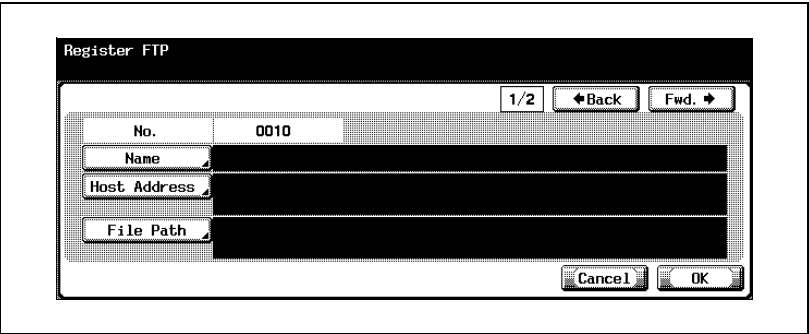


- 4 Touch [Name] and type in the name using the keyboard that appears on the screen.
- 5 Touch [OK].



## 6 Touch [Host Address].

- Enter the host address or IP address.
- To enter the host address, check that [Host Name Input] is selected, and then type in the host address using the keyboard that appears on the screen.
- To enter the IP address, touch [IP Address Input], and then enter the value. If the value was incorrectly entered, press the [C] (clear) key to erase the value, and then use the keypad to type in the correct value. To change an entered value, touch [↩] and [↪] to move the cursor to the desired position, and then type in the desired value.
- If [IP Address Input] is touched after entering the host address, the host address is cleared.
- If the IP address is entered first, then [Host Name Input] is touched, the IP address that was entered is displayed in the text box.
- If selecting [Host Name Input], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP Settings" on page 4-56.

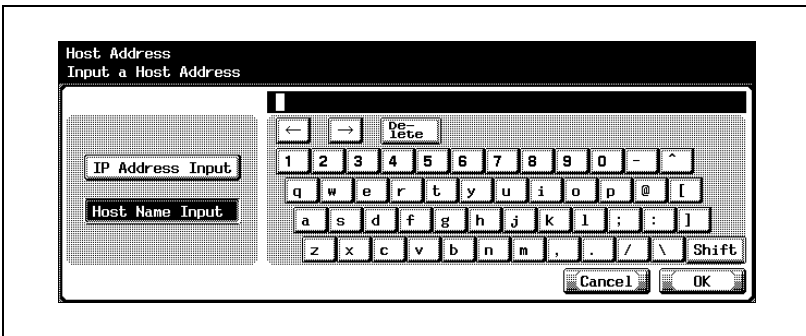


## 7 Touch [OK].

## 8 Touch [File Path] and type in the file path using the keyboard that appears on the screen.

## 9 Touch [OK].



## 10 Touch [Back] or [Fwd.].

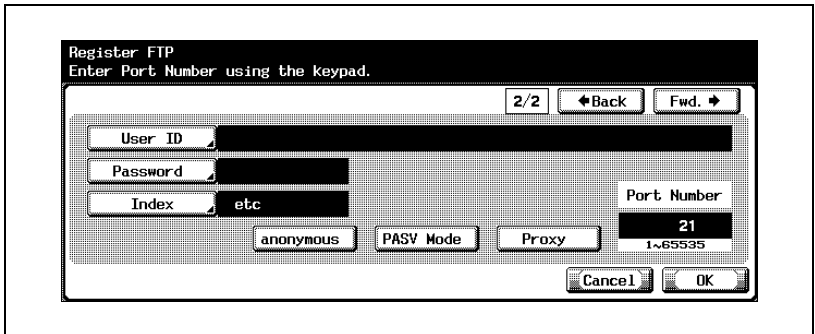

## 11 Touch [User ID] and type in the user ID using the keyboard that appears on the screen.

- If the user ID is not to be registered, touch [anonymous] on the Register FTP screen.

## 12 Touch [OK].


## 13 Touch [Password] and type in the password using the keyboard that appears on the screen.

## 14 Touch [OK].

If the first character of the name is a letter, the first character is automatically registered as the indexing character.

## 15 Touch [Index] and touch the desired button.

- This specifies the characters used to index the destination.
- For destinations that are often used, specify [Main] at the same time, and it will be easier to search.

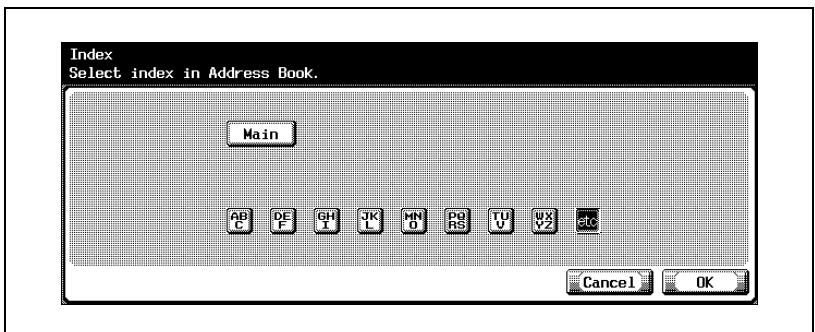



**16** Touch [OK].

**17** Press the [C] (clear) key to erase the value, and then use the keypad to type in the port number (between 1 and 65535).

- To enable PASV mode, touch [PASV Mode].
- To use a proxy server, touch [Proxy].
- If a value outside of the allowable range is specified, the message "Input Error" appears. Type in a value within the allowable range.

**18** Touch [OK].

The FTP destination is registered.



**Note**

*The registration cannot be completed unless settings have been specified for "Name", "Host Address", "File Path", "User ID", and "Password".*



**Detail**

*To check the registered destination, touch the button for the destination, and then touch [Check Setting].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*



**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



**Detail**


*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




**SMB Destinations**

SMB destinations can be registered.

- 1 In the Scan screen, touch [1 Address Book]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [3 SMB].  
The SMB screen appears.

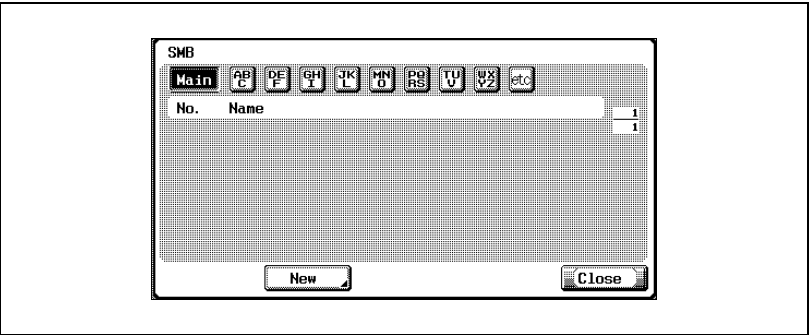


- 3 Touch [New].  
The Register SMB screen appears.

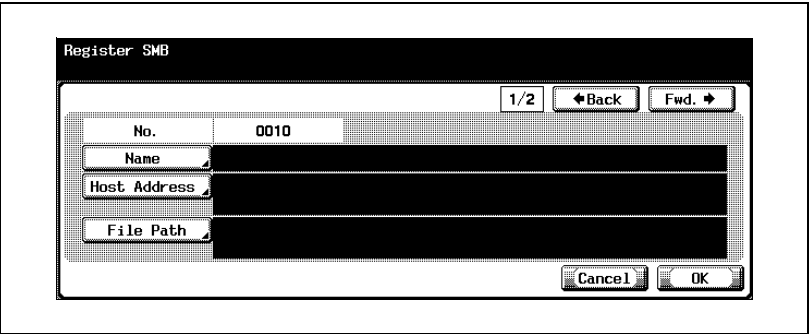

- 4 Touch [Name] and type in the name using the keyboard that appears on the screen.
- 5 Touch [OK].



- 6 Touch [Host Address] and enter the host address or IP address.
  - To enter the host address, touch [Host Name Input], and then type in the host address using the keyboard that appears on the screen.
  - To enter the IP address, touch [IP Address Input], and then enter the value. If the value was incorrectly entered, press the [C] (clear) key to erase the value, and then use the keypad to type in the correct value. To change an entered value, touch [↔] and [↕] to move the cursor to the desired position, and then type in the desired value.
  - If [IP Address Input] is touched after entering the host address, the host address is cleared.
  - If the IP address is entered first, then [Host Name Input] is touched, the IP address that was entered is displayed in the text box.
  - Enter the host name and file path using capital letters.
- 7 Touch [OK].
- 8 Touch [File Path] and type in the file path using the keyboard that appears on the screen.
- 9 Touch [OK].
- 10 Touch [Back] or [Fwd.].

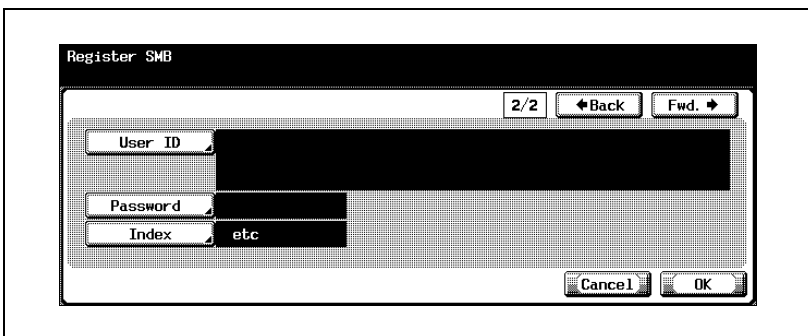


- 11 Touch [User ID] and type in the user ID using the keyboard that appears on the screen.
- 12 Touch [OK].
- 13 Touch [Password] and type in the password using the keyboard that appears on the screen.
- 14 Touch [OK].



**15** Touch [Index] and touch the desired button.

- This specifies the characters used to index the destination.
- For destinations that are often used, specify [Main] at the same time, and it will be easier to search.
- If the first character of the name is a letter, the first character is automatically registered as the indexing character.
- The registration cannot be completed unless settings have been specified for "Name", "Host Address", and "File Path".

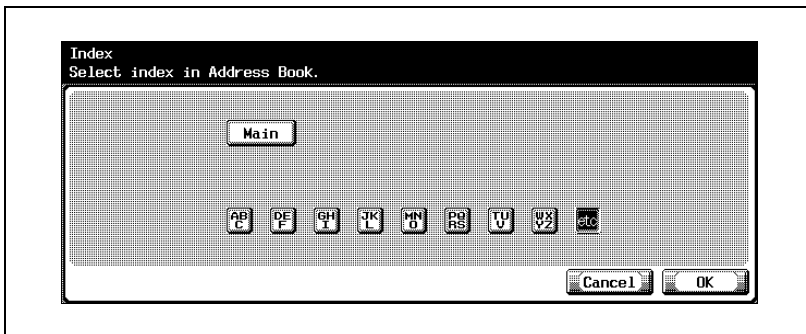**16** Touch [OK], and then touch [OK] in the next screen that appears.

The SMB destination is registered.

**Detail**

*To check the registered destination, touch the button for the destination, and then touch [Check Setting].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



**Detail**


*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




## Box Destinations

Box destinations can be registered. The Box destinations can be used when the optional hard disk drive is installed.

- 1 In the Scan screen, touch [1 Address Book]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [4 User Box].  
The User Box screen appears.

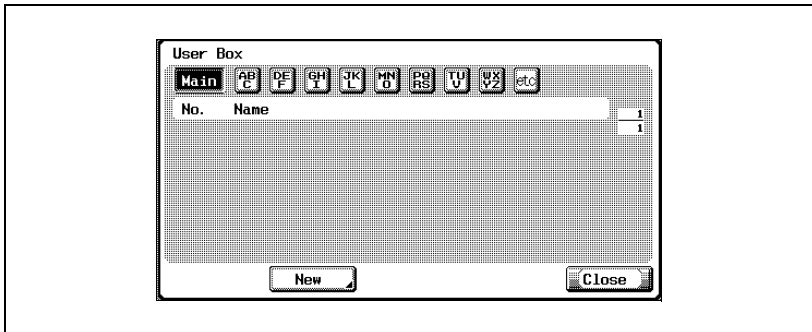

- 3 Touch [New].  
The Register User Box screen appears.

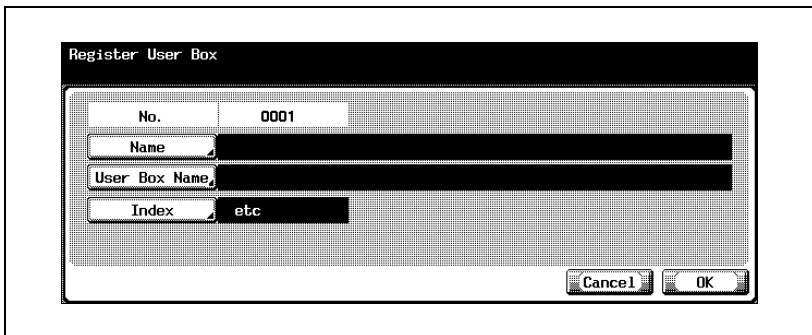

- 4 Touch [Name] and type in the name using the keyboard that appears on the screen.
- 5 Touch [OK].
- 6 Touch [User Box Name] and select the box.



- 7 Touch [Index] and touch the desired button.
  - This specifies the characters used to index the destination.
  - For destinations that are often used, specify [Main] at the same time, and it will be easier to search.
  - If the first character of the name is a letter, the first character is automatically registered as the indexing character.
  - The registration cannot be completed unless settings have been specified for "Name" and "User Box Name".
- 8 Touch [OK], and then touch [OK] in the next screen that appears.

The box destination is registered.

**Detail**

*To check the registered destination, touch the button for the destination, and then touch [Check Setting].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Detail**

*To specify a user box name, boxes must be registered in advance. Refer to the User manual [Box Operations] for more details.*

**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




### 4.4 Registering Group Destinations

Group destinations can be registered.


Up to 100 groups can be registered. Up to 500 destinations can be registered to one group.

**To register a group destination**

- 1 In the Scan screen, touch [2 Group]. (Refer to "To display the Scan screen" on page 4-6 for more details.)  
The Group screen appears.

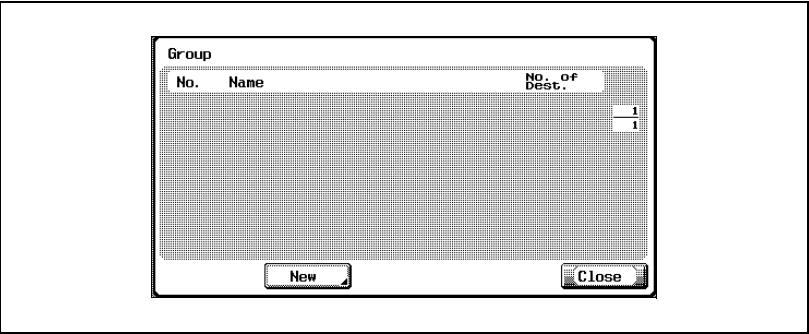

- 2 Touch [New].  
The Register Group screen appears.

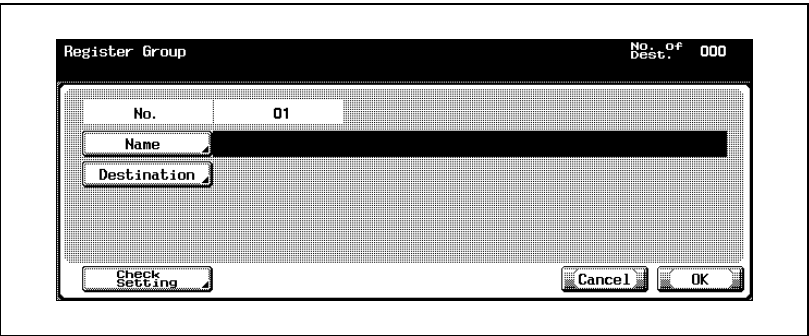

- 3 Touch [Name] and type in the name using the keyboard that appears on the screen.
- 4 Touch [OK].



- 5 Touch [Destination].
  - Touch the desired button, and then select the destinations to be registered.
- 6 Touch [Close].
  - To check the registered destinations, touch [Check Setting].
  - The registration cannot be completed unless settings have been specified for "Name" and "Destination".
- 7 Touch [OK].

The group destination is registered.

**Detail**

*To check the registered destination, touch the button for the destination, and then touch [Check Setting].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*



...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




## 4.5 Registering Program Destinations


Program destinations can be registered. Only one destination can be registered in a program. Up to 400 destinations can be registered in program destinations, including fax program destinations. (If the optional hard disk drive is not installed, up to 200 destinations can be registered.)

### To register a program destination

- 1 In the Scan screen, touch [3 Program]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch the button for the desired program number.

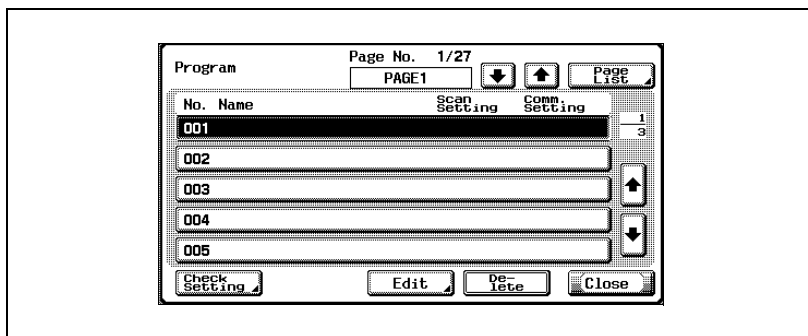

- 3 Touch [Edit].  
The Program Setting screen appears.

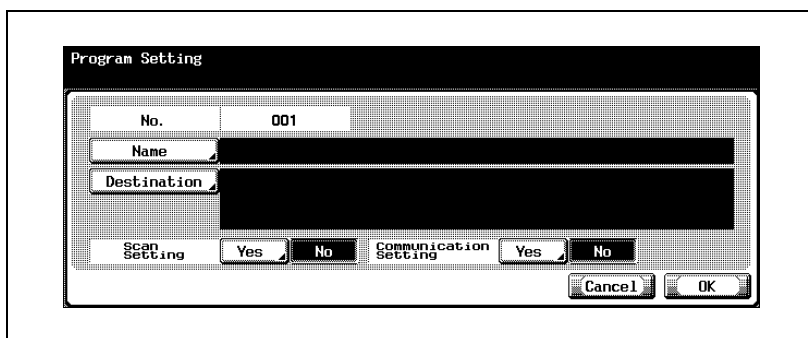

- 4 Touch [Name] and type in the name using the keyboard that appears on the screen.
- 5 Touch [OK].



## 6 Touch [Destination].

- To select from registered destinations:  
Check that [Select from Address Book] is selected, touch the button for the desired destination type, and then select the destinations to be registered.
- To enter the destinations directly:  
Touch [Direct Input], touch the button for the desired destination type, and then enter the destination to be registered.

## 7 Touch [Close].

- To register scan settings, touch [Yes] beside "Scan Setting". For details on the scan settings, refer to "Specifying the Scan Settings" on page 3-49.
- To register communication settings, touch [Yes] beside "Communication Setting". Specify the file name for saving the file and e-mail notification settings.

## 8 Touch [OK].

The program destination is registered.



### Note

*The registration cannot be completed unless settings have been specified for "Name" and for "Destination", "Scan Setting", or "Communication Setting".*



### Detail

*To check the registered destination, touch the button for the destination, and then touch [Check Setting].*

*To change the registered destination settings, touch the button for the desired destination, and then touch [Edit].*

*To delete the registered destination, touch the button for the desired destination, and then touch [Delete].*





...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




## 4.6 Specifying E-Mail Settings

Up to 10 e-mail subjects and text can be registered.


### Subject

E-Mail subjects can be registered.

- 1 In the Scan screen, touch [4 Subject/Text (for E-mail)]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [1 Subject].  
The E-Mail Title screen appears.

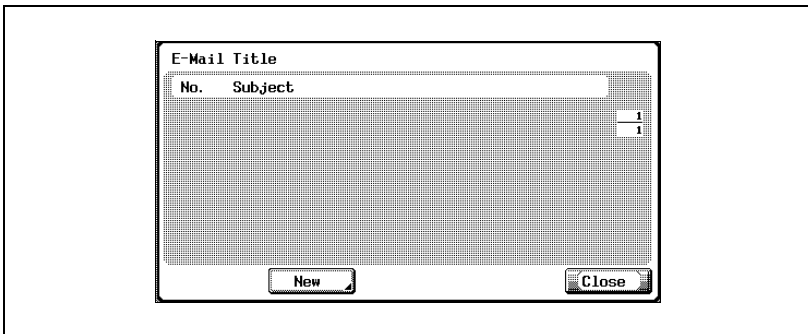

- 3 Touch [New].  
The E-Mail Subject Registration screen appears.

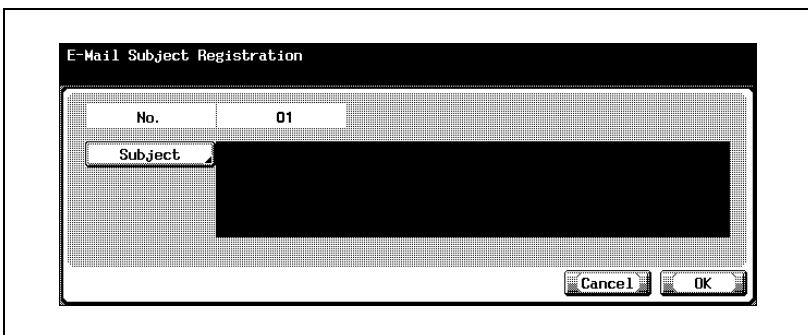

- 4 Touch [Subject] and type in the subject using the keyboard that appears on the screen.



5 Touch [OK].

The E-Mail subject is registered.



...

**Note**

*The registration cannot be completed unless a setting is specified for "Subject".*



**Detail**

*To check the registered setting, touch the button for the desired subject, and then touch [Details].*

*To delete the registered setting, touch the button for the desired subject, and then touch [Delete].*



...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



**Detail**


*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




## Text

E-mail text can be registered. The settings that were registered when the data was sent can be selected.

- 1 In the Scan screen, touch [4 Subject/Text (for E-mail)]. (Refer to "To display the Scan screen" on page 4-6 for more details.)
- 2 Touch [2 Text].  
The E-Mail Text screen appears.

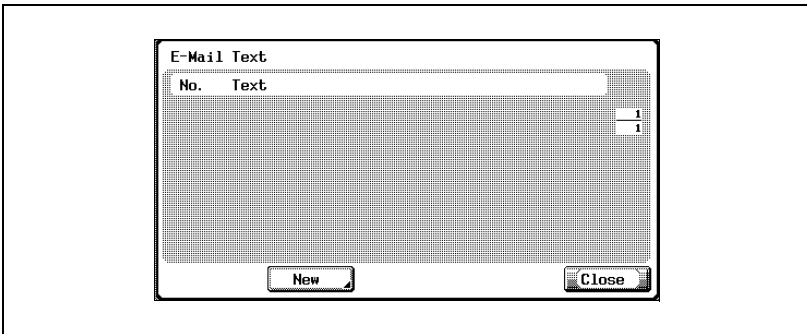

- 3 Touch [New].  
The E-Mail Text Registration screen appears.

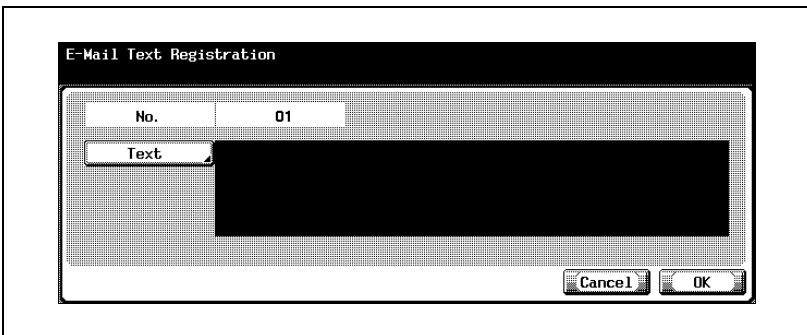

- 4 Touch [Text] and type in the text using the keyboard that appears on the screen.
- 5 Touch [OK].  
The e-mail text is registered.





...

**Note**

*The registration cannot be completed unless a setting is specified for "Text".*

**Detail**

*To check the registered setting, touch the button for the desired text, and then touch [Details].*

*To delete the registered setting, touch the button for the desired text, and then touch [Delete].*



...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*




## 4.7 Setting the Main Scan Mode Screen


### Default Tab

The default screen that appears in Scan mode can be specified. (Default setting: Program)

- 1 In the User Setting screen, touch [2 Display Setting]. (Refer to "To display the User Setting screen" on page 4-8 for more details.)
- 2 Touch [3 Scan Basic Screen Default Setting].
- 3 Touch [Default Tab].

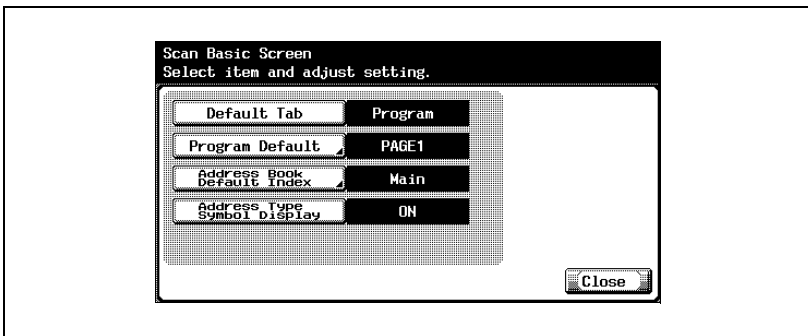

- 4 Touch the button for the desired setting.

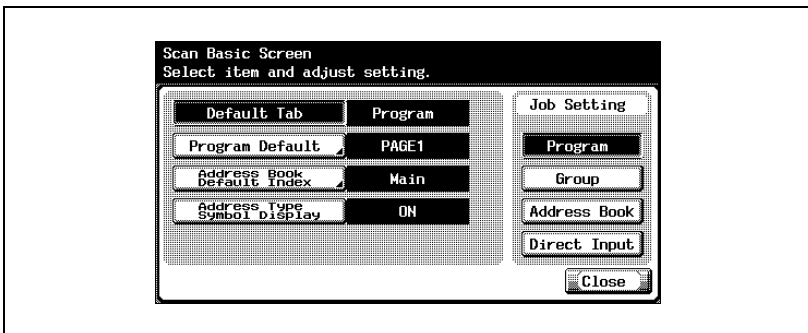





### Program Default

The default screen that appears in the Program tab in Scan mode can be specified. (Default setting: PAGE1)

- 1 In the User Setting screen, touch [2 Display Setting].
  - To display the User Setting screen, refer to "To display the User Setting screen" on page 4-8.
- 2 Touch [3 Scan Basic Screen Default Setting].
- 3 Touch [Program Default].

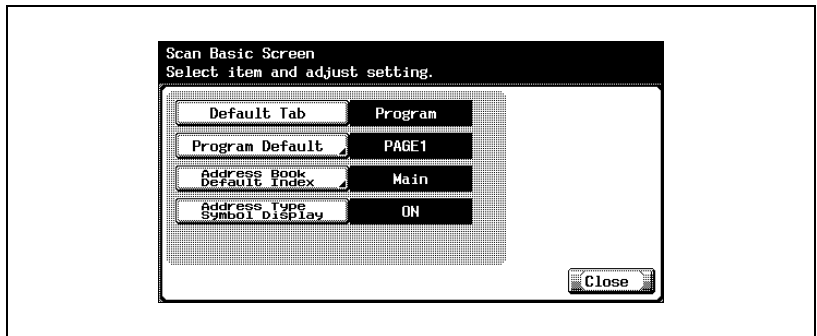

- 4 Touch the button for the desired setting.
  - Touch [▲] or [▼], and then touch the button for the desired screen.

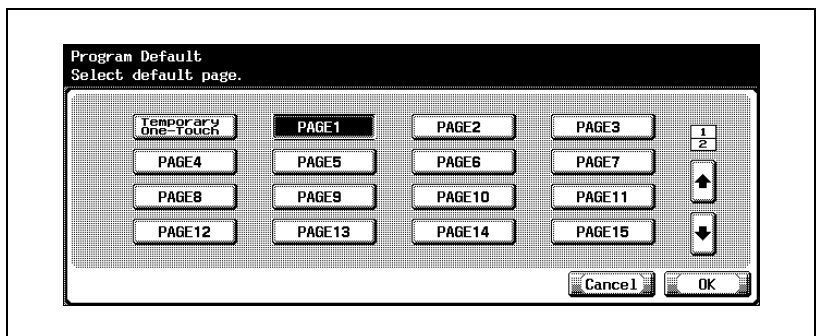

- 5 Touch [OK].





...

**Note**


*To cancel changes to the setting, touch [Cancel].*




### Address Book Default Index

You can select the index type that is displayed in the address book. (Default setting: Main)

- 1 In the User Setting screen, touch [2 Display Setting].
- 2 Touch [3 Scan Basic Screen Default Setting].
- 3 Touch [Address Book Default Index].

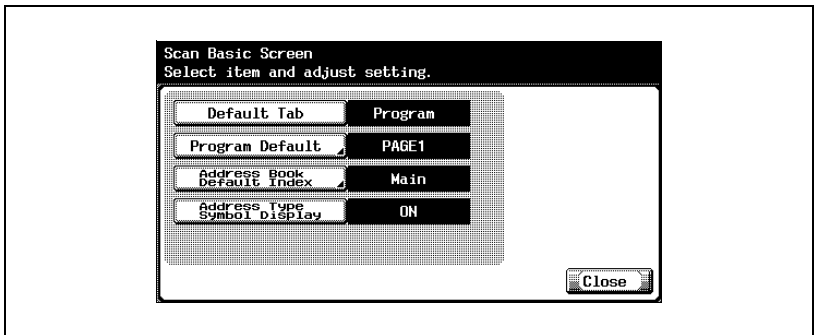

- 4 Touch the button for the desired setting.

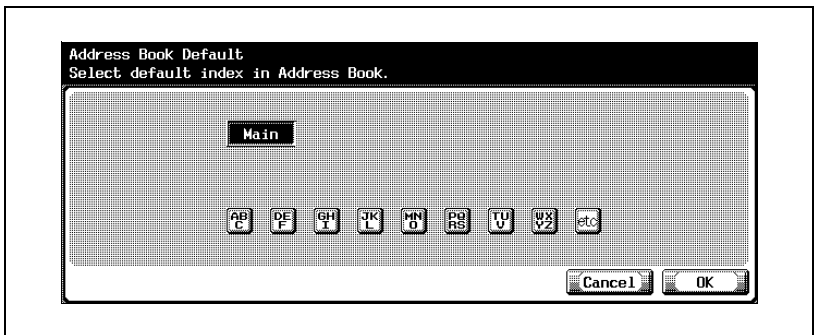

- 5 Touch [OK].





...

**Note**

*To display the User Setting screen, refer to "To display the User Setting screen" on page 4-8.*



...

**Note**


*To cancel changes to the setting, touch [Cancel].*




## Address Type Symbol Display

You can specify whether to display the symbol of the address type. (Default setting: ON)

- 1 In the User Setting screen, touch [2 Display Setting].
- 2 Touch [3 Scan Basic Screen Default Setting].
- 3 Touch [Address Type Symbol Display].

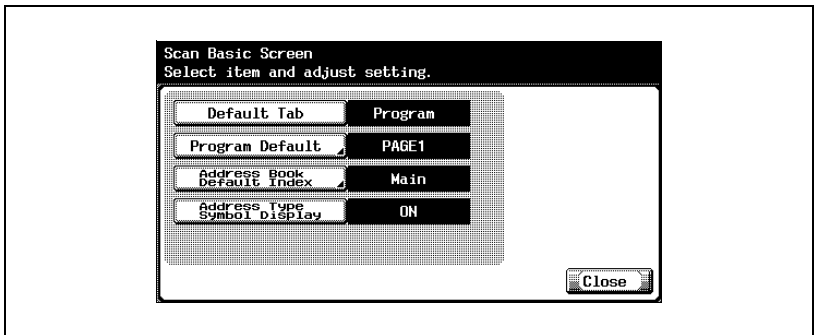

- 4 Touch the button for the desired setting.

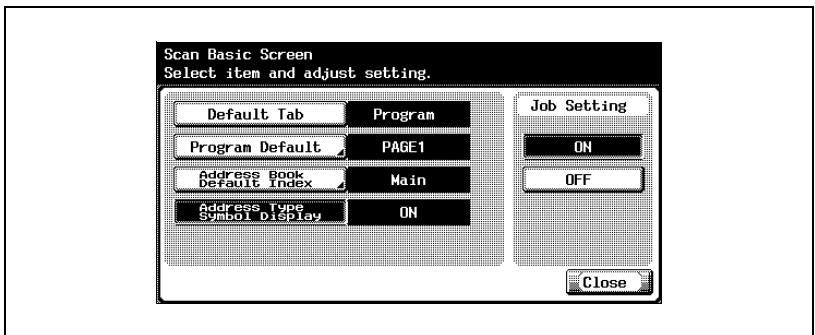

### Note

To display the User Setting screen, refer to "To display the User Setting screen" on page 4-8.



## 4.8 Setting the Save Format of the Data to Be Scanned


### Black Compression Level

The black compression level can be specified. (Default setting: MMR)


- [MH]: The data size is large.
- [MMR]: The data size is small.

### To specify the compression level

- 1 In the User Setting screen, touch [5 Scanner Setting].
  - To display the User Setting screen, refer to "To display the User Setting screen" on page 4-8.
- 2 Touch [Black Compression Level].

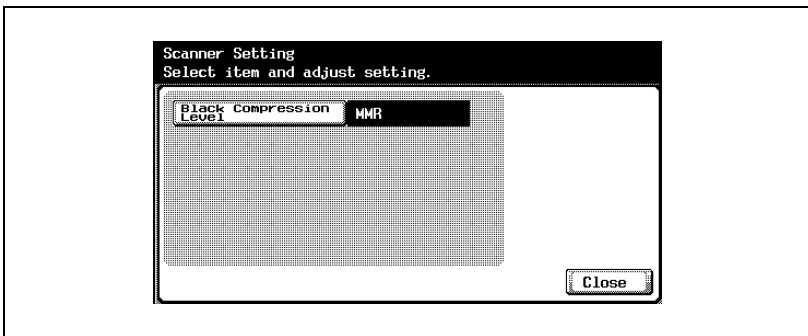

- 3 Touch the button for the desired setting.

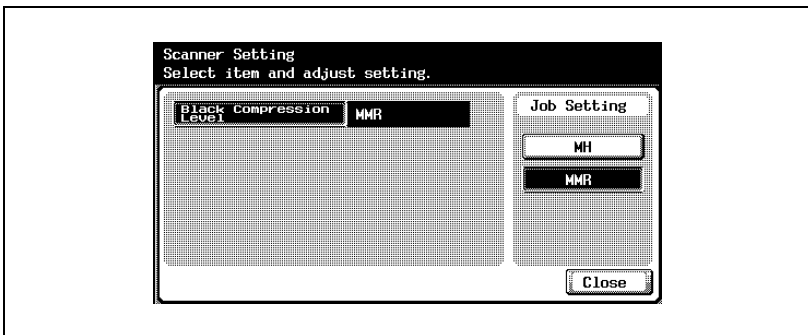



**Note**

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

*When opening the saved data on a computer, MMR-compressed data may not open depending on the application.*



## 4.9 One-Touch Registration List


You can output the destinations, subjects, and text that are registered in this machine in a list.

The type of lists that can be output are described below.

Item	Description
Address Book List	Selects the address book type and outputs the contents of up to 100 destinations.
Group List	Outputs up to 20 group destinations.
Program List	Selects the program destination type and outputs the contents of up to 50 destinations.
E-Mail Subject/Text List	Outputs the e-mail subjects and text that are registered on this machine.


### Address Book List

- 1 In the Administrator Setting screen, touch [3 One-Touch Registration].
- 2 In the One-Touch Registration screen, touch [4 One-Touch Registration List].

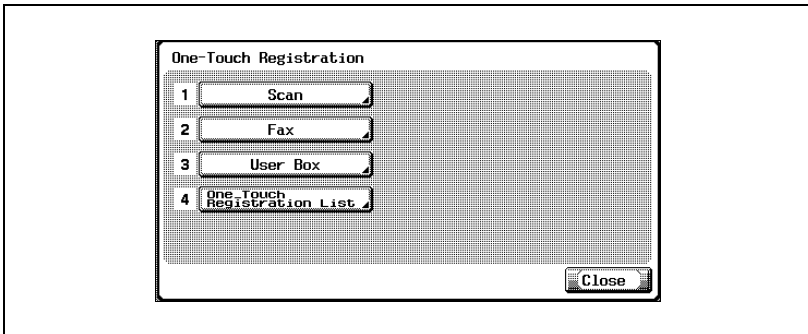




- 3 Touch [1 Address Book List].

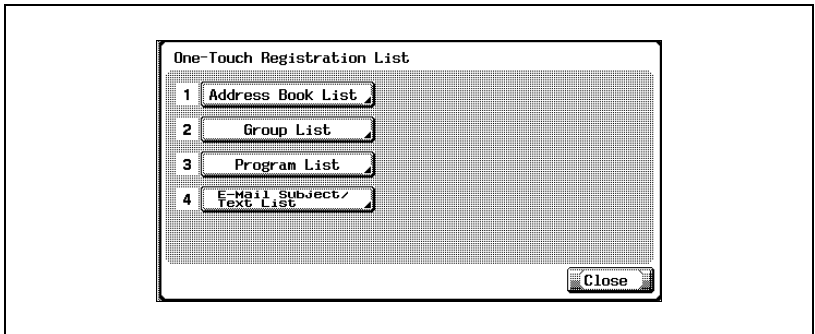

- 4 Select the registration number and destination type, and then touch [Print].

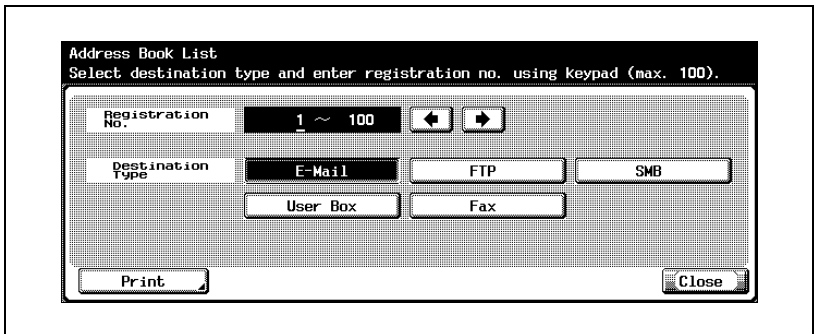


### Note

To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.




## Group List

- 1 In the Administrator Setting screen, touch [3 One-Touch Registration].
- 2 In the One-Touch Registration screen, touch [4 One-Touch Registration List].

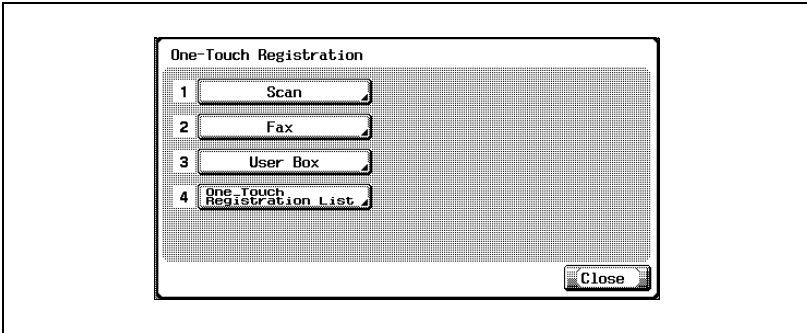


- 3 Touch [2 Group List].

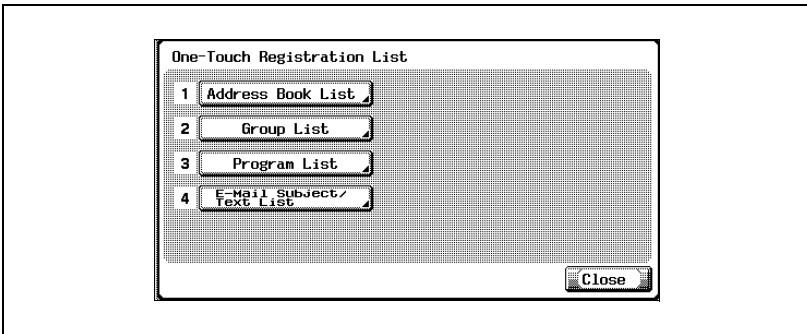



- 4 Select the registration number, and then touch [Print].

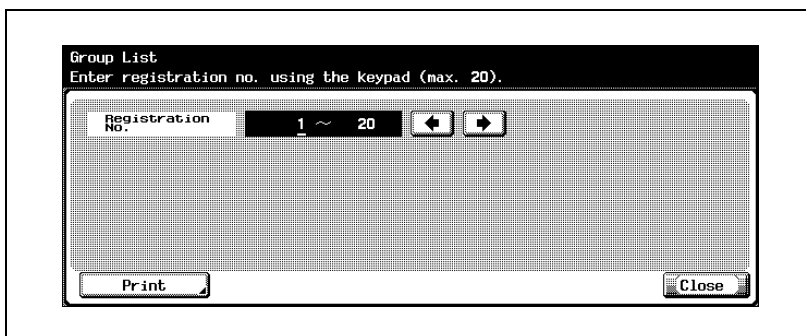
**Note**

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*




## Program List

- 1 In the Administrator Setting screen, touch [3 One-Touch Registration].
- 2 In the One-Touch Registration screen, touch [4 One-Touch Registration List].

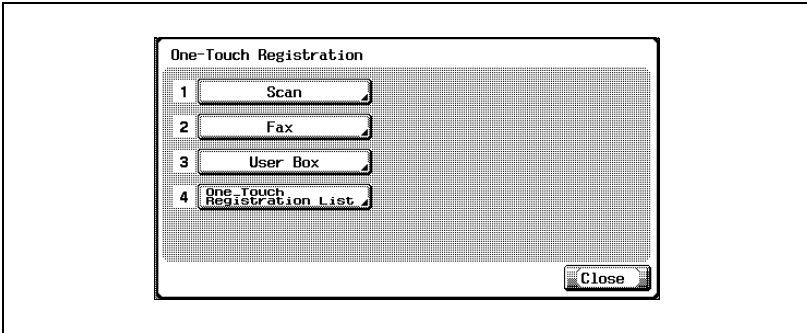

- 3 Touch [3 Program List].

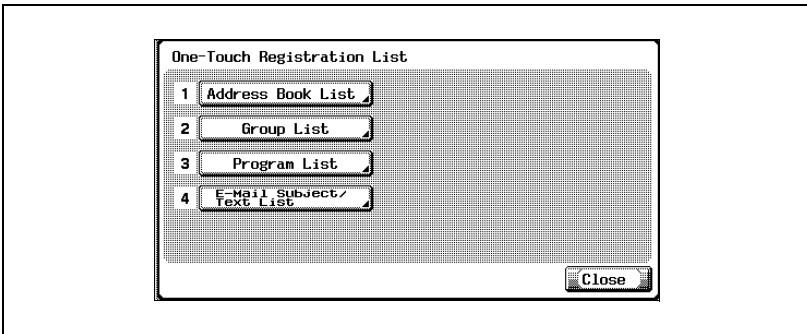



- 4 Select the registration number and destination type, and then touch [Print].

Program List  
Select destination type and enter registration no. using keypad (max. 50).

Registration NO. 1 ~ 50

Destination Type

Abbr. Dial Group No. Direct Input

Print Close


**Note**

To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.




## E-Mail Subject/Text List

- 1 In the Administrator Setting screen, touch [3 One-Touch Registration].
- 2 In the One-Touch Registration screen, touch [4 One-Touch Registration List].

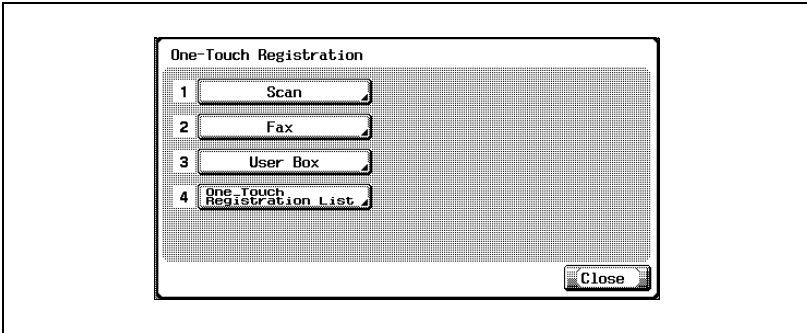


- 3 Touch [4 E-Mail Subject/Text List].

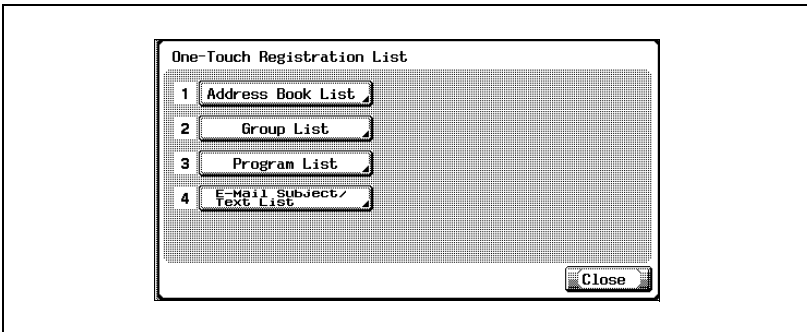



- 4 Select the paper size, and simplex or duplex printing, and then press [Start] key.

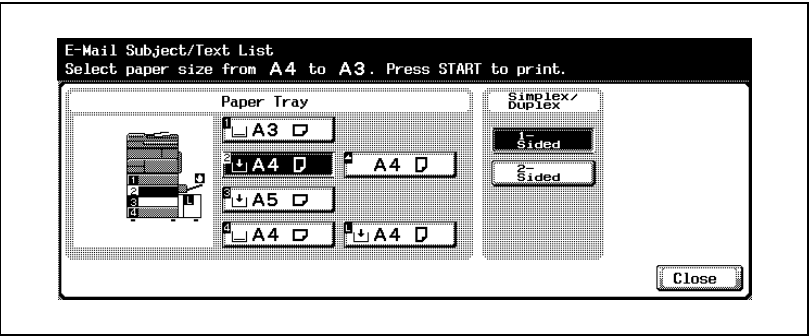

**Note**

To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.



## 4.10 Creating Annotation User Boxes

Annotation user boxes can be used only if the optional hard disk drive is installed.



### Note

*Register the annotation user boxes from the Administrator Setting screen.*

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*

Settings can be specified for the following in Annotation User Box (1/3) screen.

Item	Description
User Box No.	Touch [User Box No.], and then use the keypad to type in the box number.
Name	Touch [Name], and then use the keyboard that appeared to type in the box name.
Password	Touch [Password], and then use the keyboard that appeared to type in the password.

Settings can be specified for the following in Annotation User Box (2/3) screen.

Item		Description
Count Up		Select whether the count for the number is formatted by jobs or by pages.
Stamp Elements	Secondary Field	Text can be added to the number that is printed. A maximum of 20 characters can be entered.
	Date/Time	Select the format for the date and time that is printed.
	Density	Select the density for the numbers that are printed.
	Number Type	Select the output format (number of digits) for the numbers that are printed.
	Print Position	Select the printing position.
	Primary Field	Text can be added. A maximum of 40 characters can be entered.



Settings can be specified for the following in Annotation User Box (3/3) screen.

Item	Description
Auto Delete Document	Select the time until the document is deleted after it is saved in the box.



**Reminder**

*If "Password Rules" is set to "ON", a password containing less than 8 characters cannot be registered.*

*If a box password containing less than 8 characters has already been registered, change the password so that it contains 8 characters before setting "Password Rules" to "ON". For details on the password rules, refer to the User manual [Copy Operations].*




**Reminder**

*The "Primary Field" text can be specified by the administrator when the annotation user box is created. This text cannot be change during routing.*




### To create annotation user boxes

- 1 In the Administrator Setting screen, touch [3 One-Touch Registration].
- 2 Touch [3 User Box].  
The User Box screen appears.

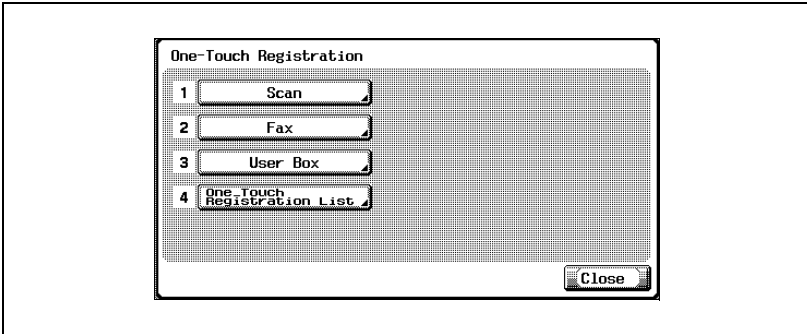


- 3 Touch [4 Annotation User Box].

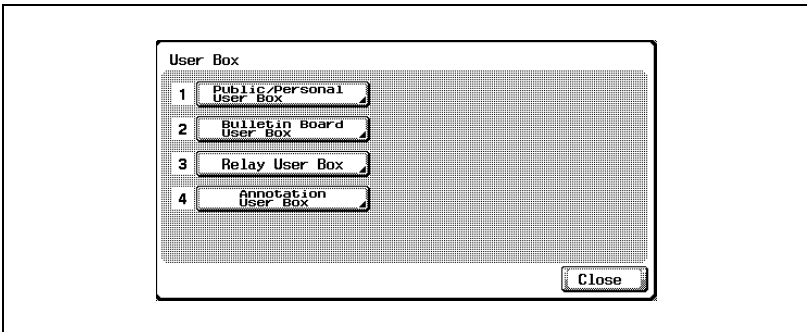




- 4 Touch [New].  
The registration screen appears.

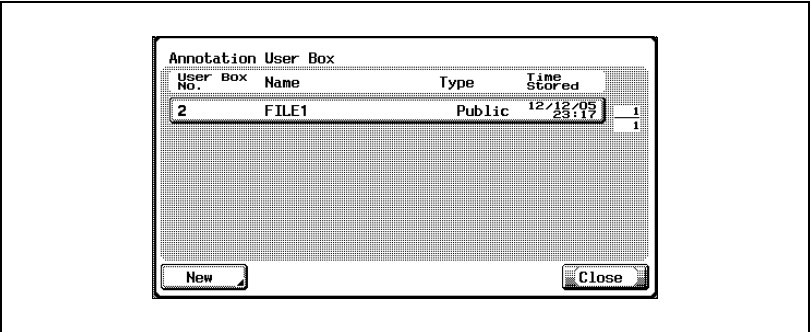


- 5 Specify the various settings for the box.

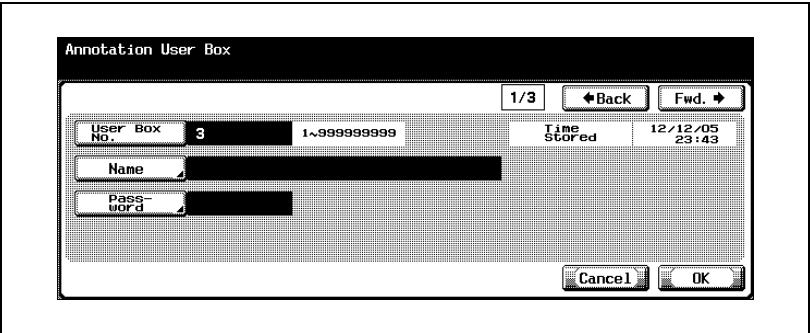

- 6 Touch [Fwd.].  
Registration screen 2/3 appears.




## 7 Specify the desired settings.

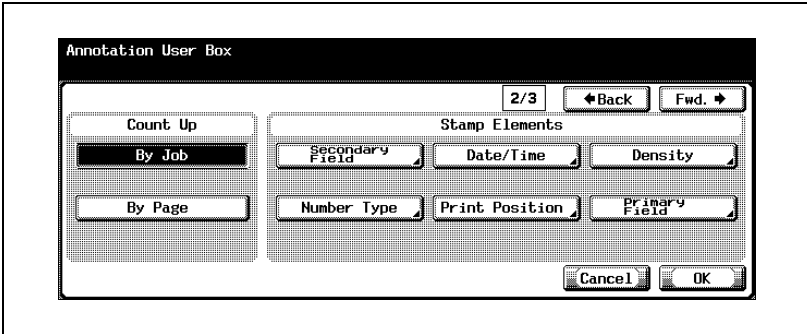

## 8 Touch [Fwd.]. Registration screen 3/3 appears.

## 9 Specify the desired settings.

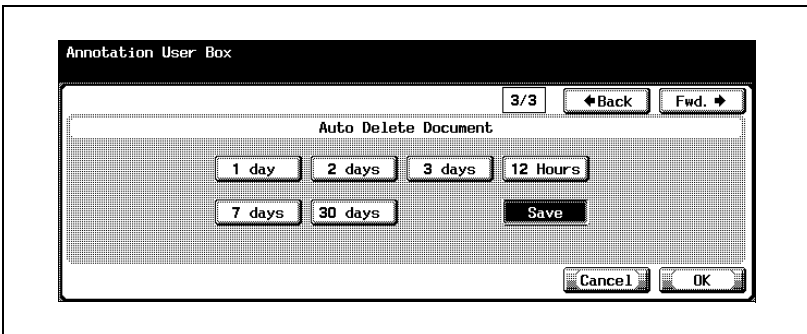

## 10 Touch [OK].

## 11 Touch [Close]. The box is registered.




## 4.11 Specifying Network Settings

Whether or not a network is used can be specified.

### To specify network settings

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [1 Network Setting].
- 3 To specify that a network be used, touch [ON].

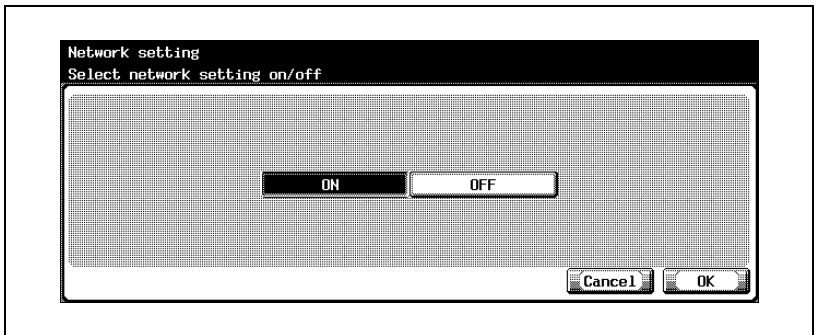

- 4 Touch [OK].



## 4.12 TCP/IP Settings

The settings for using the machine on a TCP/IP network can be specified.

To activate all network setting changes, turn the main power off and then back on.



### Reminder

*When turning the main power switch OFF then ON, wait for 10 seconds or longer before turning it ON again; otherwise the copier may not function normally.*

### Before Specifying the Settings

When specifying TCP/IP settings, note the following points.

- If "IP Address Setting Method" is set to "Auto Input", "IP Address", "Subnet Mask", and "Default Gateway" are not available.
- When a DHCP server is used, the IP address, subnet mask, and default gateway are assigned from the DHCP server. Therefore, there is no need to specify these settings manually. However, note the following points.
- Check with your network administrator that the DHCP server is available. If a DHCP server is not available, be sure to specify settings for "IP Address", "Subnet Mask", and "Default Gateway".
- If the IP address and other settings are assigned by the DHCP server, they may automatically be changed. If this happens, there is a possibility that the machine on the network can no longer be specified using the IP address. If "IP Address Setting Method" is set to "Auto Input", it is recommended that the IP address assigned to the machine be fixed by configuring the DHCP server.



Items To Be Specified

The following items are specified.

TCP/IP Setting screen 1/5

Item	Description
TCP/IP Setting	Specify whether to turn on the TCP/IP settings.

TCP/IP Setting screen 2/5

Item	Description
IP Address Setting Method	Select whether to directly input a fixed IP address or to automatically acquire an IP address.
IP Address	Set the machine's IP address. Use the keypad to type in the address.
Subnet Mask	Set the subnet mask of the network to which the machine is to be connected. Use the keypad to type in the address.
Default Gateway	Set the default gateway of the network to which the machine is to be connected.

TCP/IP Setting screen 3/5

Item	Description
DNS Server Auto Obtain	Select whether to automatically acquire the DNS server.
Priority DNS Server	Set the primary DNS server address. Use the keypad to type in the address.
Substitute 1 DNS Server	Set the substitute DNS server address. Use the keypad to type in the address.
Substitute 2 DNS Server	Set the substitute DNS server address. Use the keypad to type in the address.

TCP/IP Setting screen 4/5

Item	Description
DNS Domain Auto Obtain	Select whether to automatically acquire the DNS domain name.
DNS Default Domain Name	Enter the DNS default domain name. Use the keyboard that appears in the touch panel to type in the name (up to 253 characters).
DNS Search Domain Name1-3	Enter the DNS search domain name. Use the keyboard that appears in the touch panel to type in the name (up to 253 characters).



## TCP/IP Setting screen 5/5

Item	Description
DynamicDNS Setting	If the DNS server being used supports the dynamic DNS function, specify whether to enable a dynamic DNS.
Host Name	Use the keyboard on the control panel to type in the host name of this machine.
IP Filtering	Sets IP address filtering. For details on specifying the setting, refer to "IP Filtering" on page 4-63.
RAW Port No.	Specify the RAW port numbers for printing with a printer. For details on specifying the setting, refer to "RAW Port No." on page 4-65.


**Note**

*Be sure to enter the host name and domain name so that the total number of characters entered is within 254 characters.*



**To specify TCP/IP settings**

- 1** In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2** In the Network Setting screen, touch [2 TCP/IP Setting].  
TCP/IP Setting screen 1/5 appears.
- 3** Specify the desired settings.

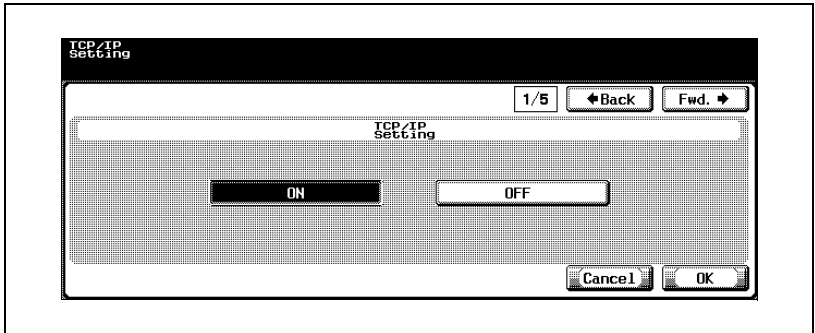

- 4** Touch [Fwd.].  
TCP/IP Setting screen 2/5 appears.



## 5 Specify the desired settings.

- If [Auto Input] was selected under "IP Address Setting Method", specify the automatic acquisition procedure, and then touch [OK].

**Auto Input**  
Select method of Auto Input.

DHCP Setting	ON	OFF
BOOTP Setting	ON	OFF
ARP/PING Setting	ON	OFF
AUTO IP Setting	ON	OFF

Cancel OK

**TCP/IP Setting**  
Select item and enter IP address using the keypad.

2/5 ◀Back Fwd.▶

IP Address Setting Method	IP Address	0. 0. 0. 0	De-lete	←	→
	Subnet Mask	0. 0. 0. 0	De-lete	←	→
	Default Gateway	0. 0. 0. 0	De-lete	←	→

Manual Input

Auto Input

Cancel OK

## 6 Touch [Fwd.].

TCP/IP Setting screen 3/5 appears.

## 7 Specify the desired settings.

**TCP/IP Setting**  
Select item and enter IP address using the keypad.

3/5 ◀Back Fwd.▶

DNS server Auto Obtain	Priority DNS Server	0. 0. 0. 0	De-lete	←	→
	Substitute 1 DNS Server	0. 0. 0. 0	De-lete	←	→
	Substitute 2 DNS Server	0. 0. 0. 0	De-lete	←	→


Enable

Disable


Cancel OK



- 8 Touch [Fwd.].  
TCP/IP Setting screen 4/5 appears.
- 9 Specify the desired settings.

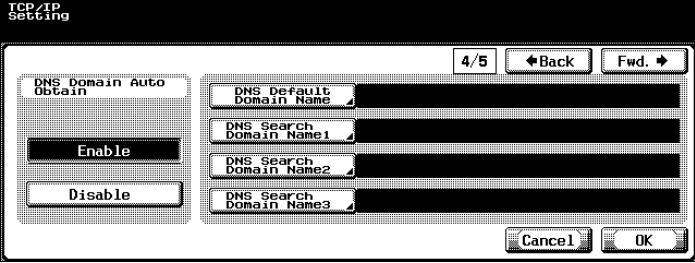

- 10 Touch [Fwd.].  
TCP/IP Setting screen 5/5 appears.
- 11 Specify the desired settings.

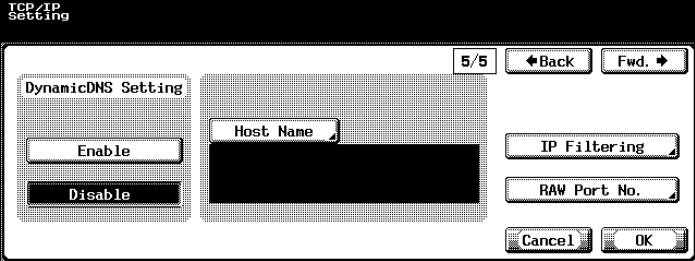

- 12 Touch [OK].  
The TCP/IP settings are applied.



**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

**Reminder**

*In order to apply the changes made to [TCP/IP Setting] and [IP Address Setting Method], the machine must be turned off, then on again.*




IP Filtering

The IP addresses in the specified ranges can be permitted or denied.



IP addresses can connect depending on whether "Enable" or "Disable" has been selected for "Permit Access" and "Deny Access" in the IP Filtering screen, as shown below.


Setting	IP Address	Connection Access
Permit Access Disable Deny Access Disable	All IP addresses	Connection possible
Permit Access Enable Deny Access Disable	IP addresses in the specified range	Connection possible
	IP addresses out of the specified range	Connection not possible
Permit Access Disable Deny Access Enable	IP addresses in the specified range	Connection not possible
	IP addresses out of the specified range	Connection possible
Permit Access Enable Deny Access Enable	IP address in the range allowed access and out of the range denied access	Connection possible
	IP address in the range allowed access and in the range denied access	Connection not possible
	IP address out of the range allowed access and out of the range denied access	Connection not possible
	IP address out of the range allowed access and in the range denied access	Connection not possible

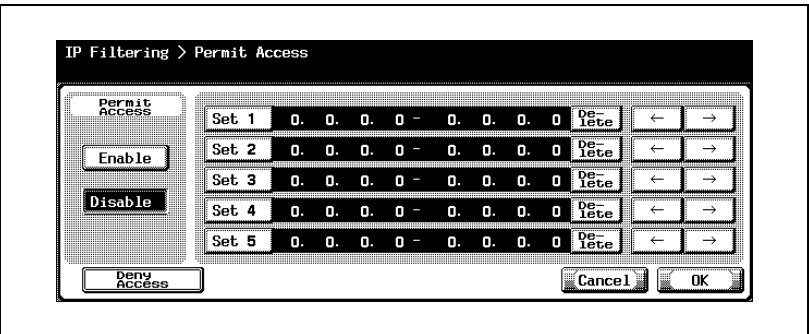- 1 In TCP/IP Setting screen 5/5, touch [IP Filtering].  
The IP Filtering > Permit Access screen appears.
- 2 Touch [Enable] or [Disable] under "Permit Access".





- 3 Touch the button for a set (Set 1 to Set 5), and then use the keypad to type in the address range.
- The range setting cannot include "0.0.0.0". For example, to specify all addresses before 192.168.1.20, specify the range from 0.0.0.1 to 192.168.1.20.
  - Touch [Deny Access] to specify the IP addresses to refuse access. The procedure for setting the IP addresses is the same as on the Permit Access screen.
  - To edit the values that you entered, touch  or  to move the cursor to the desired area, touch [Delete], and enter the new value.
  - To clear all values, press the [C] (clear) key.

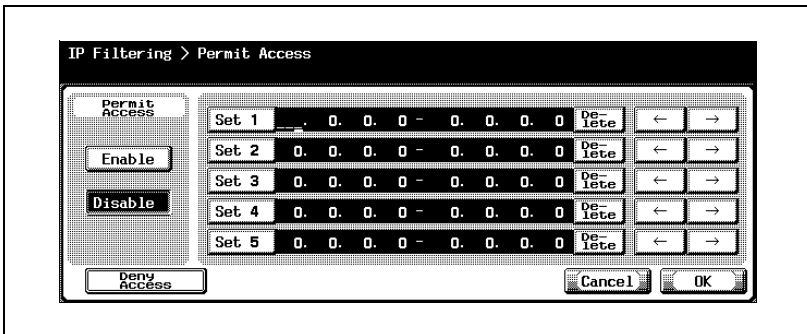

- 4 Touch [OK].
- IP filtering is set.



#### Note

*To cancel changes to the setting, touch [Cancel].*




## RAW Port No.

Specify the RAW port numbers used by the printer. By specifying multiple port numbers, multiple data can be accepted simultaneously.

- 1 In TCP/IP Setting screen 5/5, touch [RAW Port No.].

The RAW Port Number screen appears.

- 2 Touch the button for the desired port.

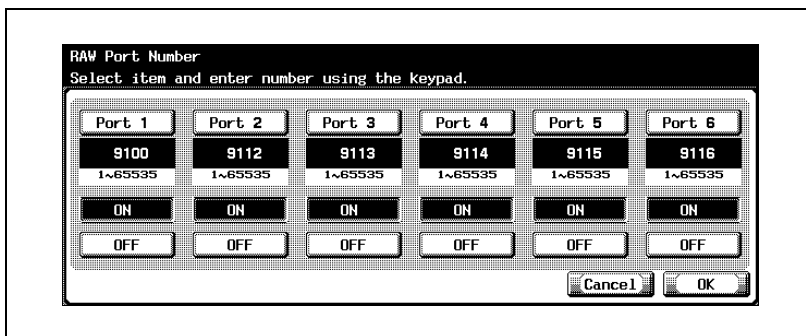

- 3 Touch [ON] or [OFF].

- 4 To use the selected port, press the [C] (clear) key to erase the value, and then use the keypad to type in the RAW port number (between 1 and 65535).

- If a value outside of the allowable range is specified, the message "Input Error" appears. Type in a value within the allowable range.

- 5 Touch [OK].

The RAW port usage and RAW port numbers are set.



### Note

*When using the RAW port, set [Spool Print Job in HDD before RIP] to [ON]. A timeout may occur if it is set to [OFF].*



### Note

*For details on the spool settings, refer to the User manual for the IC-204.*



## 4.13 NetWare Settings

The settings for using the machine on a NetWare network can be specified.

### NetWare Parameters

The NetWare settings are as follows:

NetWare Setting screen 1/5

Item	Description
IPX Setting	Specify whether to use IPX.
Ethernet Frame Type	Sets the frame type that is used for communications.
Authentication System	When [ON (External Server)] was selected in "User Authentication", specify whether to allow NDS authentication.

NetWare Setting screen 2/5

Item	Description
NetWare Print Mode	Select the print mode to be used.
Status	The NetWare status can be verified. For details on specifying the setting, refer to "Status" on page 4-71.

NetWare Setting screen 3/5

Item	Description
Print Server Name	Sets the print server name. Use the keyboard that appears in the touch panel to type in the print server name (up to 63 characters).
Print Server Password	Sets the password that is required when the print server logs in to the file server. Use the keyboard that appears in the touch panel to type in the password (up to 63 characters).
Polling Interval	Sets the interval for searching the print queue. To change the interval, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
NDS/Bindery Setting	If bindery is disabled, only NDS is enabled. If bindery is enabled, both NDS and bindery are enabled.



NetWare Setting screen 4/5

Item	Description
File Server Name	Sets the file server name to which the print server logs in. Use the keyboard that appears in the touch panel to type in the server name (up to 47 characters).
NDS Context Name	Sets the NDS context name. Use the keyboard that appears in the touch panel to type in the NDS context name (up to 191 characters).
NDS Tree Name	Sets the NDS tree name. Use the keyboard that appears in the touch panel to type in the NDS tree name (up to 63 characters).


NetWare Setting screen 5/5

Item	Description
Print Server Name	Sets the print server name. Use the keyboard that appears in the touch panel to type in the print server name (up to 63 characters).
Printer Number	Sets the printer number. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 0 and 254).




### To specify NetWare settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [3 NetWare Setting].  
NetWare Setting screen 1/5 appears.
- 3 Specify the desired settings.

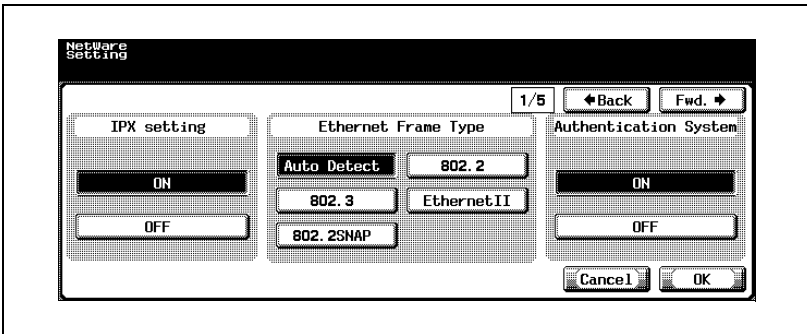


- 4 Touch [Fwd.].  
NetWare Setting screen 2/5 appears.
- 5 Specify the desired settings.

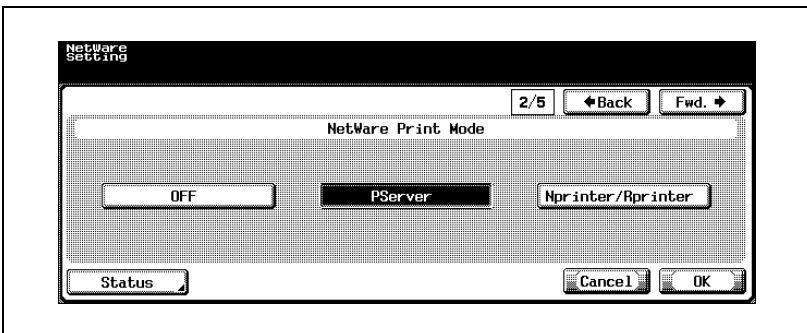

- 6 Touch [Fwd.].  
Pserver Setting screen 3/5 appears.




7 Specify the desired settings.

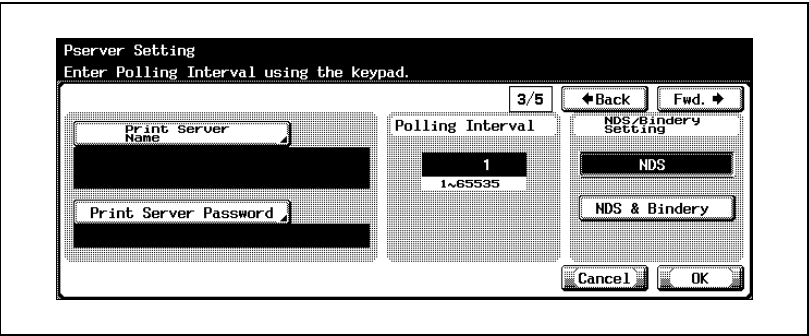

8 Touch [Fwd.].  
Pserver Setting screen 4/5 appears.


9 Specify the desired settings.

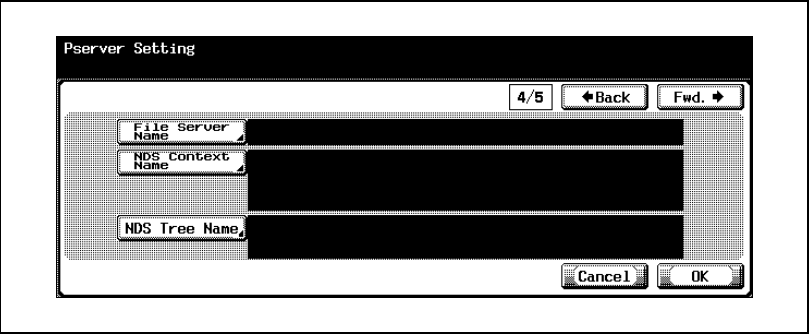

10 Touch [Fwd.].  
Nprinter/Rprinter Setting screen 5/5 appears.



## 11 Specify the desired settings.

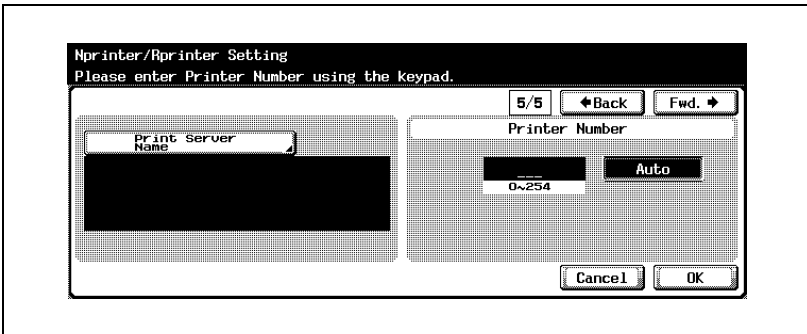

## 12 Touch [OK].

The NetWare settings are applied.



### Note

*To cancel changes to the setting, touch [Cancel].*


*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## Status

The NetWare status can be verified.

- 1 In NetWare Setting screen 2/5, touch [Status].  
The NetWare Status screen appears.

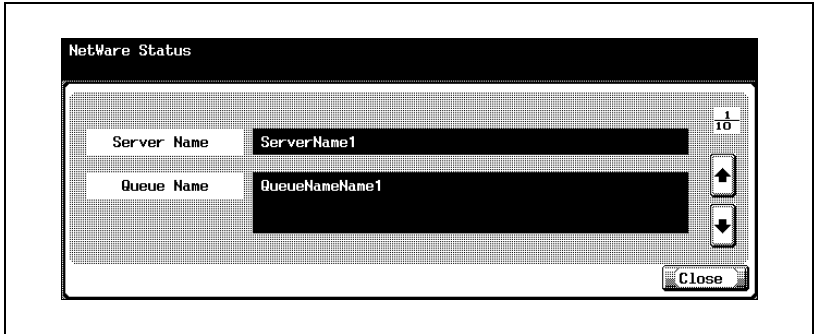

- 2 Touch [↕] or [⬇] to select the server to verify.
- 3 Verify the NetWare status.
- 4 Touch [Close].



## 4.14 http Server Settings

You can specify the http server settings, PageScope Web Connection settings, and the IPP settings used by the printer of this machine.

### IPP and http Parameters

The IPP parameters are as follows:

http Server Setting screen 1/4

Item	Description
http Server Setting	Select whether to use the http server setting. If "OFF" is selected, the PageScope Web Connection and IPP print function cannot be used since the http server port (80) is closed.
PSWC Setting	Select whether to use PageScope Web Connection.

http Server Setting screen 2/4

Item	Description
IPP Setting	Specify whether to enable the IPP print function.
Accept IPP job	Set whether to accept IPP jobs.
Support Operation	Sets the operation support information. For details on specifying the settings, refer to "Support Operation" on page 4-75.
Printer Information	Sets the printer information. For details on specifying the settings, refer to "Printer Information" on page 4-76.

http Server Setting screen 3/4

Item	Description
IPP Authentication	Select whether to perform IPP authentication.
Authentication System	Select the authentication method when performing IPP authentication.


http Server Setting screen 4/4

Item	Description
User Name	When performing IPP authentication, use the keyboard that appears in the touch panel to type in each required item.
Password	
realm	




**To specify IPP and http settings**

- 1** In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2** In the Network Setting screen, touch [4 http Server Setting].  
The http Server Setting screen appears.
- 3** Specify the desired settings.

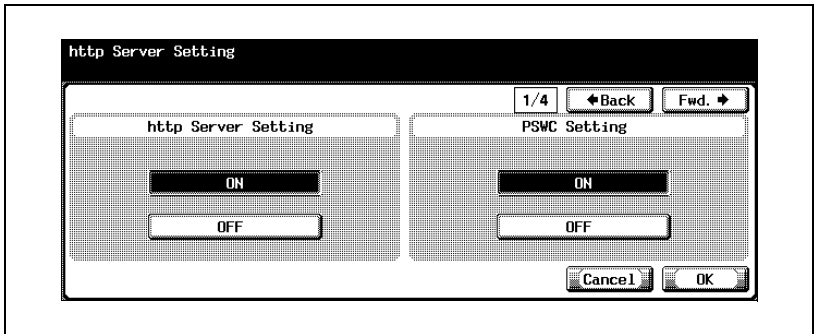


- 4** Touch [Fwd.].  
http Server Setting screen 2/4 appears.
- 5** Specify each item.

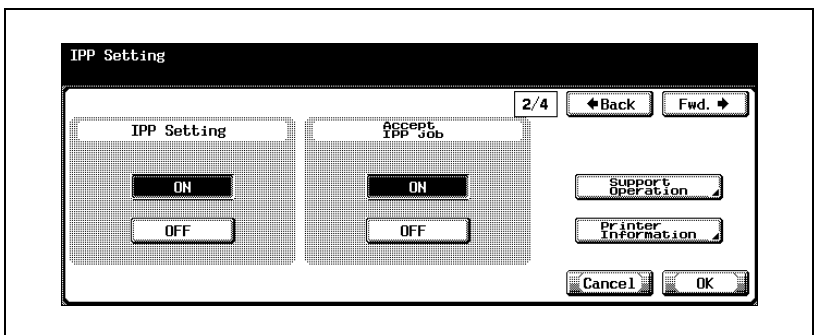

- 6** Touch [Fwd.].  
http Server Setting screen 3/4 appears.




## 7 Specify each item.

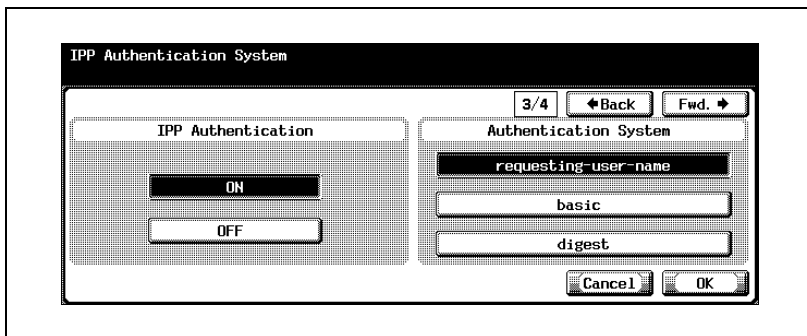

## 8 Touch [Fwd.]. http Server Setting screen 4/4 appears.

## 9 Specify the desired settings.

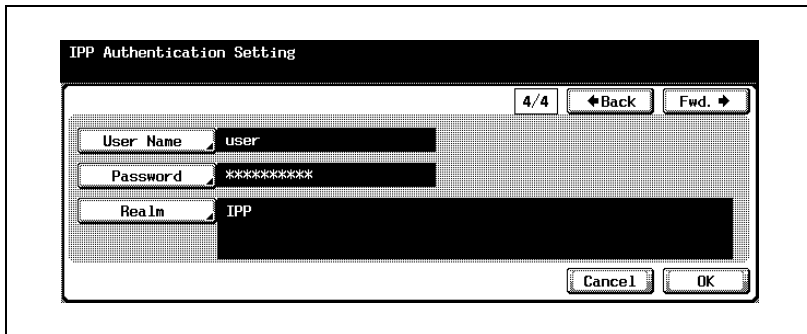

## 10 Touch [OK].

The IPP settings are applied.



### Note

To cancel changes to the setting, touch [Cancel].

To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.




## Support Operation

Specify whether each function is supported in IPP communication.

[OFF]: Responds as not supported.

[ON]: Responds to communication. No response is returned for "Cancel Job", "Open Job", and "Open Job Attributes".

- 1 On the IPP Setting screen, touch [Support Operation].  
The Support Operation screen appears.
- 2 Touch [ON] or [OFF] for each item.

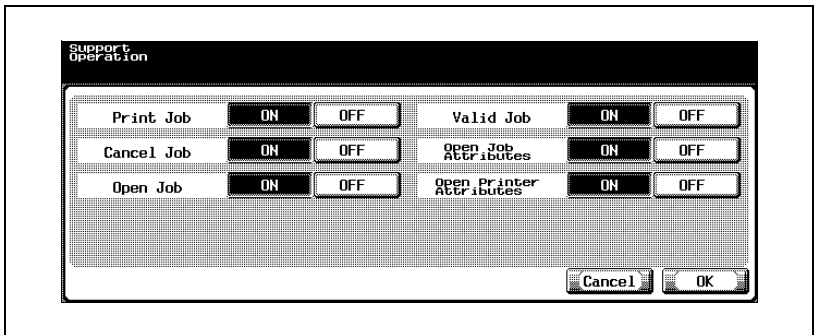

- 3 Touch [OK].  
The operation support information is set.



### Note


*To cancel changes to the setting, touch [Cancel].*




## Printer Information

The printer information can be specified.

- 1 In the IPP Setting screen, touch [Printer Information].  
Printer Information screen 1/2 appears.
- 2 Touch [Printer Name].  
The Printer Name screen appears.

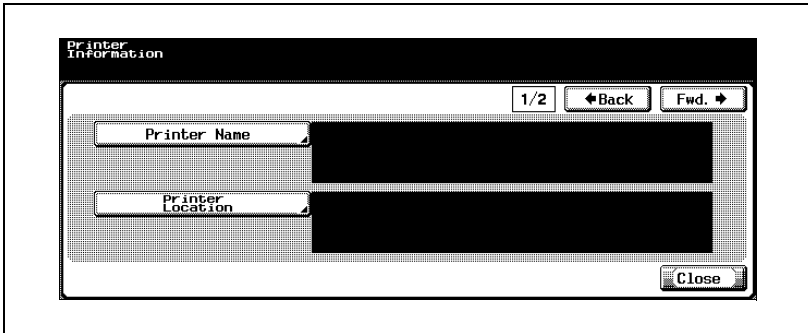


- 3 Type in the printer name (up to 127 characters).

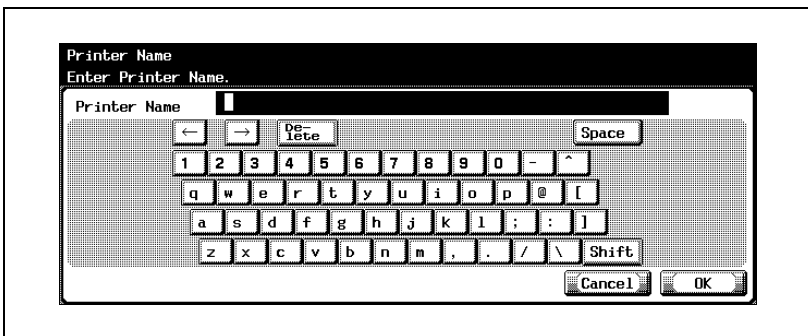


- 4 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].
 The printer name is set, and the Printer Information screen appears again.
- 5 Touch [Printer Location].  
The Printer Location screen appears.



- 6 Type in the printer location (up to 127 characters).

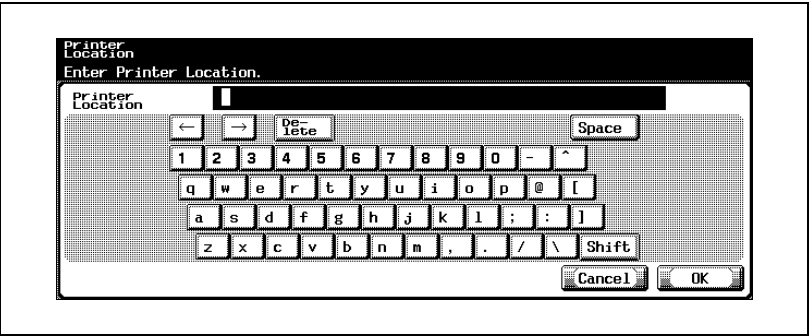


- 7 Touch [OK].
- To cancel changes to the setting, touch [Cancel].
- The printer location is set, the Printer Information screen appears again.
- 8 Touch [Fwd.].
- Printer Information screen 2/2 appears.

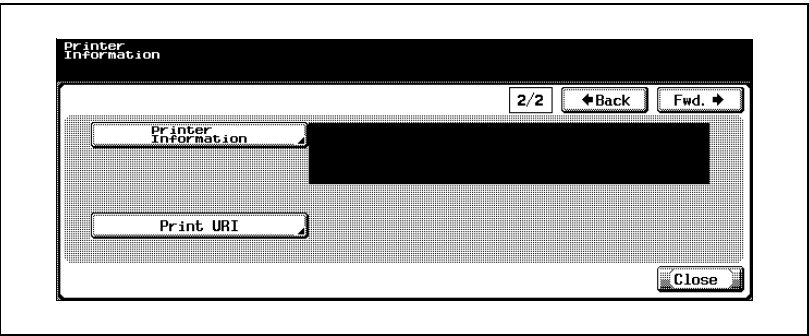



## 9 Touch [Printer Information].

The Printer Information screen appears.

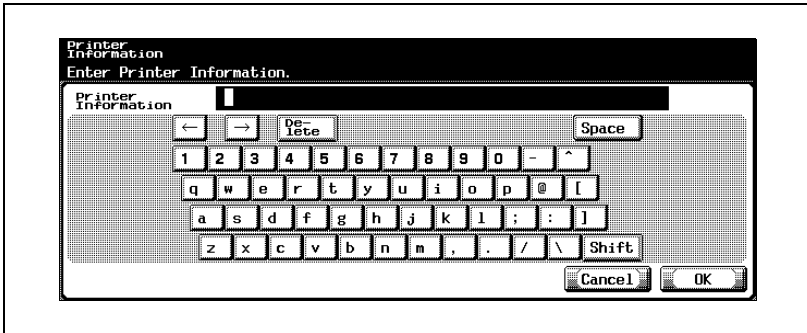

## 10 Type in the printer information (up to 127 characters).


- To cancel changes to the setting, touch [Cancel].

## 11 Touch [OK].

The printer information is set, the Printer Information screen appears again.

## 12 In Printer Information screen 2/2, touch [Print URI].

The Print URI screen appears.

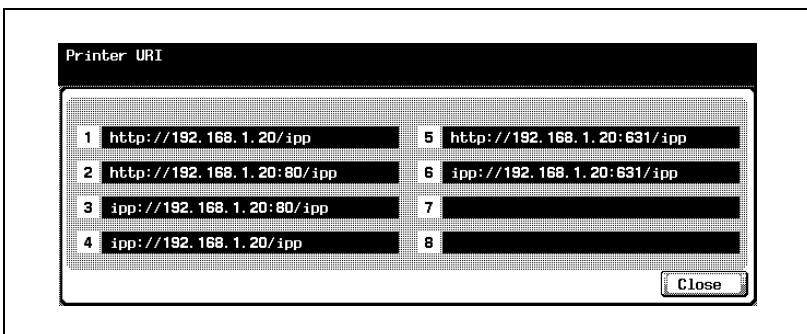

## 13 Check the print URIs.

## 14 Touch [Close].

The Printer Information screen appears again.

## 15 Touch [Close].



**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*



## 4.15 FTP Settings

Settings for sending scan data to FTP servers can be specified.

### FTP Parameters

The FTP parameters are as follows:

FTP Setting screen 1/3

Item	Description
Proxy Server Address	Sets the proxy server address. Use the keypad in the control panel to type in the address.
Proxy Port Number	Sets the port number of the proxy server. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).

FTP Setting screen 2/3

Item	Description
Port No.	Set the port number used to communicate with the FTP server. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
Connection Timeout	If the transmission stops while uploading data to the FTP server, the upload operation is automatically aborted after a specified time elapses. Set the time from the point when the transmission stops to the point when the upload operation is to be aborted. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 5 and 300 seconds).


FTP Setting screen 3/3

Item	Description
FTP Client	Sets whether to use the Scan to FTP operation.
FTP Server	Specify whether to use this machine as an FTP server. When using the copier as an FTP server, select "ON". When using an application that links to the copier as an FTP client of the copier, "ON" must be selected.




**To specify FTP settings**

- 1** In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2** In the Network Setting screen, touch [5 FTP Setting].  
FTP Setting screen 1/3 appears.
- 3** Specify the desired settings.

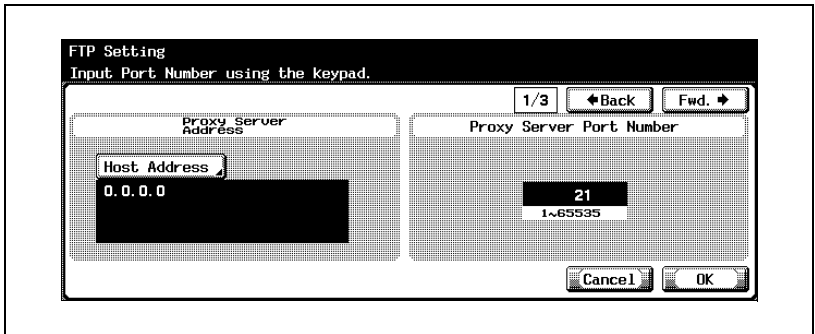


- 4** Touch [Fwd.].  
FTP Setting screen 2/3 appears.
- 5** Specify the desired settings.

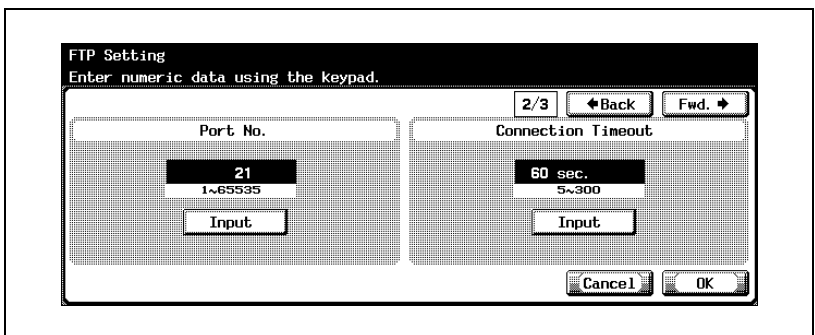

- 6** Touch [Fwd.].  
FTP Setting screen 3/3 appears.



## 7 Specify the desired settings.

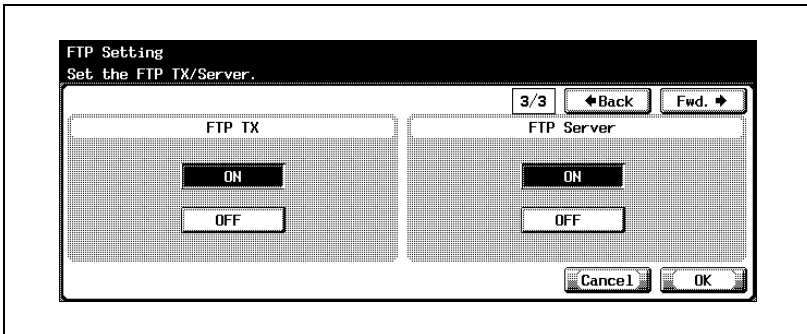

## 8 Touch [OK].

The FTP settings are applied.



### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



4.16 SMB Settings

You can specify the settings for sharing printers and sending files over a network.

SMB Parameters

The SMB parameters are as follows:

SMB Setting screen 1/4

Item	Description
Print Setting	Specifies whether to use the SMB port in Print mode.
NetBIOS Name	Sets the NetBIOS name. Use the keyboard that appears in the touch panel to type in the NetBIOS name (up to 15 characters).
Print Service Name	Sets the printer service name. Use the keyboard that appears in the touch panel to type in the print service name (up to 12 characters).
Workgroup	Sets the work group. Use the keyboard that appears in the touch panel to type in the workgroup name (up to 15 characters).

WINS Setting screen 2/4

Item	Description
WINS Setting	Select whether to use the WINS function.
Auto Obtain Setting	Select whether to automatically acquire the IP address of the WINS server from the DHCP server.

WINS Setting screen 3/4

Item	Description
WINS Server Address1-2	Specify the IP address of the WINS server.



## Client Setting screen 4/4

Item	Description
User Authentication (NTLM)	Select whether to use the user authentication with NTLM.
SMB TX Setting	Select whether to use the SMB transmission setting.
NTLM	Select the NTLM version to be used. Select [v1/v2] or [v1] when using a computer over a network that is running a Windows 98 SE or Windows Me operating system. Select [v1] when the Samba service is operating a server over a network.


**Note**

*When performing SMB scans (host name setting) via a router, specify the WINS settings according to the SMB transmission settings.*




**To specify SMB settings**

- 1** In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2** In the Network Setting screen, touch [6 SMB Setting].  
The SMB Setting screen (1/4) appears.
- 3** Specify the desired settings.

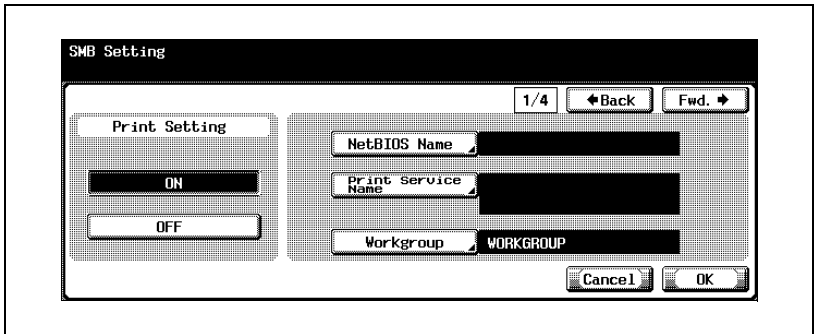


- 4** Touch [Fwd.].  
SMB Setting screen 2/4 appears.
- 5** Specify the desired settings.

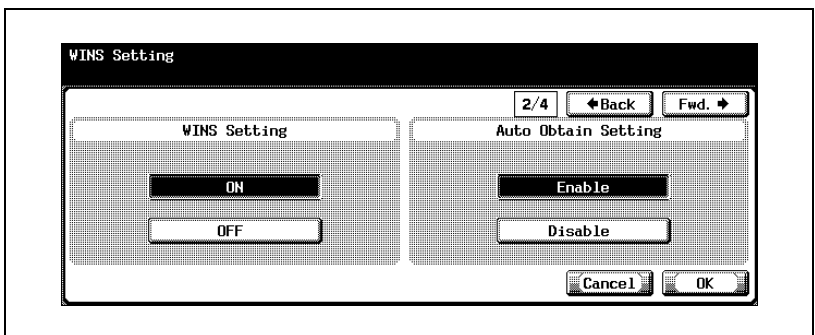

- 6** Touch [Fwd.].  
SMB Setting screen 3/4 appears.




## 7 Specify the desired settings.

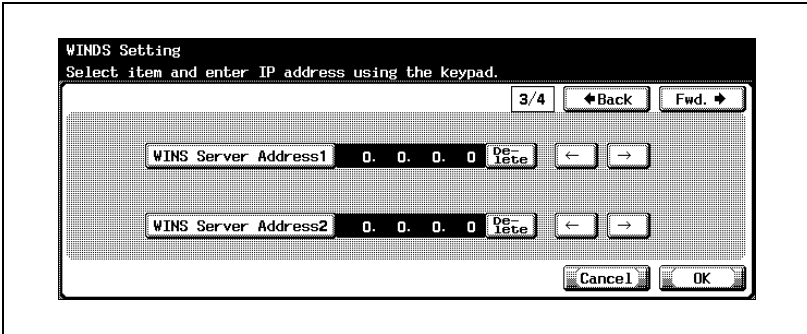

## 8 Touch [Fwd.].

SMB Setting screen 4/4 appears.


## 9 Specify the desired settings.

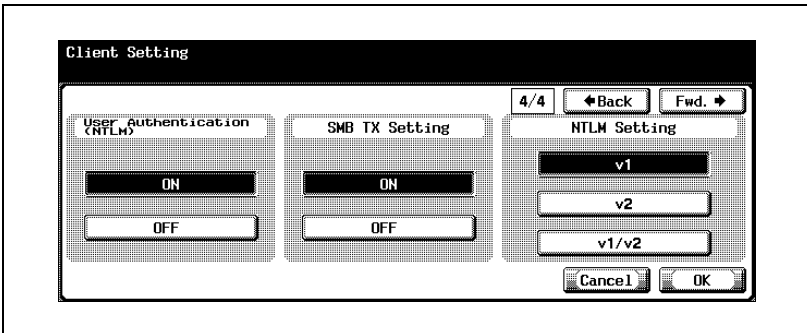



**10** Touch [OK].

The SMB settings are applied.

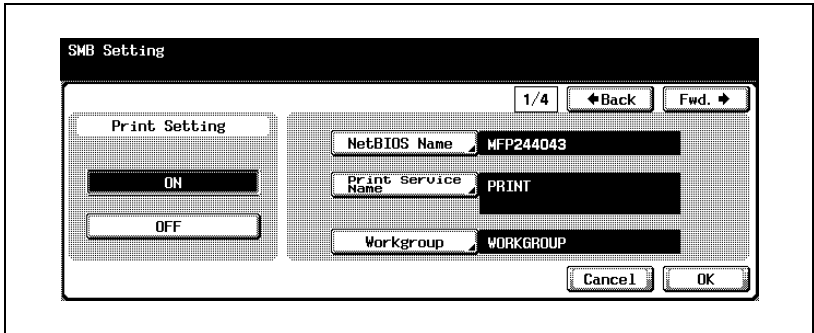**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## 4.17 AppleTalk Settings

You can specify the settings for network printing using AppleTalk.


### AppleTalk Parameters

The AppleTalk parameters are as follows:

Item	Description
AppleTalk Setting	Specify whether to turn on the AppleTalk settings.
Printer Name	Sets the name of this machine that appears on the AppleTalk network. Use the keyboard that appears in the touch panel to type in the name (up to 31 characters).
Zone Name	Sets the name of the zone to which the machine is to be connected. Use the keyboard that appears in the touch panel to type in the zone name (up to 31 characters).
Current Zone	Displays the current zone.


### To specify AppleTalk settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [7 AppleTalk Setting].  
The AppleTalk Setting screen appears.
- 3 Specify the desired settings.

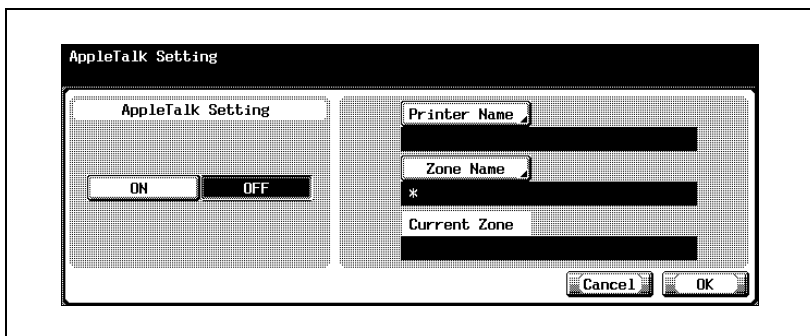



- 4 Touch [OK].  
The AppleTalk settings are applied.

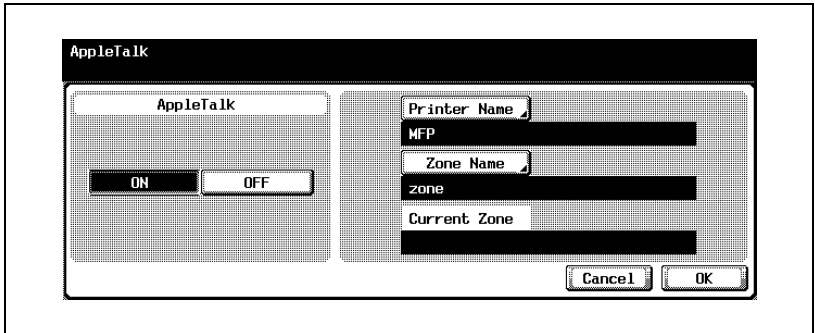**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## 4.18 Enabling LDAP Settings

The LDAP function to which the machine can connect and search and retrieve information can be enabled/disabled.


### Enabling LDAP Parameters

The Enabling LDAP parameters are as follows:

Item	Description
LDAP Function	Set whether or not to use the LDAP function.

### To specify Enabling LDAP settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [8 LDAP Setting].
- 3 In the LDAP Setting screen, touch [1 Enabling LDAP].  
The Enabling LDAP screen appears.
- 4 Specify the desired settings.

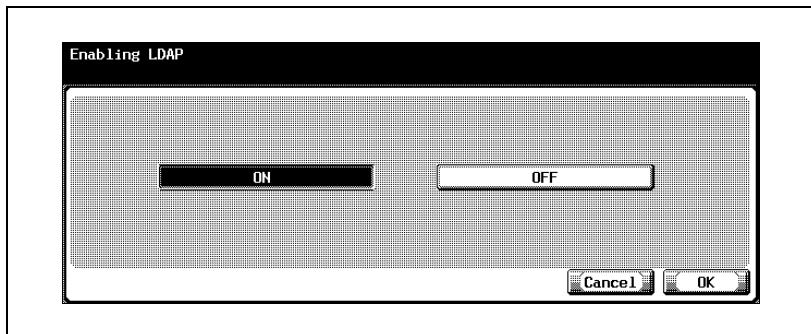

- 5 Touch [OK].  
The LDAP function is set.





...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



...

**Reminder**

*If the LDAP server settings are not specified correctly, network failure may occur. The server administrator should specify LDAP settings.*



## 4.19 Setting Up LDAP Settings

The LDAP server can be registered and authentication settings can be specified.

### LDAP Server Registration Parameters

The LDAP server registration parameters are as follows:

Setting Up LDAP screen 1/6

Item	Description
LDAP Server Name	Set the LDAP server name to be registered. Use the keyboard that appears in the touch panel to type in the server name (up to 32 characters).
Max. Search Results	Set the maximum number of destinations to display after searching. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 5 and 1000 destinations).
Timeout	Set the maximum wait time for the search operation. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 5 and 300 seconds).
Initial Setting for Search Details	Specify the initial setting of the search conditions when performing a detailed search. For details on specifying the setting, refer to "Initial Setting for Search Details" on page 4-100.
Check Connection	Checks the connection to the LDAP server.
Reset All Settings	The LDAP server settings can be reset to the default settings that were specified at the factory. When a reset confirmation message appears, touch [Yes].



Setting Up LDAP screen 2/6

Item	Description
Server Address	Sets the IP address of the LDAP server. Use the keyboard that appears in the touch panel to type in the address (up to 255 characters).
Search Base	Specify the search starting point in the hierarchical structure that is arranged in the LDAP server. Searches are performed by also including the lower sub-directories from the starting point that was specified. Use the keyboard that appears in the touch panel to type in the address (up to 255 characters).
Check Connection*	Checks the connection to the LDAP server.
Reset All Settings	The LDAP server settings can be reset to their factory default. When a reset confirmation message appears, touch [Yes].

\* When [LDAP Function] is set to "ON" on the Enabling LDAP screen, the [Check Connection] key is displayed only when [Manual Destination Input] is set to "Allow" on the Security Details screen.

Setting Up LDAP screen 3/6

Item	Description
Enable SSL	Sets whether to use SSL (data encryption) when connecting to the LDAP server. When SSL is used, the content that is sent is encrypted.
Port No.	Sets the port number of the LDAP server. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
Port Number (SSL)	Specify the port number for using SSL. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
Check Connection	Checks the connection to the LDAP server.
Reset All Settings	The LDAP server settings can be reset to their factory default. When a reset confirmation message appears, touch [Yes].



## Setting Up LDAP screen 4/6

Item	Description
Authentication Method	<p>Select the authentication method used when logging on to the LDAP server.</p> <p>[anonymous]: An authentication method that does not require the user name and password. If specified to [anonymous], dynamic authentication is disabled.</p> <p>[Simple]: A simple authentication method that requires the user name and password. Take caution since the passwords can be leaked over the network.</p> <p>[Digest-MD5]: An authentication method that can be used on a typical LDAP server. If authentication fails using Digest-MD5, the authentication is performed by automatically switching to CRAM-MD5.</p> <p>[GSS-SPNEGO]: An authentication method that can be used with Active Directory in Windows (Kerberos authentication).</p> <p>[NTLM v1] and [NTLM v2]: Standard authentication methods that can be used with Windows NT. Used for logging on when sharing files and printers.</p>

## Setting Up LDAP screen 5/6

Item	Description
Select Server Authentication Method	<p>Select the method to be used during server authentication.</p> <p>[Use The Setting Value]: Authenticates the settings specified in Setting Up LDAP screen 6/6.</p> <p>[User Authentication]: Requires a user name and password when using the LDAP search function. When logging on to the copier with the external server authentication function, the user name that was used when performing the external server authentication is automatically entered in the LDAP server login screen. The user name can also be changed.</p> <p>[Dynamic Authentication]: Requires a user name and password when using the LDAP search function.</p>
Use referral	<p>Select whether to use the referral setting. When referral is used, the search base that was specified in LDAP Server Setting searches the top and bottom levels as the starting point.</p>




Setting Up LDAP screen 6/6

Item	Description
Login Name	Sets the login name used to connect to the LDAP server. Use the keyboard that appears in the touch panel to type in the name (up to 255 characters).
Password	Sets the password used to connect to the LDAP server. Use the keyboard that appears in the touch panel to type in the password (up to 128 characters).
Domain Name	Sets the domain name used to connect to the LDAP server as necessary. Use the keyboard that appears in the touch panel to type in the name (up to 64 characters).
Check Connection	Checks the connection to the LDAP server.
Reset All Settings	The LDAP server settings can be reset to their factory default. When a reset confirmation message appears, touch [Yes].

To specify Setting Up LDAP settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [8 LDAP Setting].
- 3 In the LDAP Setting screen, touch [2 Setting Up LDAP].
- 4 Touch the LDAP server button to register and specify the setting. Setting Up LDAP screen 1/6 appears.

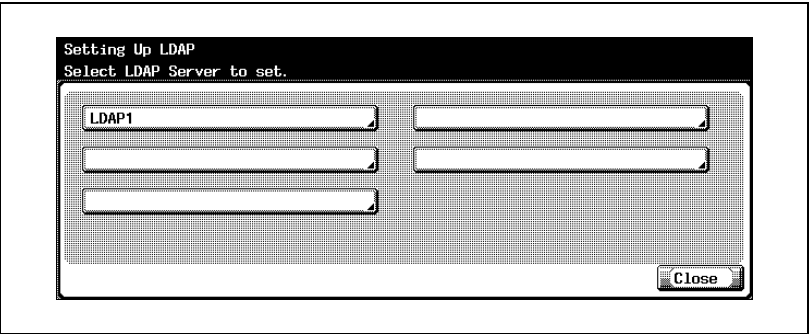



- 5 Specify the desired settings.

Setting Up LDAP  
Enter LDAP server info. Press [Check Connection] to confirm connection.

1/6 ◀ Back Fwd. ▶

LDAP Server Name

Server Name  
LDAP1

LDAP Setting

Max. Search Results 100  
5~1000

Timeout 60 sec.  
5~300

Initial Setting for Search Details

Check Connection Reset All Settings Cancel OK

- 6 Touch [Fwd.].  
Setting Up LDAP screen 2/6 appears.

- 7 Specify the desired settings.

Setting Up LDAP  
Enter LDAP server info. Press [Check Connection] to confirm connection.

2/6 ◀ Back Fwd. ▶

Server Address 192.168.1.55


Search Base

Check Connection Reset All Settings Cancel OK

- 8 Touch [Fwd.].  
Setting Up LDAP screen 3/6 appears.




9 Specify the desired settings.

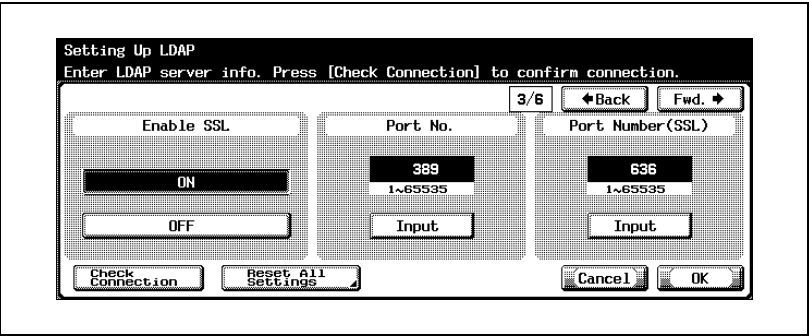

10 Touch [Fwd.].  
Setting Up LDAP screen 4/6 appears.


11 Specify the desired settings.

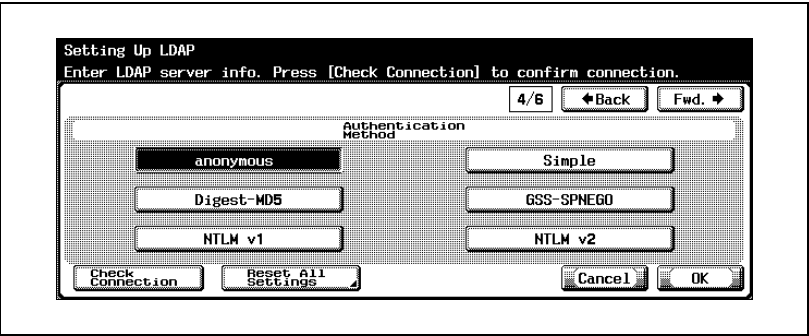

12 Touch [Fwd.].  
Setting Up LDAP screen 5/6 appears.




### 13 Specify the desired setting.

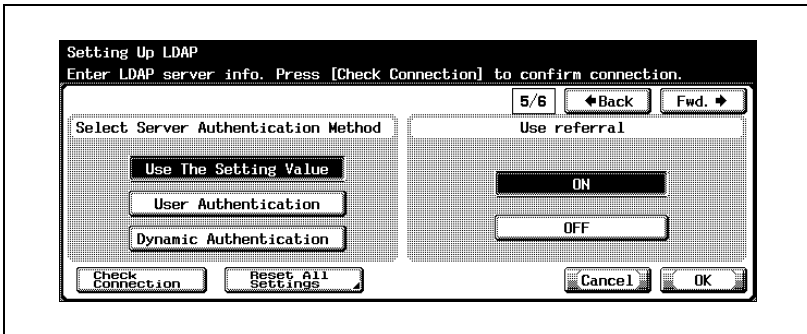

### 14 Touch [Fwd.].

Setting Up LDAP screen 6/6 appears.

### 15 Specify the desired settings.

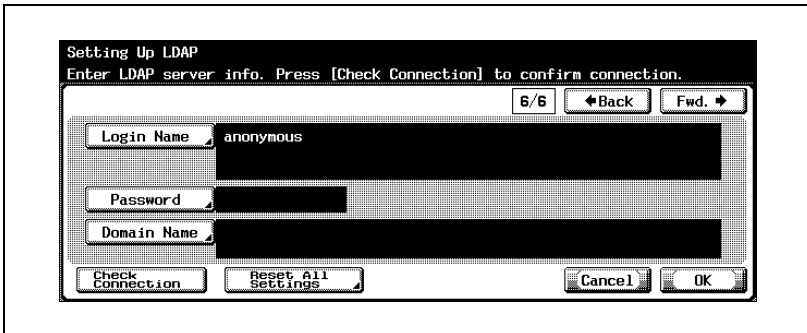

### 16 Touch [OK].

The LDAP server registration and authentication are set.



#### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*





...

**Reminder**

*If the LDAP server settings are not specified correctly, network failure may occur. The server administrator should specify LDAP settings.*



...

**Note**

*Be sure to use an authentication method like the one that is used by the LDAP server. For details, refer to the manual of the LDAP server being used.*

*If the authentication method is specified as "GSS-SPNEGO", enter the domain name for "Active Directory".*

**Detail**

*Depending on the authentication method, settings for the following parameters must be set correctly on the Setting Up LDAP screen (6/6) in order to perform the "Check Connection" operation.*

*For [Simple] and [DIGEST-MD5]: Login Name*

*For [GSS-SPNEGO]: Login Name and Domain Name*



## Initial Setting for Search Details


The initial setting of the search conditions when performing a detailed search can be specified by "Name", "E-Mail", "Fax Number", "Last Name", "First Name", "City", "Company Name", and "Department".

- 1 On the Setting Up LDAP screen, touch [Initial Setting for Search Details].


The Initial Setting for Search Details screen appears.

- 2 Touch [Condition].

The Select Condition screen appears.

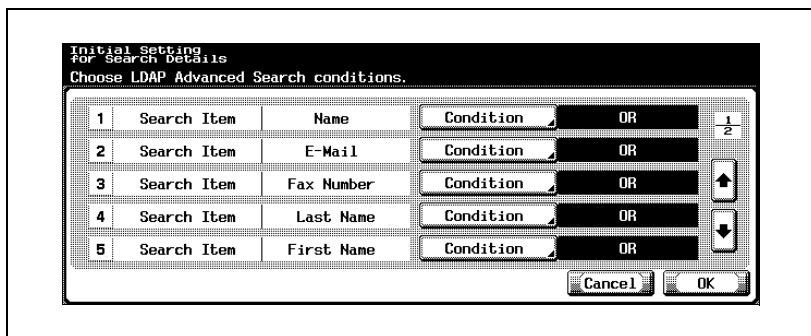

- 3 Touch [OR], [AND], [Begins With], or [Ends With].

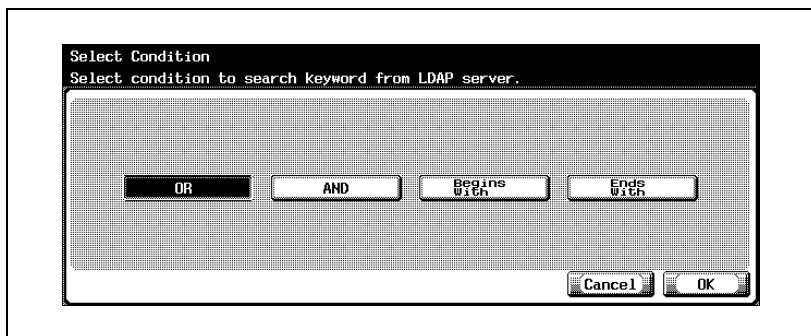

- 4 Touch [OK].
  - The initial setting that is specified in "Initial Setting for Search Details" can be changed when the user uses the LDAP search. The selected condition is set.



5 Touch [OK].

The Setting Up LDAP screen appears again.



**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




## 4.20 Search Default Setting

You can specify the LDAP server that is to perform searches by priority from the registered LDAP servers.

### To specify the detect default server settings

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [8 LDAP Setting].
- 3 In the LDAP Setting screen, touch [3 Search Default Setting].  
The Detect Default Setting screen appears.
- 4 Select the LDAP server that is to perform searches by priority.

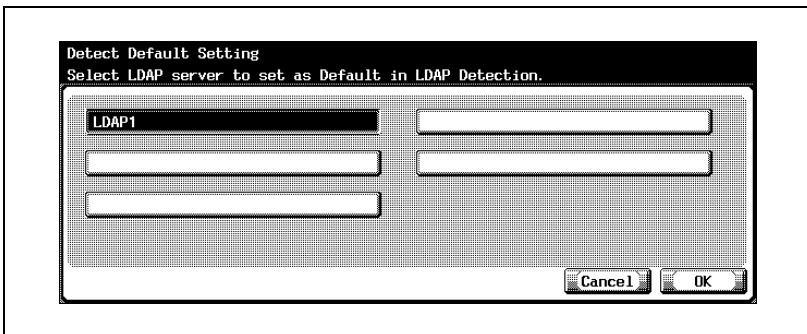

- 5 Touch [OK].



### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



4.21 E-Mail TX (SMTP) Settings

Information such as the SMTP server that is required to send the data as an e-mail attachment in Scan mode can be specified. Also, e-mail authentication can be specified.



Detail

*If running an antivirus program on the e-mail server, the binary division function may not be able to be used. For details, ask the network administrator.*

*To receive binary e-mails, an e-mail client that supports receiving separated e-mail is required. Note that even if separated e-mail is received it may not be combined depending on the e-mail client being used.*

E-Mail TX (SMTP) Parameters

The E-Mail TX (SMTP) parameters are as follows:

E-Mail TX (SMTP) screen 1/4

Item	Description
E-mail Send Setting	Specify whether to use an e-mail transmission.
Scan Send	Specify whether to use a scan transmission.
Status Notification Function	Specify whether to use the status notification function.
Total Counter Notifying Func.	Specify whether to use the total counter notification function.
Detail Setting	Specify the SMTP details. For details on specifying the setting, refer to "SMTP Detail" on page 4-109.

E-Mail TX (SMTP) screen 2/4

Item	Description
SMTP Server Address	The SMTP server address used to send e-mail can be specified. For details on specifying the settings, refer to "SMTP Server Address" on page 4-107.
Binary Division	Sets whether to send large volume of e-mail in small sizes and separated. Use to send data that has exceeded the maximum capacity when the maximum capacity is limited per e-mail on the e-mail server.
Divided Mail Size	Sets the divided data size when dividing the data to be sent. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 100 and 15000 kb).



## E-Mail TX (SMTP) screen 3/4

Item	Description
Connection Timeout	If the operation delays while sending mail to the SMTP server, mail transmission is automatically aborted after a specified time elapses. Set the time from the point when the transmission stops to the point when the mail transmission is to be aborted. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 30 and 300 seconds).
Server Capacity	Sets the maximum capacity that the SMTP server can receive per mail. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 100 MB). To apply no restriction, touch [Unlimited].

## E-Mail TX (SMTP) screen 4/4

Item	Description
SSL Settings	Specify whether to use SSL during e-mail transmission. When SSL is used, the content that is sent is encrypted.
Port Number (SSL)	Specify the port number for using SSL. To change the value, touch [Input], press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
Port Number	Specify the port number for the e-mail transmission. To change the value, touch [Input], press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).


## SMTP Detail screen

Item	Description
POP Before SMTP	Select whether to use POP Before SMTP authentication.
SMTP Authentication	Select whether to use SMTP authentication. If [ON] is touched, the screen for entering the SMTP authentication information appears. For details on specifying the setting, refer to "SMTP Authentication" on page 4-110.
POP Before SMTP Time	Specify if using POP Before SMTP authentication. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 0 and 60 seconds).




### To specify E-Mail TX (SMTP) settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [9 E-Mail Setting].
- 3 In the E-Mail Setting screen, touch [1 E-Mail TX (SMTP)].  
E-Mail TX (SMTP) screen 1/4 appears.
- 4 Specify the desired settings.

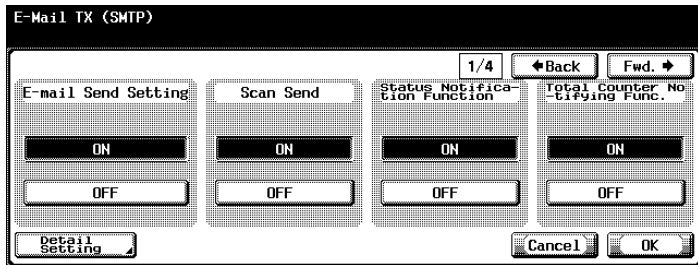


- 5 Touch [Fwd.].  
E-Mail TX (SMTP) screen 2/4 appears.
- 6 Specify the desired settings.

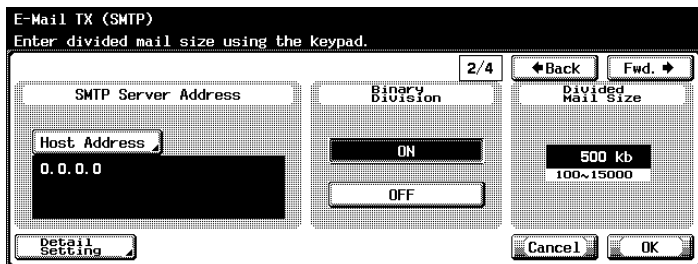

- 7 Touch [Fwd.].  
E-Mail TX (SMTP) screen 3/4 appears.




## 8 Specify the desired settings.

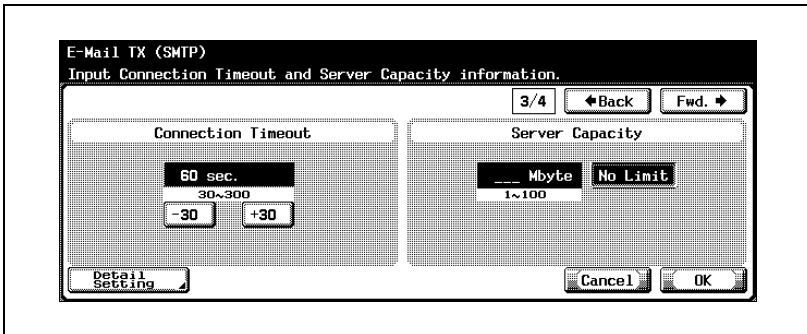

## 9 Touch [Fwd.].

E-Mail TX (SMTP) screen 4/4 appears.

## 10 Specify the desired settings.

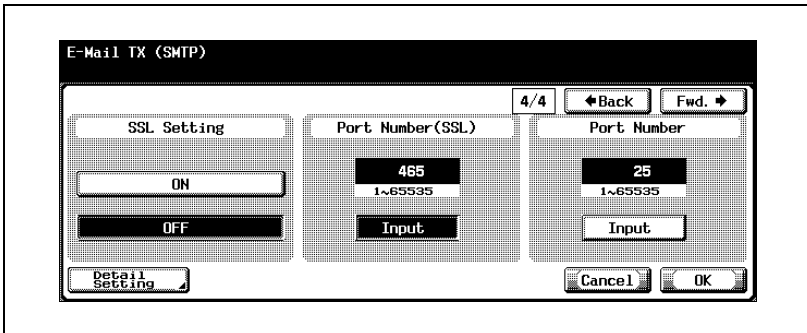

## 11 Touch [OK].

The SMTP server information is set.



### Note

To cancel changes to the setting, touch [Cancel].


To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.



### SMTP Server Address

The SMTP server address used to send e-mail can be specified.

- 1 In the E-Mail TX (SMTP) screen 2/4, touch [Host Address].  
The Host Address screen appears.
- 2 Touch [IP Address Input] or [Host Name Input].

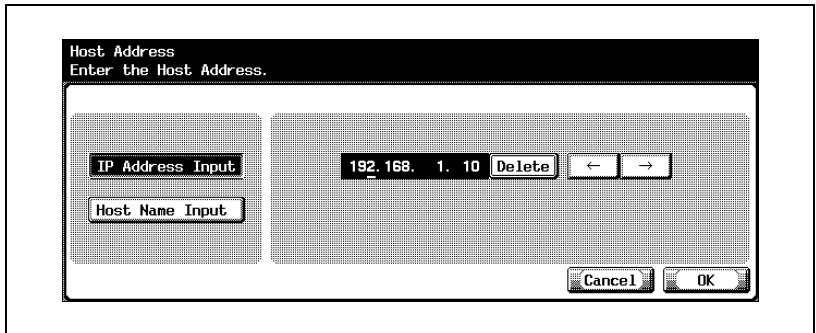

- To specify the host address with the IP address, touch [IP Address Input].
  - To specify the host address with the host name, touch [Host Name Input].
  - If selecting [Host Name Input], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP Settings" on page 4-56.
- 3 Enter the host address (IP address or host name (up to 255 characters)).
    - To edit the values that you entered with "IP Address Input", touch [←] or [→] to move the cursor to the desired area, touch [Delete], and enter the new value.
    - To clear all values, press the [C] (clear) key.
  - 4 Touch [OK].  
The SMTP server address is set.



**Note**

*To cancel changes to the setting, touch [Cancel].*

*If the host address exceeds 81 characters, touch [Details] to display the Host Address Detail screen with the rest of the host addresses.*

*If the DNS setting is not specified correctly, the function does not work properly even when the SMTP server name is entered. Refer to "TCP/IP Settings" on page 4-56 for details on the DNS settings.*

**Detail**


*For the procedure to enter characters using the keyboard that appears on the screen, refer to "Entering text" on page 7-6.*



## SMTP Detail

You can specify the SMTP details.

- 1 In the E-Mail TX (SMTP) screen, touch [Detail Setting].  
The SMTP Detail screen appears.
- 2 Specify the desired settings.

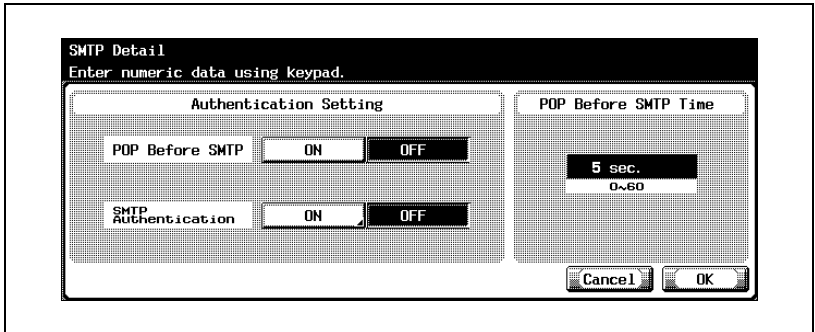

### Detail


*To perform user authentication with POP Before SMTP, the settings that will allow POP to access the e-mail server must be specified. For details, refer to "E-Mail RX (POP) Settings" on page 4-113.*



## SMTP Authentication


Specify when the authentication method is set to SMTP authentication.

- 1 In the SMTP Detail screen under SMTP Authentication, touch [ON].  
The SMTP Authentication screen appears.
- 2 In the SMTP Authentication screen, touch [User ID].

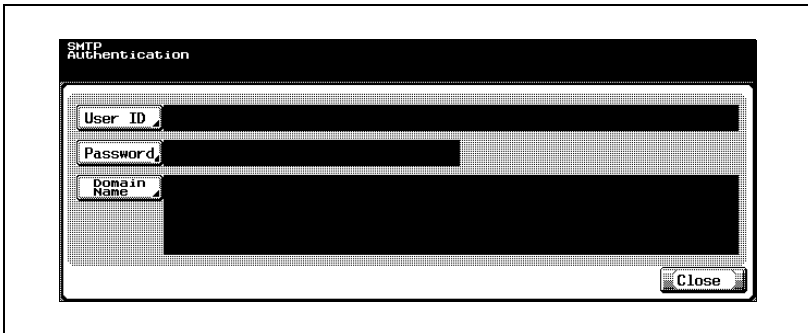

The User ID screen appears.


- 3 Type in the user ID (up to 63 characters).

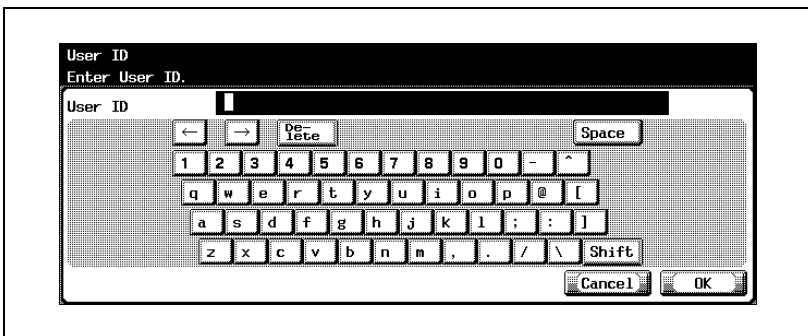

- 4 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].
 The user ID is set, and the SMTP Authentication screen appears again.
- 5 In the SMTP Authentication screen, touch [Password].  
The Password screen appears.




- 6 Type in the password (up to 15 characters).

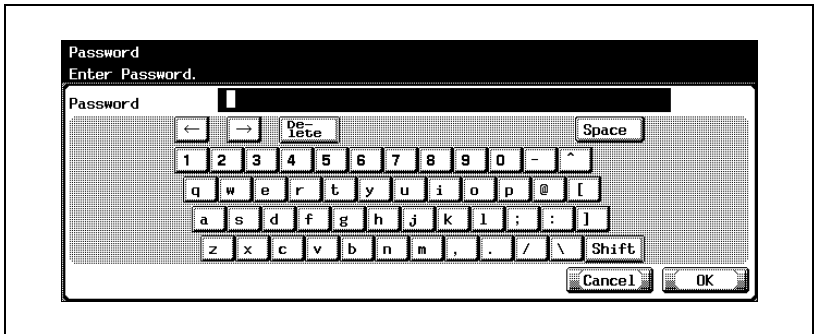

- 7 Touch [OK].
- To cancel changes to the setting, touch [Cancel].
- The password is set, and the SMTP Authentication screen appears again.

- 8 In the SMTP Authentication screen, touch [Domain Name].
- The Domain Name screen appears.

- 9 Type in the domain name (up to 255 characters).

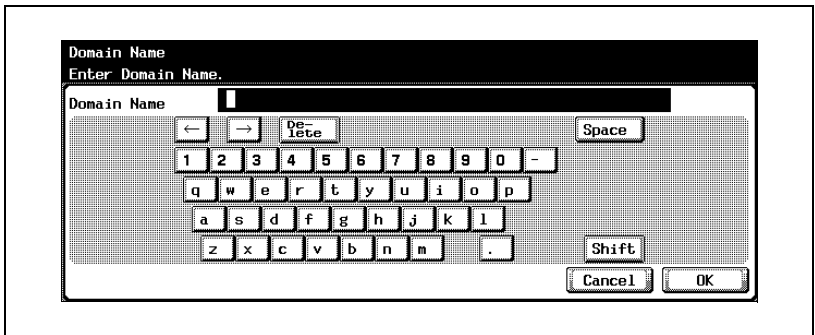

- 10 Touch [OK].
- To cancel changes to the setting, touch [Cancel].
- The domain name is set, and the SMTP Authentication screen appears again.

- 11 Touch [Close].
- The SMTP Detail screen appears again.



**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*



4.22 E-Mail RX (POP) Settings

You can specify the settings to perform the authentication of the e-mail sender with POP Before SMTP.

E-Mail RX (POP) Parameters

The E-Mail RX (POP) parameters are as follows:

E-Mail RX (POP) screen 1/2

Item	Description
E-Mail RX Setting	Specify whether to enable authentication reception.
POP Server Address	Specify the address of the POP server to be used for authentication reception. For details on specifying the settings, refer to "POP Server Address" on page 4-116.
Login Name	Sets the login name used to connect to the POP server. Use the keyboard that appears in the touch panel to type in the login name (up to 63 characters).
Password	Sets the password used to connect to the POP server. Use the keyboard that appears in the touch panel to type in the password (up to 15 characters).

E-Mail RX (POP) screen 2/2

Item	Description
SSL Setting	Specify whether to use SSL in the authentication reception time. When SSL is used, the content that is sent is encrypted.
Port Number (SSL)	Specify the port number for using SSL. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).




## POP Detail screen

Item	Description
APOP Authentication	Sets whether to turn on authentication.
Port No.	Set the port number used to communicate with the POP server. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
Connection Timeout	If the operation delays while receiving the authentication from the POP server, e-mail reception is automatically aborted after time elapses. Set the time from the point when the reception stops to the point when the mail reception is to be aborted. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 30 and 300 seconds).

## To specify E-Mail RX (POP) settings


- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [9 E-Mail Setting].
- 3 In the E-Mail Setting screen, touch [2 E-Mail RX (POP)].  
The E-Mail RX (POP) screen appears.
- 4 Specify the desired settings.

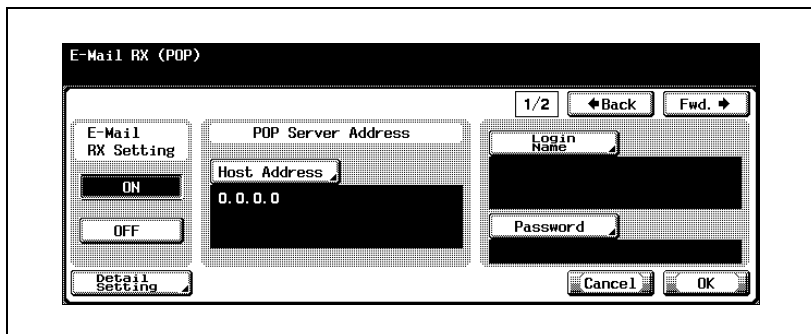

- 5 In the E-Mail RX (POP) screen, touch [Detail Setting].  
The POP Detail screen appears.



## 6 Specify the desired settings.

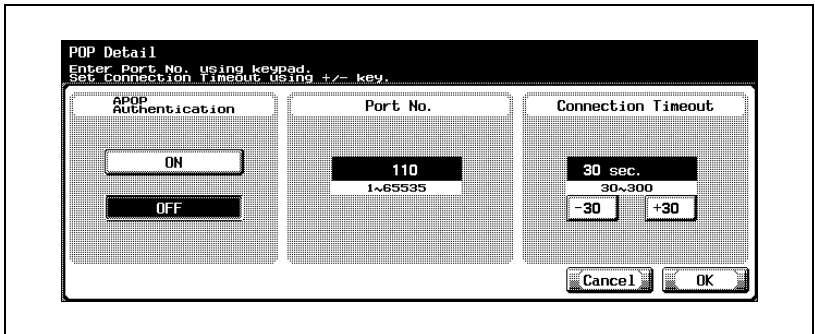

## 7 Touch [OK].


- To cancel changes to the setting, touch [Cancel].

The POP details are set, and the E-Mail RX (POP) screen appears again.

## 8 Touch [Fwd.].

E-Mail RX (POP) screen 2/2 appears.

## 9 Specify the desired settings.

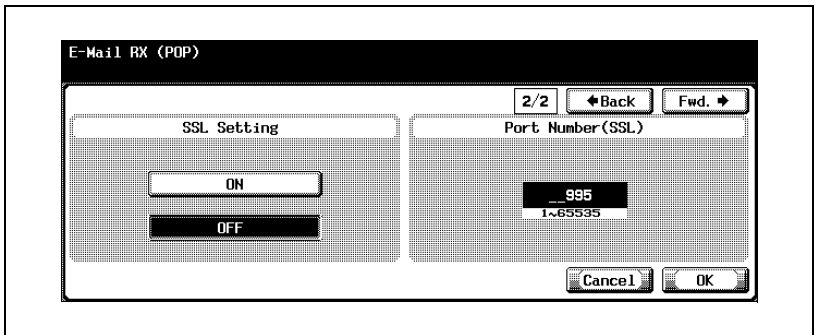

## 10 Touch [OK].


The POP server information is set.



## POP Server Address

The POP server address that is used to receive e-mail can be specified.

- 1 In the E-Mail RX (POP) screen, touch [Host Address].  
The Host Address screen appears.
- 2 Touch [IP Address Input] or [Host Name Input].

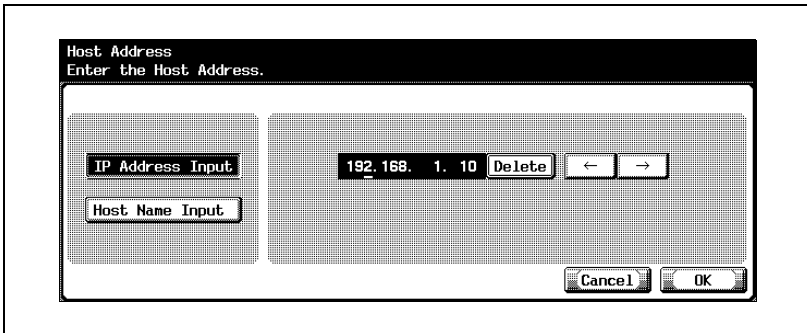

- To specify the host address with the IP address, touch [IP Address Input].
  - To specify the host address with the host name, touch [Host Name Input].
  - If selecting [Host Name Input], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP Settings" on page 4-56.
- 3 Enter the host address (IP address or host name (up to 255 characters)).
    - To edit the values that you entered with "IP Address Input", touch [←] or [→] to move the cursor to the desired area, touch [Delete], and enter the new value.
    - To clear all values, press the [C] (clear) key.
  - 4 Touch [OK].
    - To cancel changes to the setting, touch [Cancel].
    - If the host address exceeds 81 characters, touch [Details] to display the Host Address Detail screen with the rest of the host addresses.
- The POP server address is set.



### Detail

*For the procedure to enter characters using the keyboard that appears on the screen, refer to "Entering text" on page 7-6.*



### 4.23 Device Settings

Device information can be set.

#### Device Parameters

The device parameters are as follows:

Item	Description
Mac Address	Used to verify the machine's Mac address.
Network Speed	Sets the network speed. Be sure to turn the main power OFF and then back ON after changing the setting.



**Reminder**


*When turning the main power switch OFF then ON, wait for 10 seconds or longer before turning it ON again; otherwise the copier may not function normally.*

*The MAC address of this machine's network card is displayed under "MAC Address".*



## To specify device settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [1 Device Setting].  
The Device Setting screen appears.
- 4 Specify the desired settings.

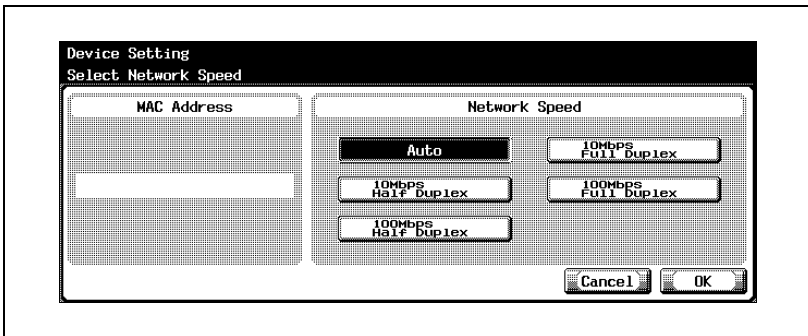

- 5 Touch [OK].  
The device information is set.



### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## 4.24 Time Adjustment Settings

The machine’s internal clock can be corrected via the network.

### Time Adjustment Parameters

The time adjustment parameters are as follows:

Item	Description
NTP Setting	Specify whether to turn on the NTP.
NTP Server Address	Sets the IP address of the NTP server. For details on specifying the settings, refer to "NTP Server Address" on page 4-121.
Port No.	Set the port number used to communicate with the NTP server. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).


After specifying this setting, touch [1 System Setting] in the Administrator Setting, touch [3 Date/Time Setting], and then set the date.

Periodic automatic adjustment is not performed.



### To specify time adjustment settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [2 Time Adjustment Setting].  
The Time Adjustment Setting screen appears.
- 4 Specify the desired settings.

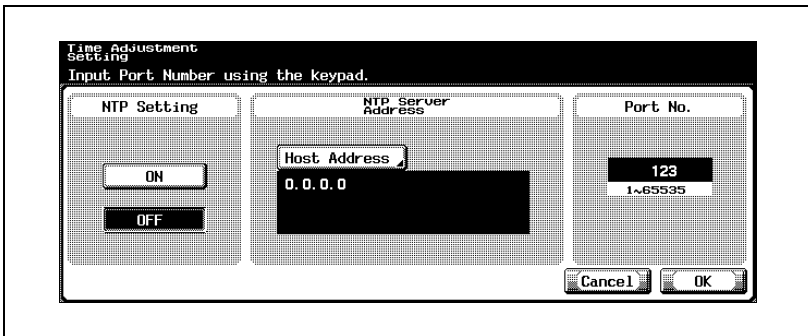

- 5 Touch [OK].  
The device information is set.



#### Note

*To cancel changes to the setting, touch [Cancel].*


*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## NTP Server Address

The IP address of the NTP server can be specified.

- 1 In the Time Adjustment Setting, touch [Host Address].  
The Host Address screen appears.
- 2 Touch [IP Address Input] or [Host Name Input].

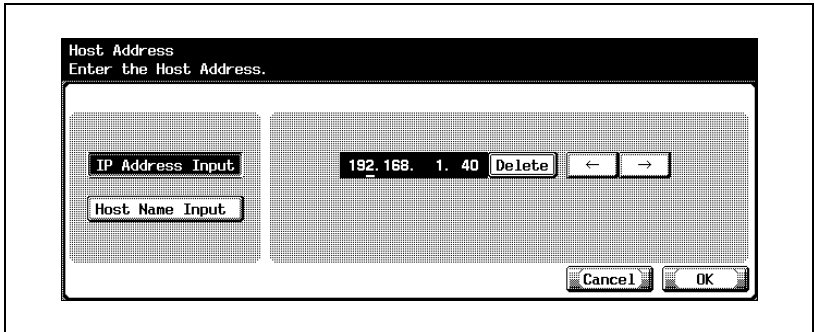

- To specify the host address with the IP address, touch [IP Address Input].
  - To specify the host address with the host name, touch [Host Name Input].
- 3 Enter the host address (IP address or host name (up to 255 characters)).
    - To edit the values that you entered with "IP Address Input", touch [↔] or [↕] to move the cursor to the desired area, touch [Delete], and enter the new value.
    - To clear all values, press the [C] (clear) key.
    - If the host address exceeds 81 characters, touch [Details] to display the Host Address Detail screen with the rest of the host addresses.
  - 4 Touch [OK].  
The NTP server address is set.





...

**Note**

*To cancel changes to the setting, touch [Cancel].*

**Detail**

*For the procedure to enter characters using the keyboard that appears on the screen, refer to "Entering text" on page 7-6.*



4.25 Status Notification Settings

Settings for notifying the administrator of the machine’s status by e-mail can be specified. The status notification is sent if the e-mail address is entered and if any of the notification conditions are selected.

Status Notification Parameters

The status notification parameters are as follows:

Item	Description
Notification Address Setting	Sets the e-mail address where notification of the machine’s status is to be sent. Use the keyboard that appears in the touch panel to type in the e-mail address (up to 320 characters). To register multiple e-mail addresses, separate them with a comma (,).
Notification Item Setting	Sets the conditions under which notification of the machine’s status is to be sent by email. For details on specifying the settings, refer to "Notification Item Setting" on page 4-125.
Notification Time Setting	Sets the time when notification of the machine’s status is to be sent. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 10 minutes).

Specify the "Printer Location" that is included in the e-mail text of the status notification function in PageScope Web Connection. For details, refer to "IPP" on page 5-99.




### To specify status notification settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [3 Status Notification Setting].
  - To quit specifying the Utility mode setting, touch [Exit] in the sub display area. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.
  - Refer to "E-Mail TX (SMTP) Parameters" on page 4-103 for more details.

The Status Notification Setting screen appears.

- 4 Specify the desired settings.

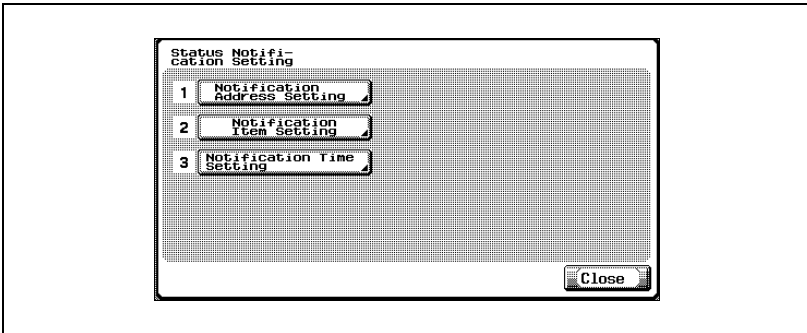




## Notification Item Setting

The conditions under which notification of the machine's status is to be sent by e-mail can be specified.

- 1 In the Status Notification Setting screen, touch [2 Notification Item Setting].

The Notification Item Setting screen appears.

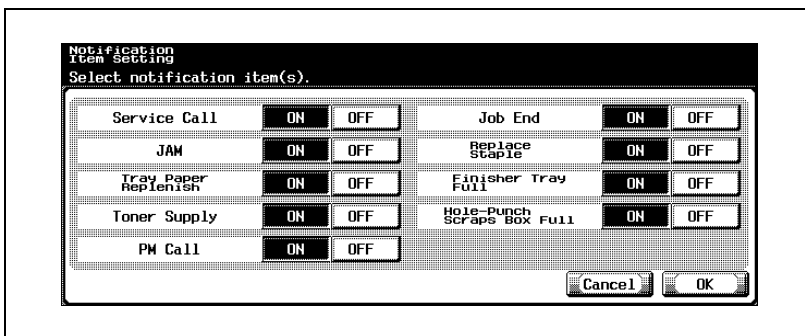

- 2 Touch [ON] or [OFF] for each item.
- 3 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].

The conditions are set for sending notification of the machine's status by e-mail.



## 4.26 Total Counter Report Setting

You can specify the total counter notification schedule and notification destination.


The settings that can be specified in the total counter screen are described below.

Item	Description
Set Schedule	Specify the period for notifying the total counter. Two types of notification schedules can be specified. For details on specifying the setting, refer to "Schedule Setting" on page 4-128.
Set notification addresses	Specify the e-mail address of the notification destination. The schedule can also be specified per address. For details on specifying the setting, refer to "Notification Address Setting" on page 4-130.
Device Nickname	Specify the model name that is included in the notification e-mail. Use the keyboard that appears in the touch panel to type in the model name (up to 20 characters).
[Send Now] button	Touch to send the current total counter to the notification destination.



### To specify the total counter report settings

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [4 Total Counter Report Setting].  
The Total Counter Report Setting screen appears.
- 4 Specify the desired settings.

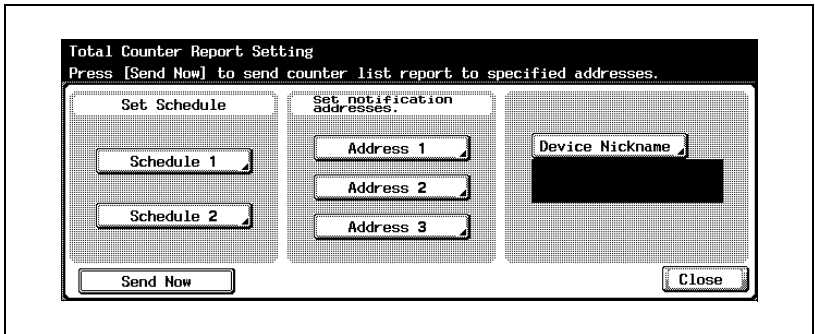

- 5 Touch [Close].



...

#### Note

To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.



...

#### Note

To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.



## Schedule Setting

You can specify the schedule for sending the total counter. An example for specifying "Schedule1" is described below.

The settings that can be specified are described below.

When "Daily" is specified as the notification period

The screenshot shows a dialog box titled "Schedule1" with the subtitle "Set interval of day(s)". It contains two main sections: "Interval Setting" on the left and "Interval of Day(s)" on the right. In the "Interval Setting" section, there are three buttons: "Daily" (which is highlighted), "Weekly", and "Monthly". In the "Interval of Day(s)" section, there is a numeric keypad showing the value "1" and a range indicator "1~31". At the bottom right of the dialog box, there are "Cancel" and "OK" buttons.

Item	Description
Interval of Day(s)	Enter the days each month for sending the schedule. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 31).


When "Weekly" is specified as the notification period

The screenshot shows a dialog box titled "Schedule 1" with the subtitle "Set interval of week(s) and the day of the week.". It contains three main sections: "Send Report" on the left, "Interval of Week(s)" in the middle, and "Day of the Week" on the right. In the "Send Report" section, there are three buttons: "Daily", "Weekly" (which is highlighted), and "Monthly". In the "Interval of Week(s)" section, there is a numeric keypad showing the value "1" and a range indicator "1~6". In the "Day of the Week" section, there are seven buttons: "Sun", "Mon" (which is highlighted), "Tue", "Wed", "Thu", "Fri", and "Sat". At the bottom right of the dialog box, there are "Cancel" and "OK" buttons.

Item	Description
Interval of Week(s)	Enter the interval of weeks for sending the schedule. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 6).
Day of the Week	Select the day of the week for sending the schedule.



When "Monthly" is specified as the notification period

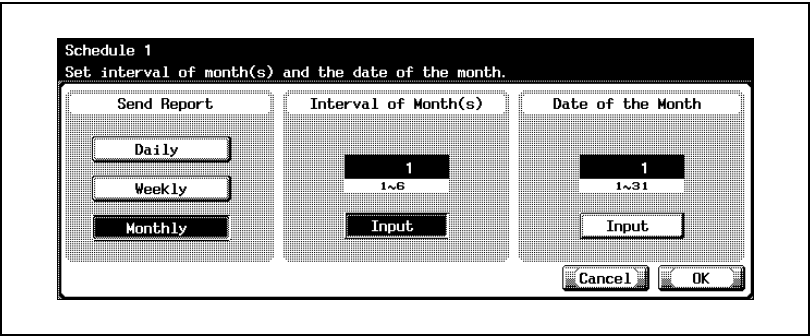

Item	Description
Interval of Month(s)	Enter the interval of months for sending the schedule. To change the value, touch [Input], press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 6).
Date of the Month	Enter the date of the month for sending the schedule. To change the value, touch [Input], press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 31).

To specify the notification address settings

- 1

In the Total Counter Report Setting screen, touch [Schedule1].  
The Schedule1 setting screen appears.
- 2

Specify the notification period.
- 3

Touch [OK].  
The Total Counter Report Setting screen appears again.




**Note**  
*To cancel changes to the setting, touch [Cancel].*




## Notification Address Setting

You can specify the e-mail addresses for sending the total counter. You can specify up to three addresses. An example for specifying "Address1" is described below.

- 1 In the Total Counter Report Setting screen, touch [Address1].  
The Address1 screen appears.
- 2 Touch [E-Mail Address Edit], and then use the keyboard that appears to type in the e-mail address (up to 255 characters).

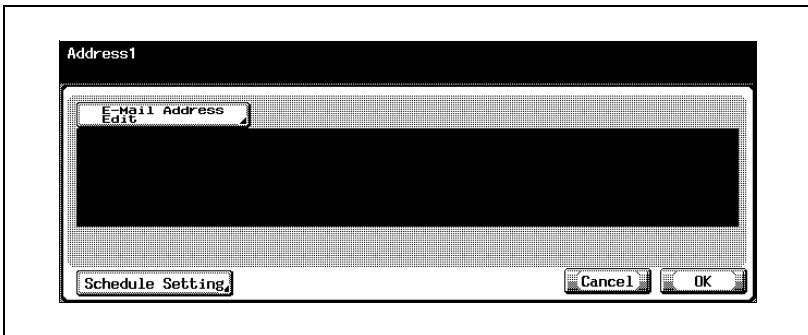

- 3 Touch [OK].
- 4 Touch [Schedule Setting].  
The Schedule Setting screen appears.
- 5 Select whether you want to use this schedule to send to this address.

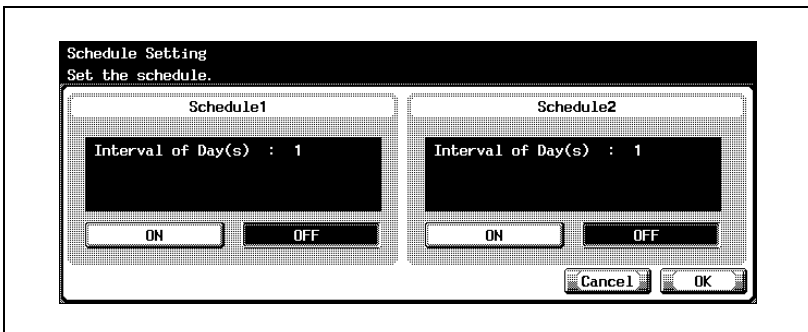

- 6 Touch [OK], and then touch [OK] in the next screen that appears.  
The Total Counter Report Setting screen appears again.





...

**Note**

*To cancel changes to the setting, touch [Cancel].*



## 4.27 PING Confirmation

Settings for checking the TCP/IP network using PING can be specified.


### PING Confirmation Parameters

The PING Confirmation parameters are as follows:


Item	Description
PING TX Address	Sets the host address of the device to ping. For details on specifying the settings, refer to "PING TX Address" on page 4-134.
Check Connection	Sends a ping to check the connection.

### To specify PING confirmation settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [5 PING Confirmation].  
The PING Confirmation screen appears.
- 4 Specify the desired settings.

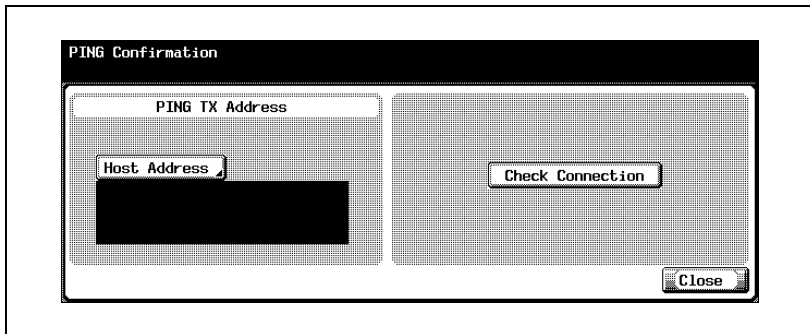

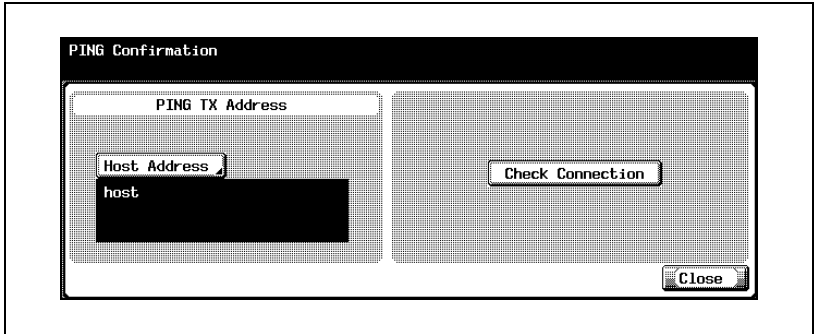

**5** Touch [Close].**Note**


*To quit specifying the Utility mode setting, touch [Exit] in the sub display area. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## PING TX Address

The host address of the device to ping can be specified.

- 1 In the PING Confirmation screen, touch [Host Address].  
The Host Address screen appears.

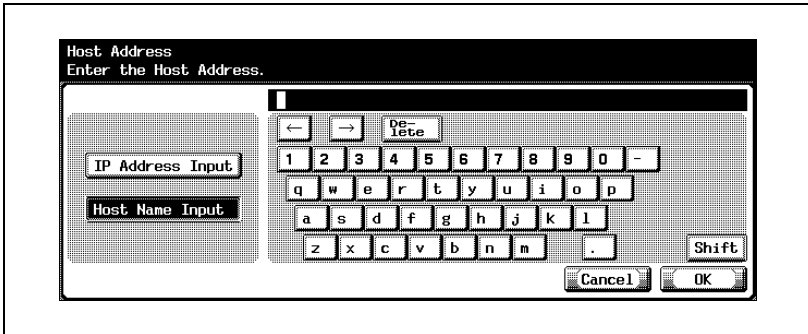

- 2 Touch [IP Address Input] or [Host Name Input].
  - To specify the host address with the IP address, touch [IP Address Input].
  - To specify the host address with the host name, touch [Host Name Input].
  - If selecting [Host Name Input], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP Settings" on page 4-56.
- 3 Enter the host address (IP address or host name (up to 255 characters)).
  - To edit the values that you entered with "IP Address Input", touch [←] or [→] to move the cursor to the desired area, touch [Delete], and enter the new value.
  - To clear all values, press the [C] (clear) key.
  - If the host address exceeds 81 characters, touch [Details] to display the Host Address Detail screen with the rest of the host addresses.
- 4 Touch [OK].  
The PING TX address is set.





...

**Note**

*To cancel changes to the setting, touch [Cancel].*

**Detail**

*For the procedure to enter characters using the keyboard that appears on the screen, refer to "Entering text" on page 7-6.*




## 4.28 SLP Settings

The use of SLP can be enabled or disabled. If set to "Enable", devices can be searched using TWAIN. If set to "Disable", device cannot be searched.

### To specify SLP settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [6 SLP Setting].  
The SLP Setting screen appears.
- 4 Touch [Enable] or [Disable].

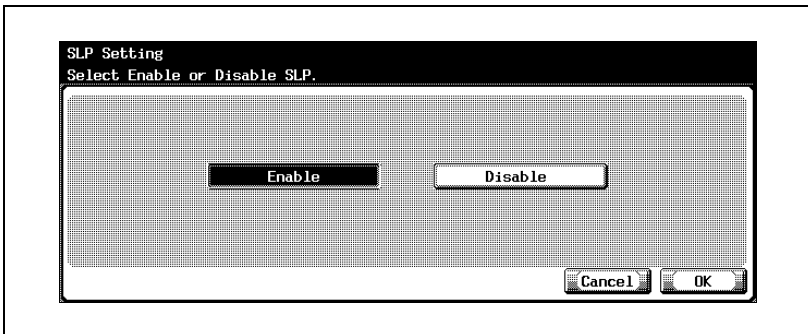

- 5 Touch [OK].  
The use of SLP is enabled or disabled.



#### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




## 4.29 LPD Settings

The use of LPD when printing can be enabled or disabled.

### To specify LPD settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [7 LPD Setting].  
The LPD Setting screen appears.
- 4 Touch [Enable] or [Disable].

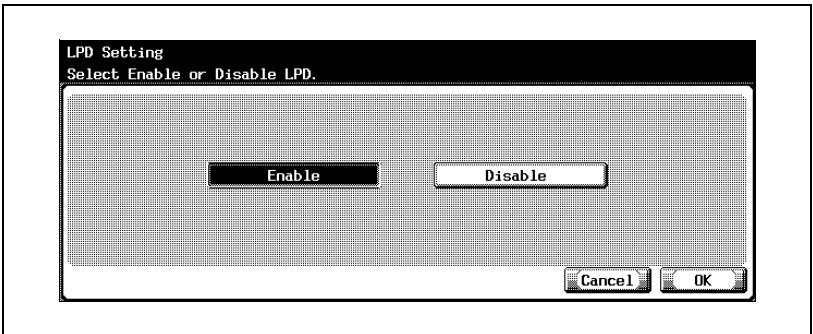

- 5 Touch [OK].  
The use of LPD is enabled or disabled.



...

### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



## 4.30 Prefix/Suffix Settings

The registered characters can be added to the e-mail address that is specified when sending e-mail. This eliminates having to enter characters that are often entered such as the same domain name.

### Prefix/Suffix Parameters


The prefix/suffix parameters are as follows:

Item	Description
ON/OFF Setting	This parameter sets whether to enable the prefix/suffix function.
Prefix/Suffix Setting	Registers the character strings that are used by the prefix/suffix function. For details on specifying the settings, refer to "Prefix/Suffix Settings" on page 4-138.




**To specify the prefix/suffix settings**

- 1** In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2** In the Network Setting screen, touch [0 Detail Setting].
- 3** In the Detail Setting screen, touch [8 Prefix/Suffix Setting].  
The Prefix/Suffix Setting screen appears.

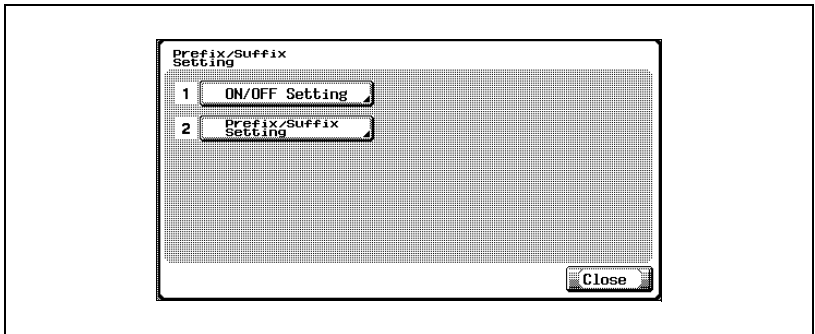

- 4** Specify the desired settings.

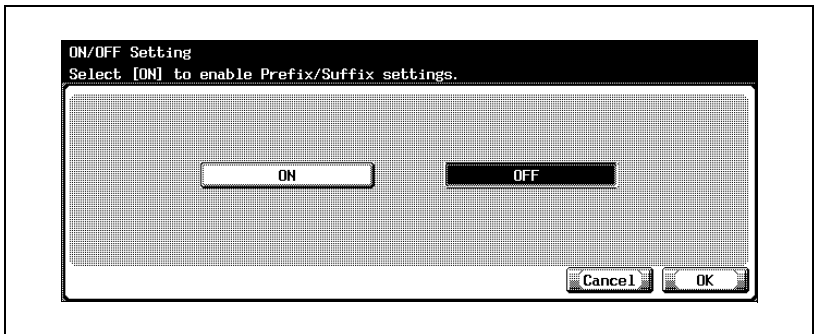

The prefix/suffix is set.

If [ON] is selected, continue with the registration of prefixes/suffixes.





...

**Note**


*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




## Prefix/Suffix Setting

The character strings that are used by the prefix/suffix input function can be registered.

- 1 In the Prefix/Suffix Setting screen, touch [2 Prefix/Suffix Setting].  
The Prefix/Suffix Setting screen appears.
- 2 Touch [Prefix].  
The Prefix screen appears.

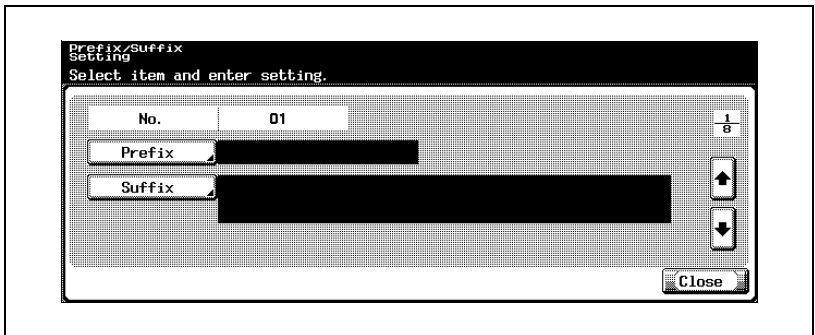


- 3 Enter the character string that is to be used as a prefix (up to 20 characters).
  - For the procedure to enter characters, refer to "Entering text" on page 7-6.

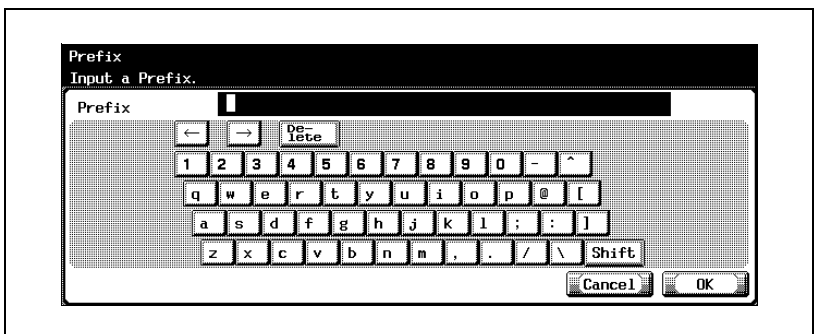



- 4 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].The prefix is set.

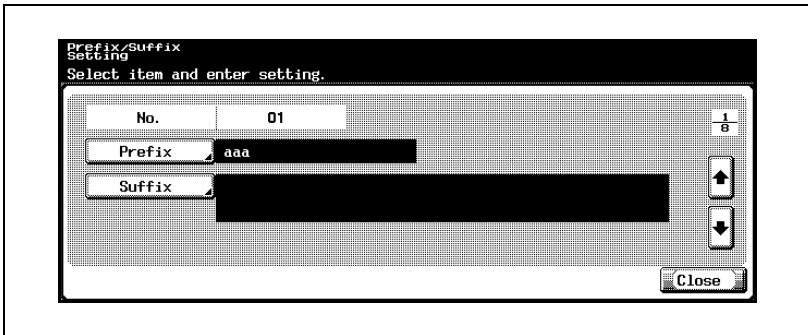

- 5 Touch [Suffix].  
The Suffix screen appears.
- 6 Enter the character string that is to be used as a suffix (up to 64 characters).
  - For the procedure to enter characters, refer to "Entering text" on page 7-6.
- 7 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].The suffix is set.
- 8 Touch [Close].



### 4.31 Action for Invalid Certificate

When this machine is to be connected to an SSL server as a client, you can specify the operation method when the validation of the SSL server certificate has expired.

Item	Description
Continue	The job continues even when the validation of a server certification has expired.
Delete the Job	The job is deleted when the validation of a server certification has expired.



#### Note

*The functions that can be specified are described below.*


*SMTP over SSL*

*POP over SSL*

*LDAP over SSL*

#### To specify the Action for Invalid Certificate settings

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [0 Detail Setting].
- 3 In the Detail Setting screen, touch [9 Action for Invalid Certificate].  
The Action for Invalid Certificate screen appears.
- 4 Select the job process method when disabled.

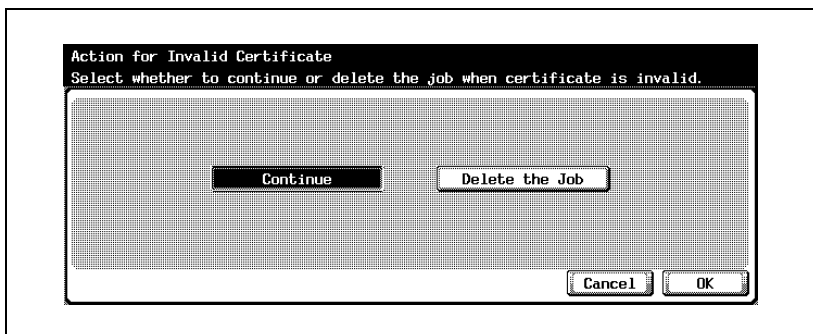

- 5 Touch [OK].





...

**Note**

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*



...

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



4.32 SNMP Settings

SNMP settings can be specified.

SNMP Parameters

The SNMP parameters are as follows:

Item	Description
SNMP Setting	Specify whether to use SNMP.
SNMP v1/v2c(IP)	Select whether to use SNMP v1/v2c (IP).
SNMP v3(IP)	Select whether to use SNMP v3 (IP).
SNMP v1(IPX)	Select whether to use SNMP v1 (IPX).
UDP Port Number	Specify the UDP port number. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).
[v1/v2c Setting]	Specify when you want to select v1 or v2c. For details on specifying the setting, refer to "v1/v2c Setting" on page 4-147.
[v3 Setting]	Specify when v3 is selected. For details on specifying the setting, refer to "v3 Setting" on page 4-148.


The v1/v2c settings that can be specified are described below.

Item	Description
Write Setting	Specify whether to enable the write setting.
Read Community Name	Specify the read community name. The default setting is "public". Use the keyboard that appears in the touch panel to type in the read community name.
Write Community Name	Specify the write community name. The default setting is "private". Use the keyboard that appears in the touch panel to type in the write community name.



### To specify SNMP settings

- 1 In the Administrator Setting screen, touch [5 Network Setting]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the Network Setting screen, touch [Fwd.->], then [1 SNMP Setting].
- 3 Specify the desired settings.

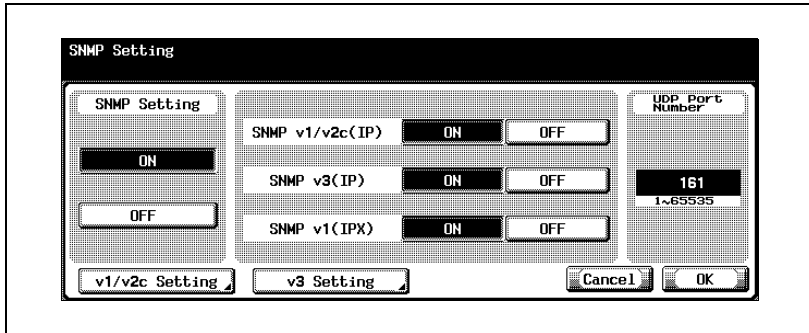


- 4 Touch [OK].  
The SNMP is set.



**v1/v2c Setting**

- 1** In the Network Setting screen, touch [v1/v2c Setting].
- 2** Specify the settings for v1/v2c.

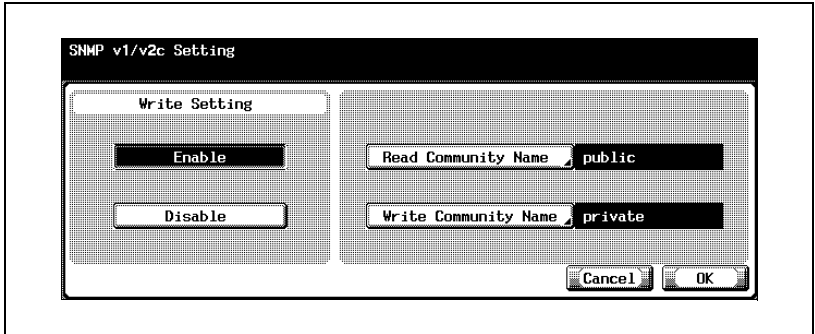

- 3** Touch [OK].  
The SNMP Setting screen appears again.



### v3 Setting

The settings that can be specified are described below.

#### SNMP v3 Setting screen 1/3

Item	Description
Context Name	Specify the context name. Use the keyboard that appears in the touch panel to type in the context name (up to 63 characters).
Discovery User	Select whether to enable the Discovery User setting.
Discovery User Name	Specify the discovery user name. Use the keyboard that appears in the touch panel to type in the discovery user name (up to 32 characters).

#### SNMP v3 Read Setting screen 2/3

Item	Description
Read User Name	Specify the read user name. Use the keyboard that appears in the touch panel to type in the read user name (up to 32 characters).
Security Level	Select the authentication security level.
Read User Password	Specify the authentication password. Use the keyboard that appears in the touch panel to enter each password for the security level (up to 32 characters). If "auth-password" is selected, enter the password only in auth-password. If "priv-password" is selected, enter both passwords.


#### SNMP v3 Write Setting screen 3/3

Item	Description
Write User Name	Specify the write user name. Use the keyboard that appears in the touch panel to type in the write user name (up to 32 characters).
Security Level	Select the authentication security level.
Write User Password	Specify the authentication password. Use the keyboard that appears in the touch panel to enter each password for the security level (up to 32 characters). If "auth-password" is selected, enter the password only in auth-password. If "priv-password" is selected, enter both passwords.




**To specify the v3 settings**

- 1 In the Network Setting screen, touch [v3 Setting].  
SNMP v3 Setting screen 1/3 appears.
- 2 Specify the desired settings.

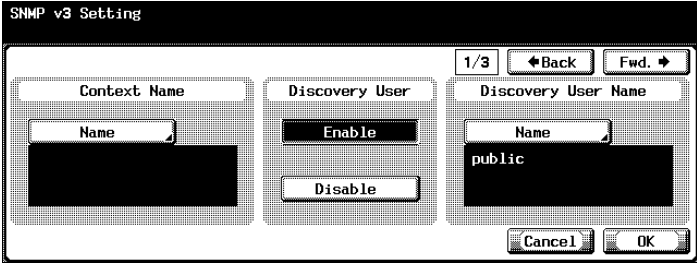

The screenshot shows the 'SNMP v3 Setting' screen, labeled '1/3' in the top right corner. It features three main sections: 'Context Name' with a 'Name' input field and a large black redaction box; 'Discovery User' with 'Enable' and 'Disable' buttons; and 'Discovery User Name' with a 'Name' input field containing the text 'public' and a large black redaction box. Navigation buttons 'Back' and 'Fwd.' are at the top right, and 'Cancel' and 'OK' are at the bottom right.

- 3 Touch [Fwd.].  
SNMP v3 Setting screen 2/3 appears.
- 4 Specify the desired settings.

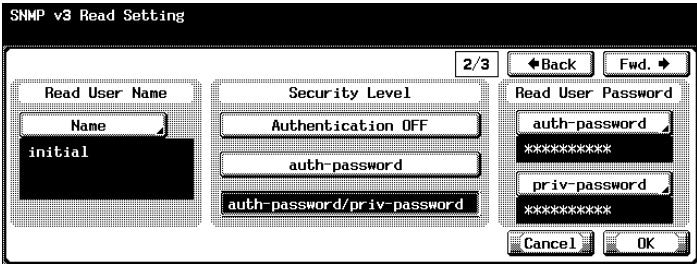


The screenshot shows the 'SNMP v3 Read Setting' screen, labeled '2/3' in the top right corner. It features three main sections: 'Read User Name' with a 'Name' input field containing 'initial' and a large black redaction box; 'Security Level' with 'Authentication OFF' and two password input fields labeled 'auth-password' and 'auth-password/priv-password'; and 'Read User Password' with two password input fields labeled 'auth-password' and 'priv-password', each followed by a large black redaction box. Navigation buttons 'Back' and 'Fwd.' are at the top right, and 'Cancel' and 'OK' are at the bottom right.

- 5 Touch [Fwd.].  
SNMP v3 Setting screen 3/3 appears.



## 6 Specify the desired settings.

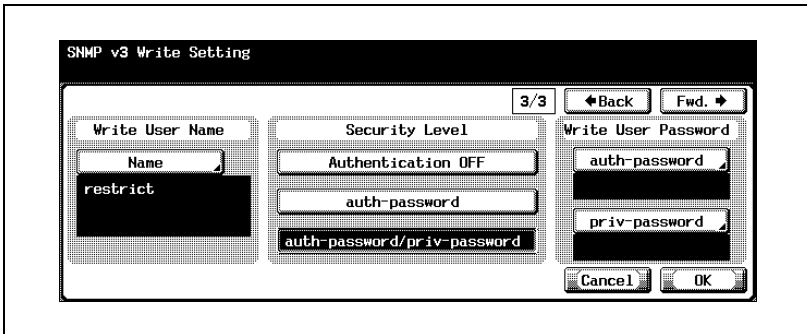

## 7 Touch [OK].

The SNMP Setting screen appears again.



### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*




4.33 Bonjour Setting

You can specify the Bonjour setting.

Bonjour Setting screen

Item	Description
Bonjour Setting	Select whether to enable the Bonjour setting. If "OFF" is selected under "TCP Socket Setting", some of the programs on your computer may not be usable.
Bonjour Name	Specify the name that is used for the Bonjour setting. Use the keyboard that appears in the touch panel to type in the name (up to 63 characters).

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [Fwd.], and then touch [2 Bonjour Setting].  
The Bonjour Setting screen appears.
- 3 Specify the desired settings.

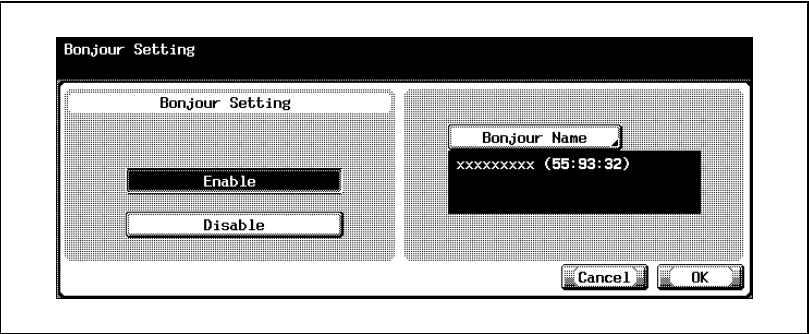

- 4 Touch [OK].



**Note**

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*

**Note**

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*



4.34 TCP Socket Setting

You can specify the TCP socket settings. The TCP socket is used for the computer programs and the data transmission of this machine.

The settings that can be specified are described below.

TCP Socket Setting screen 1/2

Item	Description
TCP Socket Setting	Select whether to use the TCP socket setting. If "OFF" is selected under "TCP Socket Setting", some of the programs on your computer may not be usable.
Port Number	Specify the port number that is used. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).


TCP Socket Setting screen 2/2

Item	Description
TCP Socket (ASCII Mode)	Select whether to use the TCP Socket (ASCII Mode) setting.
Port Number (ASCII Mode)	Specify the port number that is used with the ASCII mode. To change the value, press the [C] (clear) key, and then use the keypad to type in the value (between 1 and 65535).

- 1 In the Administrator Setting screen, touch [5 Network Setting].
- 2 In the Network Setting screen, touch [Fwd.], and then touch [3 TCP Socket Setting].


TCP Socket Setting screen 1/2 appears.

- 3 Specify the desired settings.

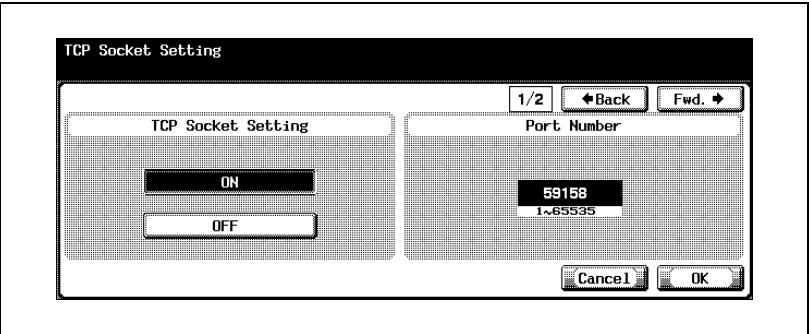



- 4 Touch [Fwd.].  
TCP Socket Setting screen 2/2 appears.
- 5 Specify the desired settings.

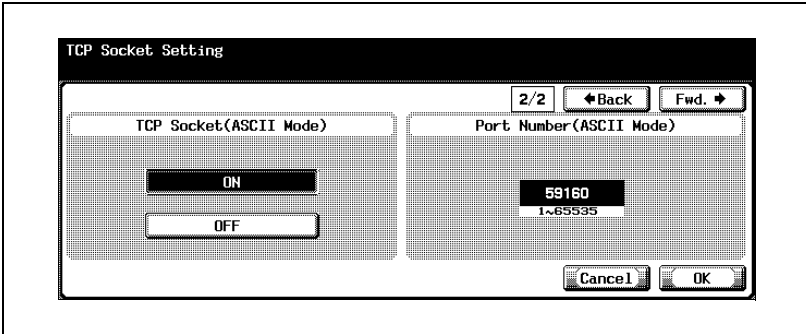

- 6 Touch [OK].



#### Note

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*



#### Note

*To cancel changes to the setting, touch [Cancel].*

*To quit specifying the Utility mode setting, touch [Exit] in the sub display area or press the [Utility/Counter] key. Otherwise, cancel the Utility mode by touching [Close] in each screen until the screen for the Copy, Fax, Scan or Box mode appears.*

*When a certificate is set to "Enable" on this machine, the [SSL Setting] or [Port Number (SSL)] screen appears. To perform SSL transmission, specify the settings.*

*To perform external server authentication on this machine, the TCP socket SSL settings are required to access this machine from the application that is using the TCP socket.*




## 4.35 OpenAPI Settings

Specify whether or not interface is open to software with a function for communicating with the copier. The settings for "Access Setting", "Port No.", "SSL", and "Authentication" of OpenAPI can be changed.

### Access Setting

Sets whether to permit access from other systems that use OpenAPI.  
(Default setting: Allow)

- 1 In the Administrator Setting screen, touch [System Connection]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the System Connection Panel screen, touch [1 OpenAPI Setting].
- 3 In the OpenAPI Setting screen, touch [Access Setting].  
Buttons for selecting settings appear.

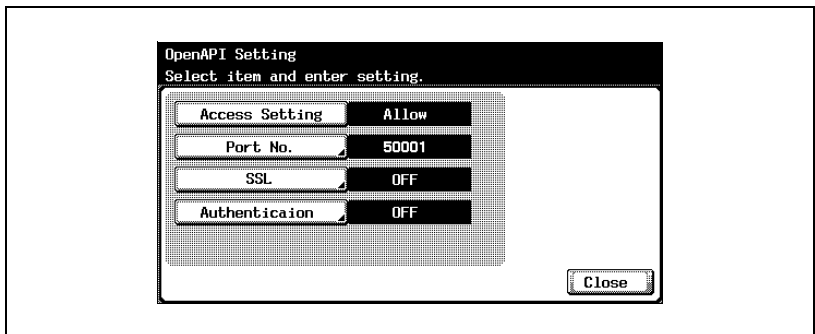


- 4 Touch the desired selection key.
  - To permit access using OpenAPI, touch [Allow].
  - To prohibit access using OpenAPI, touch [Restrict].Access using OpenAPI is set to be permitted or prohibited.



**Port No.**

Specify the port number that other systems access using OpenAPI (initial port number: 50001, initial port number (SSL): 50003).

- 1 In the Administrator Setting screen, touch [System Connection]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the System Connection screen, touch [1 OpenAPI Setting].
- 3 In the OpenAPI Setting screen, touch [Port No.].  
The OpenAPI Port Setting screen appears.

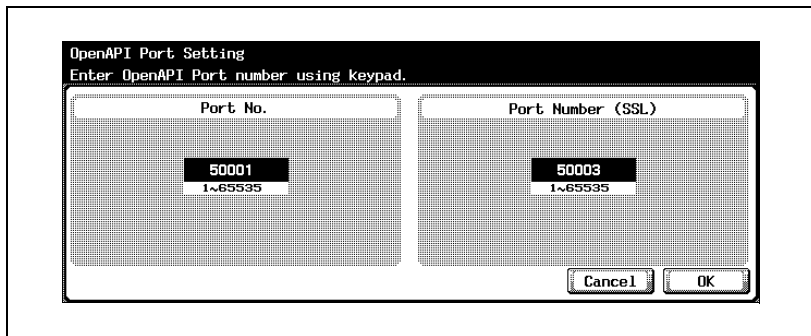

- 4 Press the [C] (clear) key to erase the value, and then use the keypad to type in the value (between 1 and 65535).
  - If a value outside of the allowable range is specified, the message "Input Error" appears. Type in a value within the allowable range.
- 5 Touch [OK].
  - To cancel changes to the setting, touch [Cancel].
 The port number that other systems access using OpenAPI is set.

**Note**


*If the port number for SSL communication is specified, the certificate must be pre-installed from PageScope Web Connection. For details, refer to "SSL/TLS" on page 5-120.*



## SSL

Specify whether to encrypt with SSL access from other systems that use OpenAPI. (Default setting: OFF)

- 1 In the Administrator Setting screen, touch [System Connection]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the System Connection screen, touch [1 OpenAPI Setting].
- 3 In the OpenAPI Setting screen, touch [SSL].

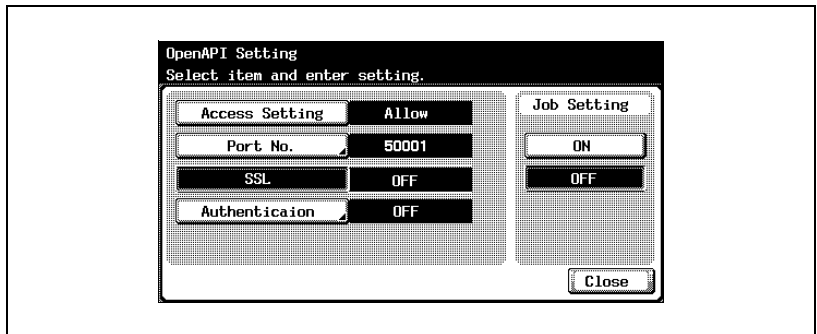

- 4 Touch the desired key.  
SSL encryption is enabled or disabled.



### Note


To use SSL, a certificate must be issued from PageScope Web Connection in advance. For details, see "SSL/TLS" on page 5-120.




## Authentication

Specify whether to use authentication for access from other systems that use OpenAPI. (Default setting: OFF)

- 1 In the Administrator Setting screen, touch [System Connection]. (Refer to "To display the Administrator Setting screen" on page 4-10 for more details.)
- 2 In the System Connection screen, touch [1 OpenAPI Setting].
- 3 In the OpenAPI Setting screen, touch [Authentication].  
The OpenAPI Setting screen appears.

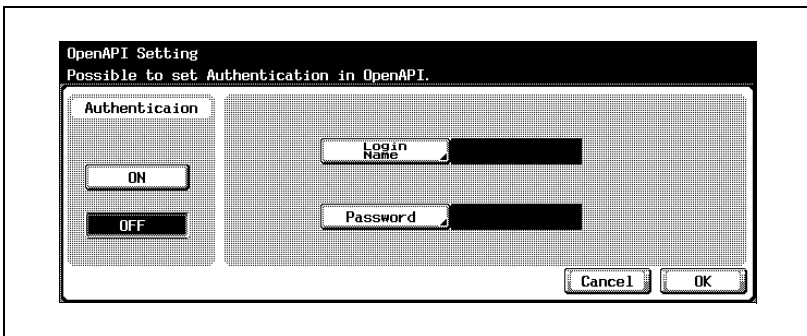

- 4 Touch the desired key under "Authentication".
  - If "ON" is selected, proceed to step 5 and enter the login name and password.
  - If "OFF" is selected, proceed to step 9.
- 5 Touch [Login Name].

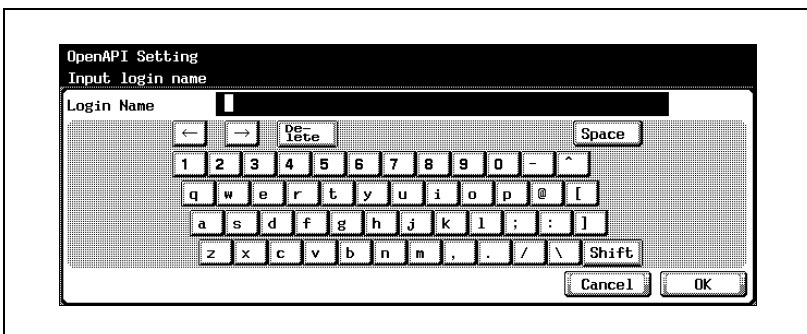



- 6 Enter the login name (up to 8 characters), and then touch [OK].  
The login name is set.
- 7 Touch [Password].
- 8 Enter the password (up to 8 characters), and then touch [OK].  
The user password is set.
- 9 Touch [OK].  
The authentication function when OpenAPI is used is set.



...

**Note**

*To cancel changes to the setting, touch [Cancel].*

**Detail**

*For the procedure to enter characters, refer to "Entering text" on page 7-6.*



## 4.36 External Server Authentication

If performing user authentication using an external server, multiple settings are required depending on the type of server being used. Specify the settings by using the following procedure as reference.

You can specify the external server authentication settings according to the network environment that is to be used.

Item	Description (reference)
Active Directory	Specify when using Windows 2000 Server, Windows Server 2003.
NTLM v1 or NTLM v2	Specify when using Windows NT 4.0 Server. NTLM v2 is available from Windows NT 4.0 (Service Pack 4).
NDS	Specify when using NetWare 5.1 or NetWare 6.0.



### Note

*In the future, the operating system may be updated or a new operating system may be released. For details, refer to the manual of the operating system.*



## Using Active Directory

Before specifying the settings, prepare the information described below.

- Administrator password (required)
- MFP IP address (required)
- Subnet mask (required)
- Default gateway
- Priority DNS server address (required)
- Substitute 1 DNS server address
- Substitute 2 DNS server address
- DNS default domain name
- DNS host name
- Active Directory default domain name (required)
- NTP server (Time Adjustment Setting) address
- List of the users for authentication (required)



### Detail

*When "Active Directory" is selected under "External Server Authentication", specify a password with one character or more. If a password is not specified, authentication will fail.*

*Do not use " " and "+" in the external server password. For details on the operating conditions of an external server, ask the network administrator.*

*If "Password Rules" is enabled, a password with less than 8 characters cannot be registered. For details on the password rules, refer to User manual [Copy Operations].*

*To perform user authentication by using an external server, touch [ON (External Server)], and then specify the server type. Up to 20 servers can be registered in "Active Directory".*

*When "Active Directory" is specified, [Domain Name] is displayed in the User Authentication screen and you can log in by selecting a server from the servers registered in "Active Directory".*



## To specify the external server authentication settings

- 1 Display the Administrator Setting screen.
- 2 In TCP/IP Setting screen 2/5 from the Network Setting screen, specify the following settings.
  - IP Address
  - Subnet Mask
  - Default Gateway

- 3 In TCP/IP Setting screen 3/5 from the Network Setting screen, specify the following settings. Specify the DNS server that is connected to "Active Directory".
  - Priority DNS Server
  - Substitute 1 DNS Server
  - Substitute 2 DNS Server



- 4 In TCP/IP Setting screen 4/5 from the Network Setting screen, specify the following settings.
- DNS Default Domain Name


The screenshot shows the 'TCP/IP Setting' window at screen 4/5. On the left, under 'DNS Domain Auto Obtain', there are 'Enable' and 'Disable' buttons. The main area contains a 'DNS Default Domain Name' field, which is currently selected. Below it are three more fields labeled 'DNS Search Domain Name1', 'DNS Search Domain Name2', and 'DNS Search Domain Name3'. At the top right, there are '4/5', 'Back', and 'Fwd.' buttons. At the bottom right, there are 'Cancel' and 'OK' buttons.

- 5 In TCP/IP Setting screen 5/5 from the Network Setting screen, specify the following settings as necessary.
- Dynamic DNS
  - Host Name


The screenshot shows the 'TCP/IP Setting' window at screen 5/5. On the left, under 'DynamicDNS Setting', there are 'Enable' and 'Disable' buttons. The main area contains a 'Host Name' field, which is currently selected. To the right of this field are two more fields labeled 'IP Filtering' and 'RAW Port No.'. At the bottom right, there are 'Cancel' and 'OK' buttons. At the top right, there are '5/5', 'Back', and 'Fwd.' buttons.



- 6 In [Administrator Setting] — [User Authentication/Account Track] — [Authentication Method], specify the following settings.
- Specify "On (External Server)" in User Authentication.

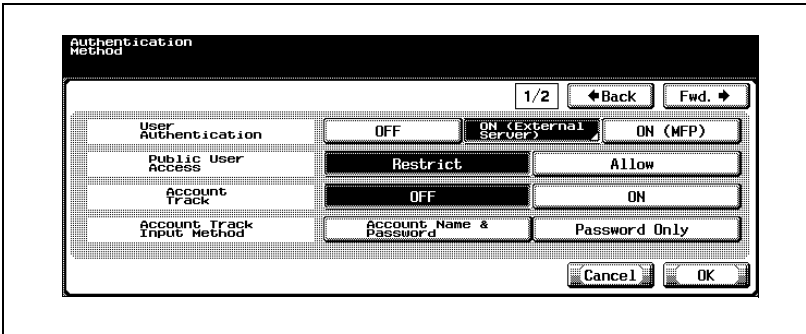


- Specify "Active Directory" in External Server Type.

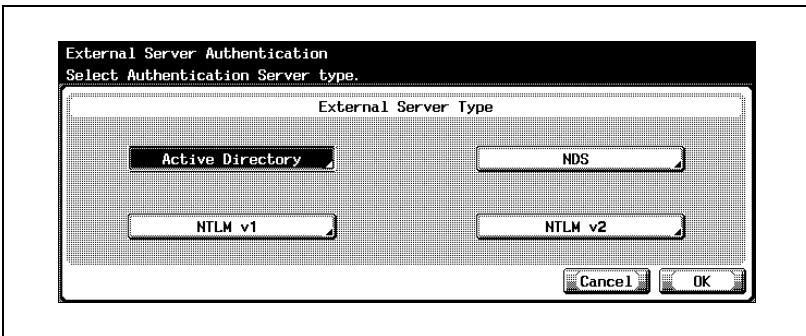

- Specify the domain name and the default setting.




- For "Active Directory", select the domain name from multiple names.

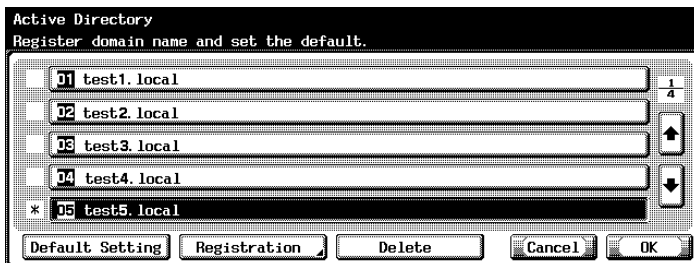

- 7 In [Administrator Setting] – [1 System Setting] – [3 Date/Time Setting], specify the following settings.

- Specify the current time and time zone.

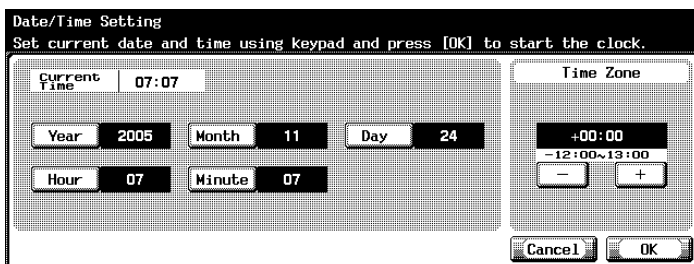



**Note**

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*

*For the TCP/IP setting procedure, refer to "TCP/IP Settings" on page 4-56.*

*For the user authentication and account track setting procedure, refer to User manual [Copy Operations].*

*For the date and time setting procedure, refer to User manual [Copy Operations].*

**Note**

*If the NTP server (Time Adjustment Setting) settings are specified, the exact time can be set on this machine over a network. For details, refer to "Time Adjustment Settings" on page 4-119.*



## Using Novell NDS

Before specifying the settings, prepare the information described below. The settings can be specified with Novell NDS Network Server 4.0 or later.

- Administrator password (required)
- Default NDS tree name (required)
- Default NDS context name (required)
- List of the users for authentication (required)



### Detail


*Do not use " " " and "+" in the external server password. For details on the operating conditions of an external server, ask the network administrator.*

*If "Password Rules" is enabled, a password with less than 8 characters cannot be registered. For details on the password rules, refer to User manual [Copy Operations].*




## To specify the settings for using Novell NDS

- 1 Display the Administrator Setting screen.
- 2 In [Administrator Setting] — [User Authentication/Account Track] — [Authentication Method], specify the following settings.
  - Specify "On (External Server)" in User Authentication.

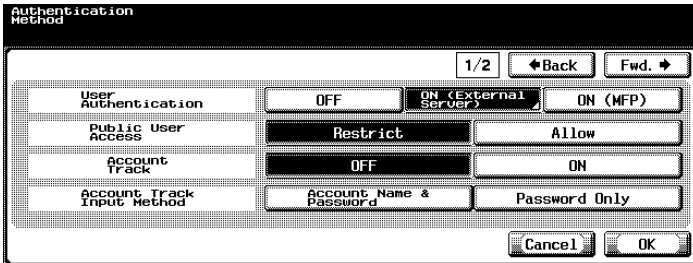


- Specify "NDS" in External Server Type.

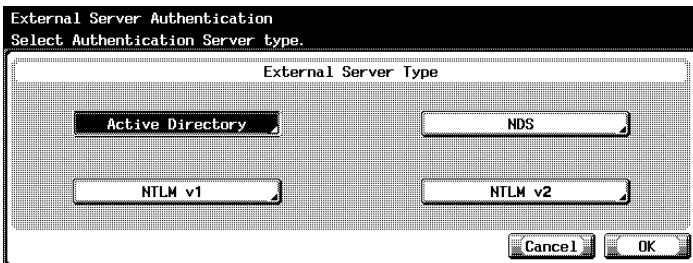



- Enter the NDS server tree name and context name.

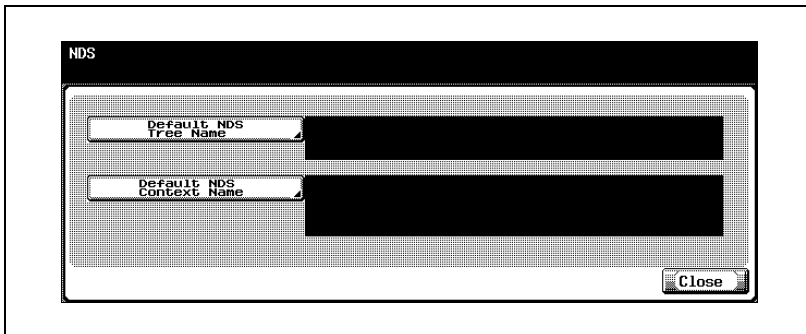

...

**Note**

*To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.*

*For the user authentication and account track setting procedure, refer to User manual [Copy Operations].*



## Using NTLM v1/NTLM v2

Before specifying the settings, prepare the information described below.

- Administrator password (required)
- Default domain name (required)
- List of the users for authentication (required)



### Detail

*Do not use " " " and "+" in the external server password. For details on the operating conditions of an external server, ask the network administrator.*

*If "Password Rules" is enabled, a password with less than 8 characters cannot be registered. For details on the password rules, refer to User manual [Copy Operations].*


## To specify the settings for using NTLM v1/NTLM v2

- 1 Display the Administrator Setting screen.
- 2 In [Administrator Setting] — [User Authentication/Account Track] — [Authentication Method], specify the following settings.
  - Specify "On (External Server)" in User Authentication.


Authentication Method	
1/2    ◀ Back    Fwd. ▶	
User Authentication	OFF    ON (External Server)    ON (MFP)
Public User Access	Restrict    Allow
Account Track	OFF    ON
Account Track Input Method	Account Name & Password    Password Only
Cancel    OK	



- Specify "NTLM v1" or "NTLM v2" in External Server Type.

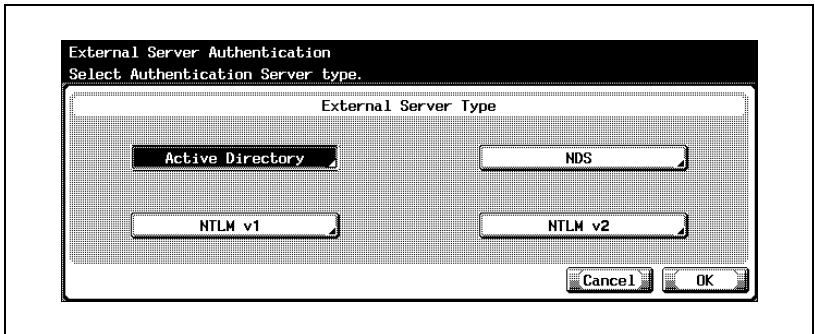

- Enter the default domain name.

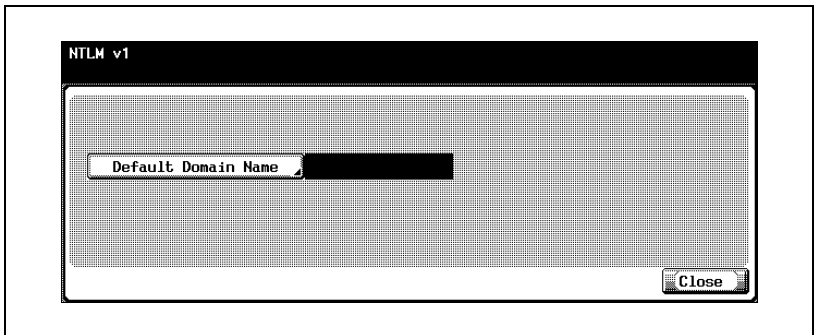

...

**Note**

To display the Administrator Setting screen, refer to "To display the Administrator Setting screen" on page 4-10.

For the user authentication and account track setting procedure, refer to User manual [Copy Operations].



...

**Note**

NTLM v2 is available from Windows NT 4.0 (Service Pack 4).







---



# 5

## **Specifying Settings Using PageScope Web Connection**







# 5 Specifying Settings Using PageScope Web Connection

## 5.1 Items That Can Be Specified Using PageScope Web Connection

PageScope Web Connection is a device management utility supported by the HTTP server built into the device. Using a Web browser on a computer connected to the network, machine settings can be specified from PageScope Web Connection.

When changing settings, operations such as typing text can be performed more easily from your computer.

The following network and Scan function settings can be specified.

### User Mode

The following settings can be specified by all users.

Item		Description
System tab	User Authentication - User Password Change	The setting can be specified when logged in with user authentication. The password of the currently logged in user can be changed.
	User Authentication - User Information	The user information can be viewed when logged in with user authentication. The information of the currently logged in user can be checked.
	Account Track Information	The information of a registered account can be checked.
Scan tab	Address Book	Registers abbreviated destinations in the address book.
	Group	Registers multiple destinations as a single destination.
	Program	Registers scan settings in addition to destinations.
	Temporary One-Touch	Registers temporary destinations.
	Subject	Selects or edits the subject used by the e-mail function.
	Text	Selects or edits the body text used by the e-mail function.



## Administrator Mode

The following more advanced settings can be specified by the administrator.

Item		Description
System tab	User Authentication — User Registration	Adds and registers new users.
	User Authentication — Default Function Permission	Specifies whether to allow the functions that can be operated by a registered user.
	Account Track Infor- mation	Adds and registers new accounts.
	Administrator Pass- word	Changes the administrator password.
Scan tab	Address Book	Registers abbreviated destinations in the ad- dress book.
	Group	Registers multiple destinations as a single des- tination.
	Program	Registers scan settings in addition to destina- tions.
	Temporary One- Touch	Registers temporary destinations.
	Subject	Selects or edits the subject used by the e-mail function.
	Text	Selects or edits the body text used by the e-mail function.
	Application Registra- tion	Register an application that is used with the RightFax.
	Prefix/Suffix	Registers the prefix and suffix that are provided as destination information when sending e-mail.
	Import/Export	Imports or exports the address book data.
	Other	Sets access restrictions on the address book.



Item		Description
Network tab	TCP/IP Setting	Specifies TCP/IP settings.
	IP Filtering	Sets the IP address filter function.
	NetWare Setting	Specifies NetWare settings.
	NetWare Status	Used to check the NetWare status.
	IPP Setting	Specifies IPP print settings.
	FTP Setting — TX	Specifies client settings such as the FTP proxy server.
	FTP Setting — Server	Specifies FTP server settings.
	SNMP Setting	Specifies SNMP settings.
	SMB Setting — WINS Setting	Specifies the WINS settings.
	SMB Setting — Client Setting	Specifies the client settings such as the server being used.
	SMB Setting — Print Setting	Specifies SMB print settings.
	Apple Talk Setting	Specifies AppleTalk settings.
	Bonjour Setting	Specifies the Bonjour settings.
	LDAP Setting	Specifies settings for connecting to the LDAP server.
	LDAP Server Registration	Register the LDAP server for performing searches.
	Email Setting — E-Mail RX (SMTP)	Specifies the e-mail authentication settings.
	E-Mail Setting — E-Mail TX (SMTP)	Specifies e-mail send settings.
	E-Mail Setting - I-Fax Advanced Setting	Specifies the settings when using the Internet fax function. For details, refer to User manual [Network Fax Operations].
	Network Fax Setting	Specifies the settings when using the network fax function. For details, refer to User manual [Network Fax Operations].
	SSL/TLS	Specifies SSL/TLS settings. The procedure to create certificates is also explained.
	SSL/TLS — Processing Method	Specifies the job processing method when SSL certificate is disabled.
	Authentication — User Authentication/Account Track	Specifies the user authentication and account track settings.
	Authentication — Auto Logout	Specifies the auto logout time for the Administrator mode and User mode.
	OpenAPI Setting	Sets OpenAPI.
	TCP Socket Setting	Specifies the TCP socket settings.



## 5.2 Using PageScope Web Connection

### Operating Environment

Item	Operating environment
Network	Ethernet (TCP/IP)
Computer application program	Compatible Web browsers: Microsoft Internet Explorer Ver.6 or later recommended (*) (JavaScript enabled and Cookie enabled), Netscape Navigator Ver.7.02 or later (JavaScript enabled and Cookie enabled) Adobe® Flash® Player (plug-in version 7.0 or later required if "Flash" is selected as the display format) (*) If Internet Explorer Ver. 5.5 is being used, Microsoft XML parser MSXML3.X must be installed.



#### Detail

*PageScope Web Connection is a device management utility supported by the HTTP server built into the device.*

*Using a Web browser on a computer connected to the network, machine settings can be specified from PageScope Web Connection.*

*For details on the display formats, refer to "Logging On and Logging Off" on page 5-11.*



...

#### Note

*Windows NT 4.0 and Mac OS 8/9 do not support versions on and after the Flash Player 8. When using an OS like these, download the Flash Player 7 from the Adobe site or select HTML in the display style of PageScope Web Connection.*



## Accessing PageScope Web Connection

PageScope Web Connection can be accessed directly from a Web browser.

- 1 Start the Web browser.
- 2 In the Address bar, type the IP address of this machine, and then press the [Enter] key.



### Detail

*Below is the URL after SSL/TLS is enabled.*

*https://<IP\_address\_of\_the\_machine>/Redirected to "https://" even if "http://" is entered.*



...

### Note


*If user authentication is enabled, a page for entering the user name and password appears before you can operate the machine.*



## Page Structure

The page that appears immediately after PageScope Web Connection is accessed is called the User mode page.

The configuration of the PageScope Web Connection page is shown below.

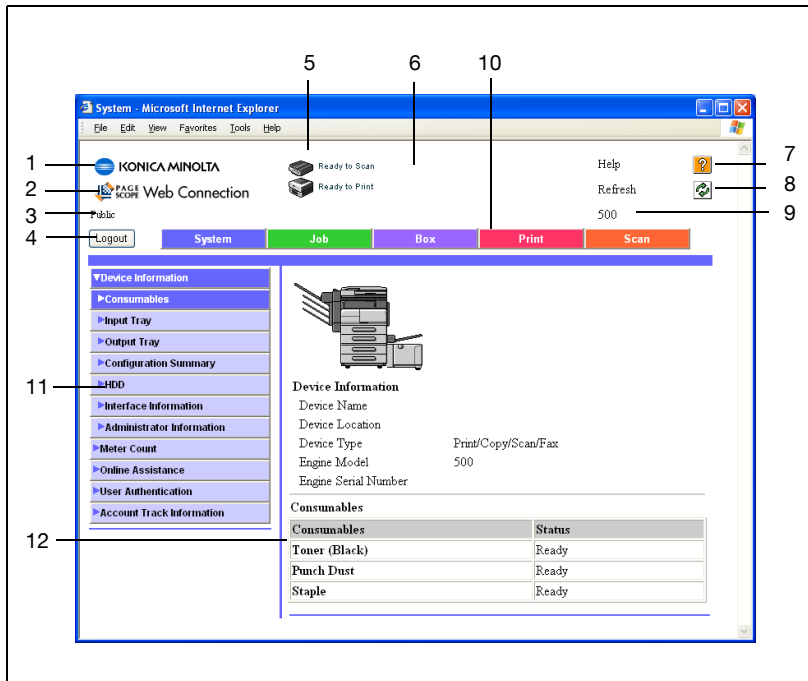

No.	Item	Description
1	KONICA MINOLTA Logo	Click the logo to go to the Konica Minolta Web site at the following URL. <a href="http://konicaminolta.com/">http://konicaminolta.com/</a>
2	PageScope Web Connection Logo	Click the logo to display the version information of PageScope Web Connection.
3	Login mode	Displays the current login mode (public, registered user, administrator). Displays the current login mode (public, registered user, Account name, administrator, box administrator).
4	[Logout] button	Click to log out of the current mode.
5	Status Display	The statuses of this machine's printer section and scanner section are displayed using icons.
6	Message Display	If an error occurred in the machine, the status of the malfunction/error and other error information are displayed.



No.	Item	Description
7	Help	The page specified in "Online Manual URL" is displayed. For details, refer to the IC-204 User manual.
8	Refresh button	Click to update the displayed page.
9	Device Name	Displays the device name that is currently being accessed.
10	Tabs	Select the category of the page to be displayed. The following tabs are displayed in User mode. <ul style="list-style-type: none"><li>• System</li><li>• Job</li><li>• Box</li><li>• Print</li><li>• Scan</li></ul>
11	Menus	Information and settings for the selected tab are listed. The menu that appears differs depending on the tab that is selected.
12	Information and Settings Display	Details of the item selected from the menu are displayed.



**Detail**

*For each login method, refer to "Logging On and Logging Off" on page 5-11.*



## Web Browser Cache

The newest information may not appear in the PageScope Web Connection pages because older versions of pages are saved in the cache for the Web browser. In addition, the following problems may occur when the cache is used.

When using PageScope Web Connection, disable the cache for the Web browser.



### Detail

*If the utility is used with the cache enabled and Administrator mode was timed out, the timeout page may appear even after the utility is accessed again. In addition, since the machine's control panel remains locked and cannot be used, the machine must be restarted. In order to avoid this problem, disable the cache.*



### Note

*The menus and commands may vary depending on the Web browser version. For details, refer to the Help for the Web browser.*

## For Internet Explorer

- 1 On the "Tools" menu, click "Internet Options".
- 2 On the General tab, click [Settings] under "Temporary Internet files".
- 3 Select "Every visit to the page", and then click [OK].

## For Netscape Navigator

- 1 On the "Edit" menu, click "Preferences".
- 2 In the "Category" box, click "Advanced", then "Cache".
- 3 Under "Compare the page in the cache to the page on the network", select "Every time I view the page".



### 5.3 Logging On and Logging Off

When PageScope Web Connection is accessed, the page for a public user appears. In order to log on as a registered user or an administrator when user authentication is performed, it is necessary to log off first, then log on again.

#### Logging Off




**Note**

*When logged on, a timeout occurs and you will automatically be logged off if no operation is performed for a specified length of time.*


*The timeout period for User mode and Administrator mode can be specified in the page that appears by clicking "Authentication (Network Tab)", then "Auto Logout" in Administrator mode.*

- 1 Click [Logout] at the upper left of the window.

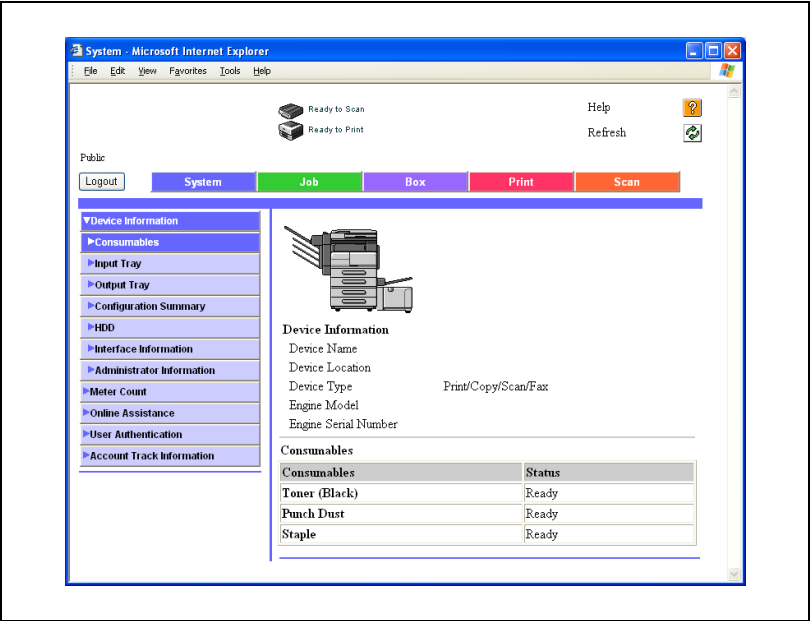



The user is logged off, and the Login page appears.

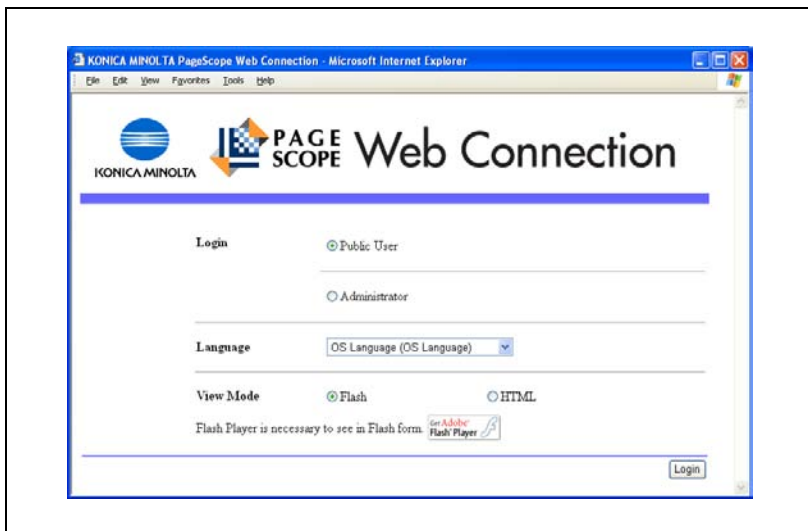




## Logging On to User Mode (Public User)

There are two procedures for logging on to User mode: one for a registered user and one for a public user. If user authentication is not performed, log on as a public user.


- 1 In the Login page, select "Public User".
  - If necessary, select the language and display format.

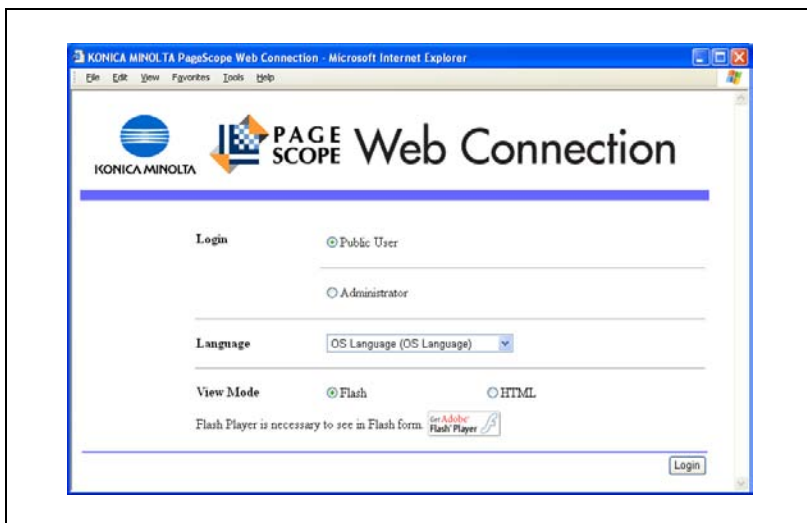



## 2 Click [Login].

The User mode page appears.

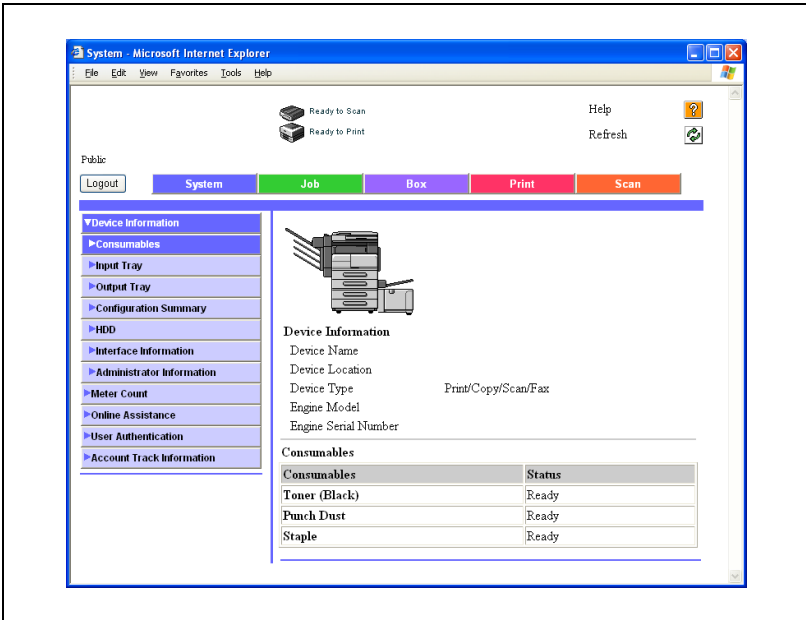

### Note

*If "Flash" is selected as the display format, the following will appear using the Flash feature. Flash Player is required to use the Flash feature.*

*Status icons and messages*

*Page display when "Input Tray" is selected in the menu below "Device Information" on the System tab*

*Page display of the Job tab*

*If a screen reading software is used, we recommend selecting "HTML" as the display format.*



## Logging On to User Mode (Registered User/Box Administrator)

There are two procedures for logging on to User mode: one for a registered user and one for a public user. The following procedure describes how to perform user authentication and log on with a specific user name.



### Note

*Click the icon to the right of the "User Name" box, and then select a user name from the list.*

- 1 In the Login page, type the user name and the password.
  - To log in as the box administrator, type "boxadmin" in User Name and type the password specified in "Specifying Box Administrator Settings" in Password.
  - If necessary, select the language and display format.

KONICA MINOLTA PageScope Web Connection - Microsoft Internet Explorer

KONICA MINOLTA PAGE SCOPE Web Connection

Login

☒ Registered User

User Name

Password

Account Name

Account Password

☐ Administrator

Language

View Mode ☒ Flash ☐ HTML


Flash Player is necessary to see in Flash form [Get Adobe Flash Player](#)

Login



## 2 Click [Login].

The User mode page appears.

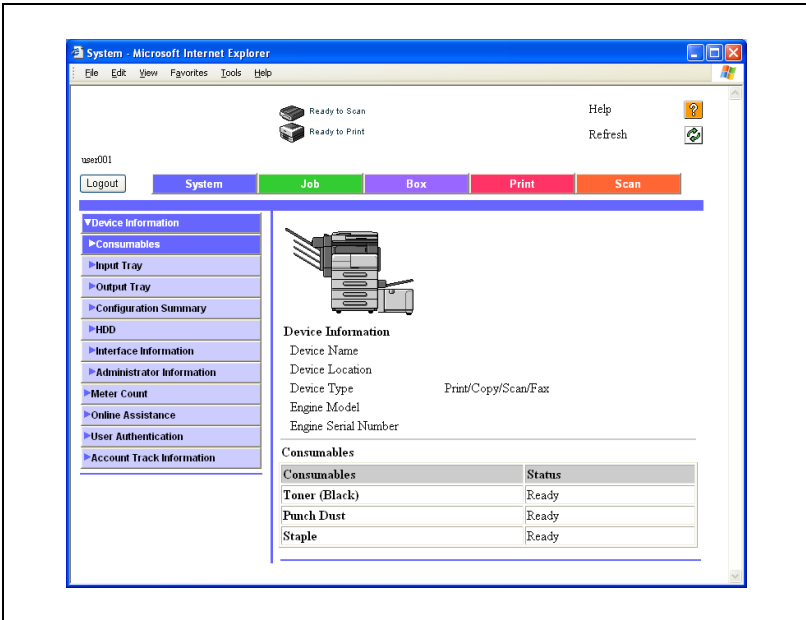

### Note

*If "Prohibit Functions when Auth. Error" in Administrator mode is set to "Mode 2" and a user enters an incorrect password the specified number of times, that user is locked out and can no longer use the machine. Contact the administrator to cancel operation restrictions.*

*If a screen reading software is used, we recommend selecting "HTML" as the display format.*

*For specifying the box administrator settings, refer to User manual [Box Operations].*



## Logging On to Administrator Mode

In order to specify system and network settings, log on to Administrator mode.




### Note

*When logged on to Administrator mode, the control panel of this machine is locked and cannot be used.*


*Depending on the status of the machine, you may not be able to log on to Administrator mode.*

- 1 In the Login page, select "Administrator".
  - If necessary, select the language and display format.

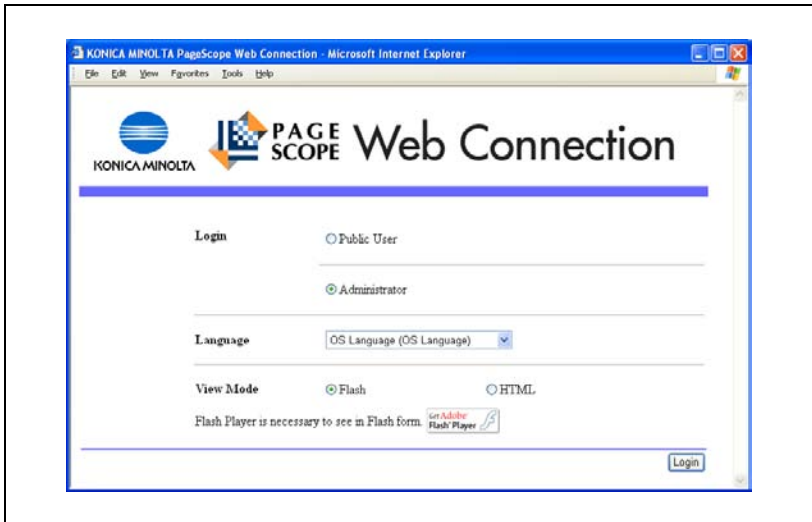




- 2 Type in the password for the machine's administrator, and then click [OK].

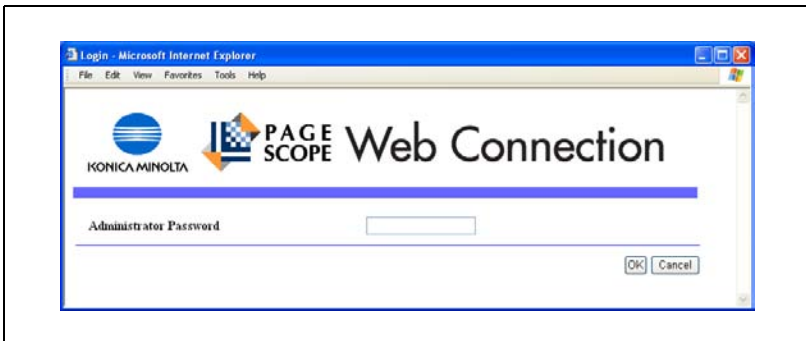

The Administrator mode page appears.

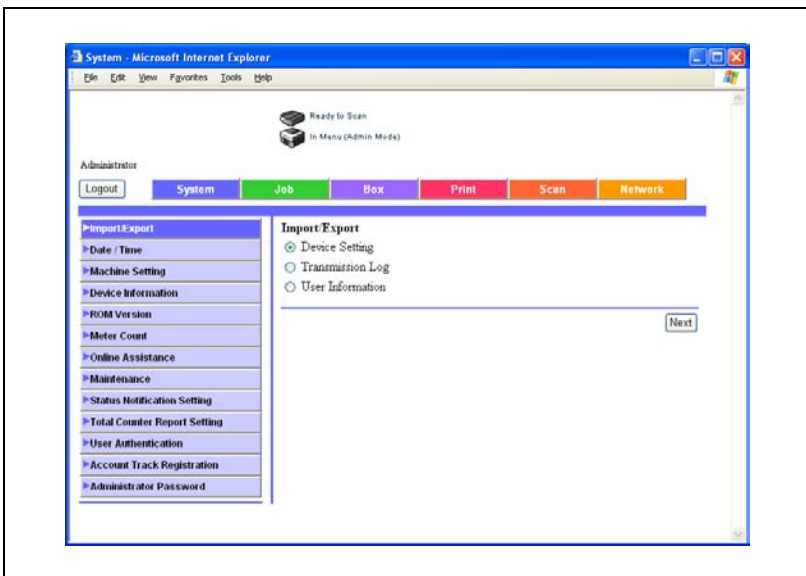



**Reminder**

*If "Prohibit Functions when Auth. Error" in Administrator mode is set to "Mode 2" and an incorrect administrator password is entered the specified number of times, it is no longer possible to enter Administrator mode. For details on the "Prohibit Functions when Auth. Error" parameter, refer to the User manual [Copy Operations].*

*If a screen reading software is used, we recommend selecting "HTML" as the display format.*



## 5.4 User Authentication (User Mode)


### Changing the User Password

The setting can be specified when logged in with user authentication. The password of the currently logged in user can be changed.

The settings that can be specified are described below.

Item	Description
Current Password	Enter the current password.
New Password	Enter the new password (up to 31 characters).
Retype New Password	Re-enter the password for confirmation.

- 1 On the System tab, click [User Authentication].
- 2 Enter the required settings.

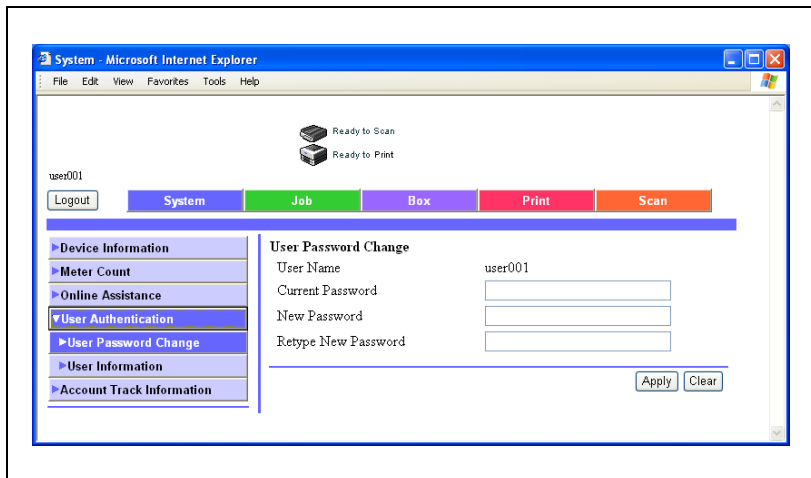


- 3 Click the [Apply] button.
- 4 Click the [OK] button.



## Checking the User Registration Information

The user information can be viewed when logged in with user authentication. The information of the currently logged in user can be checked.

- 1 On the System tab, click [User Information].
- 2 Check the details.

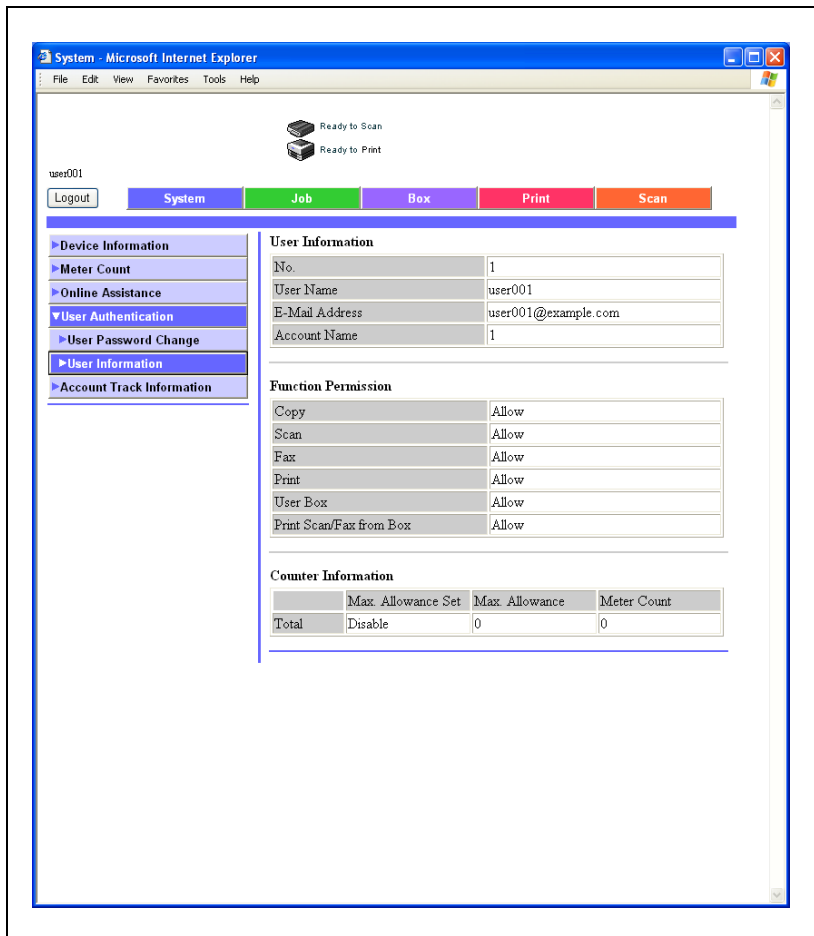




## 5.5 Account Track (User Mode)

You can check the account information when performing account track authentication. The information of the currently logged in account can be checked.

### To check the account track information

- 1 On the System tab, click [Account Track Information].
- 2 Check the information.

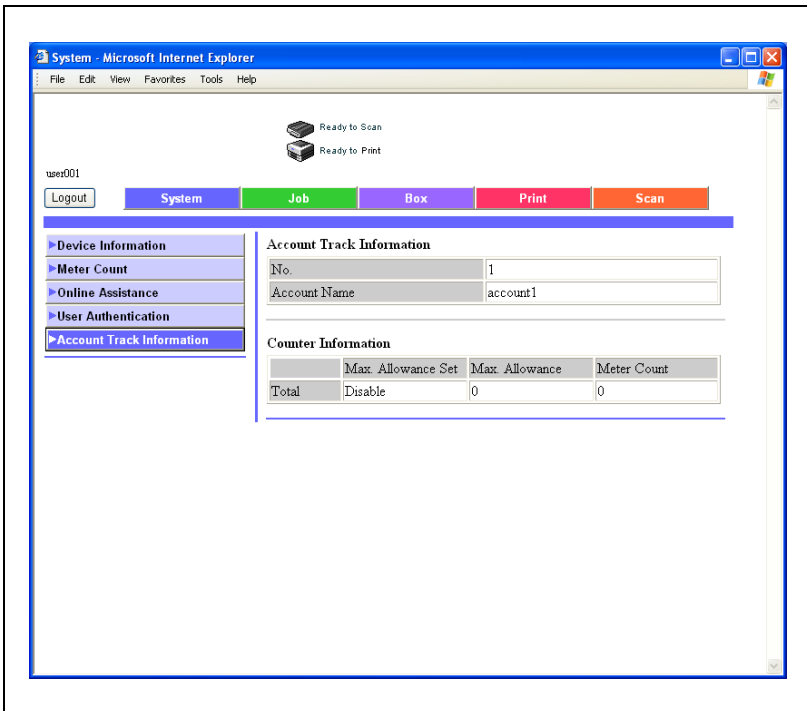



## 5.6 Address Book

### Registering New Destinations

New destinations can be registered for the scanning functions.

The Scan tab appears only when registrations by users are permitted.

#### Registering New Address Books

Click the Scan tab, and then click "Address Book".

Abbreviated destinations can be edited or registered.

The information to be entered is as follows:

When "E-Mail" is selected

Item	Description
Name	Enter the name of the destination (up to 24 characters).
Index	Select the search word for searching destinations.
E-Mail Address	Enter the destination e-mail address (up to 320 characters).

When "FTP" is selected


Item	Description
Name	Enter the name of the destination (up to 24 characters).
Index	Select the search word for searching destinations.
Host Address	Enter the IP address or host name of the destination FTP server (up to 63 characters). When entering the host name, select the "Please check to enter host name." check box.
File Path	Enter the destination file path (up to 96 characters).
User ID	Enter the user ID (up to 47 characters).
Password	Enter the password (up to 31 characters).
anonymous	Select whether to enable "ON" or "OFF".
PASV Mode	Select whether to enable "ON" or "OFF".
Proxy	Select whether to enable "ON" or "OFF".
Port Number	Enter the port number (input range: 1 to 65535, default value: 21).



When "SMB" is selected

Item	Description
Name	Enter the name of the destination (up to 24 characters).
Index	Select the search word for searching destinations.
Host Address	Enter the IP address or host name of the destination computer (up to 255 characters). Enter the host name using capital letters. When entering the host name, select the "Please check to enter host name." check box.
File Path	Enter the destination file path using capital letters (up to 255 characters).
User ID	Enter the user ID of the destination computer (up to 127 characters).
Password	Enter the password used to log on to the destination computer (up to 14 characters).

When "User Box" is selected


Item	Description
Name	Enter the name of the destination (up to 24 characters).
Index	Select the search word for searching destinations.
User Box No.	Enter the destination box number (input range: 1 to 999999999) Click  , and then select the box number from the list.

**Detail**

*User boxes can be used only if the optional hard disk drive is installed.*




A setting edit page appears and the settings can be changed. The items are the same as those used in registration.

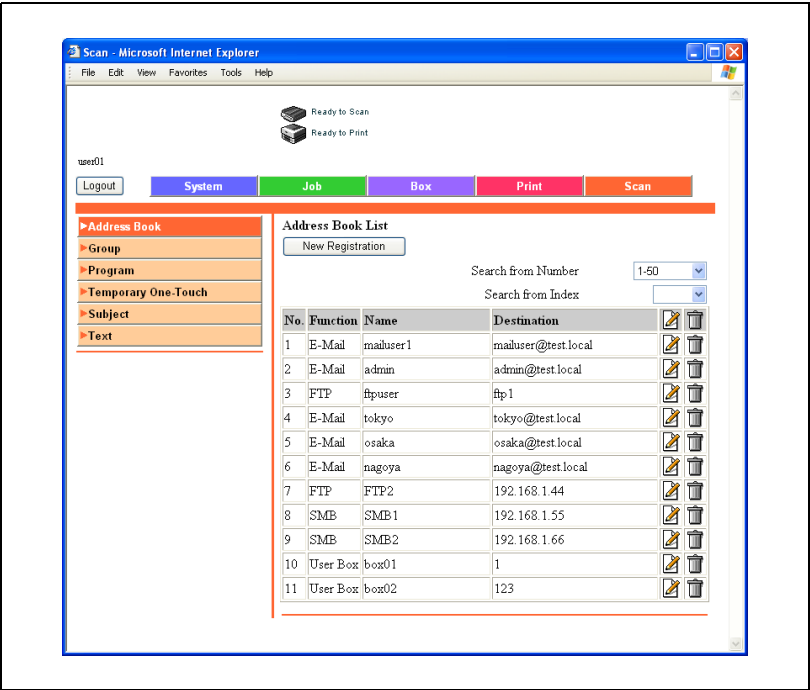




## To register new destinations

- 1 Click [New Registration].  
A page for selecting the transmission mode appears.
- 2 Select the transmission mode and click [Next].  
The registration page appears.

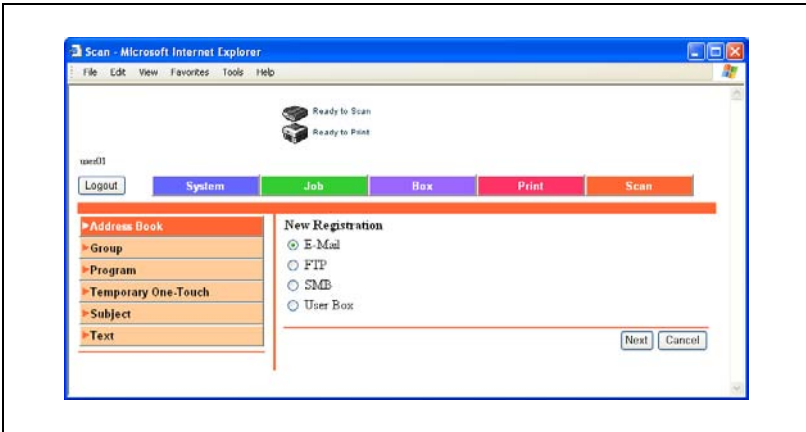


- 3 Enter the settings, and click [Apply].

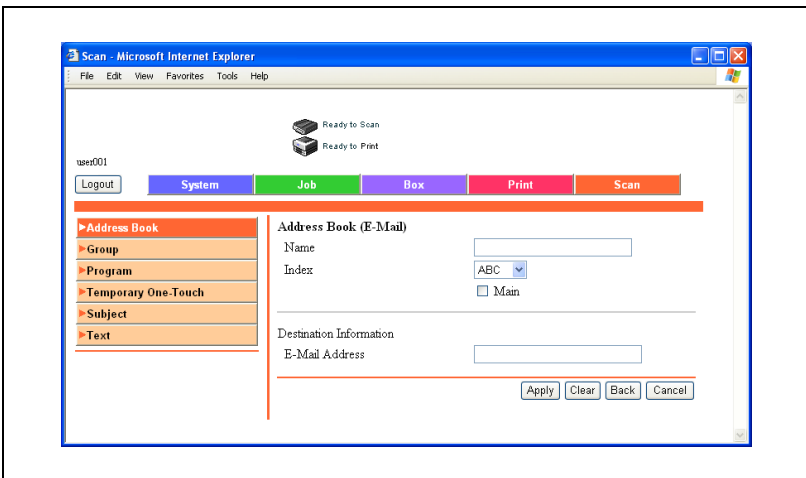




Editing abbreviated destinations


Click  of the address you want to change.

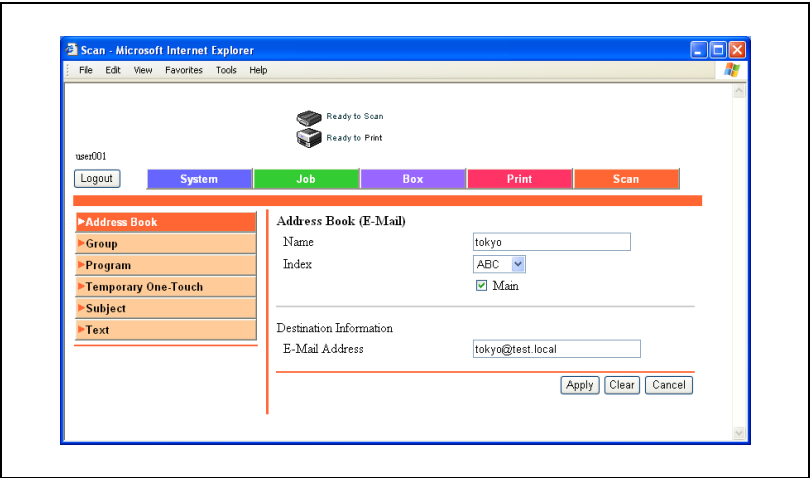



## Deleting the Address Book


- 1 Click  of the address you want to delete.  
A confirmation page appears.
- 2 To delete, click the [OK] button.

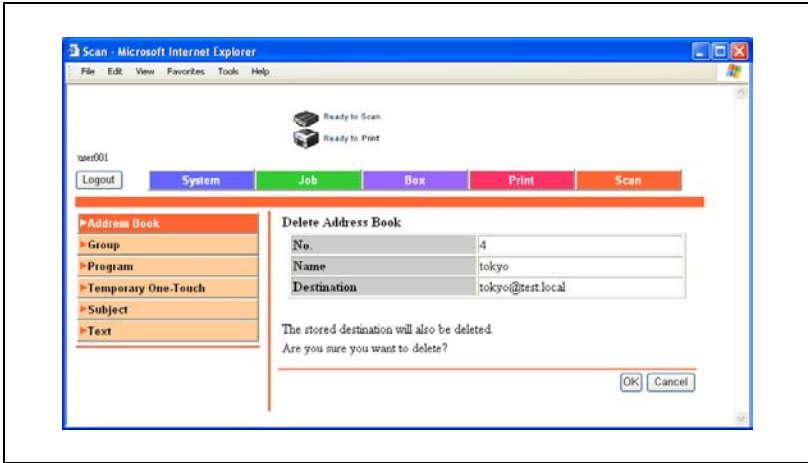



### 5.7 Group Destination

Click the Scan tab, and then click "Group".

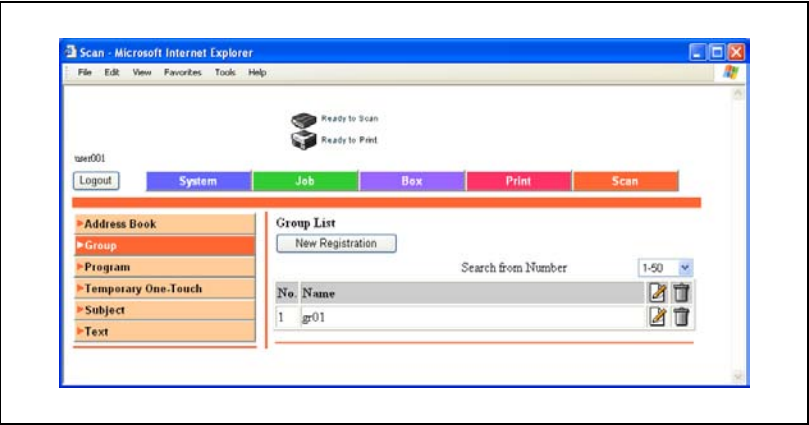


Multiple destinations registered in the abbreviated destination list can be registered as a group.




## To register group destinations


- 1 Click [New Registration].  
The registration page appears.
- 2 Select "Store Scanner", and then click [Next] button.

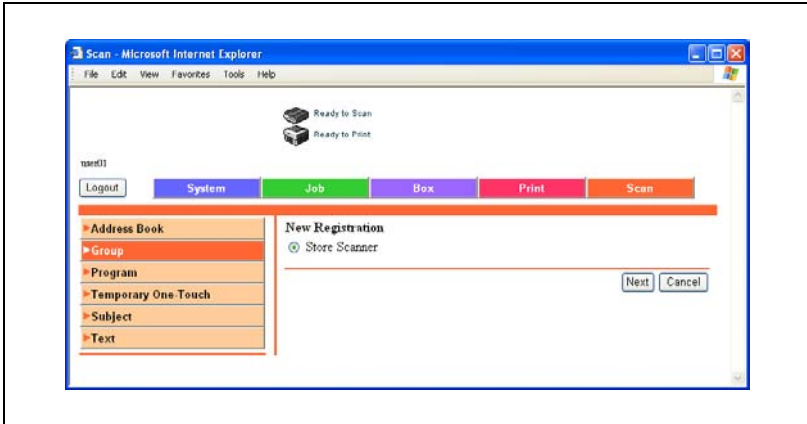


- 3 Enter the Name.

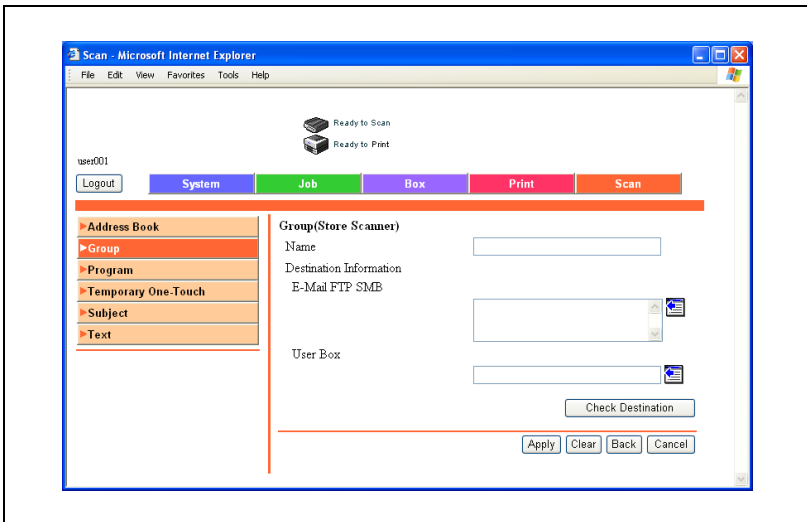



- 4 For each transmission mode, select the destinations.
- Click .
  - Select the desired destinations to be registered to the group from the Abbreviated Destination List, and click [Apply].

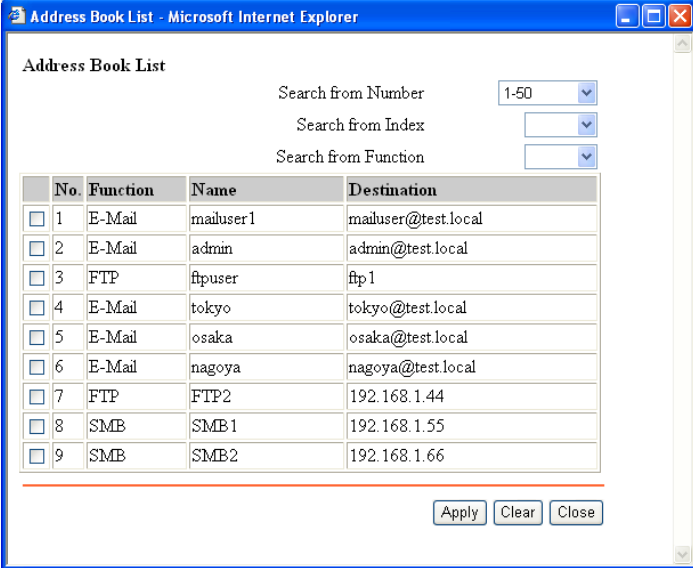

Address Book List

Search from Number

Search from Index

Search from Function

	No.	Function	Name	Destination
<input type="checkbox"/>	1	E-Mail	mailuser1	mailuser@test.local
<input type="checkbox"/>	2	E-Mail	admin	admin@test.local
<input type="checkbox"/>	3	FTP	ftpuser	ftp1
<input type="checkbox"/>	4	E-Mail	tokyo	tokyo@test.local
<input type="checkbox"/>	5	E-Mail	osaka	osaka@test.local
<input type="checkbox"/>	6	E-Mail	nagoya	nagoya@test.local
<input type="checkbox"/>	7	FTP	FTP2	192.168.1.44
<input type="checkbox"/>	8	SMB	SMB1	192.168.1.55
<input type="checkbox"/>	9	SMB	SMB2	192.168.1.66


 



## 5.8 Program Registration

Click the Scan tab, and then click "Program".

The information to be entered is as follows:

When "E-mail: Scan" is selected



Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Select from Address Book	Click  , and then select the destination from the list to display the one-touch lists.
E-Mail Address	Enter the destination e-mail address directly. (up to 320 characters).
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Subject	Specify the subject (Not Specified, 1 to 10). When "Not Specified" was selected, the default title is used. Click  to check the contents.
Text	Specify the text (Not Specified, 1 to 10). When "Not Specified" was selected, the default text is used. Click  to check the contents.
Simplex/Duplex	Select "1-Sided", "2-Sided", or "Cover + 2-Sided".
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Enable/disable the "Separate Scan" function.
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.
Center Erase	Specify the width of the area along the binding that is to be erased.
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.



Item	Description
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.



When "FTP: Scan" is selected



Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Select from Address Book	Click  , and then select the destination from the list to display the one-touch lists.
Direct Input	Directly enter the destination. Specify settings for the following. Host Address File Path User ID Password anonymous PASV Mode Proxy Port Number When entering the host name, select the "Please check to enter host name." check box.
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Simplex/Duplex	Enter the destination e-mail address directly.
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Enable/disable the "Separate Scan" function.
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
E-Mail Notification	The upload destination of the file can be notified to the specified address.
Destination	Click  to select the notification addresses.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.
Center Erase	Specify the width of the area along the binding that is to be erased.



Item	Description
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.



## When "SMB: Scan" is selected

Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Select from Address Book	Click  , and then select the destination from the list to display the one-touch lists.
Direct Input	Directly enter the destination. Specify settings for the following. Host Address (Enter using capital letters.) File Path (Enter using capital letters.) User ID Password When entering the host name, select the "Please check to enter host name." check box.
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Simplex/Duplex	Select "1-Sided", "2-Sided", or "Cover + 2-Sided".
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Enable/disable the "Separate Scan" function.
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
E-Mail Notification	The upload destination of the file can be notified to the specified address.
Destination	Click  , to select the notification addresses.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.



Item	Description
Center Erase	Specify the width of the area along the binding that is to be erased.
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.







When "User Box: Scan" is selected

Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Select from Address Book	Enter the destination e-mail address directly.
Direct Input	Directly enter the destination box number (input range: 1 to 999999999).
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Simplex/Duplex	Select "1-Sided", "2-Sided", or "Cover + 2-Sided".
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Select "ON" or "OFF".
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
E-Mail Notification	The upload destination of the file can be notified to the specified address.
Destination	Click the list button to select the notification addresses.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.
Center Erase	Specify the width of the area along the binding that is to be erased.
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.



When "Group: Scan" is selected


Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Group	Click  , and then select a group destination from the list to display the group number.
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Subject	Specify the subject (Not Specified, 1 to 10). When "Not Specified" was selected, the default title is used. Click  to check the contents.
Text	Specify the text (Not Specified, 1 to 10). When "Not Specified" was selected, the default text is used. Click  to check the contents.
Simplex/Duplex	Select "1-Sided", "2-Sided", or "Cover + 2-Sided".
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Select "ON" or "OFF".
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
E-Mail Notification	The upload destination of the file can be notified to the specified address.
Destination	Click  to select the notification addresses.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.
Center Erase	Specify the width of the area along the binding that is to be erased.




Item	Description
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.



## When "No Destination (Store Scanner)" is selected

Item	Description
No.	Enter the registration number.
Name	Enter the registration name (up to 24 characters).
Resolution	Select the resolution.
File Type	Select the file format.
Scan Setting	Select the unit of the data to be saved.
Simplex/Duplex	Select "1-Sided", "2-Sided", or "Cover + 2-Sided".
Original Type	Select the quality of the original such as text or photo.
Separate Scan	Select "ON" or "OFF".
Density	Adjust the density.
Zoom	Select the enlargement or reduction ratio for scanning. Select a preset zoom ratio or specify separate ratios for the X and Y directions.
Scan Size	Select the original size ("Auto", "Standard Size", "Custom Size"). For "Custom Size", specify the horizontal and vertical scanning sizes.
E-Mail Notification	The upload destination of the file can be notified to the specified address.
Destination	Click  to select the notification addresses.
File Name	Enter the file name (up to 30 characters).
Original Direction	Select the orientation of the original document.
Bind	Select the original binding position.
Special Original	Select whether the document contains mixed page sizes or is Z-folded.
Book Scanning	Select whether or not to enable book scanning. If "ON" is selected, the scanning method and binding position are specified.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Erase	Specify the width of the perimeter of the document to be erased.
Booklet Pagination	Select whether or not to enable page scanning. If "ON" is selected, the binding position is specified.
Center Erase	Specify the width of the area along the binding that is to be erased.
Neg-/Positive Reverse	Select whether or not the black and white areas of the document are reversed in the scan.
Non-Image Area Erase	Select whether or not the shadows along the edges of a document are erased from the scan.



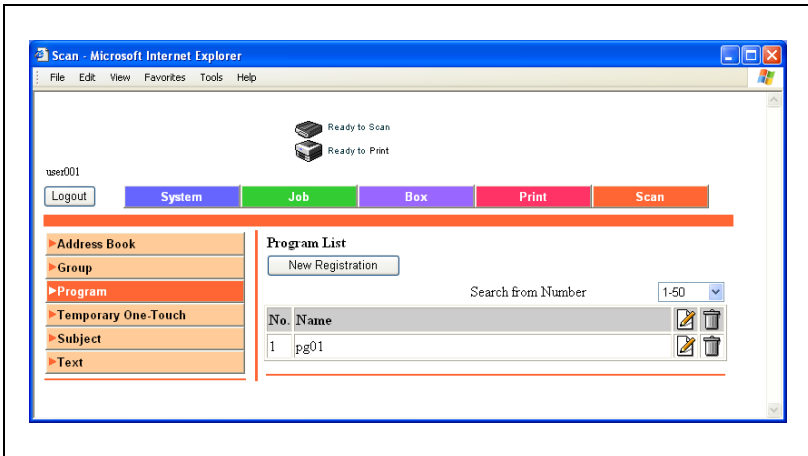


Multiple destinations registered in the abbreviated destination list can be registered as a program.



**To register new destinations**

- 1 Click [New Registration].  
A page for selecting the transmission mode appears.
- 2 Select the transmission mode and click [Next].  
The registration page appears.

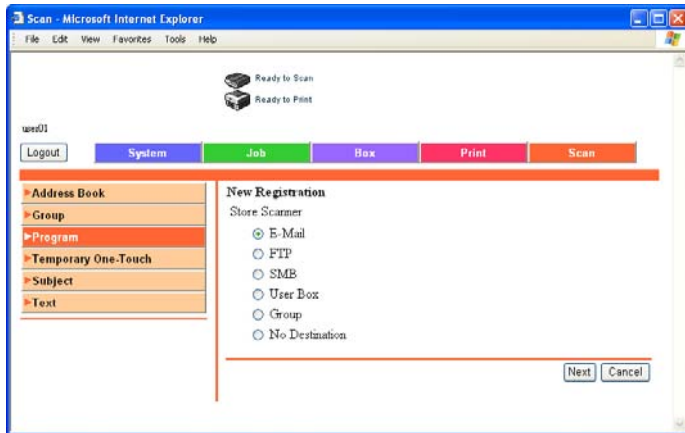



### 3 Enter the settings, and click [Apply].

Scan - Microsoft Internet Explorer

Ready to Scan  
Ready to Print

Public  
Logout System Job Box Print Scan

Address Book  
Group  
Program  
Temporary One-Touch  
Subject  
Test

**Program (F-Mail-Scan)**  
No.   
Name

**Destination Information**  
☒ Select from Address Book    
☐ Direct Input  
E-Mail Address

**Basic Setting**  
Resolution   
File Type   
Scan Setting   
Subject    
Text    
Simplex/Duplex    
Original Type   
Separate Scan   
Density   
Zoom  
☒ Fixed Zoom   
☐ XY Zoom  
X   
(0.750-4.000) 0.001  
Y   
(0.750-4.000) 0.001  
Scan Size  
☒ Auto  
☐ Standard Size   
Feed Direction   
☐ Custom Size  
X  +   $1/16$  inch (2 - 17)  
Y  +   $1/16$  inch (2 - 11  $1/16$ )

**Application Setting 1**  
File Name

**Application Setting 2**  
Original Direction   
Bind   
Special Original   
Book Scanning   
Method   
Bind Direction   
Booklet Pagination   
Bind Original   
Erase   
Top  +   $1/16$  inch (0 - 2)  
Left  +   $1/16$  inch (0 - 2)  
Bottom  +   $1/16$  inch (0 - 2)  
Right  +   $1/16$  inch (0 - 2)  
Center Erase   
 +   $1/16$  inch ( $1/16 - 1 1/16$ )  
Neg./Positive Reverse   
Non-Image Area Erase


Apply Clear Back Cancel



## 5.9 Temporary One-Touch Registration

Click the Scan tab, and then click "Temporary One-Touch".


Temporary destinations can be registered.

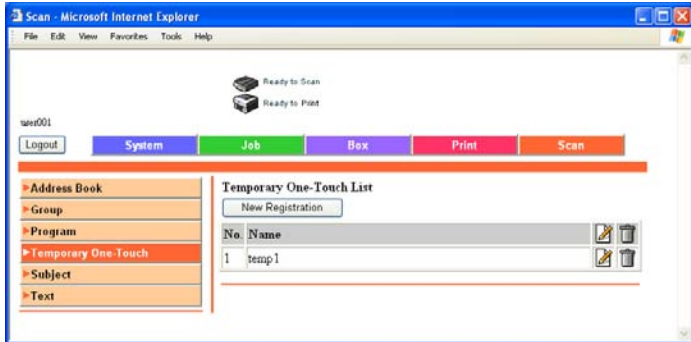



## To register temporary destinations

- 1 Click [New Registration].  
A page for selecting the transmission mode appears.
- 2 Select the transmission mode and click [Next].  
The registration page appears.

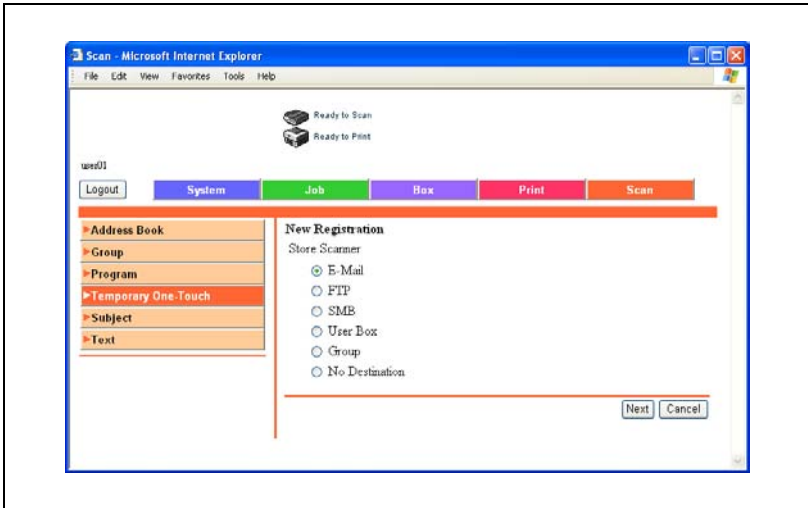

- 3 Enter the settings, and click [Apply].  
The details of the settings are the same as those for program registrations.  
For details, see "Program Registration" on page 5-32.



### Note


*To specifying a registered temporary destination, select the address from [Index List] — [Temporary One-Touch] on the control panel of this machine.*



### 5.10 Subject Registration

Click the Scan tab, and then click "Subject".

Up to 10 subjects that can be used when sending e-mail can be registered.

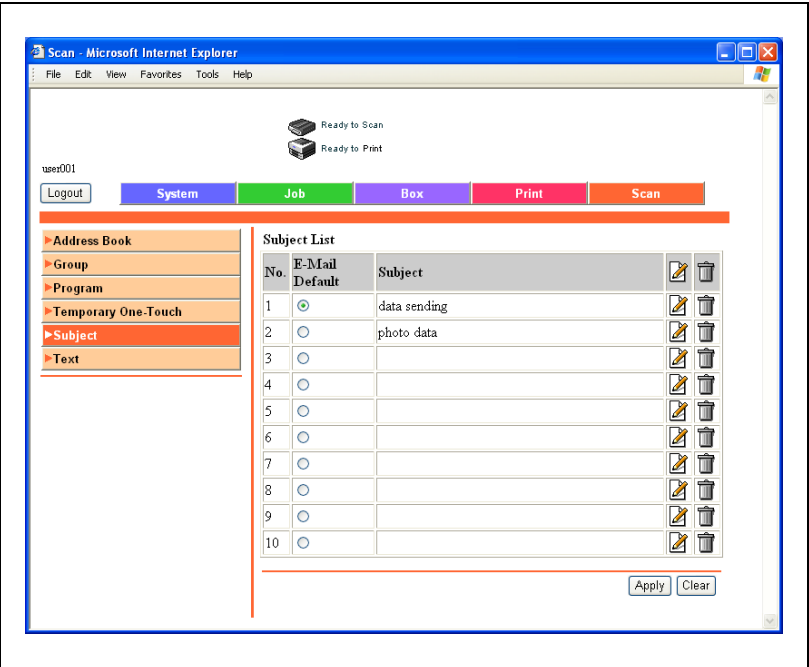




## To register the subject


When sending e-mail with a fixed subject

✓ Click "E-Mail Default" to select it.

1 Click  beside the subject to be registered or edited.

The registration page appears.

2 Enter the subject, and click [Apply].

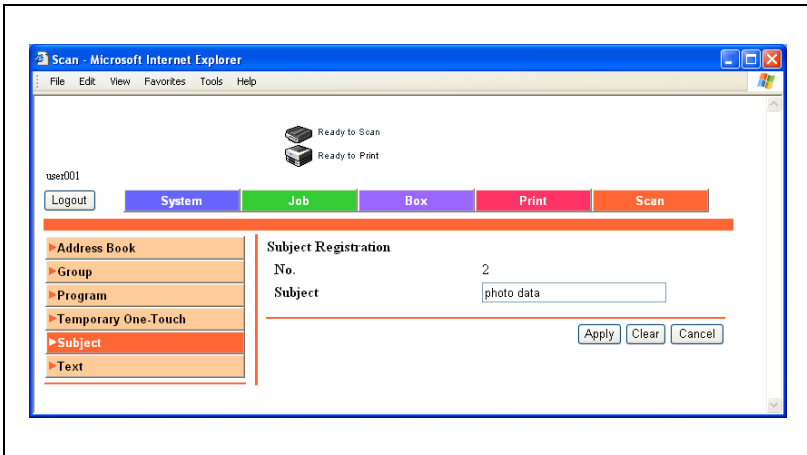




### 5.11 Text Registration

Click the Scan tab, and then click "Text".

Up to 10 text messages that can be used when sending e-mail can be registered.

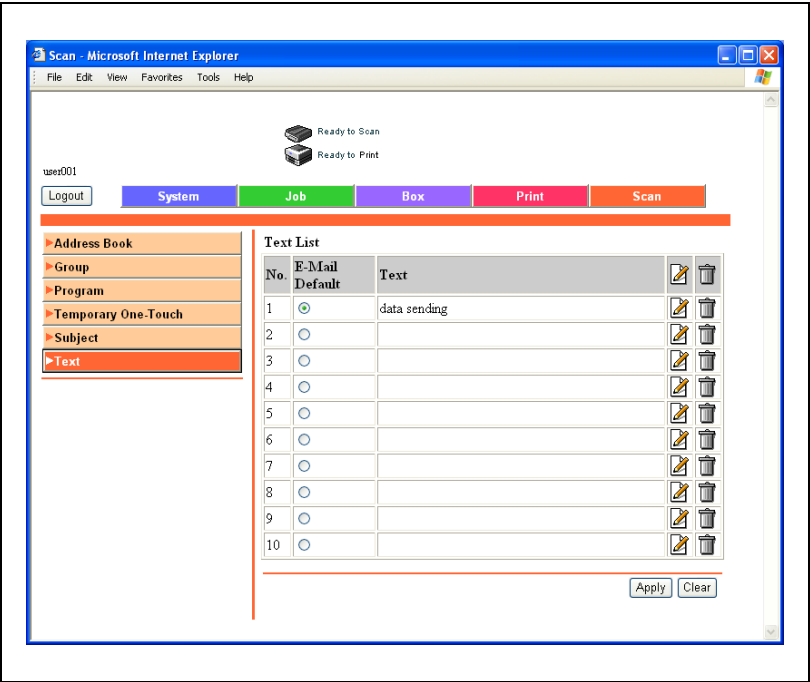




## To register text


When sending e-mail with a fixed text message

✓ Click "E-Mail Default" to select it.

1 Click  beside the text to be registered or edited.

The registration page appears.

2 Enter the text, and click [Apply].

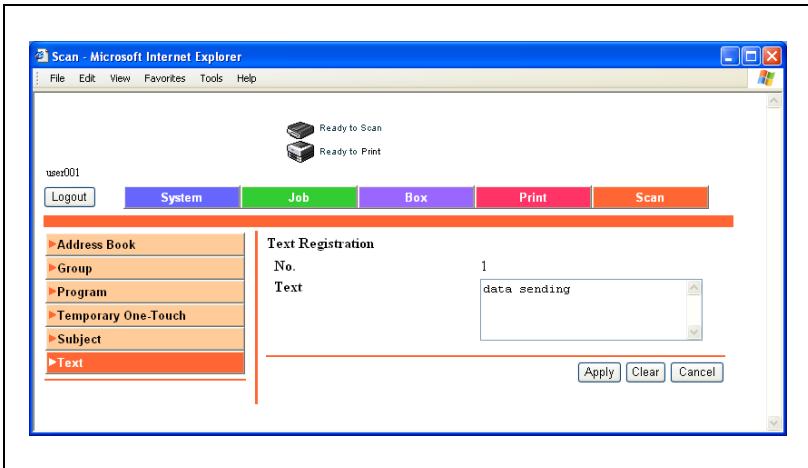



## 5.12 Administrator Mode

In Administrator mode, you can perform system configuration of the machine. Six tabs (System, Job, Box, Print, Scan and Network) are available.

For the procedure to log on to Administrator mode, refer to "Logging On to Administrator Mode" on page 5-17.

### Basic Operation

- 1** Click the appropriate tab and select the function from the menu on the left.
- 2** Set the items that appear through direct input or by selecting from the drop-down list.
- 3** Click [Apply] to apply the settings.




## 5.13 Time Adjustment Setting

Select whether the date and time of the machine can be adjusted through acquisition from the NTP server.

### To adjust the time

- 1 On the System tab, click [Date/Time].
- 2 Click [Time Adjustment Setting].

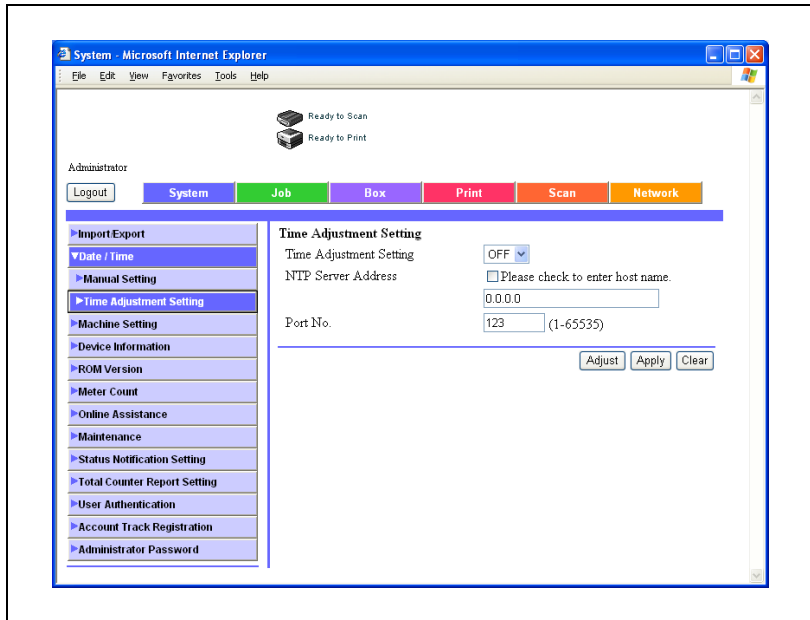

- 3 Specify settings for the following.
- 4 Click the [Apply] button.
  - To immediately apply the adjustment, click the [Adjust] button.

Item	Description
Time Adjustment Setting	Select whether or not the time is automatically adjusted through NTP.
NTP Server Address	Enter the NTP server address (up to 255 characters in the format "****.***.***.***" or FQDN). Only symbols "-" and "." can be used.
Port No.	Type in the NTP server port number. (Range: 1 to 65535)




## 5.14 User Authentication (Administrator Mode)

### User Registration

You can specify the setting when performing user authentication. Register the users that can log in.


The settings that can be specified are described below.

Item	Description
No.	Enter the user registration number.
User Name	Enter the user name.
E-Mail Address	Enter the user e-mail address.
User Password	Enter the user password.
Retype User Password	Re-enter the password for confirmation.
Account Name	When performing account track, select the name of the account. Click  and select the name from the list.
Function Permission	Specify whether to allow the operations described below. Copy Scan Fax Print User Box Print Scan/Fax from Box
Max. Allowance Set	Specify whether to enable the limit of the number of sheets used for copying and printing. If "Enable" is specified, enter the maximum value (between 1 and 99999999).




**To register a user**

- 1 On the System tab, click [User Authentication].
- 2 Click the [New Registration] button.

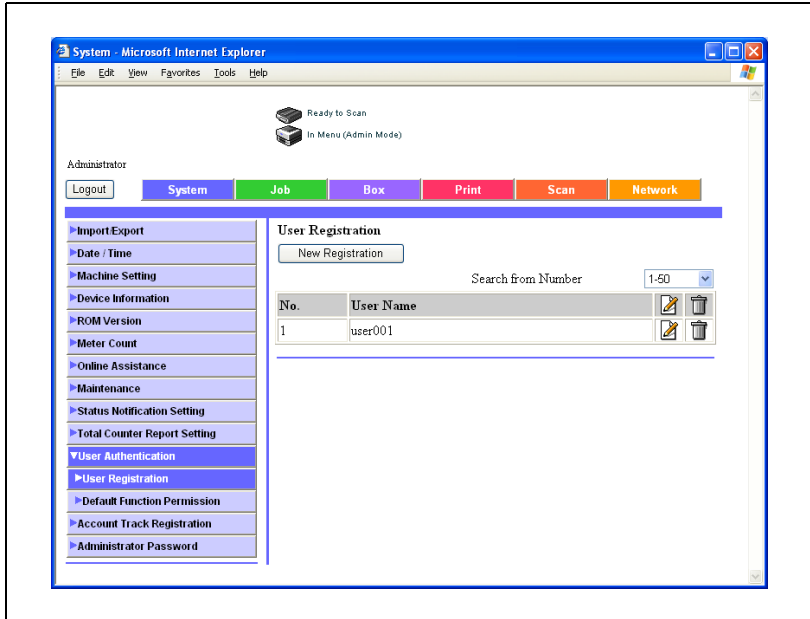



3 Specify the required settings.

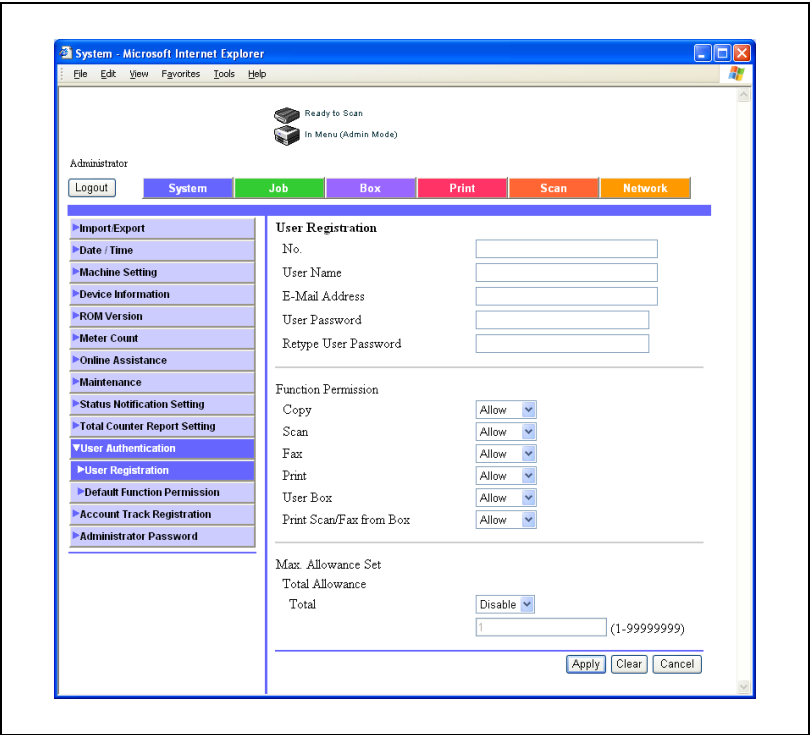

4 Click the [Apply] button.

5 Click the [OK] button.




## Checking or Changing the Registered User Information


You can check or change the registered user information. The following settings can be specified.

Item	Description
No.	Displays the user registration number.
User Name	Enter the user name.
E-Mail Address	Enter the user e-mail address.
Change User Password	Select when changing the user password.
User Password	Enter the user password.
Retype User Password	Re-enter the password for confirmation.
Function Permission	Specify whether to allow the operations described below. Copy Scan Fax Print User Box Print Scan/Fax from Box
Max. Allowance Set (Total Allowance)	Specify whether to enable the limit of the number of sheets used for copying and printing. If "Enable" is specified, enter the maximum value (between 1 and 99999999).



To check or change the registered user information

- 1 On the System tab, click [User Authentication].
- 2 Click  in the user list for the user you want to check.

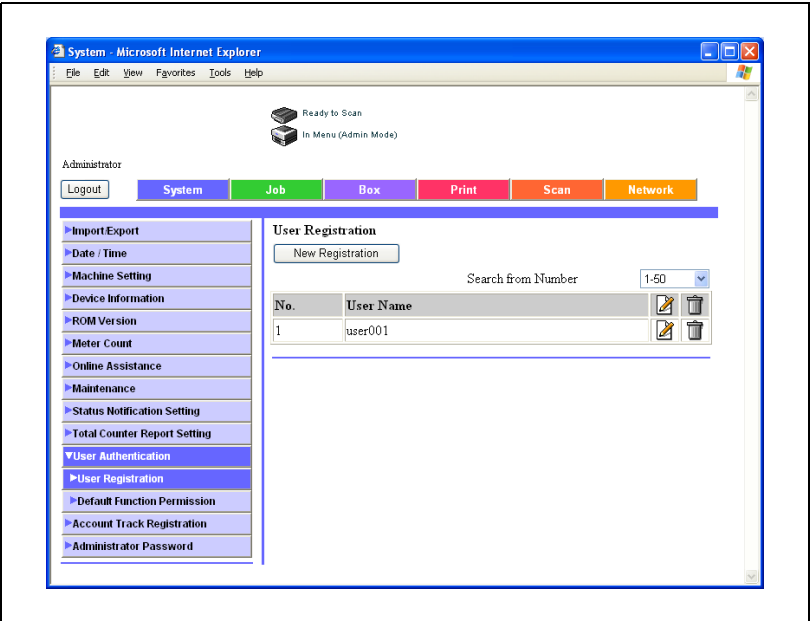



### 3 Check the registration information and change it as necessary.

System - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Ready to Scan  
In Menu (Admin Mode)

Administrator

Logout System Job Box Print Scan Network

▶ Import/Export  
 ▶ Date / Time  
 ▶ Machine Setting  
 ▶ Device Information  
 ▶ ROM Version  
 ▶ Meter Count  
 ▶ Online Assistance  
 ▶ Maintenance  
 ▶ Status Notification Setting  
 ▶ Total Counter Report Setting  
 ▼ User Authentication  
 ▶ User Registration  
 ▶ Default Function Permission  
 ▶ Account Track Registration  
 ▶ Administrator Password

#### User Registration

No. 1

User Name user001

E-Mail Address user001@example.com

☐ User Password is changed.

User Password

Retype User Password

#### Function Permission

Copy Allow

Scan Allow

Fax Allow

Print Allow

User Box Allow

Print Scan/Fax from Box Allow

#### Max Allowance Set

Total Allowance

Total Disable


0 (1-99999999)


Apply Clear Cancel

### 4 Click the [Apply] button.




To delete a registered user

- 1 On the System tab, click [User Authentication].
- 2 Click  in the user list for the user you want to delete.

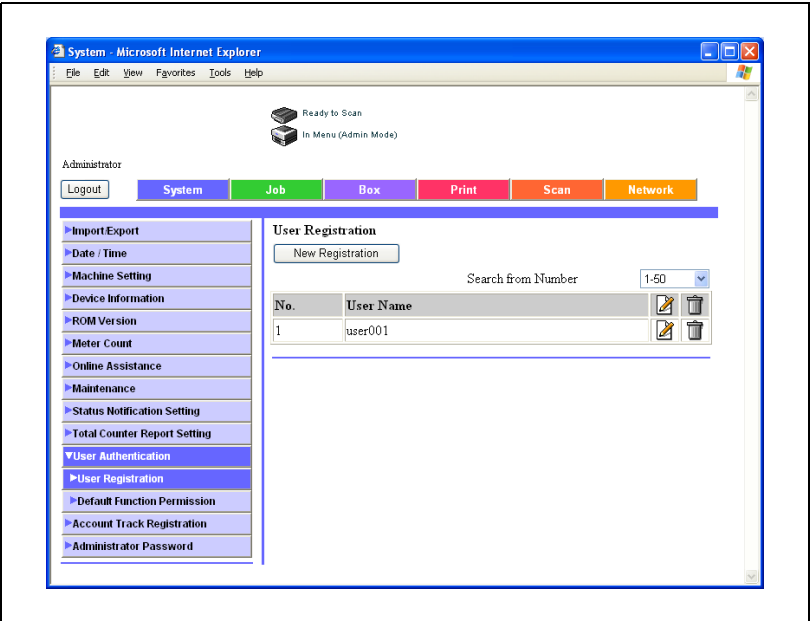



- 3 Check the message, and then click the [OK] button.

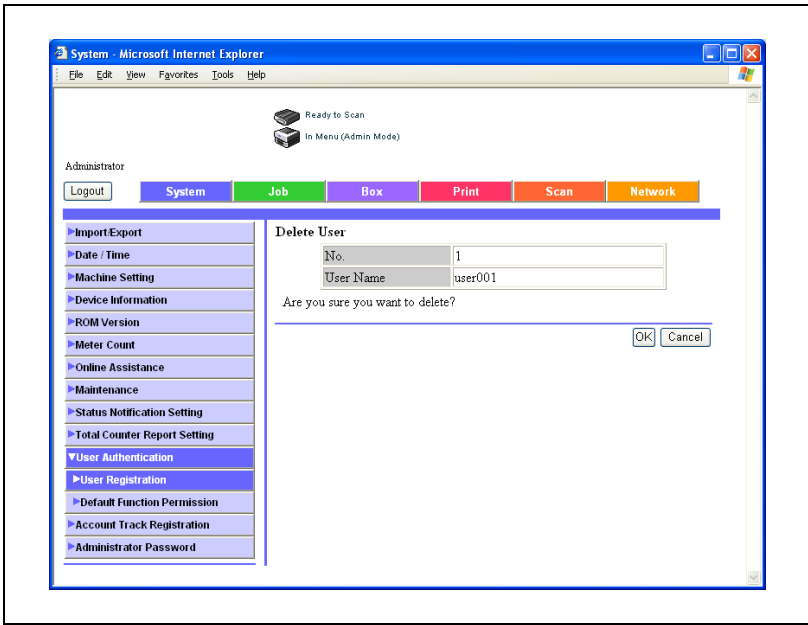



**Default Function Permission**

You can specify the permissions for the operating functions for all registered users.


The settings that can be specified are described below.

Item	Description
Copy	Specify whether to allow the copy function.
Scan	Specify whether to allow the scan function.
Fax Specify whether to allow the fax function	Specify whether to allow faxing.
Print	Specify whether to allow the print function.
User Box	Specify whether to allow the save user box function and the edit user box function.
Print Scan/Fax from Box	Select whether to allow printing of documents saved in boxes during scanning or when a fax is sent or received.



**To specify the default function permission settings**

- 1 On the System tab, click [User Authentication].
- 2 Click [Default Function Permission].
- 3 Specify the required settings.

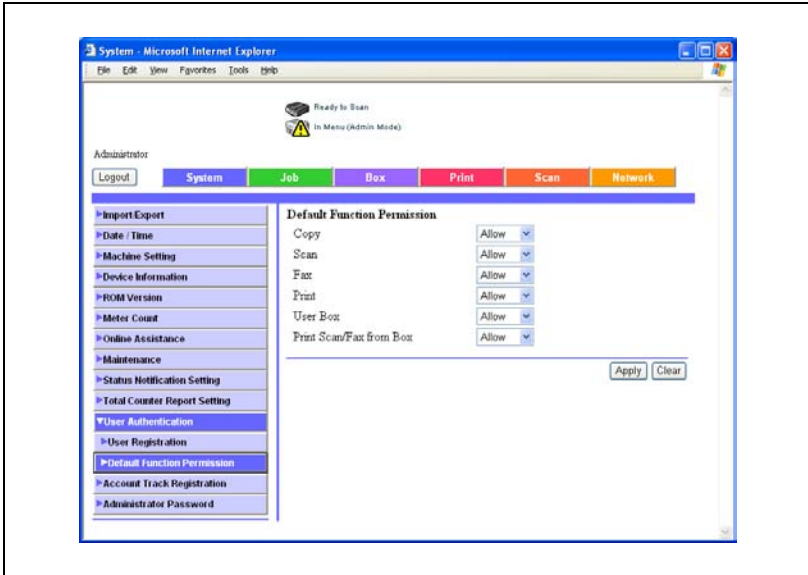

- 4 Click the [Apply] button.
- 5 Click the [OK] button.



## 5.15 Account Track Registration (Administrator Mode)

### Account Track Registration

You can specify the settings when performing account track authentication. Register the account that can log in.


The settings that can be specified are described below.

Item	Description
No.	Enter the account registration number.
Account Name	Enter the account name (up to 8 characters).
Password	Enter the account password (up to 8 characters).
Retype Password	Re-enter the password for confirmation.
Max. Allowance Set	Specify whether to enable the limit of the number of sheets used for copying and printing. If "Enable" is specified, enter the maximum value (between 1 and 99999999).




## To register an account

- 1 On the System tab, click [Account Track Registration].
- 2 Click the [New Registration] button.

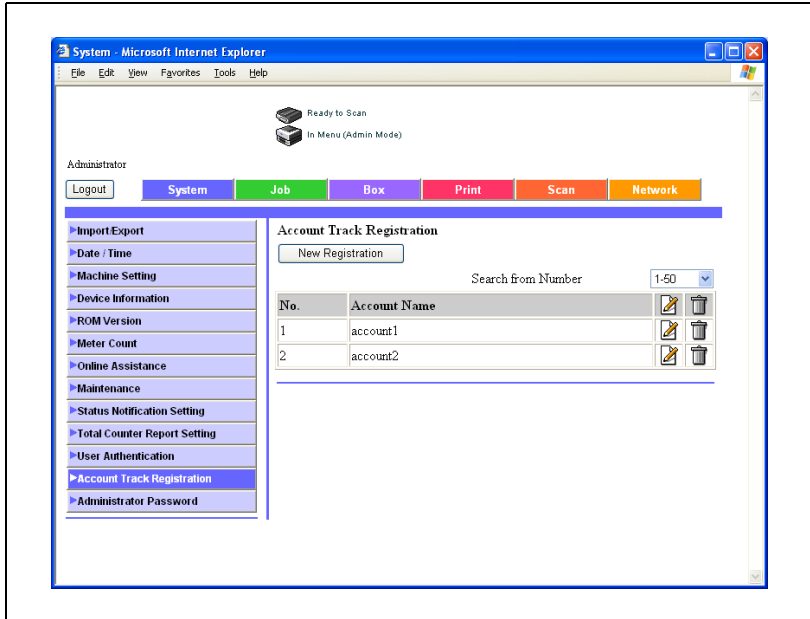



3 Specify the desired settings.

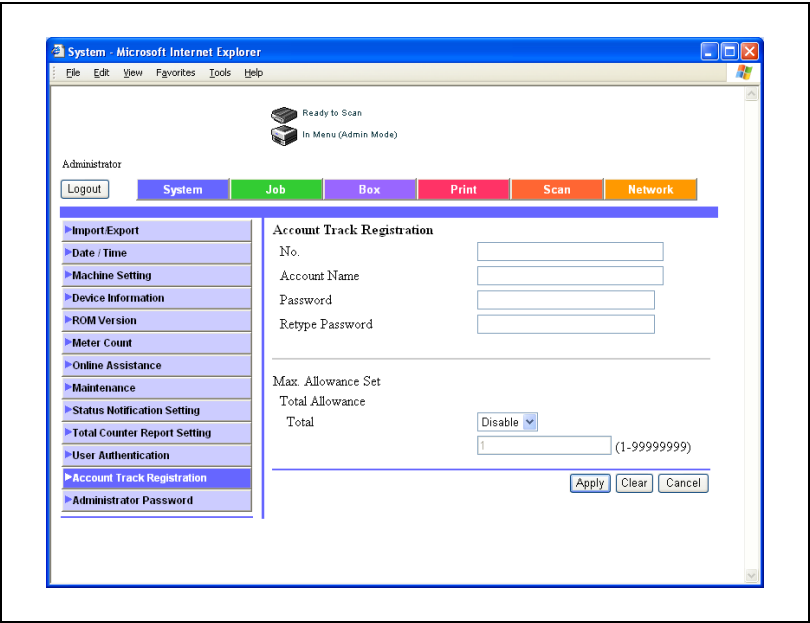

4 Click the [Apply] button.

5 Click the [OK] button.




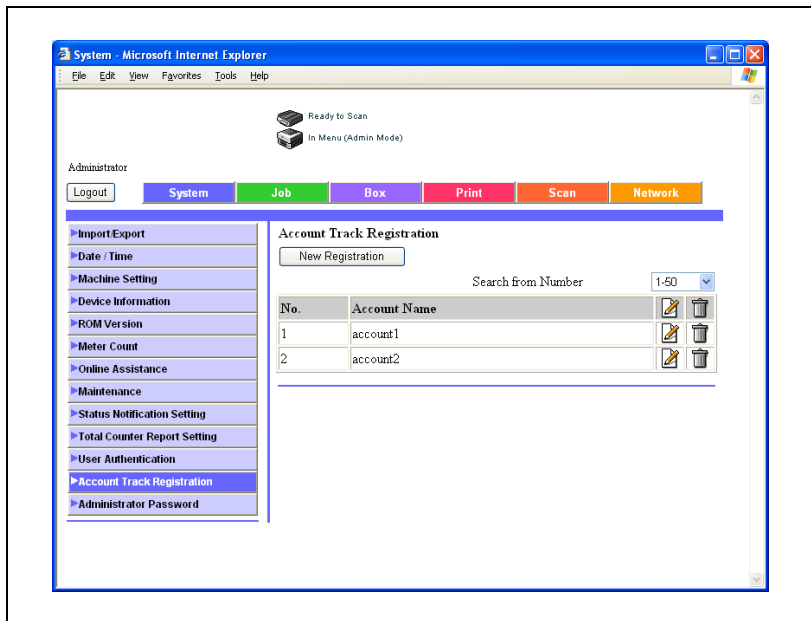
## Checking or Changing the Registered Account Information

The settings that can be checked or changed are described below.

Item	Description
No.	Displays the account registration number.
Account Name	Enter the account name (up to 8 characters).
Password is changed.	Select when changing the password.
Password	Enter the new account password (up to 8 characters).
Retype Password	Re-enter the password for confirmation.
Max. Allowance Set (Total Allowance)	Specify whether to enable the limit of the number of sheets used for copying and printing. If "Enable" is specified, enter the maximum value (between 1 and 99999999).


### To check or change the registered account information

- 1 On the System tab, click [User Authentication].
- 2 Click  in the account list for the account you want to check.






3 Check the registration information and change it as necessary.

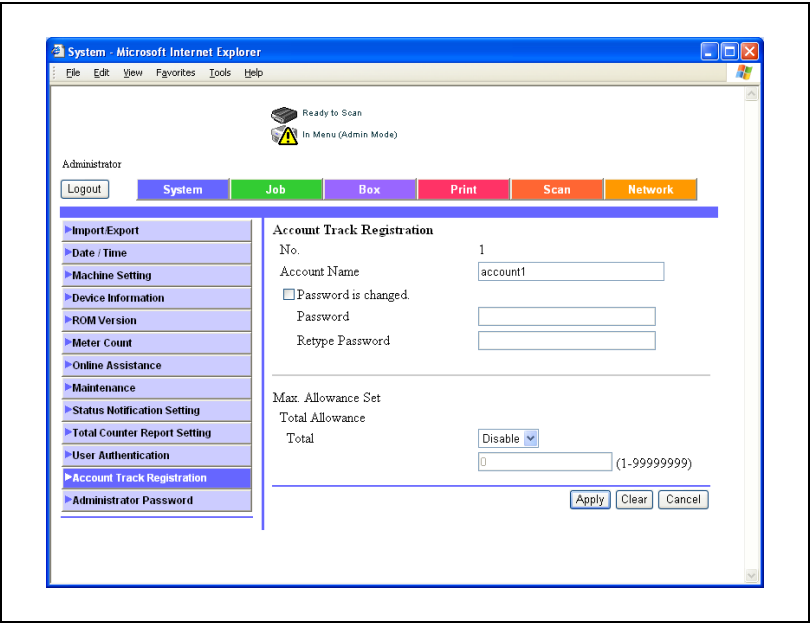


4 Click the [Apply] button.




**To delete registered accounts**

- 1 On the System tab, click [User Authentication].
- 2 Click  in the account list for the account you want to delete.

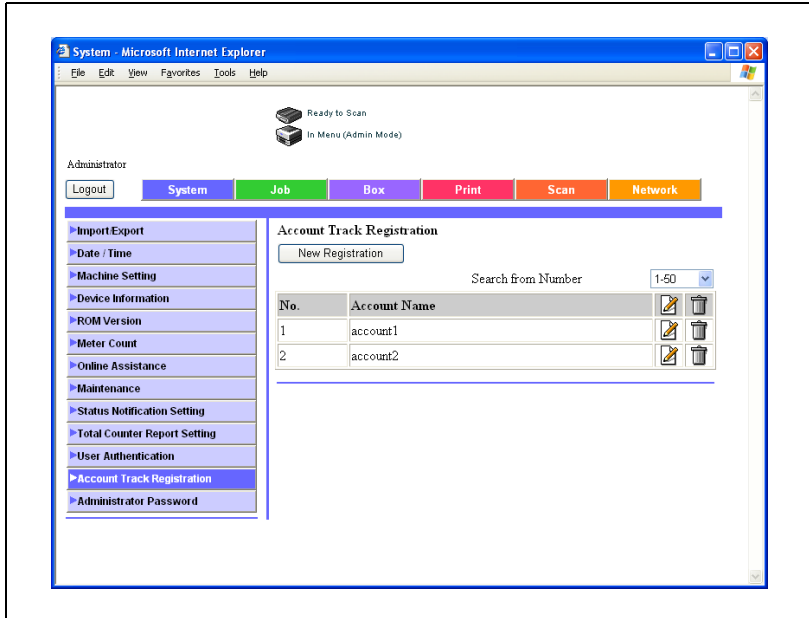



3 Check the message, and then click the [OK] button.

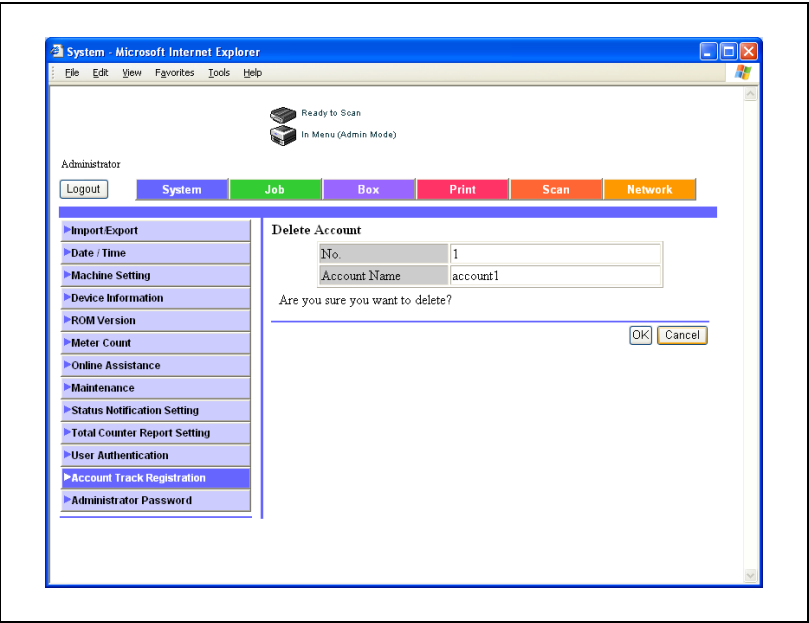



## 5.16 Administrator Password

The administrator password can be changed.




### Detail

*The use of an application registered is available only when the following two conditions are met.*

### To change the administrator password

- 1 On the System tab, click [Administrator Password].
- 2 Type in the new administrator password, and then click the [Apply].

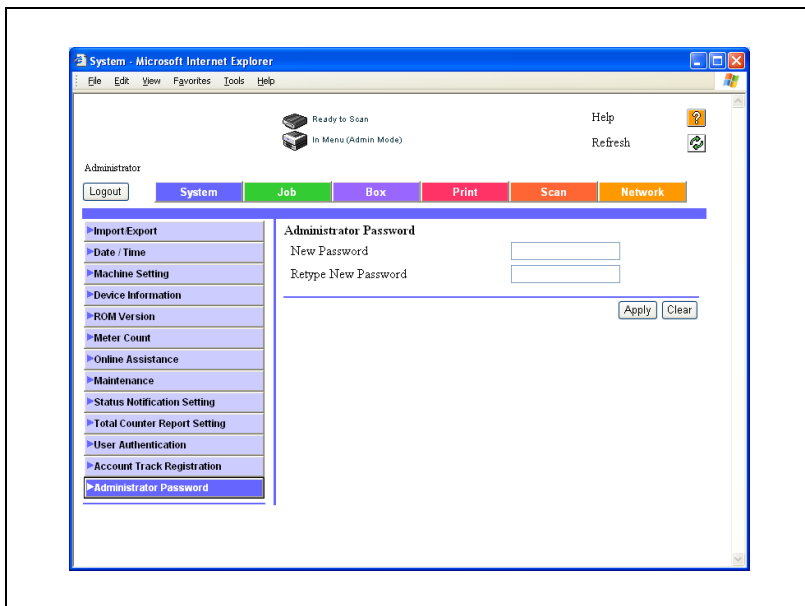



### 5.17 Application Registration

When using an application, such as Right Fax Server that is registered on an external server, you can register the settings and server address of the application. By registering an application and server, you can automatically connect to and use the server of the application that was selected.



**Note**

*The use of an application registered is available only when the following two conditions are met.*

*When the fax kit is not installed.*

*When Internet fax is disabled.*

#### Registering an Application

You can register up to 5 applications and servers in Application Registration. You can specify settings such as custom items according to the contents of the registered application. The following templates are available in PageScope Web Connection. Various custom items have been pre-specified for each application in the templates.



**Note**

*When not using a template, specify the details of the custom items manually.*

For Walk Up Fax

No.	Button name	Function name	Keyboard type	Default value	Option setting
1	Sender Name (CS)	Name	ASCII	Walkup	-
2	FAX Number (CS)	PersonalFaxNumber	ASCII	-	-
3	TEL Number (CS)	PersonalVoiceNumber	ASCII	-	-
4	Subject	Subject	ASCII	-	-
5	Billing Code 1	BillingCode1	ASCII	-	-
6	Billing Code 2	BillingCode2	ASCII	-	-



## For Fax with Account

No.	Button name	Function name	Keyboard type	Default value	Option setting
1	Sender Name (CS)	Name	ASCII	-	-
2	User ID	ID	ASCII	Walkup	-
3	Password	Password	ASCII	-	-
4	Password Auth#	Authentication	-	-	None
5	Subject	Subject	ASCII	-	-
6	Billing Code 1	BillingCode1	ASCII	-	-
7	Billing Code 2	BillingCode2	ASCII	-	-
8	CoverSheet Type	CoverSheet	ASCII	-	-
9	Hold For Preview	HoldForPreview	-	-	False

## For Secure Docs

No.	Button name	Function name	Keyboard type	Default value	Option setting
1	User ID	ID	ASCII	Walkup	-
2	Password	Password	ASCII	-	-
3	Password Auth#	Authentication	-	-	None
4	Subject	Subject	ASCII	-	-
5	Billing Code 1	BillingCode1	ASCII	-	-
6	Billing Code 2	BillingCode2	ASCII	-	-
7	CoverSheet Type	CoverSheet	ASCII	-	-
8	Document PW	DocumentPassword	ASCII	-	-
9	Delivery Method	Delivery	-	-	Secure



For Certified Delivery


No.	Button name	Function name	Keyboard type	Default value	Option setting
1	User ID	ID	ASCII	Walkup	-
2	Password	Password	ASCII	-	-
3	Password Auth#	Authentication	-	-	None
4	Subject	Subject	ASCII	-	-
5	Billing Code 1	BillingCode1	ASCII	-	-
6	Billing Code 2	BillingCode2	ASCII	-	-
7	CoverSheet Type	CoverSheet	ASCII	-	-
8	Document PW	DocumentPassword	ASCII	-	-
9	Delivery Method	Delivery	-	-	Certified

New Registration Items of an Application

When registering an application, the items that can be input are described below.

Item	Description
No.	Displays the application registration number that was selected.
Application Name	Enter the application name (up to 16 characters).
Host Address	Enter the host address of the server that is registered to the application (up to 15 characters).
File Path	Enter the application file path (up to 96 characters).
User ID	Enter the user ID for logging in to the server (up to 47 characters).
Password	Enter the password for logging in to the server (up to 31 characters).
anonymous	Select whether to enable anonymous.
PASV Mode	Select whether to enable the PASV mode.
Proxy	Select whether to enable proxy.
Port No.	Enter the port number (input range: 1 to 65535).

In addition, enter the settings described below to specify custom items.

Item	Description
Custom Item List	Displays the custom items, button name, and default value if a template was selected. Click  of the item to be added or changed.



You can specify the details of each function button as described below.

Item	Description
No.	Displays the number of the item that was selected.
Button Name	Enter the button name (up to 16 characters).
Function Name	Select ID, Name, GeneralFaxNumber, GeneralVoiceNumber, PersonalFaxNumber, PersonalVoiceNumber, Password, Authentication, Subject, DelaySendDateTime, BillingCode1, BillingCode2, CoverSheet, DocumentPassword, Delivery, or HoldForPreview as the function name.
Message on Panel	Enter the name to be displayed on the MFP panel (up to 32 characters).
Display Method	Select Enable, Enable Function (MFP Panel Input Required), Disable, or Do Not Display as the display method.
Default Value	Enter the default value. To hide the default value, select "Input string shown as *****".
Keyboard Type	Select ASCII as the keyboard type.
Options (When Authentication is enabled.)	Select None or Password.
Options (When Delivery is enabled.)	Select Normal, Secure, Certified, and Secure Certified.
Options (When Hold For Preview is enabled.)	Select Yes or No.
Input Type (When DelaySendDateTime is enabled.)	Select Year/Month/Day/Hour/Minute.
Default (When DelaySendDateTime is enabled.)	Select Device Time or Not Specify.




#### Note

*The number of characters that can be input in the default value may vary depending on the function that was selected.*




## To register an application

- 1 Select the application to be registered and click the [Registration/Edit] button.
  - "Not Registered" is displayed for applications that are not registered.

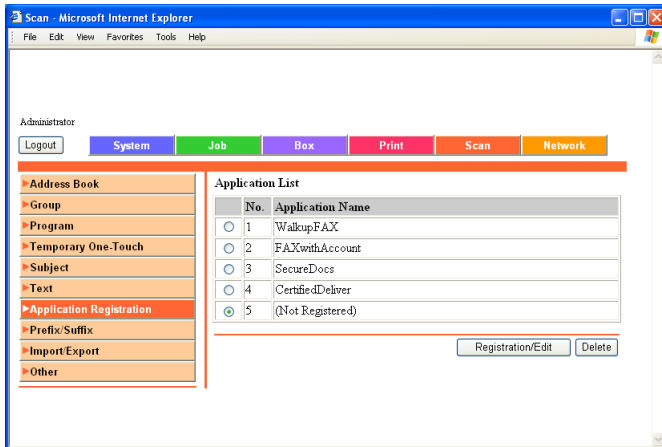

- 2 Select the template type, and then click the [Next] button.

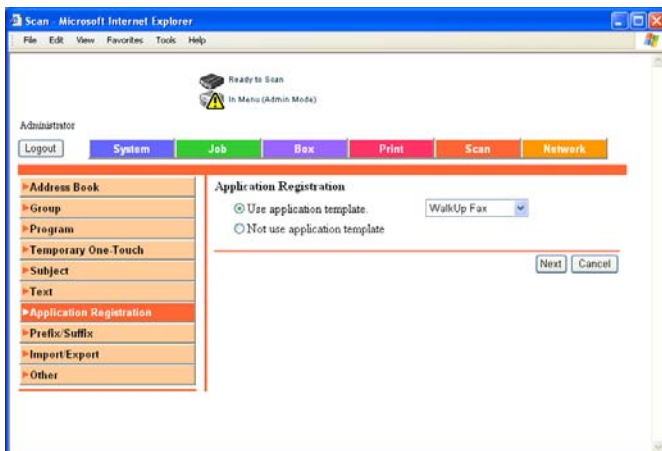



### 3 Specify the application settings, and then click the [Next] button.

Scan - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Ready to Scan  
In Menu (Admin Mode)

Administrator

Logout System Job Box Print Scan Network

Address Book  
Group  
Program  
Temporary One-Touch  
Subject  
Text  
Application Registration  
Prefix/Suffix  
Import/Export  
Other

**Application Registration**

**Application Setting**

No. 5

Application Name

**Server Setting**

Host Address 0.0.0.0

File Path

User ID

Password

anonymous OFF

PASV Mode OFF


Proxy OFF

Port No. 21 (1-65535)


Back Next Clear Cancel




4 Specify the settings of the button custom items.

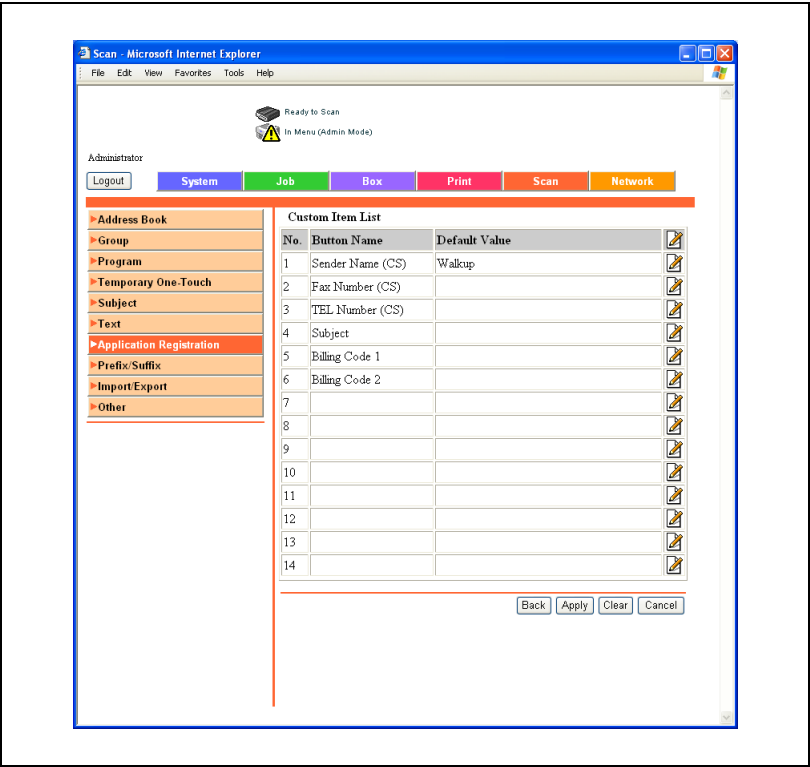



- 5 Click  to specify the details of each function. When the settings are specified, click the [Apply] button.

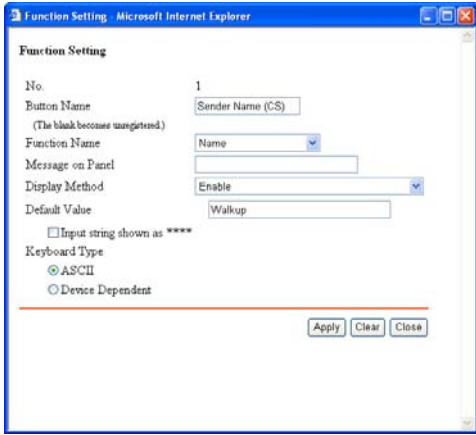


- 6 Click the [Apply] button.
- 7 Click the [OK] button.



Items that can Be Specified in Edit Application

You can specify the settings for each item described below in Edit Application.

Application Setting

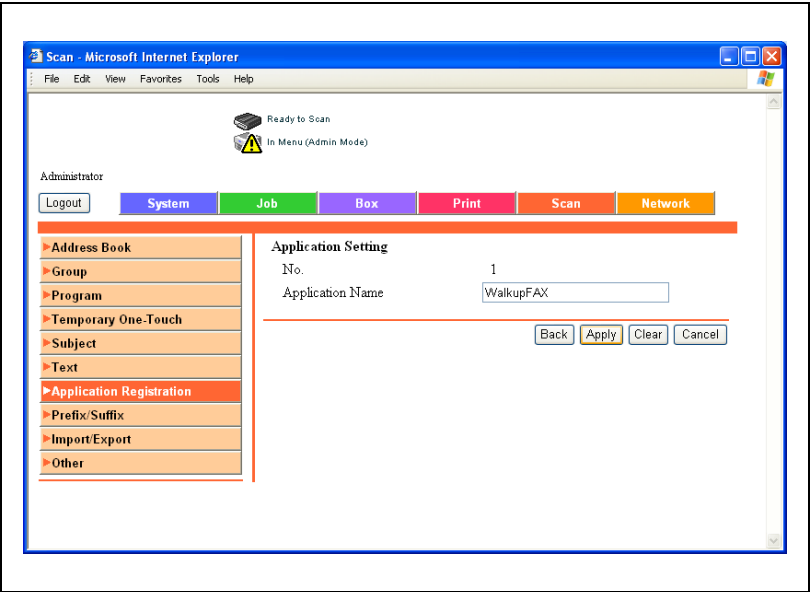

Item	Description
No.	Displays the application registration number that was select- ed.
Application Name	Enter the application name (up to 16 characters).



## Sever Setting

Scan - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Ready to Scan  
In Menu (Admin Mode)

Administrator  
Logout

System Job Box Print Scan Network

Address Book  
Group  
Program  
Temporary One-Touch  
Subject  
Text  
Application Registration  
Prefix/Suffix  
Import/Export  
Other

### Server Setting

Host Address: 192.168.1.55

File Path: 111

User ID: 111

Password:

anonymous: OFF

PASV Mode: OFF

Proxy: OFF


Port No.: 21 (1-65535)


Back Apply Clear Cancel

Item	Description
Host Address	Enter the host address of the server that is registered to the application (up to 15 characters).
File Path	Enter the application file path (up to 96 characters).
User ID	Enter the user ID for logging in to the server (up to 47 characters).
Password	Enter the password for logging in to the server (up to 31 characters).
anonymous	Select whether to enable anonymous.
PASV Mode	Select whether to enable the PASV mode.
Proxy	Select whether to enable proxy.
Port No.	Enter the port number (input range: 1 to 65535).




Custom Setting

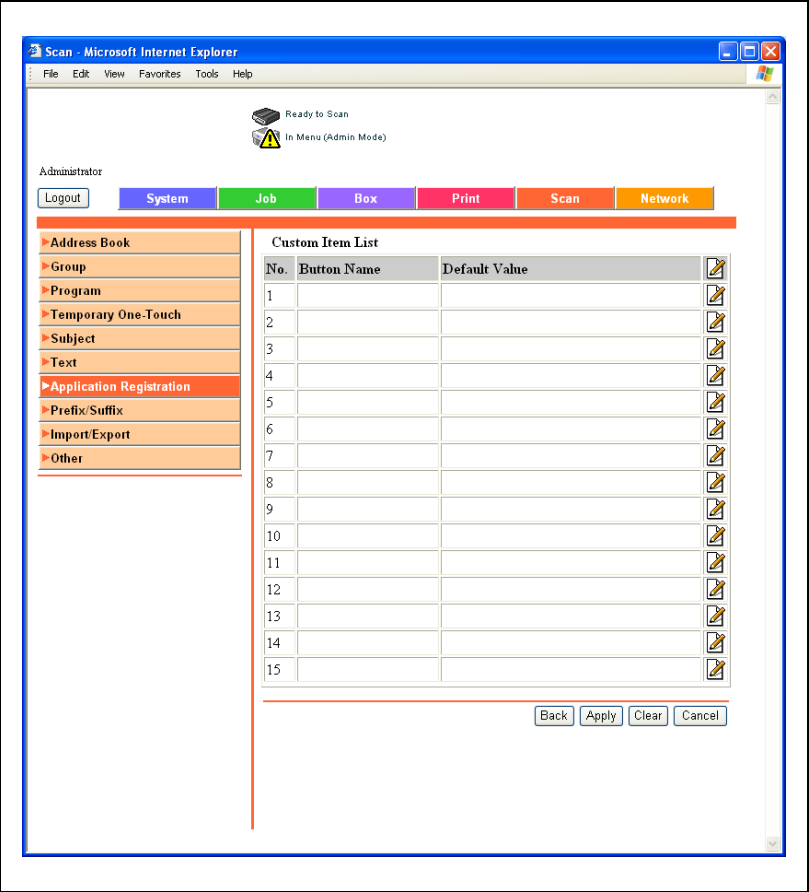

Item	Description
Custom Item List	Displays the custom items, button name, and default value if a template was selected. Click  of the item to be added or changed.




## Scan Setting

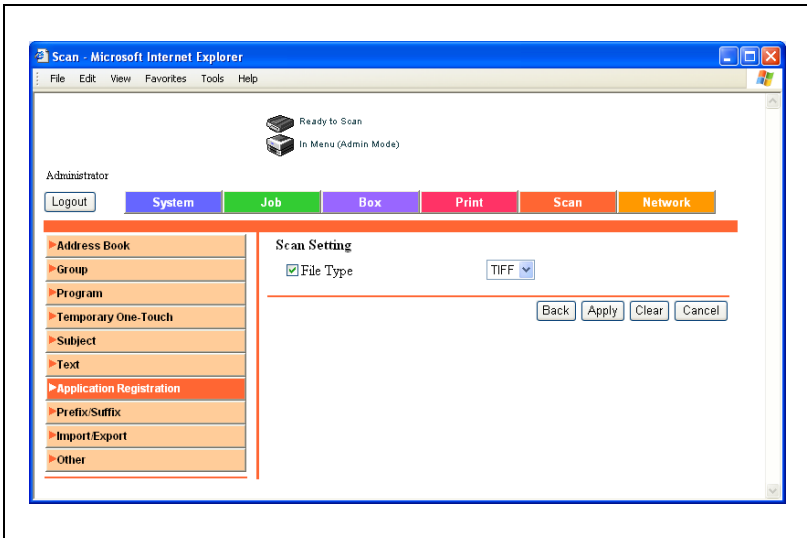

Item	Description
File Type	Select to enable the file type setting, and select PDF or TIFF as the file type.



Notification Setting

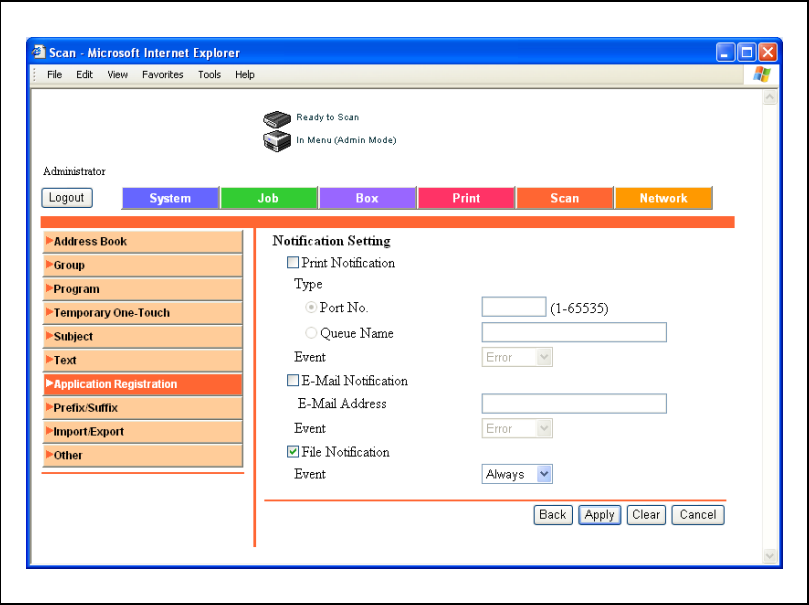


Item	Description
Print Notification	Select to notify when printing.
Port No.	Enter the port number (input range: 1 to 65535).
Queue Name	Enter the queue name (up to 32 characters).
Event	Select Error, Success, or Always as the notification event type.
E-Mail Notification	Select to perform e-mail notifications.
E-Mail Address	Enter the destination e-mail address (up to 32 characters).
Event	Select Error, Success, or Always as the notification event type.
File Notification	Select to notify the file name.
Event	Select Error, Success, or Always as the notification event type.




## To edit a registered application

- 1 Select the application to be edited, and click the [Registration/Edit] button.

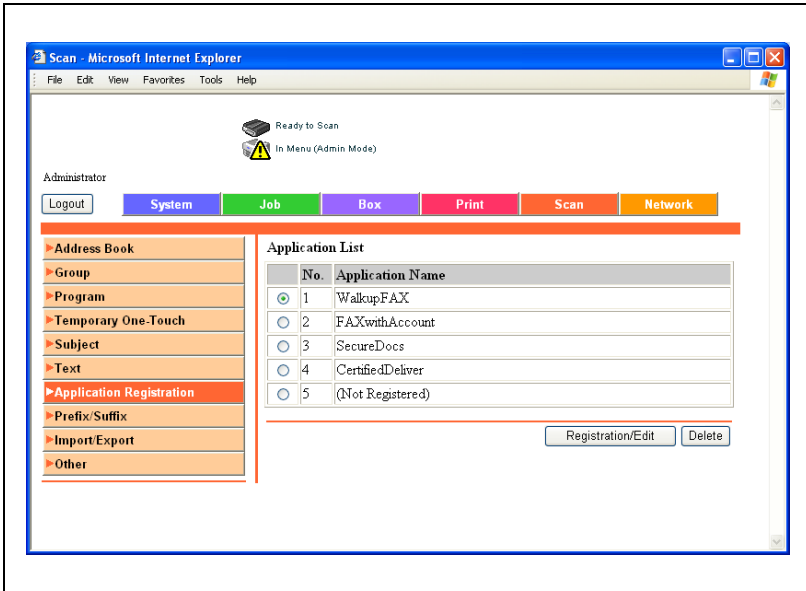




2 Select the type of item to be edited, and then click the [Next] button.

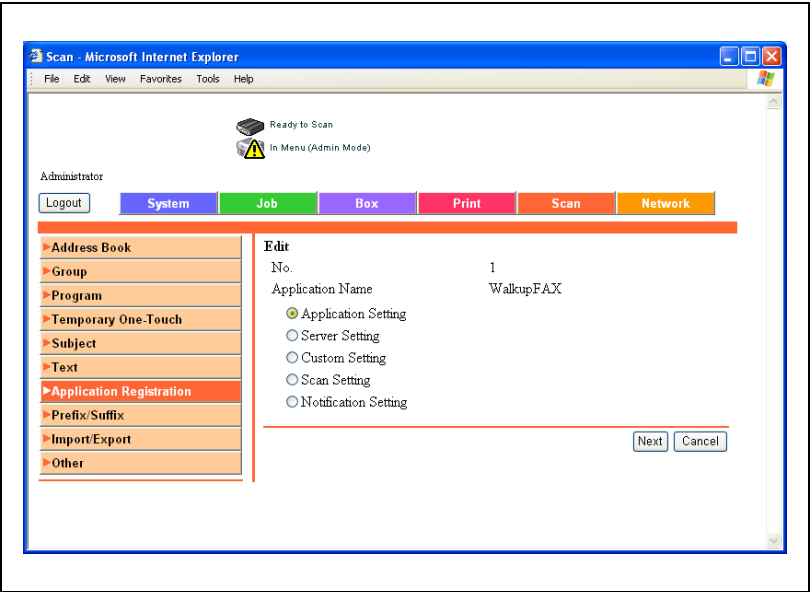

3 Specify the settings.

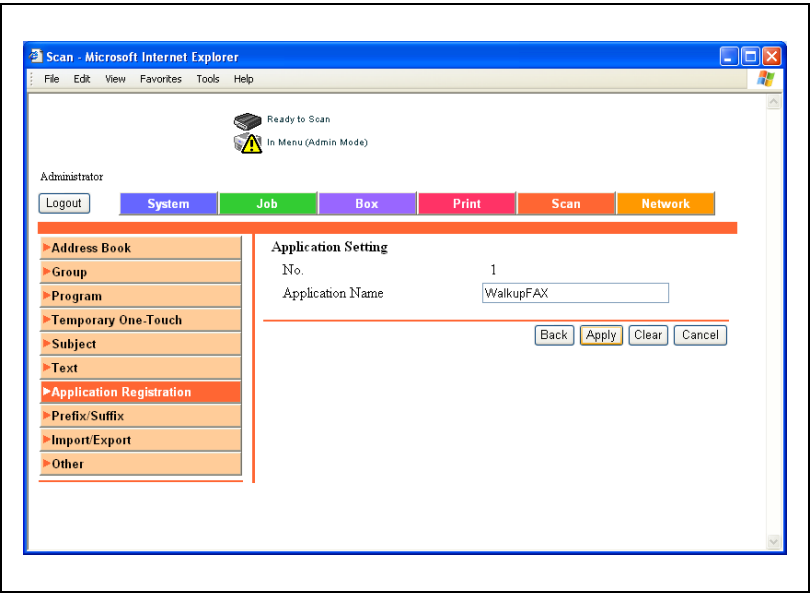




- 4 Click the [Apply] button.
- 5 Click the [OK] button.



## To delete a registered application

- 1 Select the application to be deleted, and click the [Delete] button.

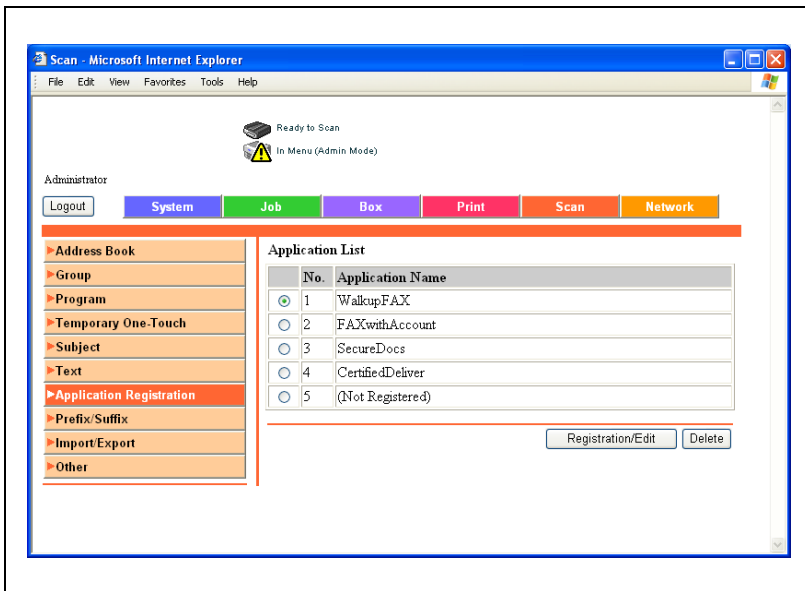


- 2 Check the setting, and then click the [OK] button.  
The application name changes to "Not Registered".




## 5.18 Prefix/Suffix


The prefix and suffix that are provided as destination information when sending e-mail can be registered. If address book registration by users is disabled, the address book registration menu appears.

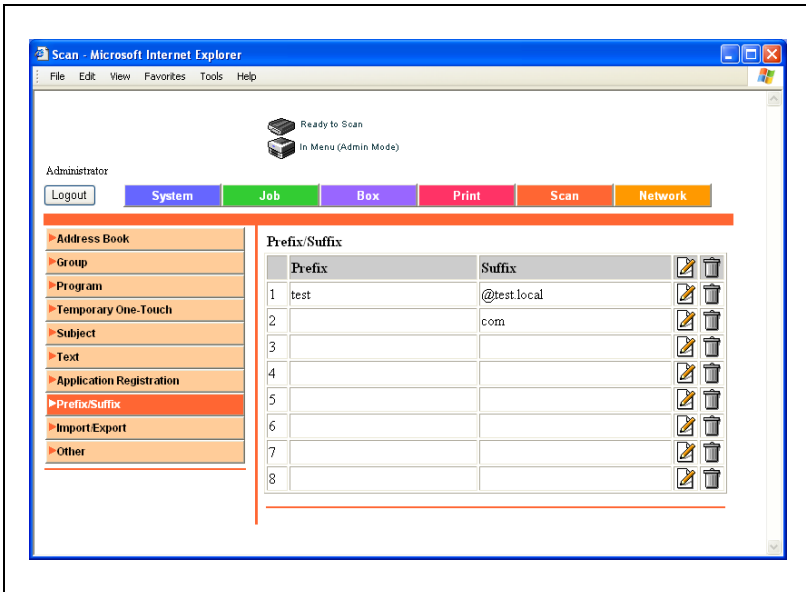



To register prefixes and suffixes

- 1 On the Scan tab, click [Prefix/Suffix].
- 2 Click  beside the prefix/suffix to be registered or edited.  
The registration page appears.
- 3 Specify the prefix/suffix, and click [Apply].

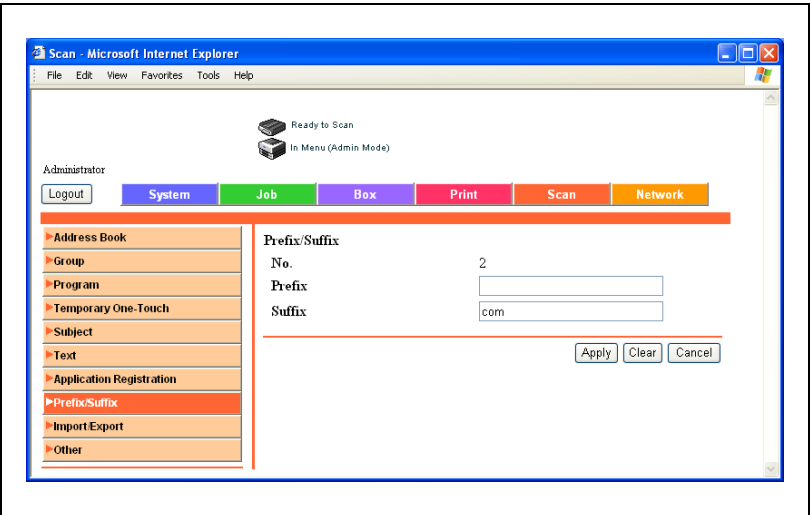


Item	Description
Prefix	Registers a prefix (setting: up to 20 characters).
Suffix	Registers a suffix (setting: up to 64 characters).



## 5.19 Import/Export

Used to import address book data from the computer or export the machine's address book.

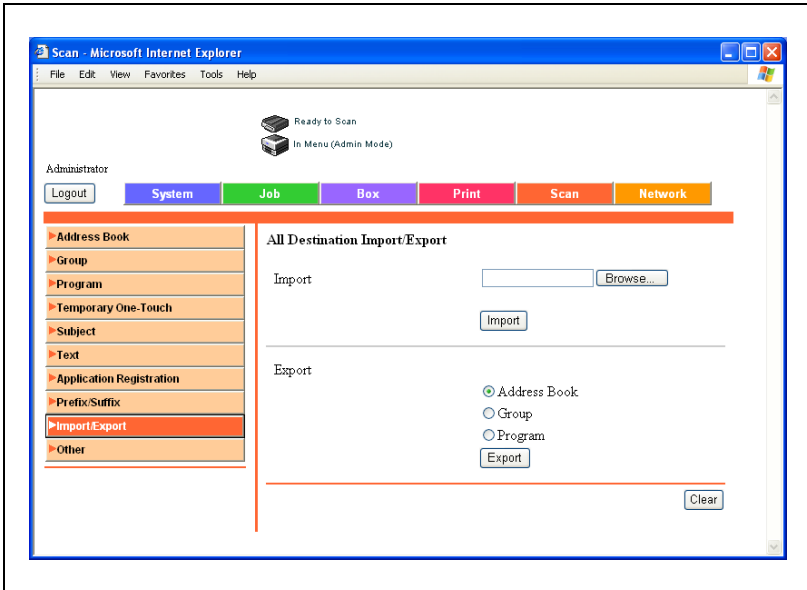

### Importing

- Click [Browse...], select the address book data to be imported, and click [Import].


### Exporting

- Click the destination data to be exported, and then click [Export].



5.20 Other

Specify address book restrictions.

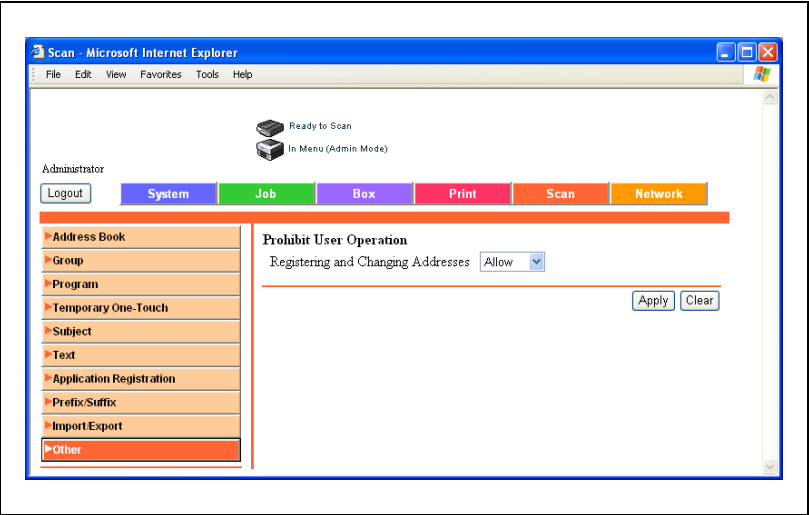

Item	Description
Prohibit User Operation	Specify whether to permit destination registration by users.



## 5.21 TCP/IP

**Reminder**

*To activate all network setting changes, turn the main power off and then back on.*

*When turning the main power switch OFF then ON, wait for 10 seconds or longer before turning it ON again; otherwise the copier may not function normally.*



TCP/IP

Specify TCP/IP settings.

Network - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Ready to Scan

In Menu (Admin Mode)

Administrator

Logout

System

Job

Box

Print

Scan

Network

▼TCP/IP Setting

▶TCP/IP Setting

▶IP Filtering Setting

▶NetWare Setting

▶IPP Setting

▶FTP Setting

▶SNMP Setting

▶SMB Setting

▶AppleTalk Setting

▶Bonjour Setting

▶LDAP Setting

▶E-Mail Setting

▶Network Fax Setting

▶SSL/TLS

▶Authentication

▶OpenAPI Setting

▶TCP Socket Setting

TCP/IP Setting

\* is reflected after reset.

TCP/IP

ON

(Turn the main switch OFF, and then ON , when changing TCP/IP)

Network Speed

Auto

IP Address Setting Method\*

Auto Setting

☒DHCP\*

☐BootP\*

☒ARP/PING\*

☒AutoIP\*

IP Address

192.168.1.95

Subnet Mask

255.255.255.0

Default Gateway

192.168.1.1

RAW Port Number

Port 1

☒9100(1-65535)

Port 2

☒9112(1-65535)

Port 3

☒9113(1-65535)

Port 4

☒9114(1-65535)

Port 5

☒9115(1-65535)

Port 6

☒9116(1-65535)

Dynamic DNS Setting

Disable

Host Name

MFP24001A

DNS Domain Name Setting

DNS Domain Auto Obtain

Enable

DNS Default Domain Name

test1.local

DNS Search Domain Name1

test1.local

DNS Search Domain Name2

test2.local

DNS Search Domain Name3

test3.local

DNS Server Setting

DNS Server Auto Obtain

Enable

Primary DNS Server

192.168.1.20

Secondary DNS Server1

192.168.1.54

Secondary DNS Server2

192.168.1.47

SLP Setting

SLP

Enable

LPD Setting

LPD

Enable

Apply

Clear




Item	Description
TCP/IP	Enables/disables TCP/IP.
Network Speed	Specify the transmission speed.
IP Address Setting Method	Select the IP address setting method.
IP Address	Specify the machine's IP address (syntax: <code>***.***.***.***</code> where the input range for <code>***</code> is 0 to 255).
Subnet Mask	Specify the subnet mask of the target network (syntax: <code>***.***.***.***</code> where the input range for <code>***</code> is 0 to 255).
Default Gateway	Specify the default gateway of the target network (syntax: <code>***.***.***.***</code> where the input range for <code>***</code> is 0 to 255).
RAW Port Number 1	Specify the RAW port number (input range: 1 to 65535).
RAW Port Number 2	
RAW Port Number 3	
RAW Port Number 4	
RAW Port Number 5	
RAW Port Number 6	
Dynamic DNS Setting	Specify whether to use the dynamic DNS setting.
Host Name	Enter the host name (up to 63 characters).
DNS Domain Auto Obtain	Specify whether to enable the automatic acquisition of the DNS domain name.
DNS Default Domain Name	Enter the DNS default domain name (up to 254 characters including the characters for the host name).
DNS Search Domain Name1-3	Enter the DNS search domain name (up to 254 characters including the characters for the host name).
DNS Server Auto Obtain	Specify whether to enable the automatic acquisition of the DNS server.
Primary DNS Server	Enter the priority DNS server address (syntax: <code>***.***.***.***</code> where the input range for <code>***</code> is 0 to 255).
Secondary DNS Server1-2	Enter the substitute DNS server address (syntax: <code>***.***.***.***</code> where the input range for <code>***</code> is 0 to 255).
SLP	Enables/disables SLP.
LPD	Enables/disables LPD.



IP Address Filtering

Specify the IP address filter function.

Access restrictions can be applied by specifying the host IP address.

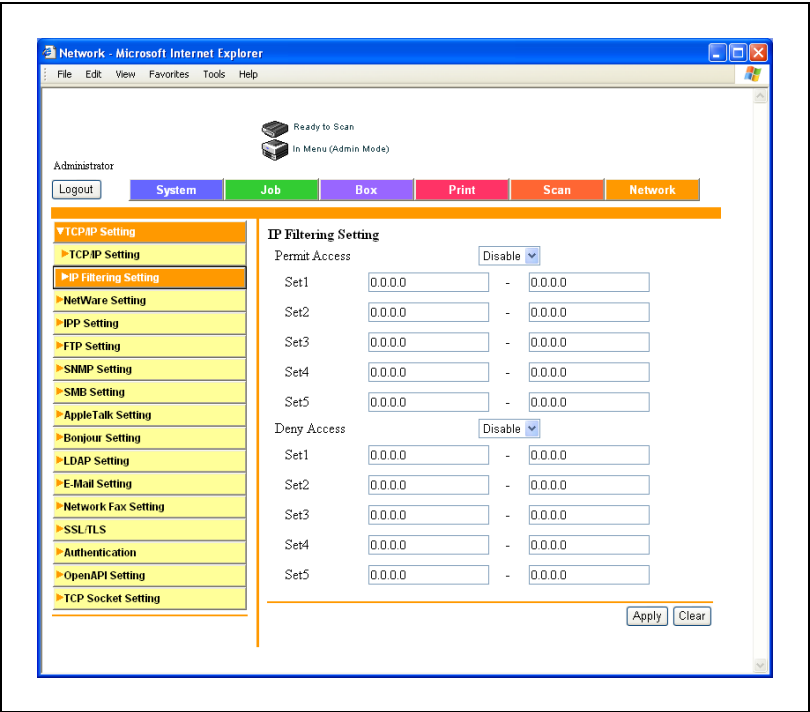

Item	Description
Permit Access	Enables/disables the access permission address setting, and enter the addresses to be permitted (syntax: "***.***.***.***" where the input range for *** is 0 to 255).
Deny Access	Enables/disables the access refusal address setting, and enter the addresses to be refused (syntax: "***.***.***.***" where the input range for *** is 0 to 255).



## 5.22 NetWare

Specify NetWare settings.

Network - Microsoft Internet Explorer

Ready to Scan  
In Menu (Admin Mode)

Administrator  
Logout

System Job Box Print Scan Network

▶ TCP/IP Setting  
 ▼ NetWare Setting  
 ▶ NetWare Setting  
 ▶ NetWare Status  
 ▶ IPP Setting  
 ▶ FTP Setting  
 ▶ SNMP Setting  
 ▶ SMB Setting  
 ▶ AppleTalk Setting  
 ▶ Bonjour Setting  
 ▶ LDAP Setting  
 ▶ E-Mail Setting  
 ▶ Network Fax Setting  
 ▶ SSL/TLS  
 ▶ Authentication  
 ▶ OpenAPI Setting  
 ▶ TCP Socket Setting

**NetWare Setting**  
\* is reflected after reset.

IPX Setting\* ☐ ON

Ethernet Frame Type\*

NetWare Print Mode\*

PServer

Print Server Name\*

Print Server Password

Polling Interval\*  sec. (1-65535)

Bindery/NDS Setting

Bindery

File Server Name

NDS

NDS Context Name

NDS Tree Name

Nprinter/Rprinter

Print Server Name\*

Printer Number\*  (0-255,255:Auto)

User Authentication Setting ☐ ON

Apply Clear

Item	Description
IPX Setting	Specify whether to enable the IPX setting.
Ethernet Frame Type	Select the frame type.
NetWare Print Mode	Specify the print server operation mode by selecting "OFF", "Pserver", or "Nprinter/Rprinter".
Print Server Name	Enter the print server name (up to 63 characters excluding : ; , * [ ] < >   + = ? .).
Print Server Password	Enter the print server password (up to 63 characters).
Polling Interval	Enter the print queue scan rate (input range: 1 to 65535 seconds).
Bindery/NDS Setting	Select "NDS" or "NDS/Bindery".
File Server Name	Enter the Bindery file server name (up to 47 characters excluding / \ : ; , * [ ] < >   + = ? .).




Item	Description
NDS Context Name	Enter the NDS context name (up to 191 characters excluding / \ : ; , * [ ] < >   + = ? ).
NDS Tree Name	Enter the NDS tree name (up to 63 characters excluding / \ : ; , * [ ] < >   + = ? ).
Print Server Name	Enter the print server name (up to 63 characters excluding / \ : ; , * [ ] < >   + = ? ).
Printer Number	Enter the Nprinter/Rprinter printer number (input range: 0 to 255).
User Authentication Setting	Select whether to use the authentication system setting.



## NetWare Status


The NetWare server and queue names can be displayed to show the NetWare connection status.

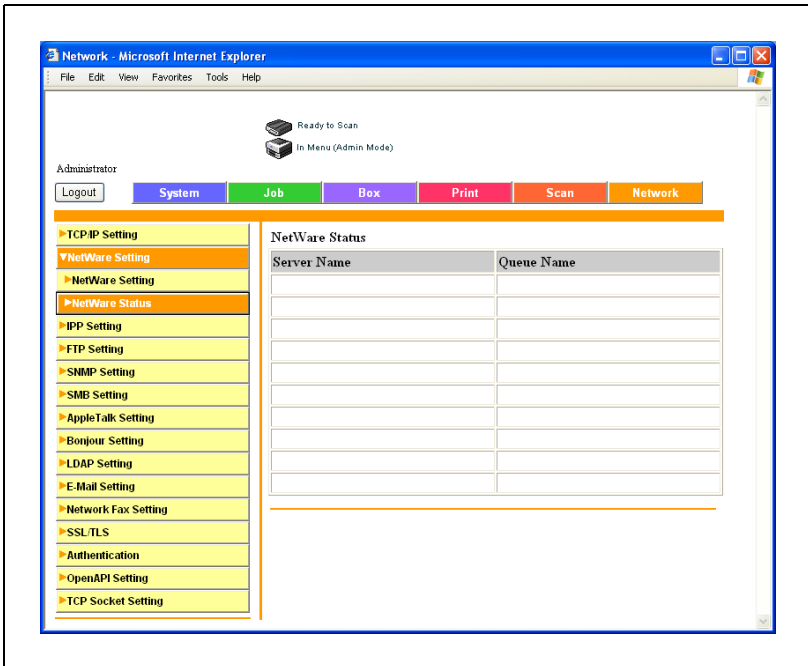



5.23 IPP

Specify the IPP print settings.

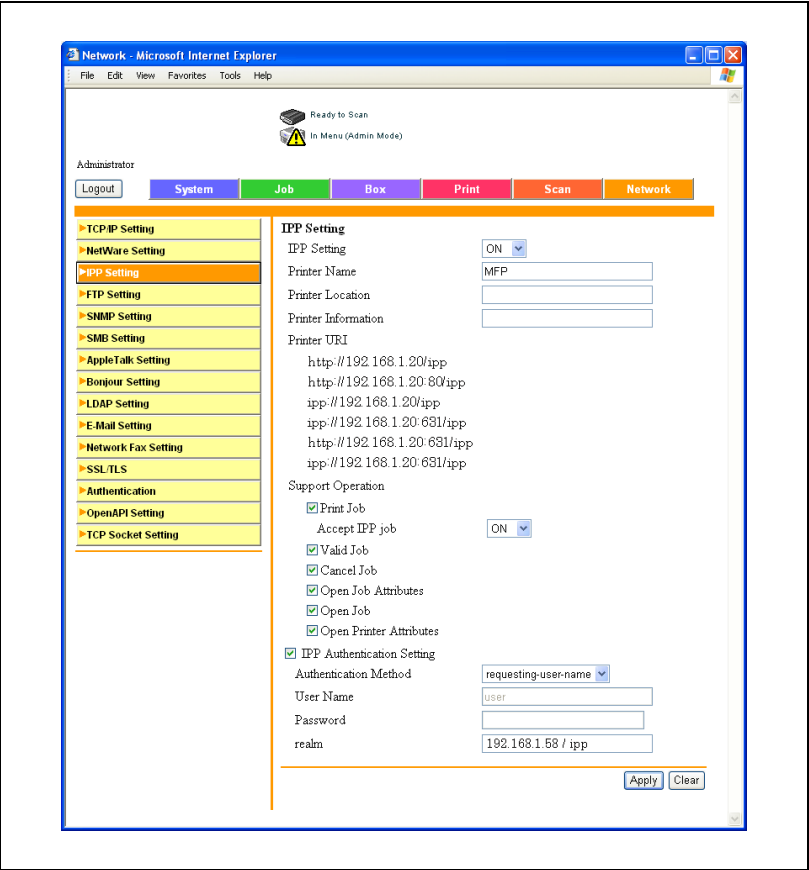




Item	Description
IPP Setting	Specify whether to enable the IPP print function.
Printer Name	Enter the printer name (up to 127 alphanumeric characters, hyphen, and underscore).
Printer Location	Enter the printer location (up to 127 characters). The contents entered in "Print Location" are included in the status notification e-mails. For the status notification details, refer to "Status Notification Settings" on page 4-123.
Printer Information	Enter the printer information (up to 127 characters).
Printer URI	Displays the URI of the printer that can print using IPP.
Support Operation	Specifies the print operations supported by IPP from the list of items. Print Job Valid Job Cancel Job Open Job Attributes Open Job Open Printer Attributes
IPP Authentication Setting	Select when performing IPP authentication and specify the setting described below. Authentication Method User Name Password realm



5.24 FTP

FTP TX

Specify client settings such as the FTP proxy server.

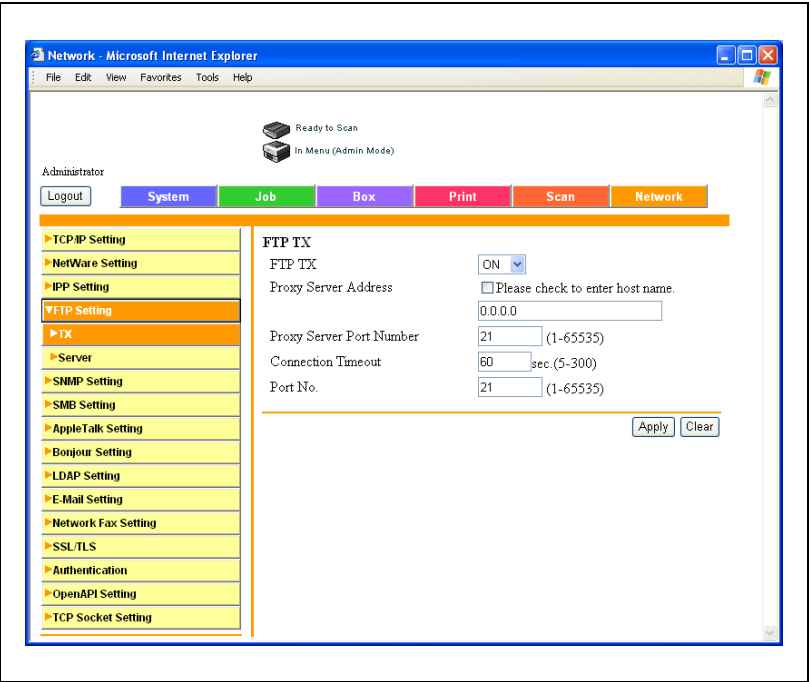


Item	Description
FTP TX	Specify whether to use this machine as an FTP server.
Proxy Server Address	Enter the proxy server address (syntax: "****.***.***.***" where the input range of *** is 0 to 255). Select to enter the host name.
Proxy Server Port Number	Enter the proxy server port number (input range: 1 to 65535).
Connection Timeout	Specify the connection timeout of the FTP server (input range: 5 to 300 seconds).
Port No.	Enter the port number (input range: 1 to 65535).



## FTP Server

Specify FTP server settings.

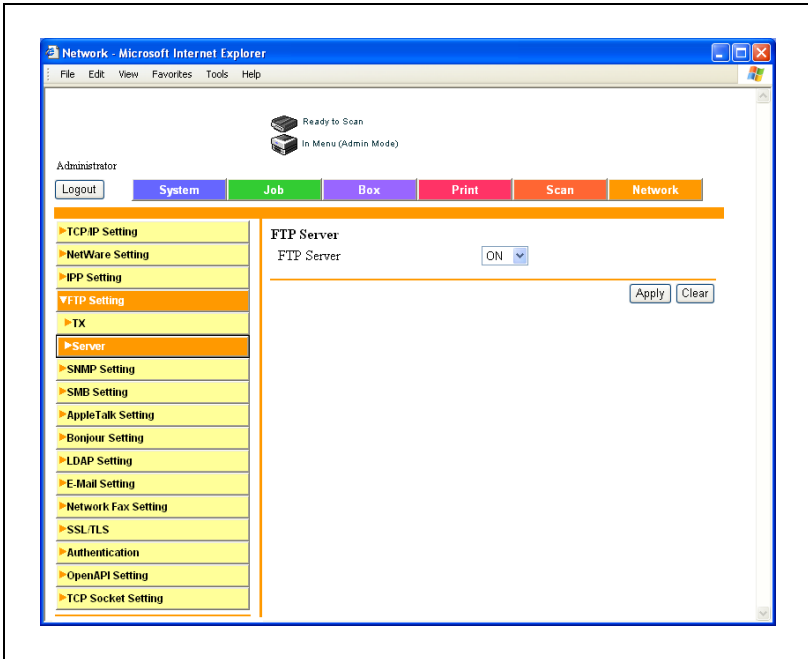


Item	Description
FTP Server	Specify the FTP server setting to "ON" or "OFF".



5.25 SNMP

Specify SNMP settings.

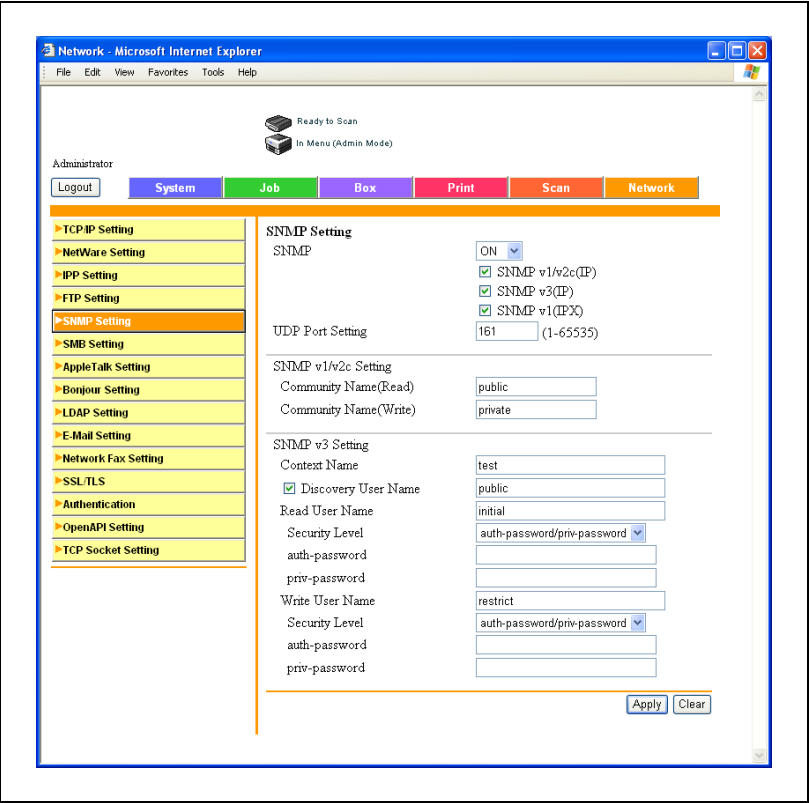




Item	Description
SNMP	Specify whether to use SNMP. Also, select the SNMP type to be used from the list of items. SNMP v1/v2c (IP) SNMP v3 (IP) SNMP v1 (IPX)
UDP Port Setting	Enter the UDP port number (input range: 1 to 65535).
SNMP v1/v2c Setting	Enter the community name for reading and writing. (up to 15 characters)
SNMP v3 Setting	Specify each setting described below. Context Name Discovery User Name Read User Name, Security Level, auth-password, priv-pass-word Write User Name, Security Level, auth-password, priv-pass-word



5.26 SMB

WINS Setting

You can specify SMB WINS settings.

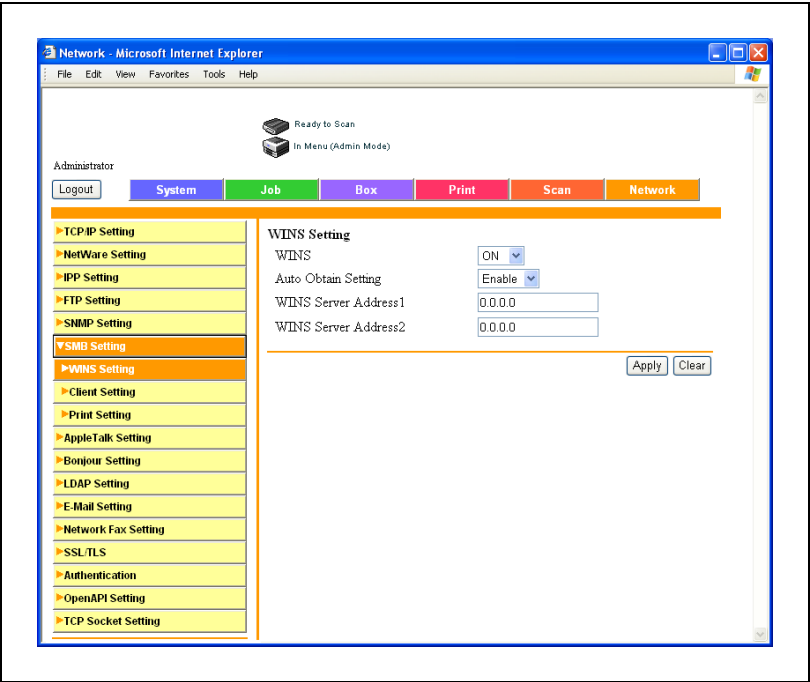

Item	Description
WINS	Specify whether to use WINS.
Auto Obtain Setting	Specify whether to enable the automatic acquisition of WINS.
WINS Server Address1	Enter the WINS server address (syntax: ***.***.***.*** where the input range for *** is 0 to 255).
WINS Server Address2	




Note

When performing SMB scans (host name setting) via a router, specify the WINS settings according to the SMB transmission settings in [SMB Setting] - [Client Setting].



## Client Setting

Specify SMB scan settings.

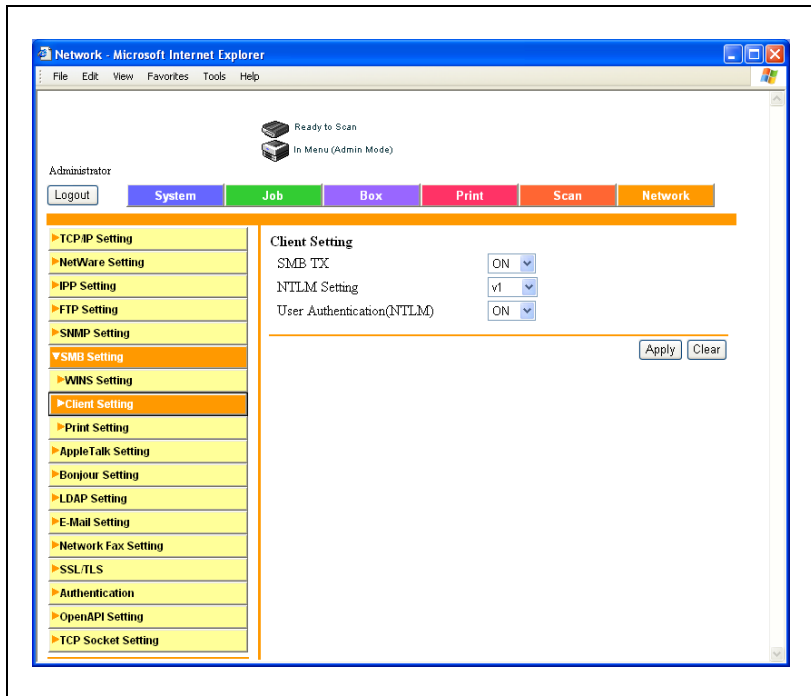

Item	Description
SMB TX	Specify whether to use SMB transmission.
NTLM Setting	Select the NTLM version to be used. Select [v1/v2] or [v1] when using a computer over a network that is running a Windows 98 SE or Windows Me operating system. Select [v1] when the Samba service is operating a server over a network.
User Authentication(NTLM)	Specify whether to use user authentication with NTLM.





...

**Note**

*To use the SMB (NTLM) of the external server authentication, [Scan Setting] or [Print Setting] must be turned ON.*



...


**Note**

*NTLMv2 is available from Windows NT 4.0 (Service Pack 4).*



## Print Setting

Specify SMB print settings.

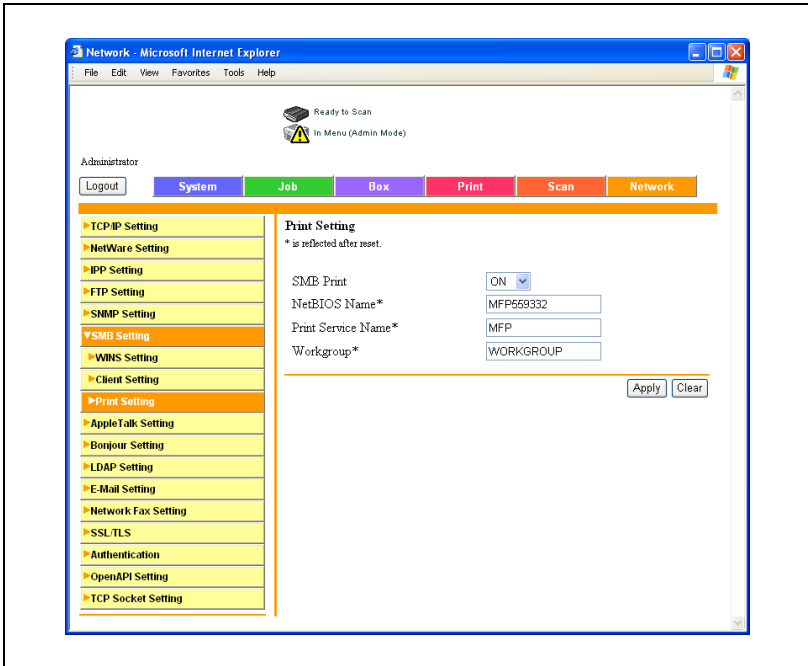


Item	Description
SMB Print	Specify whether to use the SMB printing (Windows printing) service.
NetBIOS Name	Enter the NetBIOS name (up to 15 characters).
Print Service Name	Enter the print service name (up to 12 characters).
Workgroup	Enter the work group name (up to 15 characters).



5.27 AppleTalk

Specify AppleTalk settings.

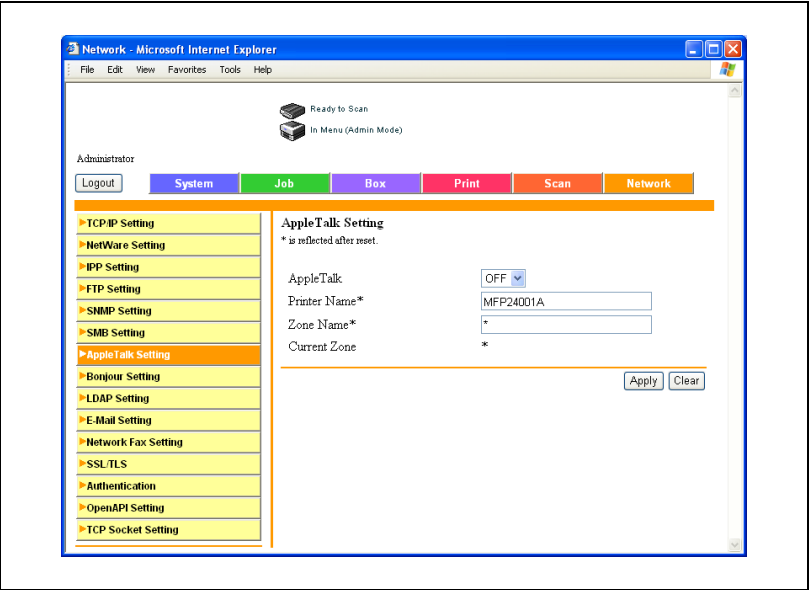


Item	Description
AppleTalk	Specify whether to use AppleTalk.
Printer Name	Enter the print name (up to 31 characters excluding = ~).
Zone Name	Enter the zone name (up to 31 characters).
Current Zone	Displays the current zone.



## 5.28 Bonjour Setting

You can specify the Bonjour settings.

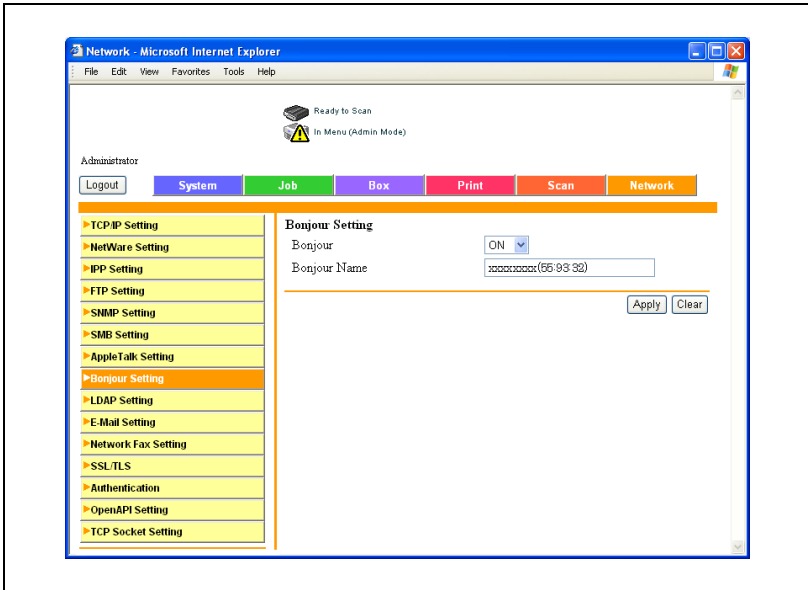


Item	Description
Bonjour	Specify whether to use the Bonjour setting.
Bonjour Name	Specify the device name that is used with Bonjour (up to 63 characters).



## 5.29 LDAP Setting


### LDAP Setting


Specify whether to use the LDAP setting.

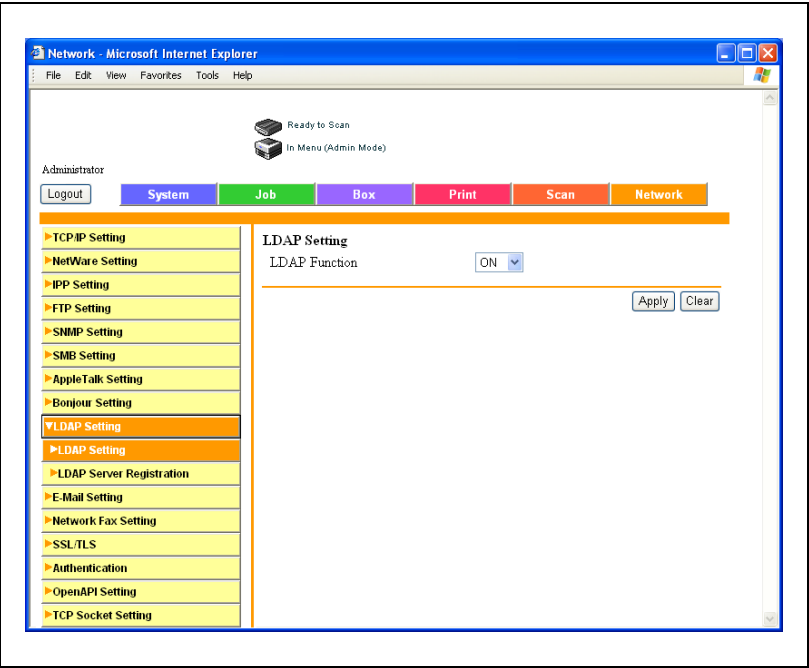



## LDAP Server Registration

- 1 On the Network tab, click [LDAP Setting].
- 2 Click [LDAP Server Registration].
- 3 Click  of the server to be registered.
  - You can specify 5 LDAP servers.

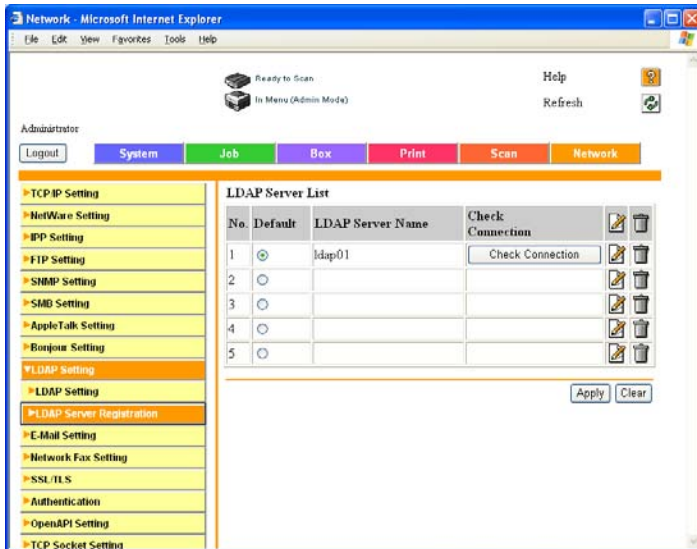



## 4 Specify the desired settings.

The screenshot shows a web browser window titled "Network - Microsoft Internet Explorer". The address bar shows "Ready to Scan" and "In Menu (Admin Mode)". The main content area is titled "Administrator" and has a navigation bar with tabs: "Logout", "System", "Job", "Box", "Print", "Scan", and "Network". The "Network" tab is selected, and the "LDAP Setting" sub-tab is active. The "LDAP Server Registration" section is expanded, showing the following settings:

- No. 1
- LDAP Server Name: ldap01
- Server Address: 192.168.1.200
- Port No. 389 (1-65535)
- ☐ Enable SSL
- Port No. (SSL) 636 (1-65535)
- Search Base: cn=users, dc=example, dc=com
- Timeout: 60 sec (5-300)
- Max Search Results: 100 (5-1000)
- Authentication Method: anonymous
- Login Name: anonymous
- Password:
- Domain Name:
- Select Server Authentication Method: Set Value
- Use Referral: ON
- Initial Setting for Search Details:
  - Name: OR
  - E-Mail: OR
  - Fax Number: OR
  - Last Name: OR
  - First Name: OR
  - City: OR
  - Company Name: OR
  - Department: OR

At the bottom right of the form are buttons for "Apply", "Clear", and "Cancel".



### Detail

*The setting that must be specified vary depending on the authentication method. If "anonymous" is selected, settings for "Domain Name", "Login Name", and "Password" are not required.*

*Click the [Check Connection] button to check the connection to the LDAP server with the specified settings.*



### Reminder

*If the LDAP server settings are not specified correctly, network failure may occur. The server administrator should specify LDAP settings.*





### Note

*Be sure to use an authentication method like the one that is used by the LDAP server. For details, refer to the manual of the LDAP server being used.*

*If the authentication method is specified as "GSS-SPNEGO", enter the domain name for "Active Directory".*


Item	Description
No.	Displays the LDAP server number.
LDAP Server Name	Enter the LDAP server name.
Server Address	Enter the LDAP server address (syntax: "****.***.***.***" or FQDN where the input range of *** is 0 to 255). Symbols "-" and "." can be used.
Port No.	Enter the port number used to communicate with the LDAP server (input range: 1 to 65535).
Enable SSL/Port No. (SSL)	Specify whether to perform communications with the LDAP server using SSL/TLS.
Search Base	Enter the search start point of the LDAP search (up to 255 characters).
Timeout	Enter the LDAP search timeout (input range: 5 to 300 seconds).
Max Search Results	Enter the maximum number of hits to be received as the LDAP search result (input range: 5 to 1000).
Authentication Method	Set the LDAP authentication method.
Login Name	Enter the login name if authentication is not set to "anonymous" (up to 255 characters).
Password	Enter the password if authentication is not set to "anonymous" (up to 128 characters).
Domain Name	Enter the domain name if authentication is set to "GSS-SPNEGO" (up to 64 characters).
Select Server Authentication Method	Select the LDAP server authentication method.
Use Referral	Specify whether to use the referral setting. When referral is used, the search base that was specified in LDAP Server Setting searches the top and bottom levels as the starting point.
Initial Setting for Search Details	Specify the conditions to perform LDAP detailed searches. Select OR, AND, Begins With, or Ends With for Name, E-Mail, Fax Number, Last Name, First Name, City, Company Name, and Department.



5.30 E-Mail Setting

E-Mail RX (POP)

You can specify the settings to perform the authentication of the e-mail sender with POP Before SMTP.

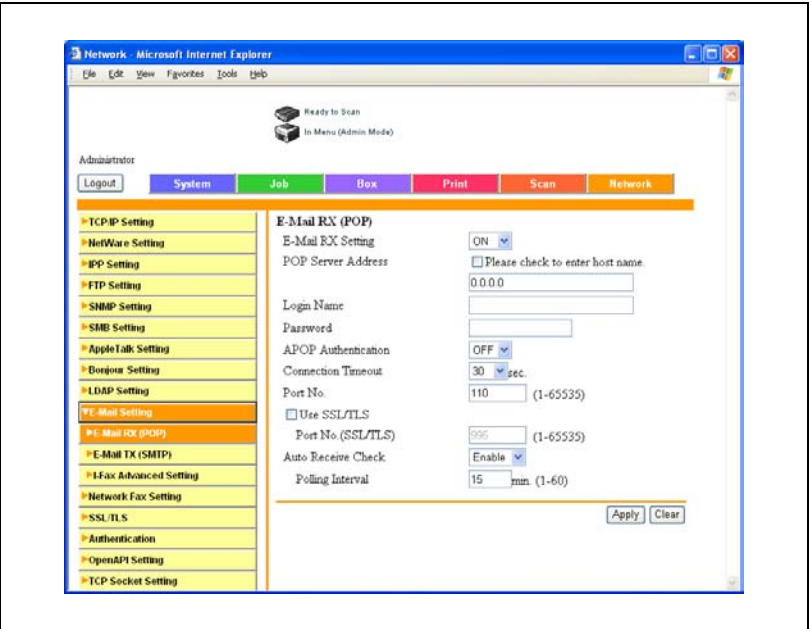

Item	Description
E-Mail RX Setting	Specify whether to use the e-mail reception setting.
POP Server Address	Enter the receiving POP server address (syntax: "****.***.***.****" or FQDN where the input range of *** is 0 to 255). When entering the host name, select the "Please check to enter host name." check box.
Login Name	Enter the user name used to log on to the POP server (up to 63 characters).
Password	Enter the password for logging on to the POP server (up to 15 alphanumeric characters).
APOP Authentication	Enables/disables APOP authentication.
Connection Timeout	Specify the connection timeout of the server (input range: 30 to 300 seconds).
Port No.	Enter the server port number (input range: 1 to 65535).
Use SSL/TLS Port No. (SSL/TLS)	Select to use SSL/TLS. Also, enter the port number to be used.



Item	Description
Auto Receive Check	A setting is made to decide whether or not a mail is automatically obtained. When it is obtained automatically, specify the Polling Interval.


**Note**

*If selecting [Please check to enter host name], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP" on page 5-92.*



E-Mail TX (SMTP)

Specify e-mail send settings.

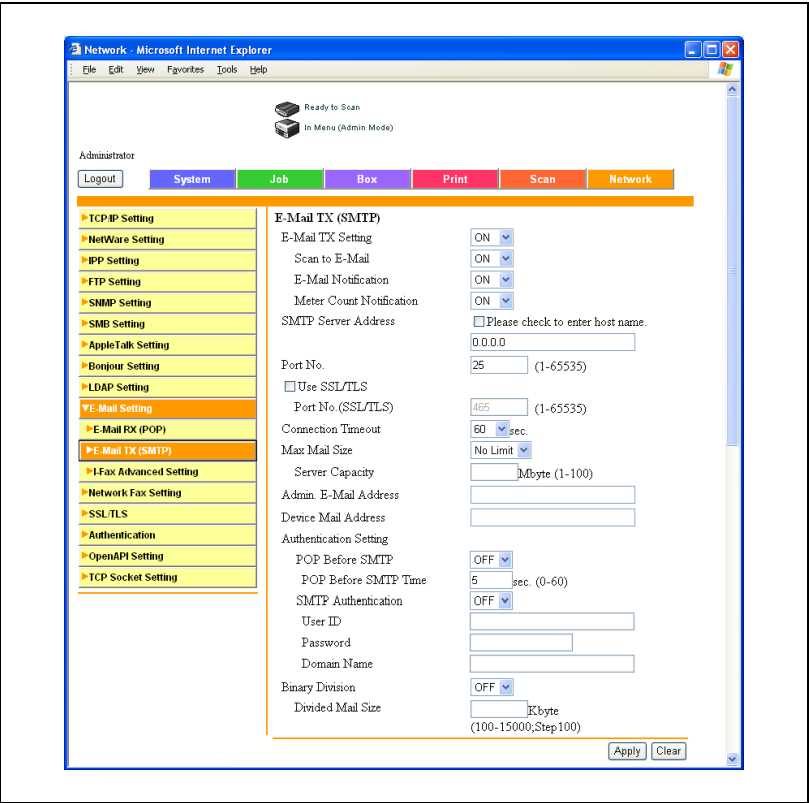

Item	Description
E-Mail TX Setting	Specify whether to use the e-mail transmission setting.
Scan to E-Mail	Specify whether to use Scan to E-Mail.
E-Mail Notification	Specify whether to use the e-mail notification function.
Meter Counter Notification	Specify whether to use the total counter notification function.
SMTP Server Address	Enter the sending SMTP server address (syntax: "****.***.***.***" or FQDN where the input range of *** is 0 to 255). When entering the host name, select the "Please check to enter host name." check box.
Port No.	Enter the server port number (input range: 1 to 65535).
Use SSL/TLS Port No. (SSL/TLS)	Specify whether to use SSL/TLS during e-mail transmission. To use, select the check box, and then type in the port number.



Item	Description
Connection Timeout	Specify the connection timeout of the server (input range: 30 to 300 seconds).
Max Mail Size	Specify whether to limit the size of e-mail transmissions.
Server Capacity	Enter the SMTP server capacity when mail size restriction is enabled (input range: 1 to 100 MB).
Admin. E-Mail Address	Enter the From address for scanner transmissions and the From address when user authentication is disabled (up to 320 characters).
POP Before SMTP	Specify whether to use POP Before SMTP.
POP Before SMTP Time	Enter the POP Before SMTP time (input range: 0-60 seconds).
SMTP Authentication	Select whether to use SMTP server authentication.
User ID	Enter the user ID when performing SMTP server authentication (up to 63 characters).
Password	Enter the password for SMTP server authentication (up to 15 characters).
Domain Name	Enter the SMTP server domain name.
Binary Division	Specify whether to send large volume of e-mail in small sizes and separated. Use to send data that has exceeded the maximum capacity when the maximum capacity is limited per e-mail on the e-mail server.
Divided Mail Size	Enter the division size for binary files (input range: 100 to 15000 KB).



### Detail

*If running an antivirus program on the e-mail server, the binary division function may not be able to be used. For details, ask the network administrator.*

*To receive binary e-mails, an e-mail client that supports receiving separated e-mail is required. Note that even if separated e-mail is received it may not be combined depending on the e-mail client being used.*



### Note

*If selecting [Please check to enter host name], check that the DNS settings are specified correctly before making the selection. For details, refer to "TCP/IP" on page 5-92.*



**Detail**

*To perform user authentication with POP Before SMTP, the settings that will allow POP to access the e-mail server must be specified. For details, refer to "E-Mail RX (POP)" on page 5-115.*



## 5.31 SSL/TLS


Specify SSL/TLS settings. When SSL/TLS is enabled, the communication between the machine and the client computer is encrypted to prevent information leakage such as passwords and transmitted data.

If a certificate is installed, the following page appears.



### Note


*The displayed information varies depending on the registered information.*

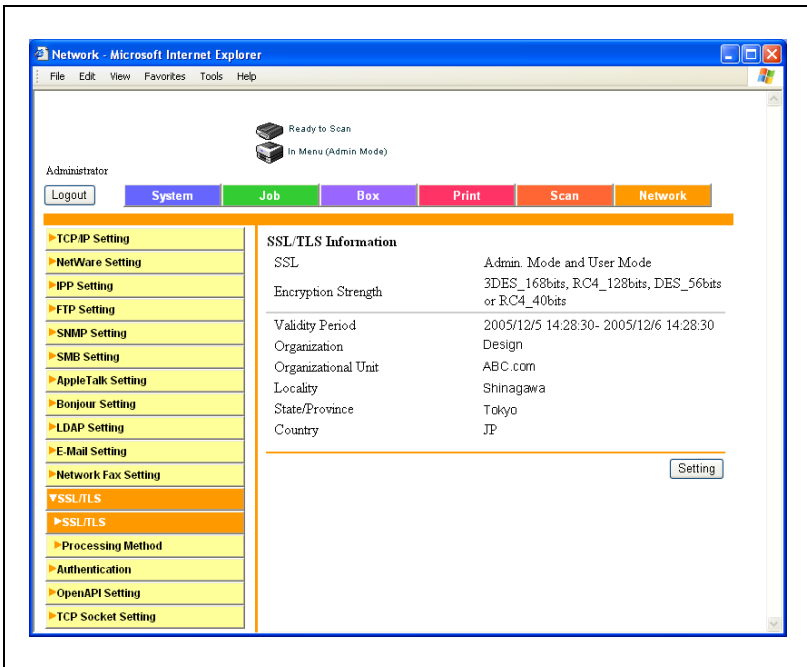



If a certificate is not installed, the following page appears.

If you create a self-signed certificate or obtain and install a certificate from a Certificate Authority, SSL/TLS is enabled.

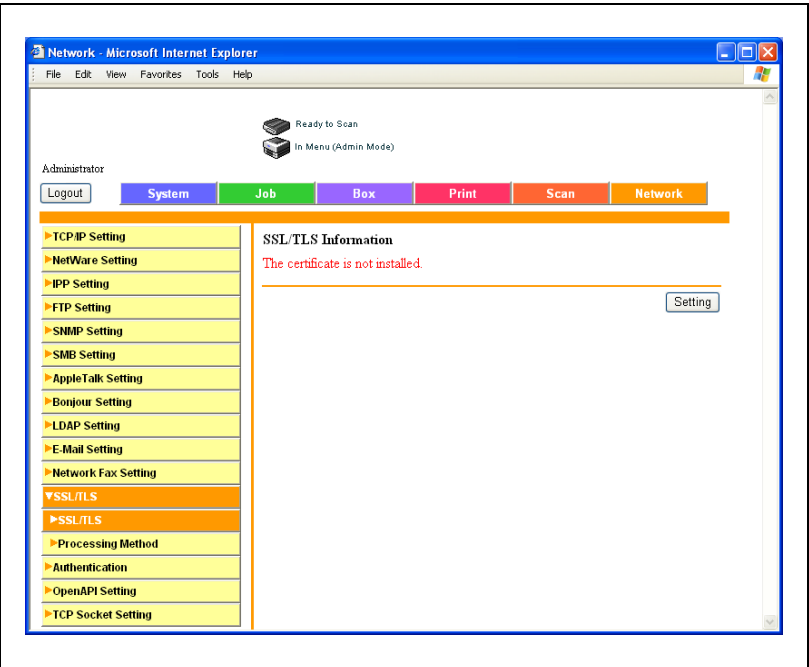

Click [Setting] to change certificate information, delete certificates, or create new certificates.



## SSL/TLS Setting

If "Create a self-signed Certificate" is selected, settings for the following need to be entered.

To create your own certificate, select "Create a self-signed Certificate".

Item	Description
Common Name	The machine's IP address or domain name is displayed. The settings when this machine is accessed are displayed.
Organization	Enter the organization name used to create an organization certificate (up to 63 ASCII characters).
Organization Unit	Enter the department name used to create a department certificate (up to 63 ASCII characters).
Locality	Enter the city name used to create a city certificate (up to 127 ASCII characters).
State/Province	Enter the state/province name used to create a state/province certificate (up to 127 ASCII characters).
Country	Enter a country code (2 characters) defined by ISO3166 for creating a country certificate. United States: US, United Kingdom: GB, Italy: IT, Australia: AU, Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Japan: JP, France: FR, Belgium: BE, Russia: RU
Validity Start Date	Enter the validity start date. The date/time when this page is opened is displayed.
Validity Period	Enter the validity period of the certificate as a number of days from the validity start date (input range: 1 to 3650 days).
Encryption Strength	Specify the encryption type.
Mode using SSL/TLS	Specify the mode using SSL/TLS.



If "Request a Certificate" is selected, settings for the following need to be entered.


To request a certificate from the certificate authority, select "Request a Certificate".

Item	Description
Common Name	The machine's IP address or domain name is displayed. The settings when this machine is accessed are displayed.
Organization Name	Enter the organization name used to create an organization certificate (up to 63 ASCII characters).
Organization Unit	Enter the department name used to create a department certificate (up to 63 ASCII characters).
Locality	Enter the city/village name used to create a city/village certificate (up to 127 ASCII characters).
State/Province	Enter the state/province name used to create a state/province certificate (up to 127 ASCII characters).
Country	Enter a country code (2 characters) defined by ISO3166 for creating a country certificate. United States: US, United Kingdom: GB, Italy: IT, Australia: AU, Netherlands: NL, Canada: CA, Spain: ES, Czech Republic: CZ, China: CN, Denmark: DK, Germany: DE, Japan: JP, France: FR, Belgium: BE, Russia: RU



## To create a certificate


- 1 Click [Setting].  
A page for selecting the function appears.
- 2 Select "Create a self-signed Certificate" or "Request a Certificate", and then click [Next].  
The registration page appears.

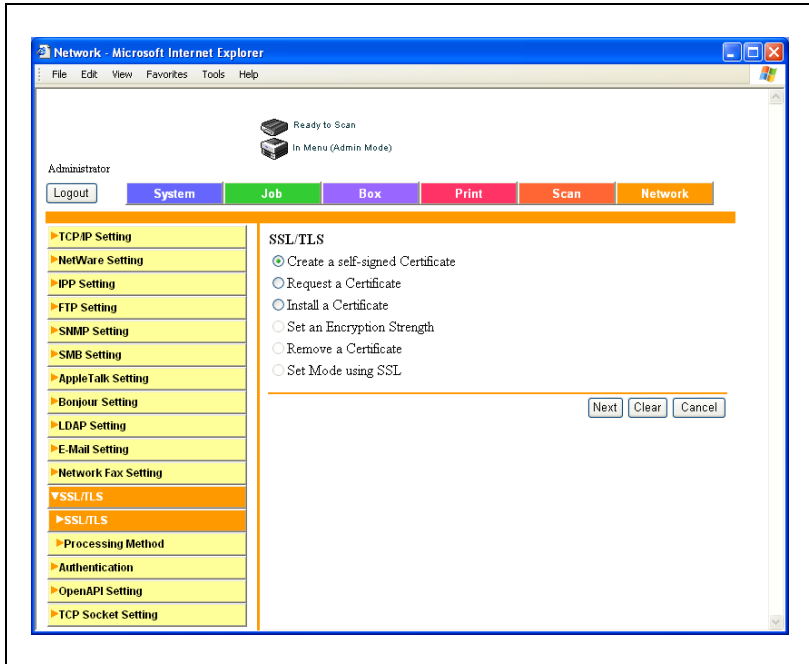



### 3 Specify the desired settings.

Example for Create a Self-signed Certificate

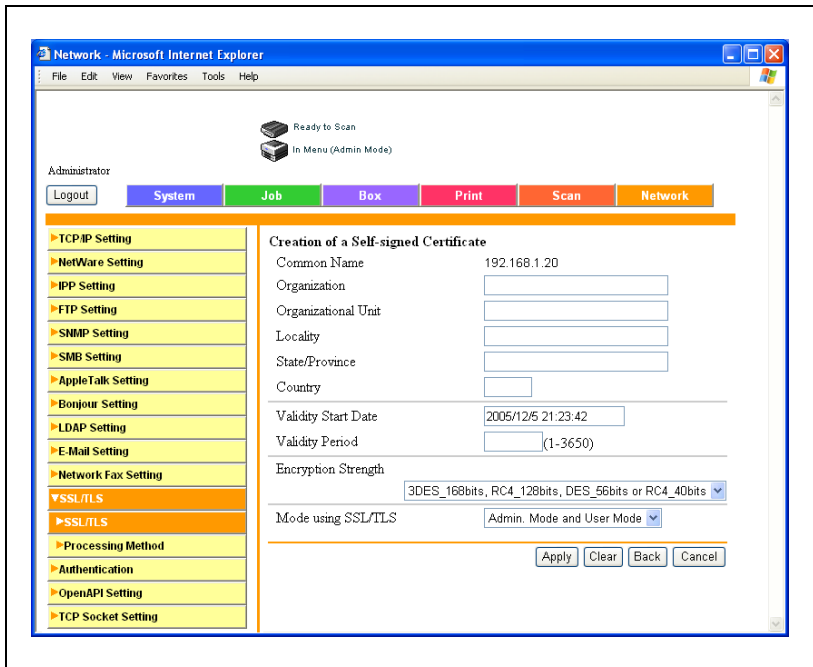

### 4 Click [Apply] or [Next].

A certificate can be registered or obtained.

- If a request was made for a certificate, proceed to step 5.
- If a self-signed certificate was created, the procedure ends here.


### 5 Save or copy the displayed certificate information. Continue to install the certificate.



## SSL/TLS Setting – Install a Certificate

Install the certificate issued by the Certificate Authority.

- 1 Click [Setting].  
A page for selecting the function appears.
- 2 Select "Install a Certificate", and then click [Next].  
A text input page appears.
- 3 Copy the issued certificate information and paste in the text. Then, click [Next].

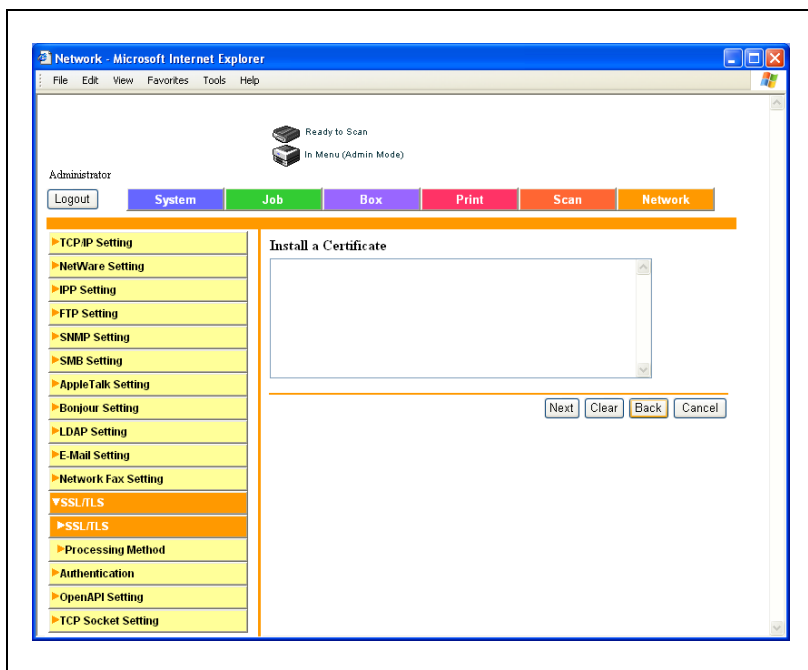

- 4 Select the encryption level and operation mode, and then click the [Install] button.




### Reminder

*If a new certificate has been created, log out once from Administrator mode.*




Set an Encryption Strength

- 1 In the SSL/TLS page, select "Set an Encryption Strength", and then click the [Next] button.

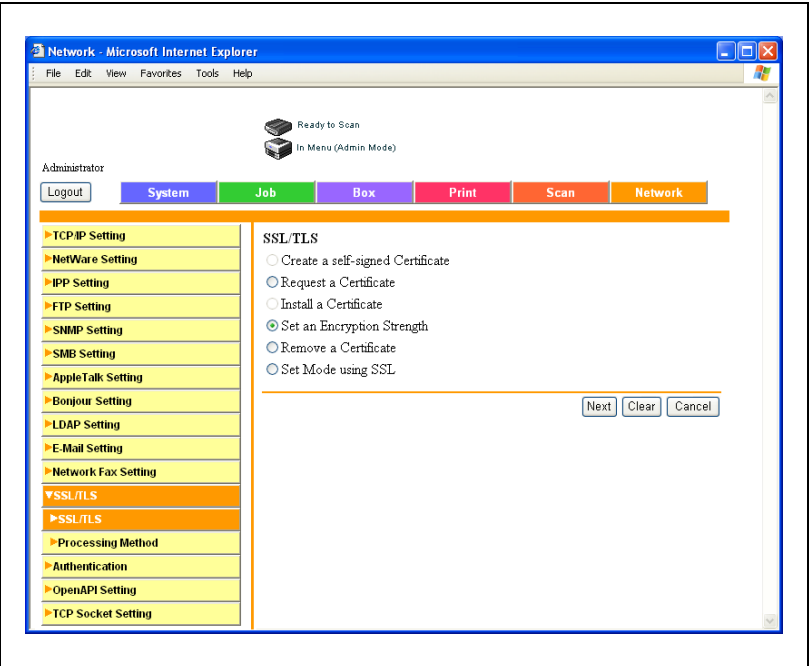




## 2 Select the encryption strength, and then click the [Apply] button.

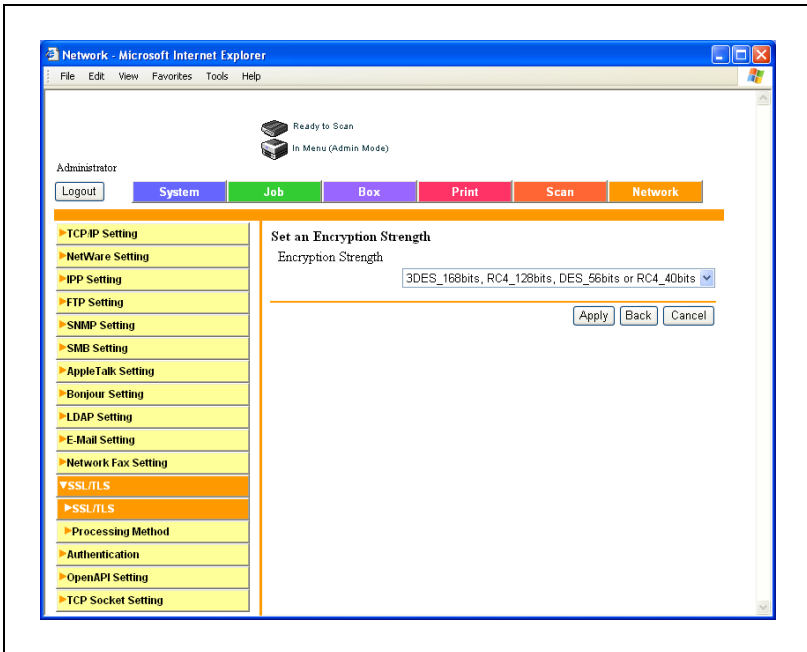




Remove a Certificate

- 1 In the SSL/TLS page, select "Remove a Certificate", and then click the [Next] button.

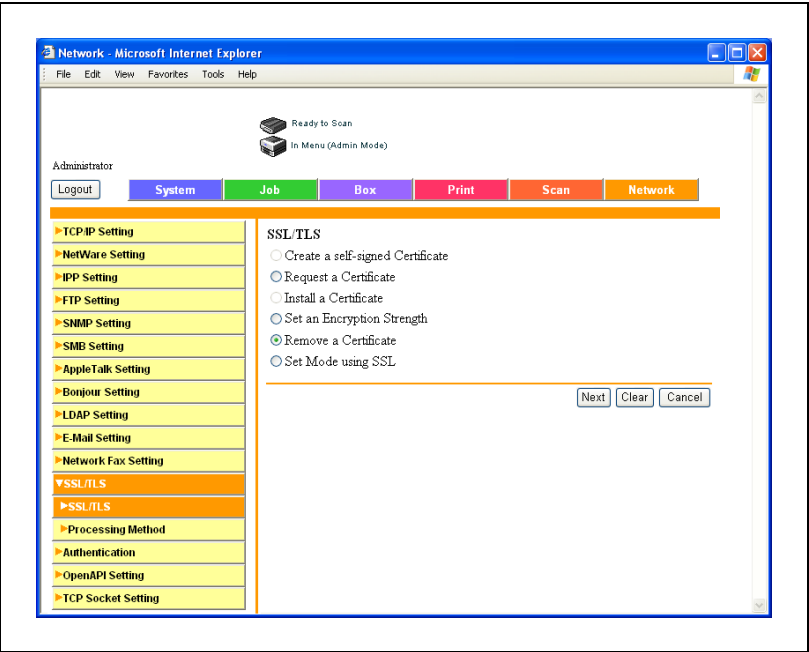



- 2 Check the message, and then click the [OK] button.

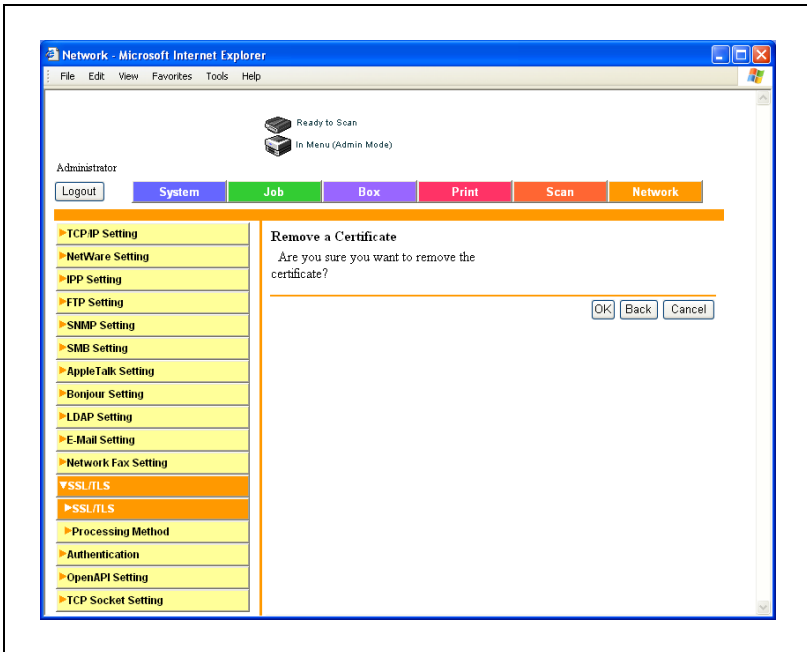




Set Mode using SSL


Select the mode using SSL.

- 1 In the SSL/TLS page, select "Set Mode using SSL", and then click the [Next] button.

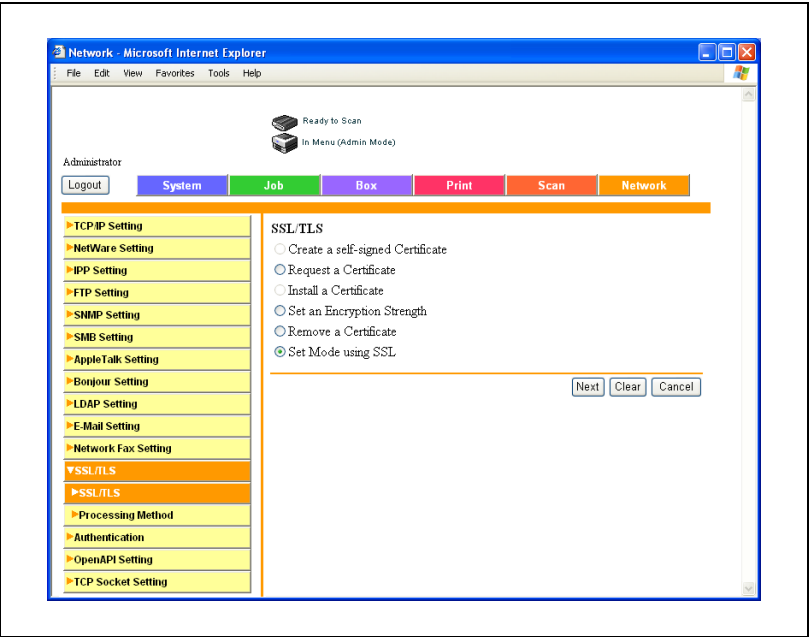



- 2 Select the mode using SSL, and then click the [Apply] button.

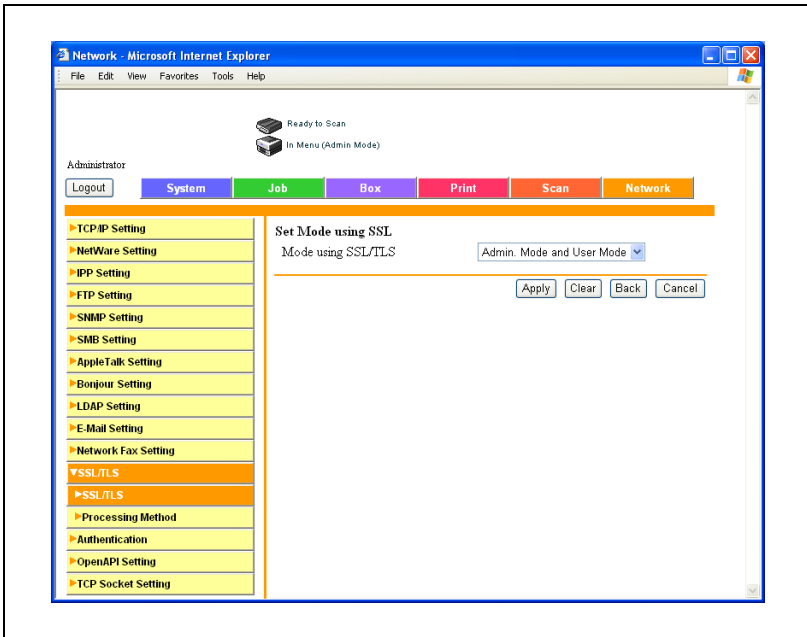



Processing Mode

When this machine is to be connected to an SSL server as a client, you can specify the operation method when the validation of the SSL server certificate has expired.

Item	Description
Continue	The job continues even when the validation of a server certification has expired.
Delete the Job	The job is deleted when the validation of a server certification has expired.




Note

*The functions that can be specified are described below.*  
*SMTP over SSL*  
*POP over SSL*  
*LDAP over SSL*



## To specify the mode using SSL

- 1 On the Network tab, click [SSL/TLS].
- 2 Click [Processing Method].
- 3 Select the processing method, and then click the [Apply] button.

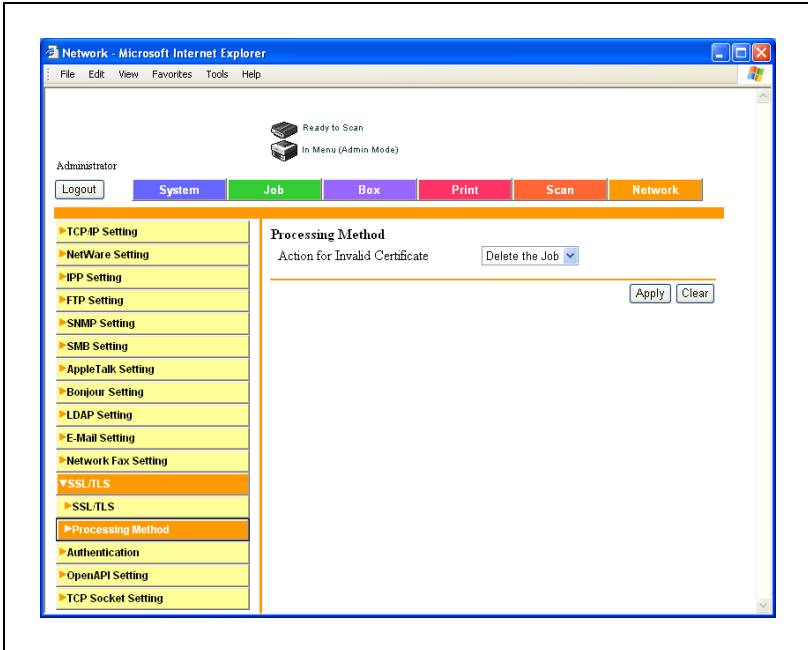



## 5.32 Authentication

### User Authentication/Account Track

The settings that can be specified are described below.

Item	Description
User Authentication	Select "OFF", "ON (External Server)", or "ON (MFP)" as the user authentication type.
Public User Access	If performing user authentication, specify whether to allow public users.
External Server Authentication	If performing external server authentication, select the server type.
Active Directory - Default Domain Name	Enter the default domain name for Active Directory.
NTLM - Default Domain Name	Enter the default domain name for NTLM.
NDS - Default NDS Tree Name	Enter the default NDS tree name for NDS.
NDS - Default NDS Context Name	Enter the default NDS context name for NDS.
Account Track	Select whether to perform account track.
Account Track Input Method	Select the account track authentication method.
Synchronize User Authentication & Account Track	Select whether to synchronize the authentication of user authentication and account track.
Number of Counters Assigned for Users	Enter the number of counters assigned for users (input range: 1 to 999).
When # of Jobs Reach Maximum	Specify the operation when the number of sheets for copying and printing reach the specified maximum value.



## To specify the User Authentication and Account Track settings

- 1 On the Network tab, click [Authentication].
- 2 Enter the required settings.

The screenshot shows a web browser window titled "Network - Microsoft Internet Explorer". The address bar shows "Ready to Scan" and "In Menu (Admin Mode)". The main content area has a navigation bar with tabs: "Logout", "System", "Job", "Box", "Print", "Scan", and "Network". The "Network" tab is selected. On the left, there is a sidebar with a list of settings categories: "TCP/IP Setting", "NetWare Setting", "IPP Setting", "FTP Setting", "SNMP Setting", "SMB Setting", "AppleTalk Setting", "Bonjour Setting", "LDAP Setting", "E-Mail Setting", "Network Fax Setting", "SSL/TLS", "Authentication", "User Auth/Account Track", "Auto Logout", "OpenAPI Setting", and "TCP Socket Setting". The "Authentication" category is expanded, and the "User Auth/Account Track" sub-category is selected. The main content area displays the "User Authentication/Account Track" settings. The settings are as follows:

User Authentication/Account Track	
User Authentication	ON (MFP) [v]
Public User Access	Allow [v]
External Server Authentication	Active Directory [v]
Active Directory	
Default Domain Name	training2.local
NTLM	
Default Domain Name	
NDS	
Default NDS Tree Name	
Default NDS Context Name	
Account Track	ON [v]
Account Track Input Method	Account Name & Password [v]
Synchronize User Authentication & Account Track	Synchronize [v]
Number of Counters Assigned for Users	500 (1-999)
When # of Jobs Reach Maximum	Skip Job [v]

At the bottom right of the settings area, there are two buttons: "Apply" and "Clear".


- 3 Click the [Apply] button.



Auto Logout

Specify auto logout settings for Administrator mode and User mode.

If no operation is performed within the specified time, the administrator or user is automatically logged out.

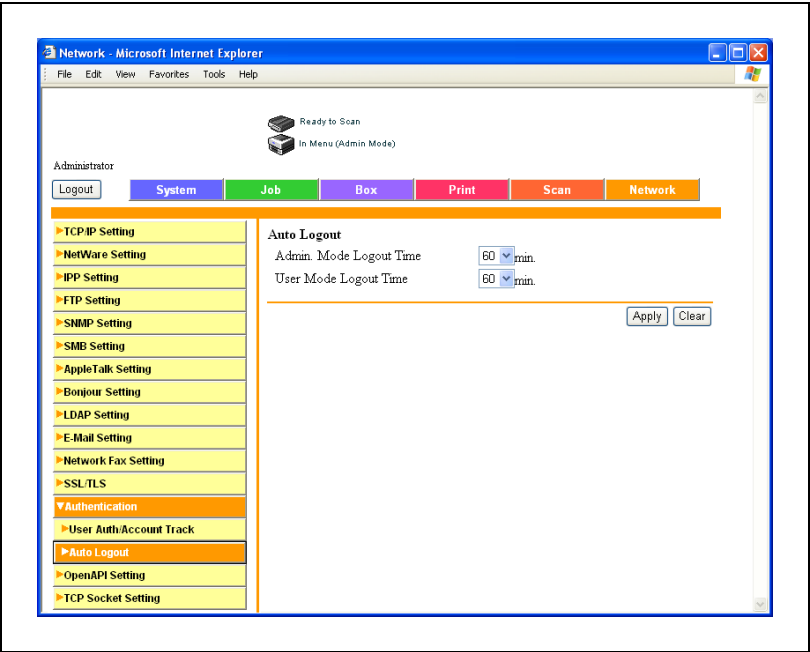


Item	Description
Admin Mode Logout Time	Enter the auto logout time (input range: 1 to 10, 20, 30, 40, 50, 60 minutes).
User Mode Logout Time	Enter the auto logout time (input range: 1 to 10, 20, 30, 40, 50, 60 minutes).



## 5.33 OpenAPI

Specify OpenAPI.

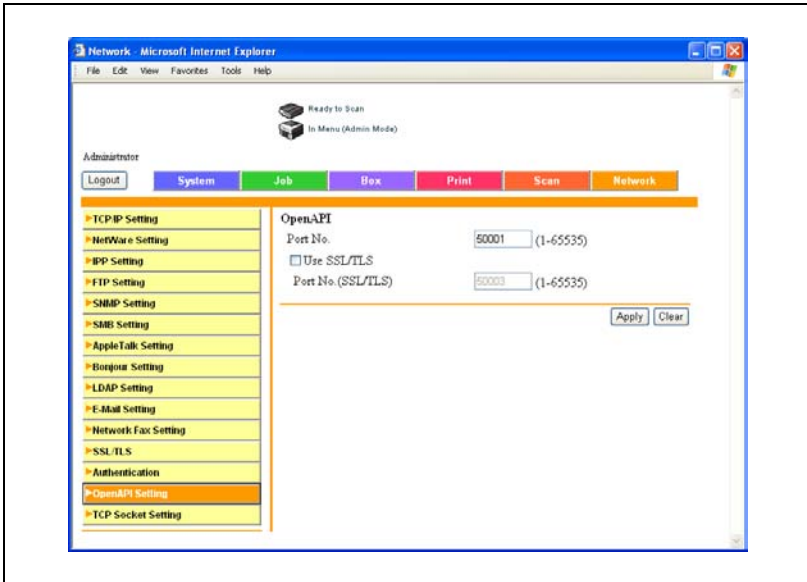

Item	Description
Port No.	Enter the port number (input range: 1 to 65535).
Use SSL/TLS Port No. (SSL/TLS)	Specifies whether to use SSL/TLS. To use, select the check box, and then type in the port number.



### Reminder

*The setting of [Use SSL/TLS] and [Port No. (SSL/TLS)] is available only when the SSL/TLS setting is valid.*



### 5.34 TCP Socket Setting

You can specify TCP socket settings.  
The settings that can be specified are described below.

Item	Description
TCP Socket	Specify whether to use a TCP socket.
Port No.	Enter the port number (input range: 1 to 65535).
Use SSL/TLS	Select to use SSL/TLS.
Port No. (SSL/TLS)	Enter the port number for SSL/TLS (input range: 1 to 65535).
TCP Socket(ASCII Mode)	Specify whether to use a TCP socket in the ASCII mode.
Port No. (ASCII Mode)	Enter the port number (input range: 1 to 65535).




**Reminder**  
*When changing the TCP socket settings, be sure to turn the power of this machine off, then on again.*  
  
*When turning the main power switch to "OFF", then to "ON", wait 10 seconds or more before turning the switch to "ON" again; otherwise, this machine may not function normally.*  
  
*The setting of [Use SSL/TLS] and [Port No. (SSL/TLS)] is available only when the SSL/TLS setting is valid.*  
  
*Setting the TCP Socket to [OFF] may result in the use of some applications on the computer unavailable.*



## To specify the TCP Socket Settings

- 1 On the Network tab, click [TCP Socket Setting].
- 2 Enter the required settings.

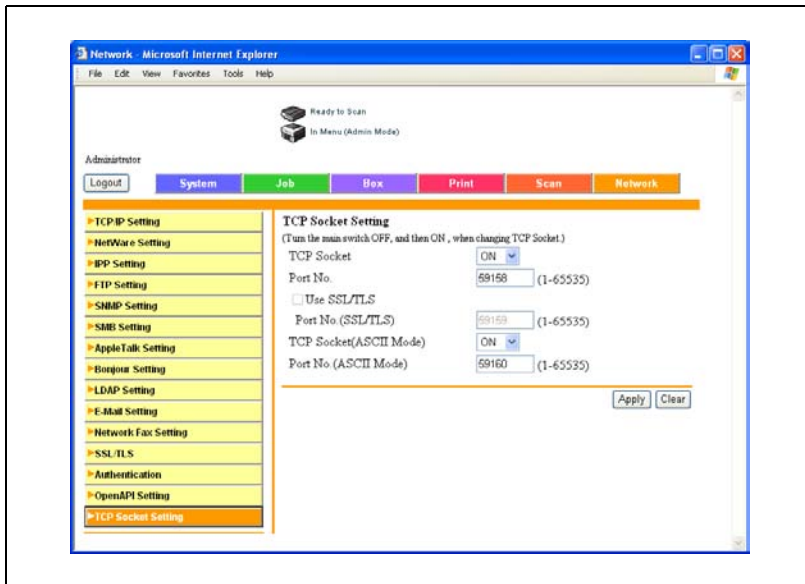

- 3 Click the [Apply] button.





## **Scan Function Troubleshooting**







# 6 Scan Function Troubleshooting

## 6.1 Error List

If an error message appears, take action as described below.

Message	Cause and Remedy
Cannot connect to the network.	A connection to the network could not be established. Check if the network cable is correctly connected. In addition, check that the Network Setting parameters on the Administrator Setting screen have been correctly specified.
The destination cannot be selected because the number of destinations has exceeded the max. number of broadcasting possible.	The number of destinations specified exceeds the number possible for a broadcast transmission. Reduce the number of broadcast destinations, or send the transmission in multiple batches.
Image could not be saved in User Box due to insufficient capacity in HDD. Please check Job History.	The hard disk is full. Delete unnecessary data, and then try saving the image.
The number of User Box has reached its maximum.	The number of user boxes that can be registered has reached the maximum number possible. Delete unnecessary user boxes, and then try registering new boxes.
The number of documents in User Box has reached its maximum.	The number of documents that can be saved in a user box has reached the maximum number possible. Delete unnecessary documents, and then try saving the document.
The number of jobs has reached its maximum. Please wait until a job is completed.	The number of jobs that can be programmed has reached the maximum number possible. Wait until a job has been completed, or delete a current job.









## **Appendix**












# 7 Appendix

## 7.1 Product Specifications

### Scanning Functions

Item	Specifications
Scan Speed	Same as copier
Scannable Range	Same as the copier (11 × 17 maximum)
Functions	Scan to E-Mail Scan to FTP Scan to SMB Save in User BOX
Scanner Resolution	200/300/400/600 dpi
Scannable Paper Size	11 × 17  to 8-1/2 × 11  , 5-1/2 × 8-1/2  , A3  to A5 
Special Functions	"Mixed Original", "Special Original", "Bind", "Erase" (frame erasing), "Center Erase", "Original Direction"



## Network Function

Item	Specifications
Type	Embedded
Frame Type	IEEE802.2/802.3/Ethernet II/IEEE802.3SNAP
Cable Type	10Base-T/100Base-TX
Connector	RJ-45
Supported Protocols	TCP/IP (BOOTP, ARP, ICMP, DHCP, SNMP, HTTP, FTP, SMTP, POP, IPP, SMB, LPD, SLP, SSL), IPX/SPX, AppleTalk (EtherTalk), and LDAP
Compatible LDAP Servers	OpenLDAP 2.0.27, Active Directory, Exchange5.5, Netscape/iPlanet Directory Server, Novell Netware5 NDS, Novell eDirectory 8.6/8.7, and LotusDominoServer*
Supported LDAP Protocol	LDAP Protocol Version 3 (Version 2 not supported)
Compatible SSL Versions	SSL2, SSL3, and TLS1.0 (An x.509 certificate must be installed on the server.)
Multiprotocol	Auto detection
Network Setting Tool (General Purpose)	Network Setup
Network Setting Tool (Dedicated)	Web browser (Netscape Navigator, Internet Explorer)
Operating Environment	Temperature 32 to 122°F Humidity 5% to 80%
Status Indicators	2 green LED
Setup	Saved to non-volatile memory

\* If you set the search condition to "OR" or "END" when using the Lotus Domino Server, it will not work properly.



### Note

*In order to incorporate improvements, these product specifications are subject to change without notice.*

## Status Indicators

Indicator lit/off	Network status
under indicator lit	Link established
under indicator blinking	Transmitting/receiving data
upper indicator lit	Network data rate at 100 Mbps
upper indicator off	Network data rate at 10 Mbps



10/100Base-T UTP Cable Specifications

General Ethernet standards apply when connecting a 10/100Base-T UTP cable to an RJ-45 connector on the network. Use cables of Category 5 or better (depends on the length).

Pin No.	Color	Ethernet
8	Blue/White	
7	Blue	
6	Orange/White	Receive-
5	Green/White	
4	Green	
3	Orange	Receive+
2	Brown/White	Transmit-
1	Brown	Transmit+




## 7.2 Entering text

The following procedure describes how to use the keyboard that appears in the touch panel for typing in the names of registered accounts and custom paper sizes. The keypad can also be used to type in numbers.


Any of the following keyboards may appear.

Example

Password input screen

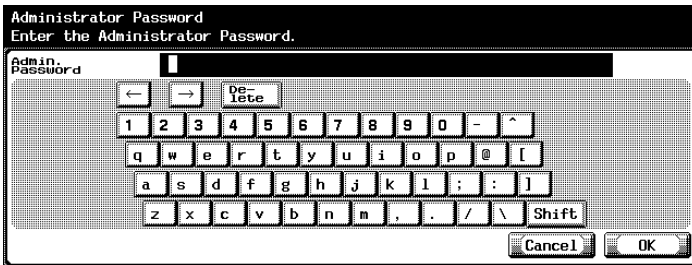


Screen for entering the name of a custom paper size

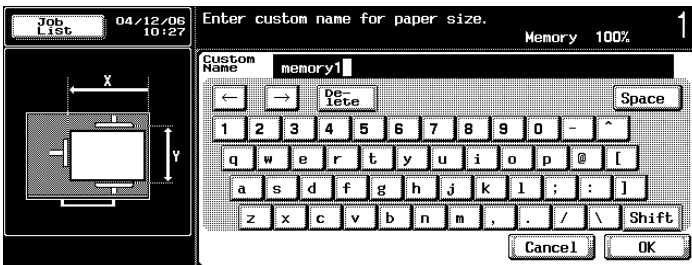




Touching [Shift] switches the keyboard display between lowercase letters (numbers) and uppercase letters (symbols).

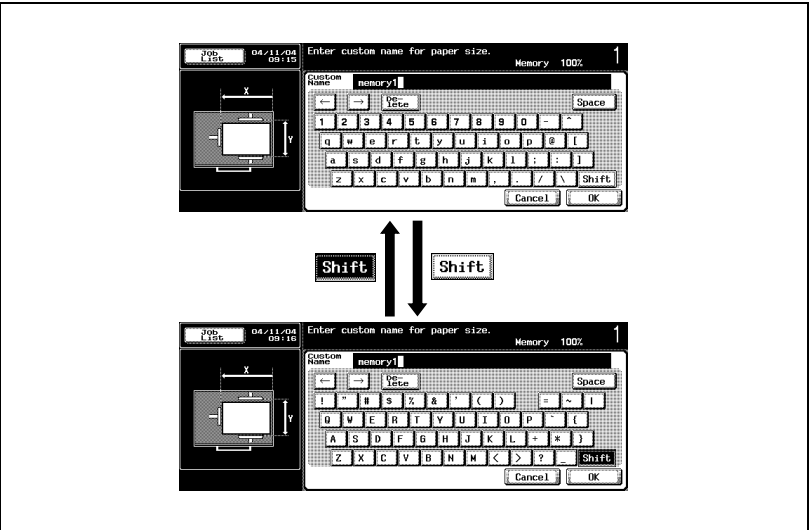



## To type text

- ➔ Touch the button for the desired character from the keyboard that appeared.
    - To type in uppercase letters or symbols, touch [Shift].
    - Numbers can also be typed in with the keypad.
- The entered characters appear in the text box.

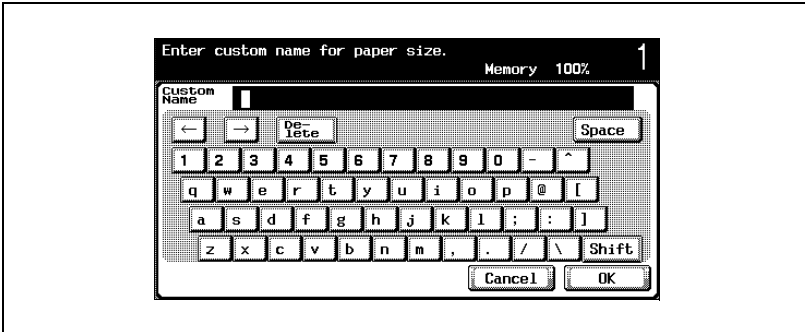

### Note

To cancel changes to the settings, touch [Cancel].

To clear all entered text, press the [C] (clear) key.



### Detail

To change a character in the entered text, touch [↔] and [↕] to move the cursor to the character to be changed, touch [Delete], and then type in the desired letter or number.

## List of Available Characters

Type	Characters
Alphanumeric characters / symbols	ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz [Space]!"#\$%&'()+,-./\;<=>?@[^_{}~*~0123456789



## 7.3 Glossary

Term	Definition
10Base-T/100Base-TX/1000Base-T	An Ethernet standard, which is a cable consisting of twisted copper wire pairs. The transmission speed of 10Base-T is 10 Mbps, of 100Base-TX is 100 Mbps, and of 1000Base-T is 1000 Mbps.
Active Directory	A service that manages all information such as hardware resources for servers, clients, and printers on a network supported by Microsoft and the attributes and access permissions of the users.
anonymous FTP	While normal FTP sites are protected by an account name and password, this type of FTP site can be used by anyone without a password by simply entering "anonymous" as the account name.
APOP	Abbreviation for Authenticated Post Office Protocol. An authentication method with encrypted passwords, which results in increased safety, as compared to the usual unencrypted passwords used by POP to retrieve e-mail messages.
AppleTalk	A generic name for the protocol suite developed by Apple Computer for computer networking.
Auto IP	A function for automatically acquiring the IP address. If acquisition of the IP address failed with DHCP, an IP address is acquired from the address space of 169.254.0.0.
bit	Abbreviation for Binary Digit. The smallest unit of information (data quantity) on a computer or printer. Displays data using 0 or 1.
BMP	Abbreviation for Bitmap. A file format for saving image data which uses the .bmp extension. Commonly used on Windows platforms. You can specify the color depth from monochrome (2 values) to full color (16,777,216 colors). Images are not usually compressed when saved.
Bonjour	Macintosh network technology for automatically detecting devices connected to the network and for specifying settings. Previously called "Rendezvous", the name was changed to "Bonjour" starting with Mac OS X v10.4.
Byte	Unit of information (data quantity) on a computer or printer. Configured as 1 byte equals 8 bits.
Client	A computer that uses the services provided by a server through a network.
Compact PDF	Compression method for reducing the data amount using the PDF format when converting color documents to data. The highest compression efficiency is achieved by identifying the text and image regions and using the resolution and compression method most appropriate for each region. The compact PDF format can be selected when converting documents to data using the scanning functions of this machine.
Contrast	The difference in intensity between the light and dark parts of the image (light/dark variation). An image with little light/dark variation is said to have a low contrast, and an image with large light/dark variation is said to have a high contrast.
CSV	Abbreviation for Comma Separated Values. One of the formats for saving database or spreadsheet data as a text file. (The file extension is ".csv".) The data, which is separated by commas (as the delimiter), can be shared by different applications.



Term	Definition
Default	The initial settings. The settings first selected when the machine is turned on, or the settings first specified when the function is selected.
Default Gateway	A device, such as a computer or router, used as a "gateway" to access computers not on the same LAN.
Density	An indication of the amount of darkness in the image.
DHCP	Abbreviation for Dynamic Host Configuration Protocol. A protocol in which a client computer on a TCP/IP network automatically specifies the network settings from the server. With collective management of the IP address for DHCP clients on the DHCP server, you can avoid duplication of an address and you can build a network easily.
DNS	Abbreviation for Domain Name System. A system that acquires the supported IP addresses from host names in a network environment. DNS allows the user to access other computers over a network by specifying host names, instead of difficult to memorize and understand IP addresses.
DPI (dpi)	Abbreviation for Dots Per Inch. A resolution unit used by printers and scanners. Indicates how many dots per inch are represented in an image. The higher the value, the higher the resolution.
Driver	Software that works as a bridge between a computer and a peripheral device.
Dynamic authentication (LDAP setting)	An authentication method option for connecting to the LDAP server from the multifunctional product. Select this option if the name and password for logging on to the LDAP server must be entered each time by the user when referencing the destination information from the LDAP server.
Ethernet	LAN transmission line standard.
File Extension	The characters added to the file name in order to differentiate file formats. The file extension is added after a period, for example, ".bmp" or ".jpg".
FTP	Abbreviation for File Transfer Protocol. A protocol for transferring files over the Internet or an intranet on the TCP/IP network.
Gateway	Hardware and software used as the point where a network is connected to a network. A gateway also changes data formats, addresses, and protocols according to the connected network.
Gradation	The light and dark levels of an image. As the number increases, smoother brightness variations can be reproduced.
Grayscale	Monochrome image expressive form using the gradation information from black to white.
GSS-SPNEGO/Simple/Digest MD5	Authentication methods for logging on to the LDAP server. The authentication method (GSS-SPNEGO, SIMPLE or Digest MD5) for the LDAP server differs depending on the server being used and the server settings.
Halftone	The method of producing the light and dark parts of an image through varying sizes of black and white dots.
Hard Disk	Large capacity storage device for storing data. The data can be stored even if the power is turned off.
Host Name	Displayed name of a device over a network.



Term	Definition
HTTP	Abbreviation for HyperText Transfer Protocol. A protocol used to send and receive data between a Web server and a client (Web browser). Documents containing images, recordings, and video clips can be exchanged with the expressive form information.
ICM	Abbreviation for Image Color Management. The color management system used by Windows. Color differences of input/output devices, such as monitors, scanners and printers, are adjusted to reproduce colors so that they are nearly the same on any device.
IMAP	Abbreviation for Internet Message Access Protocol. The protocol for retrieving e-mail messages with the function for managing mailboxes on the server. Currently, IMAP4 (the fourth version of IMAP) is most often used.
Install	To install hardware, operating systems, applications, printer drivers on to a computer.
IPP	Abbreviation for Internet Printing Protocol. A protocol that sends and receives print data and controls printers over the Internet on a TCP/IP network. Data can also be sent to printers in remote areas to print over the Internet.
IPX	A protocol used with NetWare and works at the network layer of the OSI reference model.
IP Address	A code (address) that is used to identify individual network devices over the Internet. A maximum of three digits for four numbers are displayed such as 192.168.1.10. IP addresses are assigned to devices, including computers, which are connected to the Internet.
J2RE	Abbreviation for Java 2 Runtime Environment. One type of JavaVirtual Machine (Java VM) in a program operating environment written in the object-oriented language Java, developed by Sun Microsystems. This is required to run applications that were created with Java.
Java	A programming language developed by Sun Microsystems that runs on most computers regardless of the installed hardware and operating system. However, in order to run Java applications, an operating environment called "Java Virtual Machine (Java VM)" is required.
JPEG	Abbreviation for Joint Photographic Experts Group. One of the file formats for saving image data. (The file extension is ".jpg".) The compression ratio is roughly 1/10 to 1/100. This format uses an effective method in the compression of continuous-tone images, such as photographs.
Kerberos	A type of network authentication system used by Windows 2000 or later. Used in Active Directory authentication. Users can be safely and efficiently authenticated with a two-phase authentication (user logon and network resource usage) on a dependable site set up on the network.
LAN	Abbreviation for Local Area Network. A network which connects computers on the same floor, in the same building, or in neighboring buildings.
LDAP	Abbreviation for Lightweight Directory Access Protocol. On a TCP/IP network, such as the Internet or an intranet, this protocol is used to access a database for managing environment information and the e-mail addresses of network users.



Term	Definition
LPD	Abbreviation for Line Printer Daemon. A printer protocol that uses TCP/IP and is platform-independent. Originally developed for BSD UNIX, it has become the standard printing protocol and can be used with any general computer.
LPR/LPD	Abbreviation for Line Printer Request/Line Printer Daemon. A printing method over a network in a Windows NT system or UNIX system. Using TCP/IP, you can output print data from Windows or Unix to a printer over a network.
Adobe® Flash®	Software developed by Adobe, Inc. and used to create data combining vector-graphic animation and sound, and the format of this data file. The bidirectional content can be manipulated using a keyboard and a mouse. The files can be kept relatively compact, and they can be accessed with the Web browser plug-in.
MAC Address	Abbreviation for Media Access Control address. With a special ID number for each Ethernet card, data can be sent and received between the cards. A number consists of 48 bits. The first 24 bits consist of a special number for each manufacture controlling and assigning IEEE. The last 24 bits consist of a number that the manufacturer assigns uniquely to the card.
Memory	Storage device for storing data temporally. When the power is turned off the data may or may not be erased.
NetBEUI	Abbreviation for NetBIOS Extended User Interface. A network protocol developed by IBM. By simply specifying the computer name, you can build a small-scale network.
NetWare	Network operating system developed by Novell. NetWare IPX/SPX is used as the communication protocol.
MH	Abbreviation for Modified Huffman. A data compression encoding method for fax transmissions. Documents containing mostly text are compressed to about 1/10 their original size.
MIB	Abbreviation for Management Information Base. In a TCP/IP transmission, this uses SNMP to define the management information format for a group of network devices. There are two formats: the manufacturer-specific private MIB and the standardized MIB.
MMR	Abbreviation for Modified Read. A data compression encoding method for fax transmissions. Documents containing mostly text are compressed to about 1/20 their original size.
NTLM	Abbreviation for NT LAN Manager. User authentication method used by Windows NT or later. With the MD4 and MD5 encoding methods, passwords are encoded.
NTP	Abbreviation for Network Time Protocol. The protocol for correctly adjusting the computer's internal clock over the network. In a hierarchical method, the time is adjusted with the server at the highest level using GPS to acquire the correct time, which is then referenced by each lower level host.
OCR	Abbreviation for Optical Character Reader. A device or software that converts handwritten or printed documents to text data by optically scanning it and, through comparison with a previously stored pattern, specifies the characters.
OS	Abbreviation for Operating System. Basic software for controlling the system of a computer.



Term	Definition
PASV	Abbreviation for PASSive. A mode for connecting to an FTP server from within a firewall. If this mode is not specified, the firewall will be considered inaccessible and the connection will be terminated, preventing the file from being sent.
Peer-to-peer	A network format that allows connected devices to communicate without using a dedicated server.
PDF	Abbreviation for Portable Document Format. An electronically formatted document which uses the .pdf extension. Based on the Post-Script format, you can use the free Adobe Acrobat Reader software to view documents.
Pixel	An image pixel. The smallest unit of an image.
POP	Abbreviation for Post Office Protocol. A protocol for retrieving e-mail messages from a mail server. Currently, POP3 (the third version of POP) is most often used.
POP Before SMTP	A user authentication method for sending e-mail messages. First, the reception operation is performed and the user is authenticated by the POP server. Then, IP addresses where the user was successfully authenticated by the POP server are permitted to use the SMTP server. This method prevents third parties without permission to use the mail server from sending mail messages.
Port Number	The number that identifies the transmission port for each process running on a computer on the network. The same port cannot be used by multiple processes.
Proxy Server	A server that is installed to act as an intermediary connection between each client and different servers to effectively ensure security over the entire system for Internet connections.
RAW port number	The TCP port number used when the RAW protocol is selected for Windows TCP printing. Usually set to 9100.
realm (IPP setting)	Region for performing security functions. This is constructed of authentication information such as the user name and password, and defines the security rules in the region.
referral setting (LDAP setting)	If there is no corresponding data on the LDAP server searched for the destination, specify which LDAP server should be searched next or specify an LDAP server. Specify whether or not the multifunctional product searches this specified LDAP server.
Resolution	Displays the ability to reproduce the details of images and print matter correctly.
Preview	A function that allows you to view an image before processing a print or scan job.
Property	Attribute information. When using a printer driver, various functions can be specified in the file properties. In the file properties, you can check the attribute information of the file.
Protocol	The rules that allow computers to communicate with other computers or peripheral devices.
Samba	UNIX server software that uses SMB (Server Message Block) so that UNIX system resources can be used from a Windows environment.



Term	Definition
Scanning	With the scanning operation of the scanner, an image is read while the row of image sensors is gradually moved. The direction that the image sensors are moved is called the main scanning direction, and the direction in which the image sensors are arranged is called the sub-scanning direction.
Screen Frequency	Indicates the density of dots used to create the image.
Single-Page TIFF	A single TIFF file that contains only a single page.
SLP	Abbreviation for Service Location Protocol. Services on a TCP/IP network and clients are automatically searched for.
SMB	Abbreviation for Server Message Block. A protocol that shares files and printers over a network and which is mainly used by Microsoft Windows.
SMTP	Abbreviation for Simple Mail Transfer Protocol. A protocol for sending and forwarding e-mail.
SNMP	Abbreviation for Simple Network Management Protocol. A management protocol in a network environment using TCP/IP.
SSL/TLS	Abbreviation for Secure Socket Layer/Transport Layer Security. The encoding method for safely transmitting data between the Web server and browser.
Subnet Mask	The unit used to divide a TCP/IP network into small networks (sub-networks). It is used to identify the bits in a network address that are higher than the IP address.
TCP/IP	Abbreviation for Transmission Control Protocol/Internet Protocol. The de facto standard protocol used by the Internet that uses IP addresses to identify each network device.
TCP Socket	Indicates that API for the network is used with TCP/IP. A transmission route is opened using this socket to input and output normal files.
TIFF	Abbreviation for Tagged Image File Format. One of the file formats for saving image data. (The file extension is ".tif".) Depending on the tag indicating the data type, information for various image formats can be saved in a single image data.
Thumbnail	A small image that shows the contents of the image or document file (the image displayed when the file was opened).
TWAIN	The interface standard for imaging devices, such as scanners and digital cameras, and for applications, such as graphics software. In order to use a TWAIN-compliant device, the TWAIN driver is required.
USB	Abbreviation for Universal Serial Bus. A general interface standard for connecting a mouse, printer, and other devices to a computer.
Uninstall	To delete software installed on a computer.
Web Browser	Software such as Internet Explorer and Netscape Navigator for viewing Web pages.
WINS	Abbreviation for Windows Internet Naming Service. A service for recalling named servers for the conversion of computer names and IP address in a Windows environment.
Zone	A name given in an AppleTalk network. This is used to group multiple devices on an AppleTalk network.



## 7.4 Index

### A

Abbreviated destinations *4-12*  
Access *3-3*  
Access setting *4-155*  
Accessibility *3-4*  
Account track information *5-22*  
Account track registration *5-63*  
Action for Invalid Certificate *4-143*  
Address book *3-14, 3-28, 3-42, 4-37, 5-23, 5-90*  
Address book list *4-42*  
Address direct input *3-19, 3-31, 3-45*  
Address type symbol display *4-39*  
Administrator mode *5-17*  
Administrator mode auto logout *5-137*  
Administrator mode settings via Web Connection *5-4*  
Administrator setting screen *4-10*  
Annotation user box *4-50*  
AppleTalk settings *4-88, 5-109*  
Application registration *5-71*  
Authentication setting *4-110, 4-158*  
Auto logout *5-137*

### B

Black compression level *4-40*  
Bonjour setting *4-151*  
Book scanning *3-67*  
Booklet pagination *3-70*  
Box *3-3*  
Box administrator *5-15*  
Box destination registration *4-23*

### C

C *3-4*  
Cache setting *5-10*  
Center erase *3-76*  
Certificate creation *5-124*  
Certificate installation *5-126*  
Checking job details *3-85*  
clear *3-4*  
Connecting to network *2-13*  
Contrast dial *3-4*  
Control Panel *3-3*  
Control panel *4-3*  
Copy *3-4*  
Current jobs list *3-94*

### D

Data *3-4*  
Data formats *4-40*  
Default scan settings *2-12*  
Default tab *4-34*  
Deleting destinations *3-89*  
Density *3-63*  
Destination deletion *3-89*  
Destination registration *2-10, 4-12*  
Destination settings *2-10, 4-12*  
Device settings *4-117*  
Direct input *3-19, 3-31, 3-45*  
Duplex/simplex setting *3-55*

### E

E-mail destination registration *4-12*  
E-mail RX (POP) settings *4-113, 5-115*  
E-mail settings *3-91, 4-30*  
E-mail subject registration *4-30, 5-47*  
E-Mail subject/text list *4-48*



E-mail text registration *4-32, 5-49*  
E-mail TX (SMTP) settings *4-103, 5-117*  
Entering text *7-6*  
Erasing frames *3-74*  
Error list *6-3*  
Export/import address book *5-90*

## F

Fax *3-3*  
File type settings *3-51*  
File types *3-51*  
Frame erase *3-74*  
FTP destination registration *4-15*  
FTP server settings *5-102*  
FTP settings *4-80, 5-102*

## G

Group *5-29*  
Group addresses *3-11, 3-25, 3-39*  
Group destination registration *4-25, 5-29*  
Group list *4-44*

## H

Help *3-4*  
http server setting *4-72*

## I

Import/export address book *5-90*  
IP address filtering *5-95*  
IPP print settings *4-72, 5-99*  
IPP support operations *4-75*

## J

Job detail check *3-85*  
Job history list *3-95*

## K

Keypad *3-4*

## L

LDAP server registration *4-92*  
LDAP settings *4-92*  
LDAP settings (enabling) *4-90*  
Logging out automatically *5-137*  
Login *5-13, 5-15, 5-17*  
Logout *5-11*  
LPD settings *4-137*

## M

Main Power *3-4*  
Manual conventions *1-12*  
Mode Check *3-4*

## N

Neg-/pos. reverse *3-79*  
NetWare settings *4-66, 5-96*  
NetWare status *4-71, 5-98*  
Network connection *2-13*  
Network error list *6-3*  
Network settings *2-9*  
Network TWAIN *5-52*  
Non-image area erase *3-78*  
Notification item settings *4-125*  
NTP server address setting *4-121*

## O

One-Touch registration list *4-42*  
OpenAPI access setting *4-155*  
OpenAPI authentication setting *4-158*  
OpenAPI port number *4-156*  
OpenAPI settings *4-155, 5-138*  
OpenAPI SSL setting *4-157*  
Original settings *3-64*  
Original type setting *3-56*



**P**

PageScope Web Connection access *5-7*  
PageScope Web Connection user mode page *5-8*  
PING confirmation settings *4-132*  
PING TX address setting *4-134*  
POP server address setting *4-116*  
POP settings *4-113, 5-115*  
Port number *4-65, 4-156*  
Prefix/suffix settings *4-138, 5-88*  
Print settings *4-72, 5-99, 5-108*  
Printer information *4-76*  
Printer name *4-76*  
Program *5-32*  
Program default *4-35*  
Program destination registration *4-27, 5-32, 5-43*  
Program list *4-46*  
Program settings *2-12*  
Programs *3-9, 3-23, 3-37*  
Public user *5-13*

**R**

RAW port number *4-65*  
Registered user *5-15*  
Registering box destinations *4-23*  
Registering destinations *2-10, 4-12*  
Registering e-mail destinations *4-12*  
Registering e-mail subjects *4-30, 5-47*  
Registering e-mail text *4-32, 5-49*  
Registering FTP destinations *4-15*  
Registering group destinations *4-25, 5-29*  
Registering LDAP servers *4-92*  
Registering program destinations *4-27, 5-32, 5-43*

Registering scan destinations *5-26*  
Registering SMB destinations *4-19*  
Registering temporary destinations *5-45*  
Reset *3-4*  
Resolution setting *3-54*

**S**

Saving data in boxes *2-8*  
Scan *3-3*  
Scan basic screen *4-34*  
Scan data formats *4-40*  
Scan destination registration *5-26*  
Scan screen *3-6, 4-6*  
Scan settings *2-11, 2-12, 3-49*  
Scan size setting *3-57*  
Scan to e-mail *2-5, 3-8*  
Scan to FTP *2-6, 3-22*  
Scan to SMB *2-7, 3-35*  
Scanner transmission log *3-94*  
Scanning functions *2-4*  
Scanning page spreads *3-67*  
Search conditions *4-100*  
Search default setting *4-102*  
Sending data to FTP server *2-6, 3-22*  
Sending data via e-mail *2-5, 3-8*  
Sending data via network (SMB) *2-7, 3-35*  
Separate scan *3-80*  
Simplex/duplex setting *3-55*  
SLP settings *4-136*  
SMB destination registration *4-19*  
SMB print settings *5-108*  
SMB settings *4-83, 5-108*  
SMTP authentication setting *4-110*  
SMTP detail *4-109*  
SMTP server address setting *4-107*



SMTP settings *4-103, 5-117*  
SNMP settings *4-145, 5-103*  
Specifications *7-3*  
SSL setting *4-157*  
SSL/TLS settings *5-120*  
Start *3-4*  
Status notification settings *4-123*  
Support operations *4-75*  
System configuration using  
administrator mode *5-51*

## T

TCP socket setting *4-153*  
TCP/IP settings *4-56, 4-59, 5-93*  
Temporary destination registration  
*5-45*  
Text entry *7-6*  
Time adjustment settings *4-119*  
Total counter notification setting  
*4-126*  
Touch panel *3-3*

## U

Uploading data to FTP server *2-6,*  
*3-22*  
User authentication *5-20, 5-53*  
User mode auto logout *5-137*  
User mode settings via PageScope  
Web Connection *5-3*  
User setting screen *4-8*  
Utility/Counter *3-4*

## W

Web browser cache setting *5-10*

## Z

Zoom *3-59, 3-61*