

Ferrari 1200 Series

Quick Guide

Copyright © 2008. Acer Incorporated.
All Rights Reserved.

Ferrari 1200 Series Quick Guide
Original Issue: 11/2008

This company makes no representations or warranties, either express or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose. Although care has been taken to ensure accuracy, this company shall not be liable for any errors (including, but not limited to, typos, factual errors, etc.) contained in this publication.

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Ferrari 1200 Series Notebook PC

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

Produced under license of Ferrari Spa. FERRARI, the PRANCING HORSE device, all associated logos and distinctive designs are trademarks of Ferrari Spa. The body designs of the Ferrari cars are protected as Ferrari property under design, trademark and trade dress regulations.

First things first

We would like to thank you for making an Acer notebook your choice for meeting your mobile computing needs.


Your guides

To help you use your Acer notebook, we have designed a set of guides:

First off, the **Just for Starters...** poster helps you get started with setting up your computer.

The **Ferrari Series Generic User Guide** contains useful information applying to all models in the Ferrari product series. It covers basic topics such as Acer's Empowering Technology, using the keyboard, audio, etc. Please understand that due to its nature, the **Generic User Guide** as well as the **AcerSystem User Guide** mentioned below will occasionally refer to functions or features which are only contained in certain models of the series, but not necessarily in the model you purchased. Such instances are marked in the text with language such as "only for certain models".

The **Quick Guide** introduces you to the basic features and functions of your new computer. For more on how your computer can help you to be more productive, please refer to the **AcerSystem User Guide**. This guide contains detailed information on such subjects as system utilities, data recovery, expansion options and troubleshooting. In addition it contains warranty information and the general regulations and safety notices for your notebook. It is available in Portable Document Format (PDF) and comes preloaded on your notebook. Follow these steps to access it:

- 1 Click on  **Start, All Programs, AcerSystem.**
- 2 Click on **AcerSystem User Guide.**



.....

Note: Viewing the file requires Adobe Reader. If Adobe Reader is not installed on your computer, clicking on **AcerSystem User Guide** will run the Adobe Reader setup program first. Follow the instructions on the screen to complete the installation. For instructions on how to use Adobe Reader, access the **Help and Support** menu.




Your Ferrari notebook tour

After setting up your computer as illustrated in the **Just for Starters...** poster, let us show you around your new Ferrari notebook.

Top view

 






#	Icon	Item	Description
1		Acer Crystal Eye webcam	Web camera for video communication.

#	Icon	Item	Description
2		Display screen	Also called Liquid-Crystal Display (LCD), displays computer output (Configuration may vary by models).
3		Empowering key	Launch Acer Empowering Technology
4		Power button	Turns the computer on and off.
5		Keyboard	For entering data into your computer.
6		Palmrest	Comfortable support area for your hands when you use the computer.
7		Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
8		Speakers	Left and right speakers deliver stereo audio output.
9/13		Status indicators	Light-Emitting Diodes (LEDs) that light up to show the status of the computer's functions and components. Please refer to the Generic User Guide for more details.
10		Click buttons (left and right)	The left and right buttons function like the left and right mouse buttons.
11		Acer Bio-Protection fingerprint reader	Acer Bio-Protection fingerprint reader supporting Acer FingerNav 4-way control function.
12		Easy-launch buttons	Buttons for launching frequently used programs. Please refer to the Generic User Guide for more details.
14		Microphone	Internal microphone for sound recording.




Closed front view



 
#	Icon	Item	Description
1		4-pin IEEE 1394 port	Connects to IEEE 1394 devices.
2		Headphones/speaker/ line-out jack with S/PDIF support	Connects to audio line-out devices (e.g., speakers, headphones).
3		Line-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman, mp3 player)
4		Microphone jack	Accepts inputs from external microphones.
5		Easy-launch buttons	Buttons for launching frequently used programs. Please refer to the Generic User Guide for more details.
6		Infrared port	Interfaces with infrared devices (e.g., infrared printer and IR-aware computer).





Rear view

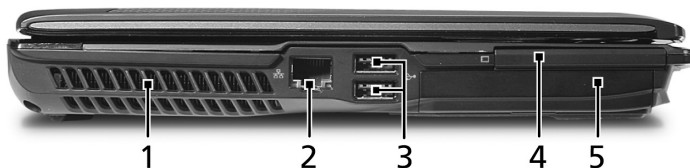

#	Icon	Item	Description
1		Kensington lock slot	Connects to a Kensington-compatible computer security lock.
2		Acer EasyPort IV connector	Connects to Acer EasyPort IV.
3		External display (VGA) port	Connects to a display device (e.g., external monitor, LCD projector).

Left view



 
#	Icon	Item	Description
1		Ventilation slots	Enable the computer to stay cool, even after prolonged use.
2		Ethernet (RJ-45) port	Connects to an Ethernet 10/100/1000-based network.
3		USB 2.0 port	Connect to USB 2.0 devices (e.g., USB mouse, USB camera).
4		ExpressCard/54 slot	Accepts one ExpressCard/54 module.
5		Hard disk bay	Houses the computer's hard disk (secured with screws).





Right view

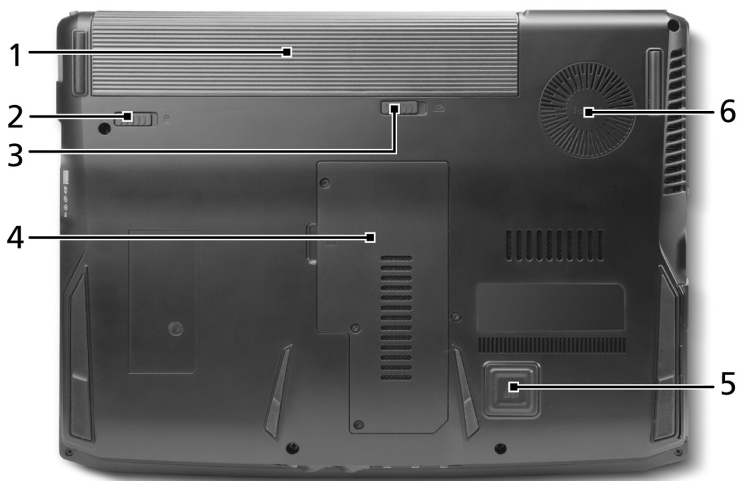

#	Icon	Item	Description
1		Optical drive eject button	Ejects the optical disk from the drive.
2		Optical disk access indicator	Lights up when the optical drive is active.
3		Optical drive	Internal optical drive; accepts CDs or DVDs.
4		5-in-1 card reader	<p>Accepts Secure Digital (SD), MultiMediaCard (MMC), Memory Stick (MS), Memory Stick PRO (MS PRO), xD-Picture Card (xD).</p> <p>Note: Push to remove/install the card. Only one card can operate at any given time.</p>
5		USB 2.0 port	Connects to USB 2.0 devices (e.g., USB mouse, USB camera).
6		DC-in jack	Connects to an AC adapter.
7		Modem (RJ-11) port	Connects to a phone line.

Base view



 
#	Icon	Item	Description
1		Battery bay	Houses the computer's battery pack.
2		Battery lock	Locks the battery in position.
3		Battery release latch	Releases the battery for removal.
4		Memory compartment	Houses the computer's main memory.
5		Acer Disk Anti-Shock Protection (DASP)	Protects the hard disk drive from shocks and bumps.
6		Ventilation slots and cooling fan	Enable the computer to stay cool, even after prolonged use. Note: Do not cover or obstruct the opening of the fan.

Bluetooth optical mouse



#	Item	Description
1	Left click button	Press the left button to perform selection and execution functions.
2	Scroll wheel	To scroll up or down a page.
3	Right click button	Press the right button to perform selection and execution functions.
4	Status indicator	Indicates the Bluetooth connection/pairing status and the mouse's battery status.
5	Battery release latch	Releases the battery for removal.
6	Bluetooth connection/pairing button	Enable/disables the Bluetooth function.
7	Power button	Turns the mouse on and off.

Bluetooth VoIP phone (optional)

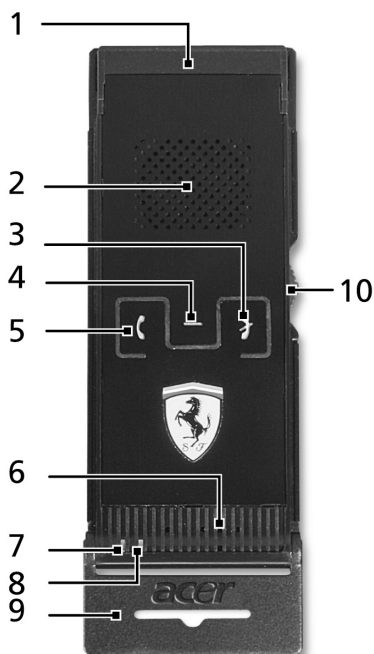

#	Item	Description
1	ExpressCard interface connector	Connects the computer's ExpressCard interface.
2	Speaker	Speaker delivers audio output.
3	Cancel button	Hang up the call. Hold for at 2 seconds to power on/off.
4	Function button	Hold for least 3 seconds to enable BT pairing. Switch between headset or hands-free after the call is accepted.
5	OK button	Answer an incoming call.
6	Microphone	Internal microphone for sound recording.
7	LED-Amber	Flashing - Power low Blinking - Switched on but not connected to an Acer Laptop.
8	LED-Blue	Flashing - Busy pairing Blinking - Connected to an Acer laptop
9	Flip	Flip out the internal microphone.
10	Volume up/down button	Increases/decreases the sound volume or scroll up/down a page.

Specifications

Operating system	<ul style="list-style-type: none"> Genuine Windows Vista®
Platform	<ul style="list-style-type: none"> AMD Better By Design program, featuring: <ul style="list-style-type: none"> AMD Turion™ X2 Ultra dual-core mobile processor* AMD Turion™ X2 dual-core mobile processor* AMD Athlon™ X2 dual-core mobile processor* AMD M780G Chipset Acer InviLink™ Nplify™ 802.11b/g/Draft-N* Acer InviLink™ 802.11b/g*
System memory	<ul style="list-style-type: none"> Dual-Channel SDRAM support Up to 2 GB of DDR2 667 MHz memory, upgradeable to 4 GB using two soDIMM modules
Display	<ul style="list-style-type: none"> 12.1" WXGA 1280 x 800
Graphics	<ul style="list-style-type: none"> ATI Radeon™ X1250
Audio	<ul style="list-style-type: none"> Dolby®-optimized surround sound system with two built-in stereo speakers High-definition audio support S/PDIF (Sony/Philips Digital Interface) support for digital speakers MS-Sound compatible Acer PureZone technology with two built-in stereo microphones
Storage subsystem	<ul style="list-style-type: none"> 2.5" hard disk drive Optical drive option: DVD-Super Multi double-layer drive 5-in-1 card reader
Communication	<ul style="list-style-type: none"> Acer Video Conference, featuring integrated Acer Crystal Eye webcam WLAN: <ul style="list-style-type: none"> Acer InviLink™ Nplify™ 802.11b/g/Draft-N* Acer InviLink™ 802.11b/g* WPAN: Bluetooth® 2.0+Enhanced Data Rate (EDR) LAN: Gigabit Ethernet; Wake-on-LAN ready Modem: 56K ITU V.92; Wake-on-Ring ready

Privacy control	<ul style="list-style-type: none"> • Enhanced Acer Disk Anti-Shock Protection (DASP) • Acer Bio-Protection fingerprint solution • BIOS user, supervisor, HDD passwords • Kensington lock slot
Dimensions and weight	<ul style="list-style-type: none"> • 304 (W) x 228 (D) x 34 (H) (mm) (11.97 x 8.98 x 1.33 inches) • 1.99 kg (4.29 lbs.) with 6-cell battery pack
Power subsystem	<ul style="list-style-type: none"> • ACPI 3.0 • 64 W 5800 mAh • 3-pin 65 W AC adapter
Special keys and controls	<ul style="list-style-type: none"> • 84-/85-key keyboard • Touchpad pointing device
I/O interface	<ul style="list-style-type: none"> • Acer EasyPort IV connector • ExpressCard™/54 slot • Acer Bio-Protection fingerprint reader • 5-in-1 card reader (SD/MMC/MS/MS PRO/xD) • USB 2.0 port • IEEE 1394 port • External display (VGA) port • Fast infrared (FIR) port • Headphones/speaker/line-out jack with SPDIF support • Microphone-in jack • Line-in jack • Ethernet (RJ-45) port • Modem (RJ-11) port • DC-in jack for AC adapter
Environment	<ul style="list-style-type: none"> • Temperature: <ul style="list-style-type: none"> • Operating: 5 °C to 35 °C • Non-operating: -20 °C to 65 °C • Humidity (non-condensing): <ul style="list-style-type: none"> • Operating: 20% to 80% • Non-operating: 20% to 80%



.....

Note: * Only for certain models



.....

Note: The specifications listed above are for reference only. The exact configuration of your PC depends on the model purchased.