





□



Warning

Adjusting the Handset Rest

When you connect your phone, you might want to adjust the handset rest to ensure that the receiver will not slip out of the cradle. See the table below for instructions.

Switch between calls on one line

Press the **Hold** button to put the existing call on hold and to retrieve the previously held call.

Switch from a connected call

Tips

- Only one call can be active at any given time; the other call will be placed on hold automatically.
- Incoming calls are initially shown on the top of the display but move to the bottom once you answer them.

Using Feature Menus

The following tips can help you use feature menus.

Tips

-

Customizing Phone Settings

You can personalize your Cisco Unified IP Phone by adjusting settings, as described in the tables below.

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA

www.cisco.com

Tel: 408 526-4000
800 553-NETS (6387)

Fax: 408 5234-a Tw f4dA-8T.Wopeat(3-NEaro)-4(te(3-NEr(er)4.4(s)TJ /F5 1 Tf 0 -1.00860TD 0.004758c 0.0023)-5)6.sco1(o)w f-3-NEms Inter