



 
THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT

















**Warnung WICHTIGE SICHERHEITSHINWEISE**

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und

**Varning! VIKTIGA SÄKERHETSANVISNINGAR**

Denna varningssignal signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanliga förfaranden för att förebygga olyckor. Använd det nummer som finns i slutet av varje varning för att hitta dess översättning i de översatta säkerhetsvarningar som medföljer denna anordning.

**SPARA DESSA ANVISNINGAR**

**Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

Este símbolo de aviso significa perigo. Você se encontra em uma situação em que há risco de lesões



---

**Warning**

When installing the product, please use the provided or designated connection cables/power cables/AC adaptors. Using any other cables/adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL-certified cables (that have the "UL" shown on the code) for any other electrical devices than products designated by CISCO. The use of cables



<sup>^</sup>  
**Warning** **Hot surface.**



# CHAPTER













## Reset Button

The Reset button resets the router configuration to th



*Figure 1-8 Sample Installation*

**Installation**

Users need to provision a 8 x 8" flat mounting surface with a mounting hole on the roof of the vehicle







**4G/LTE Case 5:**





















## CHAPTER



















## Connecting a PC, Server, or Workstation

To connect a PC (or other Ethernet devices) to an Ethernet switch port, follow these steps:













CHAPTER









After the initial configuration file is created, you can use the Cisco IOS CLI to perform additional





```
updating IOS image...  
Sending file modes: C0644 61505652 ir800-universalk9-mz.SSA.156-0.3.T
```



CHAPTER 5

# Guest Operating System (Guest OS) Installation and Configuration

---

*Figure*







## Configuring Guest OS Interface on Cisco IOS











CHAPTER





Military Standard

MIL-STD-810G Method 514.6: Procedure 1 Category 4, Secured Cargo - Common

MIL-STD-810G Method 514.6: Procedure 1 Category 20, Ground Vehicles