


Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883





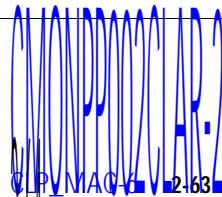

CLP_MACV 2-63

CLP_XBAR Messages 2-63

CLP_XBAR-2 2-63

CLP_XBAR-6 2-63

CLUSTER_TEST_APP Messages 2-63

CLUSTER_TEST_APP-5 2-63

CLUSTER Messages 2-64

CLUSTER-2 2-64

CLUSTER-5 2-67

CMND Messa3

EPLD_AUTO Messages	2-137
EPLD_AUTO-2	2-137
EPLD_UPGRADE Messages	2-137
EPLD_UPGRADE-2	2-137
EPP Messages	2-138
EPP-5	2-138
ETH-PORT-SEC Messages	2-138
ETH-PORT-SEC-3	2-138
ETH-PORT-SEC-5	2-140
ETHPORT Messages	2-140
ETHPORT-2	2-141
ETHPORT-3	2-141
ETHPORT-4	2-143
ETHPORT-5	2-143
ETH_PORT_CHANNEL Messages	2-154
ETH_PORT_CHANNEL-1	2-154
ETH_PORT_CHANNEL-2	2-155
ETH_PORT_CHANNEL-3	2-155
ETH_PORT_CHANNEL-4	2-158
ETH_PORT_CHANNEL-5	2-158
ETH_PORT_CHANNEL-6	2-161
ETH_PORT_CHANNEL-7	2-161
EUREKA_USD Messages	2-162
EUREKA_USD-3	2-162 259.86 326.64 Tm0 g.0015 Tc 1 G68 Tm0 0 1 rg..00025Tc-.00239TwEUVMCMess)4.59age)4.36

EX_SYSLOG-0	2-166
EX_SYSLOG-1	2-166
EX_SYSLOG-2	2-166
EX_SYSLOG-3	2-166
EX_SYSLOG-4	2-166E

MCAST-4	2-385
MCAST-5	2-386
MCECTEST Messages	2-386
MCECTEST-3	2-386
MCECTEST-5	2-387
MCECTEST-6	2-387
MCM Messages	2-387
MCM-2	2-387
MCM-5	2-388
MCM-6	2-388
METROPOLIS_USD Messages	2-388
METROPOLIS_USD-3	2-388
MFDM Messages	2-388
MFDM-2	2-389
MODULE Messages	2-389
MODULE-2	2-390
MODULE-3	2-394
MODULE-4	2-394
MODULE-5	2-395
MODULE-6	2-396
MONITOR Messages	2-396
MONITOR-3	2-397
MONITOR-5	2-397
MTM Messages	2-397
MTM-SLOT#-0	2-398
MTM Messages	2-398
MTM-SLOT#-1	2-398
MTM Messages	2-398
MTM-SLOT#-2	2-398
MTM Messages	2-400
MTM-SLOT#-5	2-400
MTM Messages	2-400
MTM-SLOT#-6	2-400
NFM Messages	2-401
NFM-2	2-401
NFM-3	2-402
NFM-4	2-403
NFM-5	2-404
NFM-6	2-404
NFM-7	2-405



SME_CPP-SLOT#-2	2-588
SME_CPP-SLOT#-3	2-589
SME_CPP-SLOT#-4	2-593
SNMPD Messages	2-593
SNMPD-1	2-593
SNMPD-2	2-593
SNMPD-3	2-593
SNMPD-4	2-593
SNMPD-5	2-594
SNMPD-6	2-594
SNMPD-7	2-594

S T\$NM9Ns)4s56\$ ReJ%5 1 T@ 0 23544 re7 Tm0 0 10029M)54€_)0812662TJ%6 1 Tf0@ 0 10986 53460 Tm80



CHAPTER

1

Introduction to System Messages for Cisco

■ System Log Message Format

FACILITY is a code consisting of two or more uppercase letters that indicate the facility to which the system message refers. A facility is a hardware device, a protocol, a feature, or a module of the system software.

System message **SEVERITY** codes range from 0 to 7 and reflect the severity of the condition. The lower the number, the more serious the situation. [Table 1-2](#) lists the severity levels.

MNEMONIC is a code that uniquely identifies the system message.

Message-text is a text string that describes the condition. This portion of the message might contain detailed information about the event, including terminal port numbers, network addresses, or addresses that correspond to locations in the system memory address space. Because the information in these variable fields changes from message to message, it

■ System Log Message Format

FACILITY is a code consisting of two or more uppercase letters that indicate the facility to which the system message refers. A facility is a hardware device, a protocol, a feature, or a module of the system software.

System message SEVERITY codes range from 0 to 3 and reflect the severity of the condition. The lower the number, the more serious the situation.



CHAPTER





ACLLOG-6

Error Message ACLMGR-4-PSS_VERSION_MISMATCH: PSS [dec] Code [dec]

Explanation There was a version mismatch between the ACLMGR service and one of its persistent stores. The persistent store information has been translated to the new format.

Recommended Action No action is required.

Error Message ACLMGR-6-ACLMGR_PPF_NOTIF: PPF notification: [chars]

Explanation The PPF generated notification

Recommended Action No action is required.

Error Message ACLMGR-6-BECAME_ACTIVE: Became ACTIVE from standby mode

Explanation The ACLMGR service on the standby supervisor became active and it is ready to serve client requests.

 
Recommended Action No action is required.

Error Message ACLMGR-6-BECAME_STDBY: Became STANDBY from active mode

Explanation Recommended action: Standby mode

 
Explanation

e. Tc6nde clc up a rly9.963i:PSSled18.6265.4€ 6nnJJP3 1 Tf9.4020224 Tc-127346 Tw[5he]5









 















Error Message CALLHOME-3-MESSAGE_SIZE_EXCEED: message size for callhome alert:[chars] exceeds maximum limit for destination profile:[chars]

 Explanation Message size for callhome alert:[chars] exceeds maximum limit for destination







CLOUD Messages

This section contains the CLOUD messages.

CLOUD-2





CMPPROXY-5

Error Message CMPPROXY-5-LOG_CMP_AAA_FAILURE: Authentication failed for a login from CMP (on module [dec])

Explanation A login attempt has been denied access from Connectivity management processor (CMP) as authentication did not succeed

Recommended Action No action is r32 597.8g2Lq4.3(nu-1.6(ilr6(ed)5.3(n.)]TJ/F5 1 Tf9 0 0 9 164 656.448T





CORE-DMON-3

Error Message CORE-DMON-3-NO_SPACE: Failed to save core file [chars]. Try removing existing core fileiving .6.0@f7.90 296 6647ref1475 Tc.0\P(.2(xMessa)plaMe

CTS-2

Error Message











 
DEVICE_TEST-4

Error Message DEVICE_TEST-4-THREAD_CREATE_FAIL: Thread creation failed

Explanation Device Test process could not create threads

Recommended Action No action is required.

Error Message



 
Error Message DHCP_SNOOP-3-INVDHCPPKTS: Validation errors while processing DHCP packet received on interface [chars] vlan [dec] Reason:[chars]. Dropping the packet
















Error Message

 Ers2.9 Td5.8gy]J#75 1 Tf6.760 0 TD05 Tc-.0678 TwDOST1X-3-NOST_DOT1X_SCAPABLE:fchars]Sy





ELTM-5

Error Message ELTM-5-EXT_COMP_ERR: [chars] component error [chars]

Explanation Recently applied Multicast config on the interface was unsuccessful, so reverting to the

EOU-6

 
Error Message EOU-6-AAA_DOWN: Default Policy ip: [chars]:retained

Explanation Policy retained

Recommended Action No action is required.

Error Message group7] lic]Eysucceeed/notD7(]:retain)6.7(82TTm.e(y (76D9584.52x6.76 06.2(p









Error Message ETHPORT-5-IF_TRUNK_DOWN: Interface [chars], vlan [chars] down

Explanation Interface [chars] is trunking, VLANs [chars] are down

Recommended Action

Error Message ETH_PORT_CHANNEL-3-PCM_HWCFG_FAIL_ERROR: Port-channel:[chars] mbr:[chars] SAP [dec] returned error [chars] for opc [chars]; if lacp port-channel please collect <show tech-support lacp all

Explanation Port-channel hwcfg fail error

Recommended Action No.7([(0 0 9 D_6Cf629.1m 144 705 Tm0 g.0075 Tc.0038 Tw[(Er)-6.2(ror)-6.2(Mess













Error Message FCDOMAIN-6-FCIDNOTSTORED: FCIDs not stored

 
Explanation FCIDs not stored.

Recommended Action No action is required.

Error Message FCDOMAIN-6-FCIDP_ENABLED_DOM_TYPE_PREFERRED: FCID persistency is








Error Message FDMI-3-PSS_ERROR: PSS operation [chars] returned err: [hex]

Explanation [chars] specifies the context where the failure occurred and 0x[hex] specifies the err

 Recommended Action



















FSPF-4

Error Message FSPF-4-FC2_DOWN_INTF: Received FC2 packet on DOWN interface [chars]

Explanation FSPF received a FC2 packet on inactive interface [chars].

Recommended Action This message may be printed for the

FVP-2

Error Message FVP-2-GENERAL_ERROR: [chars]

Explanation The FVP Manager has encountered an critical error. The description of error is [str.]

Recommended Action No action is required.

Error Message FVP-2-MALLOCGENEm. 0 [dec] bytes

Explanation The FVP Manager could not allocate memory.

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAC for support.

Error Message FVP-2-PSS_BKP_PSS_MISMATCH: Block [dec]: PSS: Not Free; BKPLN PROM: Free

Explanation This FVP Manager detected a discrepancy between the information on the chassis and that in its persistent information databases. The persistent information database has been updated with the information on the chassis.

Recommended Action No action is required.

Error Message FVP-2-PSS_ERROR: [chars]

Explanation The FVP Manager encountered error while operating on a persistent storage database.

Recommended Action No action is required. 

FVP-3

 
Error Message FVP-3-FVPD_PSS_Cm. 0 [chars] PSS found corrupted

Explanation















ILC_HELPER Messages

This section contains the ILC-HELPER messages.

ILC_HELPER-2

Error Message

IM-5

IPFC Messages

This section contains the IPFC messages.

IPFC-2

Error Message IPFC-2-ALLOC_MEMORY: Memory allocation failed

Explanation The service failed to allocate a block of dynamic memory.

Recommended Action No action is required.

IPFC-3

Error Message IPFC-3-INIT_FAILED: Initialization failed. Component [chars]

Explanation The service failed to start. The failure occurred while initializing the component [chars].

Recommended Action Show processes to check the status of

Error Message IPQOSMGR-2-QOSMGR_MTS_REGISTRATION_FAILED: MTS options setting to [hex] failed for opCode: [dec].

Explanation MTS options setting to [hex] failed for opCode: [dec].

Recommended Action No action is required.

Error Message IPQOSMGR-2-QOSMGR_NETWORK_QOS_POLICY_CHANGE: Policy [chars] is now active

Explanation [chars] is the new active network-qos policy

Recommended Action No action is required.

Error Meq1f5.w§J7 1 Tf6.7532 TDTD0 Tc.-0137 Tw[IPQ.7(MGR-12-7QOS_PR-)P.7QOSSAILEDU.7R_M PoFai.7R_d)o)7odo P

Ex Explanation

IF, (a)2cQe6.7(sa(s)-6J/-6.2.0752 027Rec4 S1676 -.0036 Tw1[(ChaC nf)r.21 Dti265S1 Tf9SAIL53.96 TD.0 /-6 IF, (a)2cr

Error Message IPS_SB_MGR-SLOT#-4-NODE_NOT_COMPAT_WITH_CURRENT: svc-node[dec] image is not compatible with current node image

Explanation The new svc image is not compatible with the svc image currently running on the node

Recommended Action Please contact your support representative

Error Message IPS_SB_MGR-SLOT#-4-NODE_NOT_COMPAT_WITH_SUP: svc-node[dec] image is not compatible with system image

Explanation The svc image on the node is not compatible with the supervisor image.

Recommended Action Please contact your support representative

 
IPS_SB_MGR-SLOT#-6

Error Message IPS_SB_MGR-SLOT#-6-SBMGR_EVENT: Sbmgr event: [chars]

Explanation This is an event log of sb_mgsTJ/F3 1gc-1()]T4(og)6(a)]T4(e)-5.8isTJ/ng to a poDd~~D~~Recomm













Error Message IVR-3-ZS_POLICY_IS_PERMIT_ZS_DEACTIVATED: Default zone behavior policy is permit on VSAN [dec] and regular zoneset deactivated

Explanation Default zone behavior is permit and regular zoneset is deactivated. Inter-VSAN zone members may not be able to communicate.

Recommended Action No action is required.

IVR-4

Error Message IVR-4-AUTO_TOPOLOGY_UPDATE_DISCARDED: [chars]

Explanation

Error Message IVR-5-IVZ_ACTIVATED_VSAN: Inter-VSAN zoneset [chars] activated in VSAN [dec]

Explanation











LIM-5-IF_DOWN_NON_PARTICIPATING: Interface [chars] is down (Non participating)





MFDM-2

Error Message MFDM-2-DI_REUSE: LTL node exists with DI [dec] oiflist_index [dec] type [dec] and same DI returned for oiflist_index [dec] type [dec] Please collect show tech-support forwarding distribution l2/l3 multicast and show tech-support pixm.

Explanation PIXM returned duplicate DI.

 
Recommended Action No action is required.

Error Message MFDM-2-DOWNLOAD_TIMEOUT: Download of L2/L3 route databases timed out : download_in_progress_slots [hex i. tio D.7(ownlo(r s)6.7(-DOWNLO oi)io Dn3 out)eppixm.

Error Message MODULE-2-XBAR_DIAG_FAIL: Xbar [dec] (Serial number: [chars]) reported failure [chars] due to [chars] in device [chars] (device error [hex])

Explanation The xbar in slot [decimal digit] reported a failure in the runtime diagnostic. Module





Error Message

MTM Messages

MTM-SLOT#-5







 


 












Error Message PLATFORM-5-PS_STATUS: PowerSupply [dec] current-status is [chars]
[chars]

Explanation Module in slot [decimal digit] changed status.

Recommended Action No action is required.

Error Message PLATFORM-5-XBAR_PWRDN: Xbar [dec] powered down (Serial number
[chars])

Explanation The xbar in slot [decimal digit] is powered down.

Recommended Action Please perform a
showmodulexbar','showplatforminternalallmodule[decimaldigit]'and'showmoduleinternalallmodul
e[decimaldigit]'tocollectmoreinformationifyoususpectmodulehasbeenpowereddownduetoerrors.'ars'])

 
Explanation

No action is required.

 


PLUGIN-3



















Error Message PORT-5-IF_DOWN_CHANNEL_ADMIN_DOWN: Interface [chars] is down
(Channel admin down) [chars] [chars]

Explanation

 


Error Message



Error Message PORT-5-IF_DOWN_FICON_VSAN_DOWN: Interface [chars] is down(FICON vsan down) [chars] [chars] E 0 576 762Tc 70031 Tw [-haptery Message]





Error Message PORT-5-IF_DOWN_PEER_CLOSE: Interface [chars] is down(TCP conn.
closed by peer) [chars] [chars]

Explanation The FCIP peer connected to this interface







PREFPATH-3

Error Message PREFPATH-3-ACL_PROG_FAILURE: SLOT [dec]: Failed to [chars] ACL for route - source fcid [chars] mask [chars] dest fcid [chars] mask [chars] selected interface [chars] (ACL return code=[hex], [chars])

Explanation The Preferred Path has failed to program or



PULSE-4

Error Message PULSE-4-WARN_MSG: [chars]

Explanation Pulse Warning Message

Recommended Action No action is required.

PULSE-5

Error Message PULSE-5-NOTIF_MSG: [chars]

Explanation Pulse Notification Message

Recommended Action No action is required.

PULSE-6

Error Message PULSE-6-INFO_MSG: [chars]

Explanation Pulse Informational Message

Recommended Action No action is required.

PULSE-7

Error Message PULSE-7-DEBUG_MSG: [chars]

Explanation Pulse Debug Message



Error Message QOS-6-SWITCHOVER: Switching Over to other Supervisor.

Explanation The QOS Manager has successfully switched over to the standby supervisor card.

Recommended Action No action is required.

Error Message











RIB-6

Error Message RIB-6-INFO: [chars]

Explanation Rib event occurred

Recommended Action No action is required.

RLIR Messages





SAC_USD-5

Error Message SAC_USD-5-STARTING: Xbar Driver process starting

Explanation Xbar Driver process is being started

Recommended Action No action is required.

Error Message SAC_USD-5-XBAR_FLOW_CTRL_DIS_EN: XBAR Multicast Flow Control [chars]

Explanation Sacramento xbar multicast flow control on Stage3 ports

Recommended Action No action is required.

SAC_USD-6

Error Message

Error Message SAC_USD-6-SYNC_DONE: Xbar Driver sync done for slot:[dec] asic:[dec]
channel:[hex]

Explanation Sync Completed successfully for the xbar channel

Recommended Action No action is required.

Error Message SANTAP-SLOT#-2-COMMIT_FAILED: Commit Failed, status: [dec] token = [dec], vtUid = 0x%Lx, lunId = 0x%Lx

Explanation ISAPI Commit Filed, number of ITLs exceeded S9.96hse DPPx

neon









Error Message SECURITYD-2-FIPS_CRNG_SELF_TEST_STATUS: FIPS CRNG self-test status

Error Message SECURITYD-6-CHANGE_PASSWD: changing passwd for [chars]

Explanation Changing passwd for [chars]

Recommended Action No action is required.

Error Message SECURITYD-6-DELETE_STALE_USER_ACCOUNT: deleting expired user account : [chars]

Explanation Deleting expired user account of [chars]

Recommended Action No action is required.

Error Message SECURITYD-6-FIPS_MODE_SET_FAILED: Error when setting FIPS mode : [chars]

Explanation FIPS mode failed [chars]

Recommended Action No action is required.

Error Message SECURITYD-6-FIPS_MODE_SET: FIPS mode is [chars] for service [chars]

 
Explanation FIPS mode is changed [chars] [chars]

Recommended Action No action is required.

Error Message SECURITYD-6-FIPS_POST_INFO_MSG:FIPS1212.7cs]

Explanation





SFC-3

Error Message SFC-3-ERROR: [chars]

Explanation SCSI Flow Client encountered an error

Recommended Action Please contact the Cisco reseller through which you procured the product for support. If you have purchased a Cisco support contract please call Cisco TAppr

Error Message SIM-3-IF_ERROR_VLANS_SUSPENDED: VLANs [chars] on Interface [chars] are being suspended. (Reason: [chars])

Explanation The VLANs on an interface are being suspended. (Reason: [chars])

Error Message SIM-5-IF_DOWN_DOMAIN_OTHER_SIDE_EPORT_ISOLATED: Interface [chars] is down (Isolation due to domain other side eport isolated)

Explanation Isolating this interface due to the remote end being isolated

Recommended Action No action is required.

Error Message SIM-5-IF_DOWN_DOMAIN_OVERLAP_ISOLATION: Interface [chars] is down





Error Message Error MessageEre(D5(ceed. Pe(D5(epla(Mee.xlnf1ly)4Pe(D5(6.x4ly)3co)x4ly)nln)







 




Error Message STP-2-L2GW_BACKBONE_BLOCK: L2 Gateway Backbone port inconsistency
blocking port [chars] on [chars].

Explanation







STP-6

Error Message STP-6-FIRST_BPDU_TX: First BPDU transmitted

Explanation First BPDU transmitted.

Recommended Action No action is required.

Error Message STP-6-MST_DIGEST: MST digest changed to [chars], pre-std digest changed to [chars]

Explanation MST Region configuration has changed

Recommended Action LOG_STD_NO_ACTION

Error Message STP-6-MST_PORT_BOUNDARY: Port [chars] [chars] as MST Boundary port

Explanation MST Boundary port status of the specified port is changed

Recommended Action LOG_STD_NO_ACTION

Error Message STP-6-FPO6.7(RDT_ADDED6.7(: MIner)f)6.7(sce[chars6.7(s),)add- to [-rs] [v]

atan **Reconfiguration** LOG_STD_NO_ACTION **Error Message**

Error Message STP-6-MST_PORT_PRE_STANDARD: Port [chars] [chars] as MST Pre-standard port.

Explanation MST pre-standard status of the specified port is TD0 000 rManded **Recommended Action** LOG_

Error Message SVC_BATTERY-SLOT#-2-BATTERY_NOT_PRESENT: Battery [dec] is not present.

Explanation The line card does not have sufficient number of batteries. Two batteries are needed.

Recommended Action Remove the line card and plug in batteries in the battery slots that are empty.

Error Message SVC_BATTERY-SLOT#-2-CHARGING_DISABLED: Temperature outside permitted range for battery charging (5C-40C).

Explanation The temperature of 2] mes no 2][(rgTh)4.4(e t)5.5(o)-4. (mp)4.4(e)-3.rn t bae ttt

Error Message ERY-SLOT#-2-CHAOTNFAILOTn).6.Uep2] n t not [ture ouatt([hnd e ou]6.70C).

Explanation

Error Message SVC-2-SVC_SYSLOG_PATH_FAILURE: System health detected SVC packet path failure for [chars].

Explanation The CSM has been brought down by the System Health monitor. System Health has detected a



Error Message SVC-3-NODE_ERR_MSG: (SVC [dec]/[dec]
SS_EID_EC_ER_SET_BATT_THRESHOLD_FAILED) Set battery threshold failed [chars]

Explanation

Error Message SVC-3-NODE_ERR_MSG: (SVC [dec]/[dec] SS_EID_PL_ER_FC_ADAP_FAIL)
Logical Fibre Channel port reported failed [chars]

Explanation No active/functioning logical FC port was detected by the software.

Recommended Action Reload the node. If the problem persists, replace the Caching Services Module.

Error Message SVC-3-NODE_ERR_MSG: (SVC [dec]/[dec] SS_EID_PL_ER_FC_ADAP_QUANTITY)
Logical Fibre Channel port missing [chars]

Explanation

Error Message SVC-3-NODE_ERR_MSG: (SVC [dec]/[dec]
SS_ERR_CFG_REMOTE_MODIFYPARTNERSHIP) Remote Copy partnership modified [chars]





Error Message SVC-4-NODE_WARNING_MSG: (SVC [dec] / [dec])

Error Message SVC-4-NODE_WARNING_MSG: (SVC [dec]/[dec]
SS_EID_IC_ER_FEATURISATION_VIOLATION) Featurisation violation [chars]

Explanation The user has allocated more virtualized storage than licensed for or established a Flash Copy mapping or Remote Copy relationship when these have not been licensed.

Recommended Action Look in the featurisation log for log entries of type Error'todeterminethetypeofviolation.Theuserthenshouldtheneitherreducevirtualizedstorage,removetheFlashCopymappingorRemoteCopyrelationship,soastobeincompliancewiththeirlicense;orupdate their license information if that is incorrect; or arrange with their IBM representative to purchase a license for the desired features.'

Error Message SVC-4-NODE_WARNING_MSG: (SVC [dec]/[dec]
SS_EID_IC_ER_TRANSFER_FILE_FAILED) Failed to transfer file from remote node
[chars]

Explanation





Error Message SVC-6-NODE_INFO_MSG: (SVC [dec]/[dec] SS_ERR_CFG_ERRORLOG_DUMPLOG)
Error log dumped [chars]



Error Message SVC-6-NODE_INFO_MSG: (SVC [dec]/[dec] SS_ERR_CFG_MIGRATE) Virtual Disk migration to new Managed Disk group started [chars]

Explanation svctaskmigratevdisk'orequivalentGUI/CiscoCLIcommandhasbeeninvoked.'

Recommended Action None

Error Message SVC-6-NODE_INFO_MSG: (SVC [dec]/[dec] SS_ERR_CFG_MODIFY_FC_MAPPING) Flash Copy mapping modified [chars]

Explanation svctaskchfcmap'orequivalentGUI/CiscoCLIcommandhasbeeninvoked.'

Recommended Action None Message SVC-6-NOI2-8.2(G: (SVd)-4.S Tc[([dec]DE Tc[_ec]

Error Message SVC-6-NODE_INFO_MSG: (SVC [dec]/[dec] SS_ERR_CFG_NODE_ADD) Node added [chars]

Explanation



Error Message SVC-6-NODE_INFO_MSG: (SVC [dec]/[dec]
SS_ERR_CFG_VDISK_EXPAND_SINGLE_EXT) Virtual Disk expanded by single extent
[chars]

Explanation

SS_ERR_CFG_VDISK_EXPAND_SINGLE_EXT) Virtual Disk expanded by single extent
[chars] svctaddvdiskext'aa [c System Memigronss7.3(2,)-9(s(n20Rec)-c)-5.ts'o8(edu)-5..0019 96 0 0 9.9Tc-.00 291(.
SS_ERR_CFG_VDISK_EXPAND_SINGLE_EXT) Virtual Disk expanded by single extent
[chars] [chE E([chx3 661mi([chgrat.9(ch)NS76rt3 1[co)NS7c.0016 Tw[(sv)4.6(ct)5.067sk)4.6(a)-3.2(d)4.6(dvd)4.6(isk)10.7(e)14.9(x)
SS_ERR_CFG_VDISK_EXPAND_SINGLE_EXT) Virtual



Error Message SYSMGR-2-FEATURE_SET_SRVTIMEOUT: vdc [dec]: feature-set 0x%llx [chars]: Following services did not respond in time: [chars]

Explanation The services did not handshake with sysmgr in time

 
Recommended Action No action is required.

Error Message



























TPC-SLOT#-5

Error Message







VEC-SLOT#-4

Error Message

Error Message VMAN-2-HA_SYNC_ERR: [chars] [chars]'[chars]'

Explanation



Error Message VMAN-5-UNSIGNED_PACKAGE: Unsigned software package [chars] loaded for service container [chars].

Explanation A software package without a code signing certificate has been loaded.

Recommended Action

Error Message VPC-2-PEER_KEEP_ALIVE_RECV_FAIL: In domain [dec], VPC peer



VPCM Service Enabled ~~Recommended Action~~ ~~No action is required~~ Error Message store, delay

Er

Execution 6-STATS_CLEARED: vPC Statistics Cleared

VPCistic D .s cleared

Reco D 2_Gmme D 2_Gndr D 2_GndActivedition(4) 10/24/2010 9:129 1005102 The0075 Eccard280

VPM-3

Error Message VPM-3-PSS_SYNC_TO_STNDBY_FAILED: PSS TYPE=[chars] KEY=[chars]

Explanation Could not send PSS Sync. notification to Standby Supervisor. PSS Type=[str.] Operation=[.str] Key=[Str.]

Recommended Action No action is required.

Error Message VPM-3-SEND_TO_ILC_FAILED: [chars]

Explanation The VP Manager could not send to IL r

VPM-6

Error Message VPM-6-BECAME_ACTIVE: Became ACTIVE from standby mode

Explanation The VP Manager on the standby supervisor became active and it is ready to serve client requests.

Recommended Action No action is required.

Error Message VPM-6-BECAME_STDBY: Became STANDBY from active mode

Explanation The VP Manager became standby from active mode.

Recommended Action No action is required.

Error Message VPM-6-DG_DEREGISTERED: [chars]

 
Explanation

VRRP-CFG-3

Error Message VRRP-CFG-3-INIT_FAILED: Initialization failed. Component [chars]

Explanation








WWN-2

Error Message WWN-2-BKPLN_PROM_CANT_READ: Can not read backplane PROM

 Explanation





Error Message XBAR_DRIVER_USD-6-HW_INIT: Xbar DriverHW initialization has been done for Slot: [dec] Asic: [dec]

Explanation





 
Error Message ZBM-6-ZBM_MCAST_EVENT_STATUS: [chars] [chars].

Explanation ZBM multicast event status is reported as [chars] [chars].

Recommended Action No action is required.

Error Message ZBM-6-ZBM_NX_PORT_EVENT_STATUS: [chars] [chars].

Explanation ZBM Nx Port event status is s. s 1(]7(s)1.)





Error Message ZONE-2-ZS_LICENSE_UNAVAIL: License:[chars] unavailable, removing LUN members, read-only attribute and re-activating active zonesets on all affected VSANs

Explanation License:[char] unavailable, removing LUN members, read-only attribute and re-activating active zonesets on all affected VSANs.

Recommended Action No action is required.

Error Message ZONE-2-ZS_LIC_FAILURE: License [chars] operation failed for license [chars]

Explanation License [char] operation failed for license [char].

Recommended Action No action is required.

Error Message

Error Message ZONE-4-ZS_LC_UPGRADE_CHANGE_IN_PROGRESS: Linecard upgrade request is received when change protocol is in progress

Explanation A request for linecard upgrade has been received when change protocol is in progress. The linecard upgrade will occur after the completion of the change protocol.

Recommended Action





