

Al estar actualizando y mejorando constantemente nuestros productos, la apariencia o el software de su dispositivo pueden variar ligeramente con respecto a lo descrito en esta guía de usuario.



4 TRANSFERENCIA DE E-BOOKS Y OTROS ACHIVOS MULTIMEDIA AL ARCHOS

Una vez conectado el ARCHOS a su ordenador, utilice el navegador de archivos de este último (el Explorador de Windows® o el Finder de Mac) para copiar y pegar (o arrastrar y soltar) en la carpeta eBooks del ARCHOS eReader revistas o libros que ya tenga descargados en su ordenador. El ARCHOS e-book reader puede visualizar libros, revistas y documentos en los siguientes formatos: PDF (normal o Adobe DRM), EPUB (normal o ADOBE DRM), PDB, FB2, HTML, RTF, MOBI, TXT.

Adobe Digital Editions


Puede descargar los libros más recientes en ePub y PDF protegidos y transferirlos a su lector electrónico. Para ello, es necesario descargar e instalar el Adobe® Digital Editions en su ordenador. Esta aplicación le permitirá comprar libros electrónicos y transferirlos a su ARCHOS. Para instalar Adobe Digital Editions, siga las siguientes instrucciones.

- Ir a la dirección siguiente: www.adobe.com/products/digitaleditions.
- Pulse INSTALAR
- Siga las instrucciones del asistente de instalación.
- Ahora puede transferir sus libros electrónicos en formato ePub o PDF a su ARCHOS eReader.

Puede transferir sus archivos multimedia del ARCHOS copiando y pegando éstos en sus carpetas respectivas mediante el Explorador de Windows® (o el Finder en un Macintosh®), o utilizando el Reproductor de Windows Media®. El botón Sincronizar del Reproductor de Windows Media® funciona en una sola dirección, insertando archivos de vídeo, música y fotos en el ARCHOS. Así, puede llevar en el ARCHOS el mismo contenido digital que tiene en la biblioteca del Reproductor de Windows Media®. En el ordenador, inicie el Reproductor de Windows Media®.
1) Seleccione la pestaña Sincronizar.
2) Arrastre los archivos multimedia que desee transferir al área de sincronización en el panel de la derecha.
3) Haga clic en el botón Iniciar sincronización. Los vídeos, canciones y fotos seleccionados se copiarán directamente en la carpeta correspondiente Video, Music o Pictures del ARCHOS. Consulte la sección de ayuda de su Reproductor de Windows Media® para obtener más información.

7 VISUALIZACIÓN DE FOTOS

Abra el navegador de fotos para ver las fotos almacenadas una a una o en forma de presentación automatizada. Para ver una presentación con las fotos de la carpeta actual, pulse el botón de menú M y luego seleccione **Slideshow [Presentación de imágenes]**. Para añadir música a la presentación, primero pinche en una canción en el reproductor de música, pulse el botón Inicio y luego vaya al navegador de fotos para iniciar la presentación de imágenes.

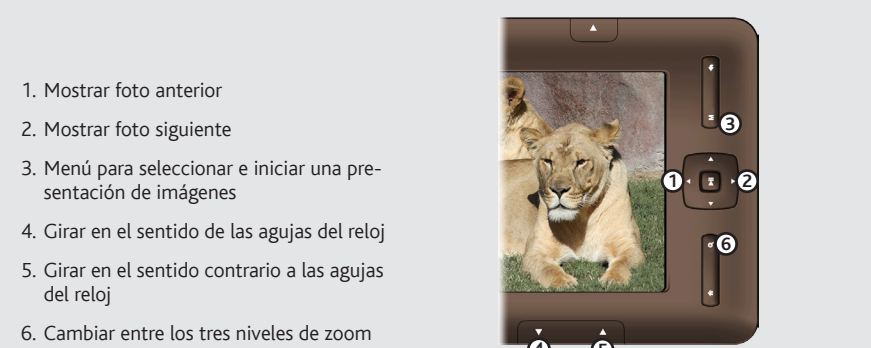

- Mostrar foto anterior
- Mostrar foto siguiente
- Menú para seleccionar e iniciar una presentación de imágenes
- Girar en el sentido de las agujas del reloj
- Girar en el sentido contrario a las agujas del reloj
- Cambiar entre los tres niveles de zoom
(utilice los botones de navegación para desplazarse por la imagen ampliada)

1. Anterior / Atrás / Vol +

2. Siguiente / Adelante / Vol -

3. Ir a la pantalla de inicio

4. Zoom

5. Seleccionar / OK / Reproducir-Pausar

6. Botón de navegación (para mover arriba / abajo / izquierda / derecha)

7. Menú (algunas pantallas disponen de su propio menú)

8. Volver/Escape

9. Página siguiente

10. Puerto USB

11. Restablecer (usar sólo si el dispositivo queda bloqueado y ningún botón funciona).

12. Toma del adaptador de alimentación

13. Ranura para tarjetas SD o SDHC

14. Micrófono

15. Encender/Apagar (mantener pulsado durante 3 segundos para encender o apagar el dispositivo)

16. Conector de auriculares


2. SELECCIÓN DEL IDIOMA

Para cambiar el idioma del dispositivo, seleccione **Settings [Configuración] > Language [Idioma]**, y escoja el idioma deseado. Pulse el botón Volver/Escape para volver.



RECARGA


El eReader se recarga cada vez que se conecta a un ordenador a través del cable USB incluido. Para una recarga más rápida del eReader, utilice el cargador/adaptador incluido. Al conectar el cargador/adaptador al dispositivo, éste se encenderá e iniciará automáticamente la carga. El icono de batería en la esquina superior derecha de la pantalla se llena y vacía para indicar que la batería se está cargando. La batería interna estará completamente cargada cuando este icono de batería deje de vaciarse y muestre una batería totalmente cargada.

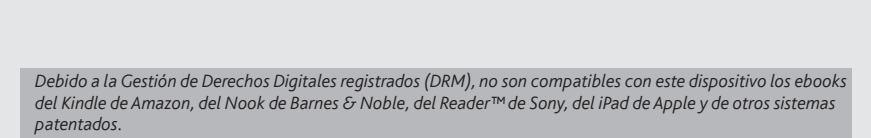

Debido a la Gestión de Derechos Digitales registrados (DRM), no son compatibles con este dispositivo los ebooks del Kindle de Amazon, del Nook de Barnes & Noble, del Reader™ de Sony, del iPad de Apple y de otros sistemas patentados.

5 LECTURA DE UN E-BOOK

Seleccione eBook en la pantalla principal y aparecerá un listado con todos los archivos ebook compatibles de la carpeta eBooks. Pulse el botón OK/Reproducir para abrir el libro.



1. Volver a la página anterior

2. Ir a la página siguiente


3. Ir a la página siguiente

4. Escoger uno de los tres tamaños de texto disponibles

5. Abrir el menú de opciones


En el menú de opciones podrá saltar a una página determinada, guardar/cargar/borrar un marcador, hacer que las páginas pasen automáticamente o seleccionar un nuevo fondo de pantalla.

6. Pasar del modo retrato a paisaje, y viceversa

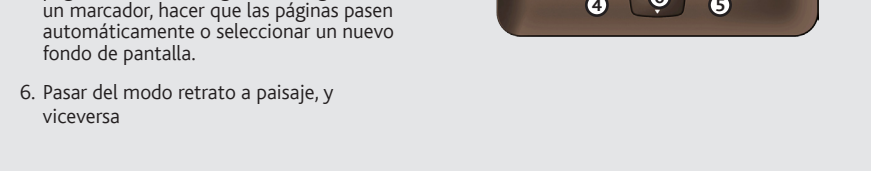

8 REPRODUCCIÓN DE VÍDEO

En el navegador de vídeo encontrará una lista con todos los archivos de vídeo (y sólo archivos de vídeo) guardados en la carpeta Vídeo del ARCHOS.

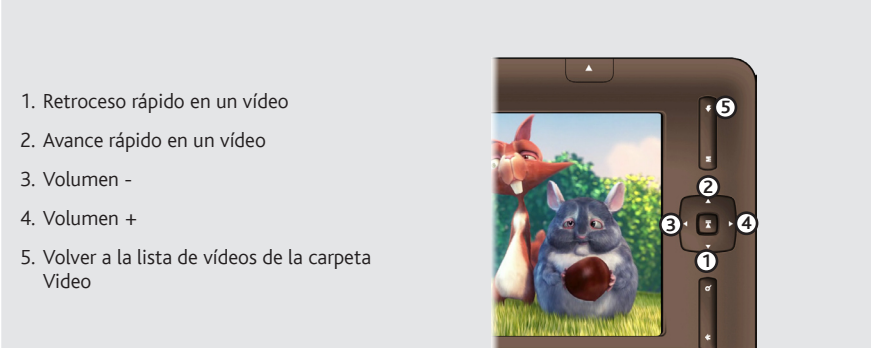

1. Retroceso rápido en un vídeo

2. Avance rápido en un vídeo

3. Volumen -

4. Volumen +

5. Volver a la lista de vídeos de la carpeta Vídeo

6. Botón de reproducción

7. Botón de pausa

8. Botón de parada

9. Botón de reproducción

10. Botón de reproducción

11. Botón de reproducción

12. Botón de reproducción

13. Botón de reproducción

14. Botón de reproducción

15. Botón de reproducción

16. Botón de reproducción

17. Botón de reproducción

18. Botón de reproducción

19. Botón de reproducción

20. Botón de reproducción

21. Botón de reproducción

22. Botón de reproducción

23. Botón de reproducción

24. Botón de reproducción

25. Botón de reproducción

26. Botón de reproducción

27. Botón de reproducción

28. Botón de reproducción

29. Botón de reproducción

30. Botón de reproducción

31. Botón de reproducción

32. Botón de reproducción

33. Botón de reproducción

34. Botón de reproducción

35. Botón de reproducción

36. Botón de reproducción

37. Botón de reproducción

38. Botón de reproducción

39. Botón de reproducción

40. Botón de reproducción

41. Botón de reproducción

42. Botón de reproducción

43. Botón de reproducción

44. Botón de reproducción

45. Botón de reproducción

46. Botón de reproducción

47. Botón de reproducción

48. Botón de reproducción

49. Botón de reproducción

50. Botón de reproducción

51. Botón de reproducción

52. Botón de reproducción

53. Botón de reproducción

54. Botón de reproducción

55. Botón de reproducción

56. Botón de reproducción

57. Botón de reproducción

58. Botón de reproducción

59. Botón de reproducción

60. Botón de reproducción

61. Botón de reproducción

62. Botón de reproducción

63. Botón de reproducción

64. Botón de reproducción

65. Botón de reproducción

66. Botón de reproducción

67. Botón de reproducción

68. Botón de reproducción

69. Botón de reproducción

70. Botón de reproducción

71. Botón de reproducción

72. Botón de reproducción

73. Botón de reproducción

74. Botón de reproducción

75. Botón de reproducción

76. Botón de reproducción

77. Botón de reproducción

78. Botón de reproducción

79. Botón de reproducción

80. Botón de reproducción

81. Botón de reproducción

82. Botón de reproducción

83. Botón de reproducción

84. Botón de reproducción

85. Botón de reproducción

86. Botón de reproducción

87. Botón de reproducción

88. Botón de reproducción

89. Botón de reproducción

90. Botón de reproducción

91. Botón de reproducción

92. Botón de reproducción

93. Botón de reproducción

94. Botón de reproducción

95. Botón de reproducción

96. Botón de reproducción

97. Botón de reproducción

98. Botón de reproducción

99. Botón de reproducción

100. Botón de reproducción

101. Botón de reproducción

102. Botón de reproducción

103. Botón de reproducción

104. Botón de reproducción

105. Botón de reproducción

106. Botón de reproducción

107. Botón de reproducción

108. Botón de reproducción

109. Botón de reproducción

110. Botón de reproducción

111. Botón de reproducción

112. Botón de reproducción

113. Botón de reproducción

114. Botón de reproducción

115. Botón de reproducción

116. Botón de reproducción

117. Botón de reproducción

118. Botón de reproducción

119. Botón de reproducción

120. Botón de reproducción

121. Botón de reproducción

122. Botón de reproducción

123. Botón de reproducción

124. Botón de reproducción

125. Botón de reproducción

126. Botón de reproducción

127. Botón de reproducción

128. Botón de reproducción

129. Botón de reproducción

130. Botón de reproducción

131. Botón de reproducción

132. Botón de reproducción

133. Botón de reproducción

134. Botón de reproducción

135. Botón de reproducción

136. Botón de reproducción

137. Botón de reproducción

138. Botón de reproducción

139. Botón de reproducción

140. Botón de reproducción

141. Botón de reproducción

142. Botón de reproducción

143. Botón de reproducción

144. Botón de reproducción

145. Botón de reproducción

146. Botón de reproducción

147. Botón de reproducción

148. Botón de reproducción

149. Botón de reproducción

150. Botón de reproducción

151. Botón de reproducción

152. Botón de reproducción

153. Botón de reproducción

154. Botón de reproducción

155. Botón de reproducción

156. Botón de reproducción

157. Botón de reproducción

158. Botón de reproducción

159. Botón de reproducción

160. Botón de reproducción

161. Botón de reproducción

162. Botón de reproducción

163. Botón de reproducción

164. Botón de reproducción

165. Botón de reproducción

166. Botón de reproducción

167. Botón de reproducción

168. Botón de reproducción

169. Botón de reproducción

170. Botón de reproducción

171. Botón de reproducción

172. Botón de reproducción


3. CONEXIÓN A UN ORDENADOR

El ARCHOS se conecta al ordenador mediante el cable USB como cualquier unidad de disco duro externa, por lo que en el Explorador de Windows® aparecerá con una letra de unidad (por ejemplo, ARCHOS (E:)). En los ordenadores Macintosh®, también aparece como disco duro externo.




DESCONEXIÓN DE UN ORDENADOR

Una vez terminada la transferencia de archivos, cierre el Explorador de Windows® y cualquier otro programa que pudiera haber sido utilizado con el ARCHOS. Haga clic en el icono "quitar de forma segura" en la bandeja de sistema, junto al reloj. SÓLO una vez hecho esto, podrá desenchufar el cable USB del ARCHOS y/o del ordenador.

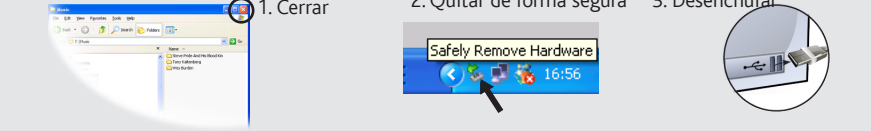

6 REPRODUCCIÓN DE MÚSICA

En el navegador de música podrá realizar búsquedas por título, intérprete, álbum o género (siempre que los archivos de música dispongan de esta información de etiqueta). Las canciones sin etiquetas se guardan en las carpetas <No artist>, <No album>, etc. Recuerde que puede escuchar música mientras lee un eBook. Para ello, realice lo siguiente.



1. Volver a la página anterior

2. Ir a la página siguiente

3. Ir a la página siguiente

4. Escoger uno de los tres tamaños de texto disponibles

5. Abrir el menú de opciones

En el menú de opciones podrá saltar a una página determinada, guardar/cargar/borrar un marcador, hacer que las páginas pasen automáticamente o seleccionar un nuevo fondo de pantalla.

6. Pasar del modo retrato a paisaje, y viceversa

7. Botón de reproducción

8. Botón de reproducción

9. Botón de reproducción

10. Botón

ARCHOS 70 eReader

EN

1. Previous / Back / Vol +
2. Next / Forward / Vol -
3. Go to the home screen
4. Zoom
5. Select / OK / Play-Pause
6. Navigation pad (to move up / down / left / right)
7. Menu (some screens have available menu options)
8. Back/Escape
9. Next page
10. USB port
11. Reset (Use only if the device is frozen and does not respond to any buttons.)
12. Power adapter jack
13. SD or SDHC card slot
14. Microphone
15. On/Off (Hold for 3 seconds to turn on/off)
16. Headphone connector

4 PUTTING E-BOOKS AND OTHER MEDIA ONTO YOUR ARCHOS

Once you have connected the ARCHOS to your computer, you'll use the file browser of your computer (Windows® Explorer or Mac finder) to copy/paste (or drag & drop) books or magazines that you have already downloaded to your computer into the eBooks folder on your ARCHOS eReader. The ARCHOS e-book reader can display books, magazines, and texts with the following formats: PDF(normal or Adobe DRM), EPUB (normal or ADOBE DRM), PDB, FB2, HTML, RTF, MOBI, TXT.

Adobe Digital Editions

You can download the most recent books in protected ePub and PDF format and transfer them onto your eReader. So you need to download and install Adobe Digital Editions onto your computer. This program will help you when you order and transfer your eBooks onto your ARCHOS. Follow these steps to install Adobe Digital Editions.

1. Go to www.adobe.com/products/digitaleditions.
2. Click on the START INSTALLATION button.
3. Follow the Installation wizard.
4. You can now transfer Adobe DRM epub and PDF eBooks to your ARCHOS eReader.

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh®), or by using Windows Media® Player. The Synchronize button in Windows Media® Player is a one way 'sync' button. It will add video, music and photo files to your ARCHOS. It will give you the possibility to have the same digital media on your ARCHOS as you have in your Windows Media® Player library. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

7 PHOTO PLAYBACK

Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. To view the current folder of pictures as a slide show, press the M menu button and then select **Slideshow**. You can have a slide show display to background music by first starting a song in the music player, pressing the Home button and then going to the photo browser and starting a slideshow.

1. Show previous photo
2. Show next photo
3. Menu to select and start a slideshow
4. Rotate the image clockwise
5. Rotate the image counter-clockwise
6. Cycle through the three zoom levels (The navigation buttons allow you to move the image when it is zoomed)

2 SETTING THE LANGUAGE

To change the language of your device, select **Settings > Language**, and then the desired language. Press on the Back/escape button to return.

CHARGING

Your eReader will charge each time it is connected to the computer via the included USB cable. To charge your eReader more efficiently, use the included charger/adaptor. When you connect the charger/adaptor to the device, it will turn on and start charging automatically. The battery icon on the top right of the screen animates to indicate that the battery is charging. The internal battery is completely charged when the battery icon on the top right of the screen stops animating and shows a full battery icon.

Because of proprietary Digital Rights Management (DRM), ebooks for Amazon's Kindle, Barnes & Noble's Nook, Sony's Reader™, Apple's iPad or other proprietary systems are not readable on this device.

5 VIEWING AN E-BOOK

When you select **eBook** from the main screen, you will see a listing of all the compatible ebook file types in the folder **eBooks**. Press the OK/Play button to open the book.

1. Show previous page
2. Show next page
3. Show next page
4. Choose one of three different text sizes
5. Open the menu of options
 - Menu options include jumping to particular page, saving/loading/deleting a bookmark, having the pages turn automatically, or setting the screen to a different background.
6. Switch between landscape and portrait mode

8 VIDEO PLAYBACK

Opening the Video browser will display a list of the video files (and only video files) that have been saved to the **Video** folder on the ARCHOS.

1. Fast reverse through the video
2. Fast forward through the video
3. Volume -
4. Volume +
5. Go back to the list of videos in the Video folder

3 CONNECTING TO A COMPUTER

When you connect the USB cable to your computer, the ARCHOS will connect as an external hard drive. Windows® Explorer will show it as ARCHOS (E:) for example. For Macintosh® computers, it will also appear as an external hard drive.

DISCONNECTING FROM A COMPUTER

Once all your file transfers are finished, close Windows® Explorer and any other program that may have read or written to the ARCHOS. Click on the 'safely remove' icon in the system tray, next to the clock. ONLY once this is done should you unplug the USB cable from ARCHOS and/or your computer.

1. Close
2. Safely remove
3. Unplug

6 MUSIC PLAYBACK

Opening the music browser will allow you to choose your music by the title, artist, album, or genre (so long as the music files have these tag information in them). If a song has no music tags, then you can find it in the folder named <No artist>, <No album>, etc. Remember, you can listen to music while reading an eBook by doing the following.

1. Start music from the desired album.
2. Press the Home button to return to the home screen.
3. Go to eBook and select the ebook you want to read.
4. To stop the music, you will need to go back to the home screen and select Music, then Currently Playing to control the music playback.

If you would like to add a song or an album to your favorites list, highlight the desired song or album when it is listed and press the left direction button. The song or album will now be a part of the favorites category. To delete a song from your favorites list, enter the list and then press on the left directional button to see your options.

9 EXPLORER

The explorer allows you to view all the files that are stored on your ARCHOS eReader. When you highlight a file and press on the OK/Play button, it will open the file if it is a file type that it recognizes.

MEMORY CARDS

Slide an SD or SDHC memory card into the card slot with the gold connectors facing upwards. The card's outer edge should remain flush to the body of the device once it is inserted correctly. To remove the card, push it in slightly and a spring will then push it out so you can remove it.

TROUBLESHOOTING

PROBLEM: When I look into a folder, it says that there are not files there yet when I look with the Explorer I can see files in that folder.
SOLUTION: When you use the eBook, Photo, or Video modes, the device filters from view anything that is not a file of that specific type. Thus, if you open the Photo browser and look in eBooks, it will filter from view everything that is not a photo.

PROBLEM: The device is frozen and doesn't respond to any of the buttons.
SOLUTION: Turn off the device with the switch on the bottom and restart as normal. Alternatively, you can press the reset button on the bottom of the device by using an object such as a paper clip.

PROBLEM: The device turns off without any warning.
SOLUTION: If your battery becomes very low, the device will shut off. Also, check your **Settings** to see if the **Auto shut-off** is set for a very short period of time. The device shuts off if you do not press any buttons for that set amount of time.

REGISTER YOUR PRODUCT!

Once you unpack your ARCHOS product, we recommend that you take a few minutes to register it. This will allow you to get access to our technical support.

On our Website: See the Frequently Asked Questions section on www.archos.com/faq

Technical Support Team: Visit www.archos.com/support for e-mail support.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture. Use of this product is for personal use only. Copying CDs or loading music, video, or picture files for sale or other business purposes is or may be a violation of copyright law. Copyrighted materials, works of art, and/or presentations may require authorization to be fully or partially recorded. Please be aware of all such applicable laws concerning the recording and use of such for your country and jurisdiction. For driving safety, only a passenger should operate the device when the car is in motion and not the driver. Laws governing the usage of electronic device by the driver may be applicable in your jurisdiction and/or country.

LEGAL AND SAFETY INFORMATION

Warranty and Limited Liability

This product is sold with a limited warranty and specific remedies are available to the original purchaser in the event the product fails to conform to the limited warranty. Manufacturer's liability may be further limited in accordance with its sales contract. In general, and in an non-limited manner, the manufacturer shall not be responsible for product damages caused by natural disasters, fire, static discharge, misuse, abuse, neglect, improper handling or installation, unauthorized repair, alteration or accident. In no event shall the manufacturer be liable for loss of data stored on disk media.

MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF INFORMED OF THE POSSIBILITY THEREOF IN ADVANCE.

ARCHOS licensor(s) makes no warranties, express or implied, including, without limitation, the implied warranties of merchantability and fitness for a particular purpose, regarding the licensed materials. ARCHOS' licensor(s) does not warrant, guarantee or make any representations regarding the use or the results of the use of the licensed materials in terms of its correctness, accuracy, reliability, correctness or otherwise. The entire risk as to the results and performance of the licensed materials is assumed by you. The exclusion of implied warranties is not permitted by some jurisdictions. The above exclusion may not apply to you.

In no event will ARCHOS' licensor(s), and their directors, officers, employees or agents (collectively ARCHOS' licensor) be liable to you for any consequential, incidental or indirect damages (including damages for loss of business profits, business interruption, loss of business information, and the like) arising out of the use of inability to use the licensed materials even if ARCHOS' licensor has been advised of the possibility of such damages. Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you. Please see your sales contract for a complete statement of warranty rights, remedies and limitation of liability.

Furthermore, warranty does not apply to:

1. Damages or problems resulting from misuse, abuse, accident, alteration or incorrect electrical current or voltage
2. Any product tampered-with or damaged warranty seal or serial number label.
3. Any product without a warranty or serial number label.
4. Batteries and any consumable items delivered with or in the equipment.

The end user is required to use this product only in conformity with its original purpose and is strictly forbidden to make any technical modifications that could potentially impinge on the rights of third parties. Any modification to the hardware, software, or physical enclosure of the product must be approved in writing by ARCHOS. Non approved modified products are subject to the withdrawal of any or all warranty clauses.

As part of the contractual agreement of its products, ARCHOS is committed to ensure the availability of parts and components that are essential to the use and proper working conditions of its products. This availability will be guaranteed for a period of two years, as of the first retail release for customers.

Lithium-ion Battery Caution

This product is equipped with a Lithium-ion battery. Do not pierce, open, disassemble it, or use it in a humid and/or corrosive environment. Do not put, store or leave your product in or near sources of heat, in direct strong sunlight, in a high temperature location, in a pressurized container or in a microwave oven. Do not expose it to temperatures over 60 C (140 F). If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. Failure to follow these instructions could cause the Lithium-ion battery to leak acid, become hot, explode or ignite and cause injury and/or damage.

Only ARCHOS certified technicians are qualified to repair your ARCHOS device. In calling upon non qualified persons to repair your ARCHOS product, you run the risk of damaging your device and voiding your warranty. To prevent risks of electric shock, this unit must only be opened by qualified service personnel.

FCC Compliance Statement

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

USA: - This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- FCC Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canada: - Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.