Open-Source Register Reference For AMD Family 17h Processors Models 00h-2Fh

Legal Notices

© 2017,2018 Advanced Micro Devices, Inc. All rights reserved.

The information contained herein is for informational purposes only, and is subject to change without notice. While every precaution has been taken in the preparation of this document, it may contain technical inaccuracies, omissions and typographical errors, and AMD is under no obligation to update or otherwise correct this information. Advanced Micro Devices, Inc. makes no representations or warranties with respect to the accuracy or completeness of the contents of this document, and assumes no liability of any kind, including the implied warranties of noninfringement, merchantability or fitness for particular purposes, with respect to the operation or use of AMD hardware, software or other products described herein. No license, including implied or arising by estoppel, to any intellectual property rights is granted by this document. Terms and limitations applicable to the purchase or use of AMD's products are as set forth in a signed agreement between the parties or in AMD's Standard Terms and Conditions of Sale.

Trademarks:

AMD, the AMD Arrow logo, and combinations thereof are trademarks of Advanced Micro Devices, Inc.

3DNow! is a trademark of Advanced Micro Devices, Incorporated.

AGESA is a trademark of Advanced Micro Devices, Incorporated.

AMD Virtualization is a trademark of Advanced Micro Devices, Incorporated.

MMX is a trademark of Intel Corporation.

PCI Express is a registered trademark of PCI-SIG Corporation.

Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

Reverse engineering or disassembly is prohibited.

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG ACTUAL OR DE FACTO VIDEO AND/OR AUDIO STANDARDS IS EXPRESSLY PROHIBITED WITHOUT ALL NECESSARY LICENSES UNDER APPLICABLE PATENTS. SUCH LICENSES MAY BE ACQUIRED FROM VARIOUS THIRD PARTIES INCLUDING, BUT NOT LIMITED TO, IN THE MPEG PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 6312 S. FIDDLERS GREEN CIRCLE, SUITE 400E, GREENWOOD VILLAGE, COLORADO 80111.

List of Chapters

- 1 Open Source Register Reference
- 2 Core Complex (CCX)
- 3 Machine Check Architecture
- 4 SMU Registers
- 5 Advanced Platform Management Link (APML)
- 6 SB Temperature Sensor Interface (SB-TSI)

List of Namespaces List of Definitions Memory Map - MSR Memory Map - SMN

Table of Contents

1 Open Source Register Reference

- 1.1 Intended Audience
- 1.2 Reference Documents
 - 1.2.1 Documentation Conventions
- 1.3 Conventions
 - 1.3.1 Numbering
 - 1.3.2 Arithmetic And Logical Operators
 - 1.3.2.1 Operator Precedence and Associativity
 - 1.3.3 Register Mnemonics
 - 1.3.3.1 Logical Mnemonic
 - 1.3.3.2 Physical Mnemonic
 - 1.3.4 Register Format
 - 1.3.4.1 A Register is a group of Register Instances
 - 1.3.4.2 Register Physical Mnemonic, Title, and Name
 - 1.3.4.3 Full Width Register Attributes
 - 1.3.4.4 Register Description
 - 1.3.4.5 Register Instance Table
 - 1.3.4.5.1 Content Ordering in a Row
 - 1.3.4.5.2 Multiple Instances Per Row
 - 1.3.4.5.3 MSR Access Method
 - 1.3.4.5.3.1 MSR Per-Thread Example
 - 1.3.4.5.3.2 MSR Range Example
 - 1.3.4.5.4 BAR Access Method
 - 1.3.4.5.4.1 BAR as a Register Reference
 - 1.3.4.5.5 PCICFG Access Method
 - 1.3.4.5.5.1 PCICFG Bus Implied to be 00h
 - 1.3.4.5.6 Data Port Access Method
 - 1.3.4.6 Register Field Format
 - 1.3.4.7 Simple Register Field Format
 - 1.3.4.8 Complex Register Field Format
 - 1.3.4.9 Field Name is Reserved
 - 1.3.4.10 Field Access Type
 - 1.3.4.10.1 Conditional Access Type Expression
 - 1.3.4.11 Field Reset
 - 1.3.4.12 Field Initialization
 - 1.3.4.13 Field Check
 - 1.3.4.14 Field Valid Values

2 Core Complex (CCX)

- 2.1 Processor x86 Core
 - 2.1.1 Secure Virtual Machine Mode (SVM)
 - 2.1.1.1 BIOS support for SVM Disable
 - 2.1.1.1.1 Enable AMD Virtualization[™]
 - 2.1.1.1.2 Disable AMD VirtualizationTM
 - 2.1.1.1.3 Disable AMD Virtualization[™], with a user supplied key
 - 2.1.2 Effective Frequency
 - 2.1.3 Address Space
 - 2.1.3.1 Virtual Address Space
 - 2.1.3.2 Physical Address Space
 - 2.1.3.3 System Address Map
 - 2.1.3.3.1 Memory Access to the Physical Address Space

- 2.1.3.3.1.1 Determining Memory Type 2.1.4 **Configuration Space** 2.1.4.1 **MMIO Configuration Coding Requirements** 2.1.4.2 MMIO Configuration Ordering Processor Configuration Space 2.1.4.3 PCI Configuration Legacy Access 2.1.5 2.1.6 **Register Sharing** Timers 2.1.7 2.1.8 Interrupts System Management Mode (SMM) 2.1.8.1 SMM Overview 2.1.8.1.1 2.1.8.1.2 Mode and Default Register Values 2.1.8.1.3 SMI Sources And Delivery 2.1.8.1.4 SMM Initial State 2.1.8.1.5 SMM Save State System Management State 2.1.8.1.6 2.1.8.1.7 Exceptions and Interrupts in SMM The Protected ASeg and TSeg Areas 2.1.8.1.8 2.1.8.1.9 SMM Special Cycles Locking SMM 2.1.8.1.10 Local APIC 2.1.8.2 2.1.8.2.1 Local APIC Functional Description Detecting and Enabling 2.1.8.2.1.1 APIC Register Space 2.1.8.2.1.2 ApicId Enumeration Requirements 2.1.8.2.1.3 Physical Destination Mode 2.1.8.2.1.4 Logical Destination Mode 2.1.8.2.1.5 2.1.8.2.1.6 Interrupt Delivery Vectored Interrupt Handling 2.1.8.2.1.7 Interrupt Masking 2.1.8.2.1.8 **Spurious Interrupts** 2.1.8.2.1.9 Spurious Interrupts Caused by Timer Tick Interrupt 2.1.8.2.1.10 2.1.8.2.1.11 Lowest-Priority Interrupt Arbitration 2.1.8.2.1.12 Inter-Processor Interrupts **APIC** Timer Operation 2.1.8.2.1.13 Generalized Local Vector Table 2.1.8.2.1.14 2.1.8.2.1.15 State at Reset 2.1.8.2.2 Local APIC Registers 219 **CPUID** Instruction 2.1.9.1 **CPUID Instruction Functions MSR** Registers 2.1.10 2.1.10.1 MSRs - MSR0000 xxxx MSRs - MSRC000 0xxx 2.1.10.2 2.1.10.2.1 MSRs - MSRC000 2xxx MSRs - MSRC001 0xxx 2.1.10.3 MSRs - MSRC001 1xxx 2.1.10.4 Performance Monitor Counters 2.1.11 2.1.11.1 **RDPMC** Assignments 2.1.11.2 Large Increment per Cycle Events **Core Performance Monitor Counters** 2.1.11.3
- 2.1.11.3.1 Floating Point (FP) Events
- 2.1.11.3.2 LS Events
- 2.1.11.3.3 IC and BP Events

- 2.1.11.3.4 DE Events
- 2.1.11.3.5 EX (SC) Events
- 2.1.11.3.6 L2 Cache Events.
- 2.1.11.4 L3 Cache Performance Monitor Counters
- 2.1.11.4.1 L3 Cache PMC Events
- 2.1.12 Instruction Based Sampling (IBS)

Machine Check Architecture

3.1 Overview

3

- 3.2 Machine Check Architecture Extensions
- 3.3 Machine Check Global Registers
- 3.4 Machine Check Banks
- 3.5 Machine Check Bank Registers
- 3.6 Legacy MCA MSRs
- 3.7 Determining Bank Type
- 3.8 Machine Check Errors
- 3.9 Machine Check Initialization
 - 3.9.1 Initialization Sequence
 - 3.9.2 Configuration Requirements
- 3.10 MCA Overflow Recovery
- 3.11 MCA Recovery
- 3.12 Use of MCA Information
 - 3.12.1 Error Management
 - 3.12.2 Fault Management
- 3.13 Machine Check Error Handling
- 3.14 Error Codes
- 3.15 Error Thresholding
- 3.16 Error Simulation
- 3.17 MCA Registers
 - 3.17.1 Decoding Error Type
 - 3.17.2 Mapping of Banks to Blocks
 - 3.17.3 Hardware IDs and McaType
 - 3.17.4 MCA Banks
 - 3.17.5 LS
 - 3.17.6 IF
 - 3.17.7 L2
 - 3.17.8 DE
 - 3.17.9 EX
 - 3.17.10 FP
 - 3.17.11 L3 Cache
 - 3.17.12 CS
 - 3.17.13 PIE
 - 3.17.14 UMC
 - 3.17.15 Parameter Block

4 SMU Registers

5.2

- 4.1 MP0 Configuration Unit Registers
- 4.2 Thermal (THM)
 - 4.2.1 Registers

5 Advanced Platform Management Link (APML)

- 5.1 Overview
 - 5.1.1 Definitions
 - SBI Bus Characteristics
 - 5.2.1 SMBus Protocol Support
 - 5.2.2 I2C Support

- 5.3 SBI Processor Information
 - 5.3.1 SBI Processor Pins
 - 5.3.1.1 Physical Layer Characteristics
 - 5.3.2 Processor States
- 5.4 SBI Protocols
 - 5.4.1 SBI Modified Block Write-Block Read Process Call
 - 5.4.2 SBI Error Detection and Recovery
 - 5.4.2.1 Error Detection
 - 5.4.2.1.1 ACK/NAK Mechanism
 - 5.4.2.1.2 Bus Timeouts
 - 5.4.2.2 Error Recovery
 - 5.4.2.2.1 SBI Bus Reset
- 5.5 SBI Physical Interface
 - 5.5.1 SBI SMBus Address
 - 5.5.2 SBI Bus Timing
 - 5.5.3 SBI Bus Electrical Parameters
 - 5.5.4 Pass-FET Option

6 SB Temperature Sensor Interface (SB-TSI)

- 6.1 Overview
 - 6.1.1 Definitions
- 6.2 SB-TSI Protocol
 - 6.2.1 SB-TSI Send/Receive Byte Protocol
 - 6.2.1.1 SB-TSI Address Pointer
 - 6.2.2 SB-TSI Read/Write Byte Protocol
 - 6.2.3 Alert Behavior
 - 6.2.4 Atomic Read Mechanism
 - 6.2.5 SB-TSI Temperature and Threshold Encodings
 - 6.2.6 SB-TSI Temperature Offset Encoding
- 6.3 SB-TSI Physical Interface
 - 6.3.1 SB-TSI SMBus Address
 - 6.3.2 SB-TSI Bus Timing
 - 6.3.3 SB-TSI Bus Electrical Parameters
 - 6.3.4 Pass-FET Option
- 6.4 SB-TSI Registers

List of Figures

- Figure 1: Register Physical Mnemonic, Title, and Name
- Figure 2: Full Width Register Attributes
- Figure 3: Register Description
- Figure 4: Register Instance Table: Content Ordering in a Row
- Figure 5: Register Instance Table: MSR Example
- Figure 6: Register Instance Table: MSR Range Example
- Figure 7: Register Instance Table: BAR as Register Reference
- Figure 8: Register Instance Table: Bus Implied to be 00h
- Figure 9: Register Instance Table: Data Port Select
- Figure 10: Simple Register Field Example
- Figure 11: Register Field Sub-Row for {Reset, AccessType, Init, Check}
- Figure 12: Register Field Sub-Row for Description
- Figure 13: Register Field Sub-Row for Valid Value Table
- Figure 14: Register Field Sub-Row for Valid Bit Table
- Figure 15: Register Sharing Domains
- Figure 16: Instance Parameters
- Figure 17: SBI Transmission Protocol
- Figure 18: Pass FET Implementation
- Figure 19: RTS Thermal Management Example
- Figure 20: SB-TSI Thermal Management Example
- Figure 21: Alert Assertion Diagram
- Figure 22: Pass FET Implementation

Table 1:

Table 2:

Table 3: Table 4:

Table 5:

List of Tables

Logical Mnemonic Definitions Table 6: **Physical Mnemonic Definitions** Table 7: Table 8: AccessType Definitions Table 9: **Reset Type Definitions** Table 10: Init Type Definitions SMM Initial State Table 11: Table 12: SMM Save State Table 13: **ICR Valid Combinations** Blocks Capable of Supporting MCA Banks Table 14: Legacy MCA Registers Table 15: Table 16: MCAX Registers Table 17: **Error Overwrite Priorities** Table 18: Error Scope Hierarchy Table 19: Error Code Types Table 20: Error code: transaction type (TT) Error codes: cache level (LL) Table 21: Error codes: memory transaction type (RRRR) Table 22: MCA Bank to Block Mapping Table 23: MCA Block HWID and McaType Mapping Table 24: Table 25: MCA STATUS LS[ErrorCodeExt] Decode MCA ADDR LS Register Table 26: Table 27: MCA SYND LS Register Table 28: MCA STATUS IF[ErrorCodeExt] Decode MCA ADDR IF Register Table 29: Table 30: MCA SYND IF Register Table 31: MCA STATUS L2[ErrorCodeExt] Decode MCA ADDR L2 Register Table 32: Table 33: MCA SYND L2 Register MCA STATUS DE[ErrorCodeExt] Decode Table 34: MCA ADDR DE Register Table 35: Table 36: MCA SYND DE Register Table 37: MCA STATUS EX[ErrorCodeExt] Decode Table 38: MCA ADDR EX Register MCA SYND EX Register Table 39: Table 40: MCA STATUS FP[ErrorCodeExt] Decode MCA ADDR FP Register Table 41: MCA SYND FP Register Table 42: MCA STATUS L3[ErrorCodeExt] Decode Table 43: MCA ADDR L3 Register Table 44: MCA SYND L3 Register Table 45: MCA STATUS CS[ErrorCodeExt] Decode Table 46: Table 47: MCA ADDR CS Register Table 48: MCA SYND CS Register MCA STATUS PIE[ErrorCodeExt] Decode Table 49: Table 50: MCA ADDR PIE Register

Reference Documents Listing

Function Definitions

Arithmetic and Logical Operator Definitions

Operator Precedence and Associativity Register Mnemonic Definitions

- Table 51: MCA_SYND_PIE Register
- Table 52:
 MCA_STATUS_UMC[ErrorCodeExt] Decode
- Table 53: MCA_ADDR_UMC Register
- Table 54:MCA_SYND_UMC Register
- Table 55:
 MCA_STATUS_PB[ErrorCodeExt] Decode
- Table 56:
 MCA_ADDR_PB Register
- Table 57:MCA_SYND_PB Register
- Table 58:APML Definitions
- Table 59:
 SBI Specific SMBus Electrical Parameters
- Table 60:SB-TSI Definitions
- Table 61:
 SB-TSI CPU Temperature and Threshold Encoding Examples
- Table 62:
 SB-TSI Temperature Offset Encoding Examples
- Table 63:SB-TSI Address Encodings

1 Open Source Register Reference

The Open Source Register Reference (OSRR) is provided as an additional processor programming reference for Family 17h processors, models 00h through 2Fh. This document provides details of various registers to aide in optimizing the performance and operation of AMD's 17h Family processors.

1.1 Intended Audience

This document provides targeted processor register definitions and associated design notes. It is intended to aide software designers and programmers involved in the development of operating system kernel modules and performance metric mechanisms.

The processor revision is specified by CPUID_Fn0000001_EAX (FamModStep) or CPUID_Fn80000001_EAX (FamModStepExt). This document uses a revision letter instead of specific model numbers. Where applicable, the processor stepping is indicated after the revision letter. All behavior marked with a revision letter apply to future revisions unless they are superseded by a change in a later revision. See the revision guide in 1.2 [Reference Documents] for additional information about revision determination.

1.2 Reference Documents

Term	Description
docAPM1	AMD64 Architecture Programmer's Manual Volume 1: Application Programming, order# 24592.
docAPM2	AMD64 Architecture Programmer's Manual Volume 2: System Programming, order# 24593.
docAPM3	AMD64 Architecture Programmer's Manual Volume 3: Instruction-Set Reference, order# 24594.
docAPM4	AMD64 Architecture Programmer's Manual Volume 4: 128-Bit and 256-Bit Media Instructions, order# 26568.
docAPM5	AMD64 Architecture Programmer's Manual Volume 5: 64-Bit Media and x87 Floating-Point Instructions, order# 26569.
docACPI	Advanced Configuration and Power Interface (ACPI) Specification. <u>http://www.acpi.info</u> .
docIOMMU	AMD I/O Virtualization TechnologySpecification, order# 48882.
docI2C	I2C Bus Specification. http://www.nxp.com/documents/user_manual/UM10204.pdf
docJEDEC	JEDEC Standards. http://www.jedec.org.
docPCIe	PCI Express® Specification. http://www.pcisig.org.
docPCIIb	PCI Local Bus Specification. <u>http://www.pcisig.org</u> .
docRAS	RAS Feature Enablement for AMD Family 17h Models 00h-0Fh, order# 55987.
docRevG	Revision Guide for AMD Family 17h Models 00h-0Fh Processors, order# 55449.
docRevG	Revision Guide for AMD Family 17h Models 10h-1Fh Processors, order# 55606.
docRevG	Revision Guide for AMD Family 17h Models 20h-2Fh Processors, order# 56270.

Table 1: Reference Documents Listing

1.2.1 Documentation Conventions

When referencing information found in external documents listed in Reference Documents, the "=>" operator is used. This notation represents the item to be searched for in the reference document. For example:

docExDoc => Header1 => Header2

is to have the reader use the search facility when opening referenced document "docExDoc" and search for "Header2". "Header2" may appear more than once in "docExDoc", therefore, referencing the one that follows "Header1". In that case, the easiest way to get to Header2 is to use the search to locate Header1, then again to locate "Header2".

1.3 Conventions

1.3.1 Numbering

- Binary numbers: Binary numbers are indicated either by appending a "b" at the end (e.g., 0110b) or by verilog syntax (e.g., 4'b0110).
- Hexadecimal numbers: Hexadecimal numbers are indicated by appending an "h" to the end (e.g., 45F8h) or by verilog syntax (e.g., 16'h45F8).
- Decimal numbers: A number is decimal if not specified to be binary or hex.
- Exception: Physical register mnemonics are implied to be hex without the h suffix.
- Underscores in numbers: Underscores are used to break up numbers to make them more readable. They do not imply any operation (e.g., 0110 1100).

1.3.2 Arithmetic And Logical Operators

In this document, formulas generally follow Verilog conventions for logic equations.

Operator	Definition
{}	Concatenation. Curly brackets are used to indicate a group of bits that are concatenated together. Each set of bits is separated by a comma (e.g., {Addr[3:2], Xlate[3:0]} represents a 6-bit values; the two MSBs are Addr[3:2] and the four LSBs are Xlate[3:0]).
	Bitwise OR (e.g., $01b \mid 10b == 11b$).
	Logical OR (e.g., $01b \parallel 10b == 1b$). It treats a multi-bit operand as 1 if ≥ 1 and produces a 1-bit result.
&	Bitwise AND (e.g., $01b \& 10b == 00b$).
&&	Logical AND (e.g., 01b && 10b == 1b). It treats a multi-bit operand as 1 if ≥ 1 and produces a 1-bit result.
^	Bitwise exclusive-OR (e.g., $01b \land 10b == 11b$). Sometimes used as "raised to the power of" as well, as indicated by the context in which it is used (e.g., $2^2 == 4$).
~	Bitwise NOT (also known as one's complement). (e.g., $\sim 10b == 01b$).
!	Logical NOT (e.g., $!10b == 0b$). It treats a multi-bit operand as 1 if ≥ 1 and produces a 1-bit result.
<, <=, >, >=, ==, !=	Relational. Less than, Less than or equal, greater, greater than or equal, equal, and not equal.
+, -, *, /, %	Arithmetic. Addition, subtraction, multiplication, division, and modulus.
<<	Bitwise left shift. Shift left first operand by the number of bits specified by the 2nd operand (e.g., $01b \ll 01b == 10b$).
>>	Bitwise right shift. Shift right first operand by the number of bits specified by the 2nd operand (e.g., $10b >> 01b == 01b$).
?:	Ternary conditional (e.g., condition ? value if true : value if false).

Table 2: Arithmetic and Logical Operator Definitions

Table 3: Function Definitions

Term	Description	
ABS	ABS(integer expression): Remove sign from signed value.	
FLOOR	FLOOR(integer expression): Rounds real number down to nearest integer.	
CEIL	CEIL(real expression): Rounds real number up to nearest integer.	
MIN	MIN(integer expression list): Picks minimum integer or real value of comma separated list.	
MAX	MAX(integer expression list): Picks maximum integer or real value of comma separated list.	
COUNT	COUNT(integer expression): Returns the number of binary 1's in the integer.	
ROUND	ROUND(real expression): Rounds to the nearest integer; halfway rounds away from zero.	
UNIT	UNIT(register field reference): Input operand is a register field reference that contains a valid values table	
	that defines a value with a unit (e.g., clocks, ns, ms, etc). This function takes the value in the register field	
	and returns the value associated with the unit (e.g., If the field had a valid value definition where 1010b was	
	defined as 5 ns). Then if the field had the value of 1010b, then UNIT() would return the value 5.	
POW	POW(base, exponent): $POW(x,y)$ returns the value x to the power of y.	

1.3.2.1 Operator Precedence and Associativity

This document follows C operator precedence and associativity. The following table lists operator precedence (highest to lowest). Their associativity indicates in what order operators of equal precedence in an expression are applied. Parentheses are also used to group subexpressions to force a different precedence; such parenthetical expressions can be nested and are evaluated from inner to outer (e.g., " $X = A \parallel !B \&\& C$ " is the same as " $X = A \parallel (!B) \&\& C$ ").

Operator	Description	Associativity
!,~	Logical negation/bitwise complement	right to left
*, /, %	Multiplication/division/modulus	left to right
+, -	Addition/subtraction	left to right
<<,>>>	Bitwise shift left, Bitwise shift right	left to right
< , <=, >,	Relational operators	left to right
>=, ==, !=		
&	Bitwise AND	left to right
^	Bitwise exclusive OR	left to right
	Bitwise inclusive OR	left to right
&&	Logical AND	left to right
	Logical OR	left to right
?:	Ternary conditional	right to left

Table 4: Operator Precedence and Associativity

1.3.3 Register Mnemonics

A register mnemonic is a short name that uniquely refers to a register, either all instances of that register, some instances, or a single instance.

Every register instance can be expressed in 2 forms, logical and physical, as defined below.

Table 5: Register Mnemonic Definitions

Term	Description
logical mnemonic	The register mnemonic format that describes the register functionally, what namespace to
	which the register belongs, a name for the register that connotes its function, and optionally,
	named parameters that indicate the different function of each instance (e.g.,
	Link::Phy::PciDevVendIDF3). See 1.3.3.1 [Logical Mnemonic].

physical mnemonic The register mnemonic that is formed based on the physical address used to access the register (e.g., D18F3x00). See 1.3.3.2 [Physical Mnemonic].

1.3.3.1 Logical Mnemonic

The logical mnemonic format consists of a register namespace, a register name, and optionally a register instance specifier (e.g., register namespace::register name register instance specifier).

For Unb::PciDevVendIDF3:

- The register namespace is Unb, which is the UNB IP register namespace.
- The register name is PciDevVendIDF3, which reads as PCICFG device and vendor ID in Function 3.
- There is no register instance specifier because there is just a single instance of this register.

For Dct::Phy::CalMisc2_dct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0]:

- The register namespace is Dct::Phy, which is the DCT PHY register namespace.
- The register name is CalMisc2, which reads as miscellaneous calibration register 2.
- The register instance specifier is _dct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0], which indicates that there are 2 DCTPHY instances, each IP for this register has 5 chiplets (0-3 and BCST), and for each chiplet 13 pads (0-11 and BCST). This register has 130 instances. (2*5*13)

Term	Description
register namespace	A namespace for which the register name must be unique. A register namespace indicates to which IP it belongs and an IP may have multiple namespaces. A namespace is a string that supports a list of "::" separated names. The convention is for the list of names to be hierarchical, with the most significant name first and the least significant name last (e.g., Link::Phy::Rx is the RX component in the Link PHY).
register name	A name that cannotes the function of the register.
register instance specifier	The register instance specifier exists when there is more than one instance for a register. The register instance specifier consists of one or more register instance parameter specifier (e.g., The register instance specifierdct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0] consists of 3 register instance parameter specifiers, _dct[1:0], _chiplet[BCST,3:0], and _pad[BCST,11:0]).
register instance parameter specifier	A register instance parameter specifier is of the form _register parameter name[register parameter value list] (e.g., The register instance parameter specifier _dct[1:0] has a register parameter name of dct (The DCT PHY instance name) and a register parameter value list of "1:0" or 2 instances of DCT PHY).
register parameter name	A register parameter name is the name of the number of instances at some level of the logical hierarchy (e.g., The register parameter name dct specifies how many instances of the DCT PHY exist).
register parameter value list	The register parameter value list is the logical name for each instance of the register parameter name (e.g., For _dct[1:0], there are 2 DCT PHY instances, with the logical names 0 and 1, but it should be noted that the logical names 0 and 1 can correspond to physical values other than 0 and 1). It is the purpose of the AddressMappingTable to map these register parameter values to physical address values for the register.

Table 6: Logical Mnemonic Definitions

The physical register mnemonic format varies by the access method. The following table describes the supported physical register mnemonic formats.

Term	Description
PCICFG	The PCICFG, or PCI defined configuration space, physical register mnemonic format
	is of the form DXFYxZZZ.
BAR	The BAR, or base address register, physical register mnemonic format is of the form
	PREFIXxZZZ.
MSR	The MSR, or x86 model specific register, physical register mnemonic format is of the
	form MSRXXXX_XXXX, where XXXX_XXXX is the hexadecimal MSR number.
	This space is accessed through x86 defined RDMSR and WRMSR instructions.
PMC	The PMC, or x86 performance monitor counter, physical register mnemonic format is
	any of the forms {PMCxXXX, L2IPMCxXXX, NBPMCxXXX}, where XXX is the
	performance monitor select.
CPUID	The CPUID, or x86 processor identification state, physical register mnemonic format
	is of the form CPUID FnXXXX_XXXX_EiX[_xYYY], where XXXX_XXXX is the
	hex value in the EAX and YYY is the hex value in ECX.

Table 7: Physical Mnemonic Definitions

1.3.4 Register Format

A register is a group of register instances that have the same field format (same bit indices and field names).

1.3.4.1 A Register is a group of Register Instances

All instances of a register:

- Have the same:
 - Field bit indices and names
 - Field titles, descriptions, valid values.
 - Register title
 - Register description
 - Fields may have different: (instance specific)
 - Access Type. See 1.3.4.10 [Field Access Type].
 - Reset. See 1.3.4.11 [Field Reset].
 - Init. See 1.3.4.12 [Field Initialization].
 - Check. See 1.3.4.13 [Field Check].

1.3.4.2 Register Physical Mnemonic, Title, and Name

A register definition is identified by a table that starts with a heavy bold line. The information above the bold line in order is:

- 1. The physical mnemonic of the first instance of the register
 - A register that has multiple instances, may have instances that have different access methods, each with it's own physical mnemonic format.
 - This text is not intended to represent the physical mnemonics of all instances of the register. It is only a visual aid to identify a register when scanning down a list, for readers that prefer to find registers by physical mnemonic.
 - The first instance physical mnemonic is the physical mnemonic of the first instance of the list of instances, sorted in lexical/alphabetical order.
- 2. The register title in brackets.
- 3. The register name in parenthesis.

Physical M	nemonic Title Name	
MSR00	MSR0000_0010 [Time Stamp Counter] (TSC)	
Read-w	Read-write, Volatile. Reset: 0000_0000_0000_0000h.	
Core::X86:	Core::X86::Msr::TSC_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000010	
Bits	Description	
63:0	TSC: time stamp counter. Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The	
	TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is	
	affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based	
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).	

Figure 1: Register Physical Mnemonic, Title, and Name

1.3.4.3 Full Width Register Attributes

The first line that follows the bold line contains the attributes that apply to all fields of the register. This row is rendered as a convenience to the reader and replicates content that exists in the register field.

- AccessType: If all non-reserved fields of a register have the same access type, then the access type is rendered in this row.
 - The supported access types are specified by 1.3.4.10 [Field Access Type].
 - The example figure shows that the access type "Read-write, Volatile" applies to all non-reserved fields of the register.
- Reset: If all non-reserved fields of a register have a constant reset, then the full width register reset is rendered in this row. The example figure shows the reset "0000_0000_0000_0000h".
 - The value zero (0) is assumed for display purposes for all reserved fields.
- If none of the above content is rendered, then this row of the register is not rendered.

MSR0000_0010 [Time Stamp Counter] (TSC)

Read-wr	Read-write,Volatile.]Reset: 0000_0000_0000_0000h.]	
Core::X86::1	Core::X86::Msr::TSC_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000010	
Bits	Description	
63:0	TSC : time stamp counter . Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).	

Figure 2: Full Width Register Attributes

1.3.4.4 Register Description

The register description is optional and appears after the "full width register attributes" row and before the "register instance table" rows. The register description can be one or more paragraphs.

PciDevVendIDF3 [Device/Vendor ID]

Read-onl	y. Reset: 0000_1022h.	
A register	A register description.	
That can	That can be multiple paragraphs.	
Link::Phy::T	Link::Phy::Tx::PciDevVendIDF3; D18F3x00	
Bits	Description	
31:16	DeviceID: device ID. Read-only. Reset: Fixed,0000h.	
15:0	VendorID: vendor ID. Read-only. Reset: Fixed, 1022h. Init: 1234h.	

Figure 3: Register Description

1.3.4.5 Register Instance Table

The zero or more rows of 8-pt font before the Bits/Description row is the register instance table.

The register instance table can generally be described as follows:

- Each row describes the access method of one or more register instances.
- If a row describes two or more instances, then the logical instance range, left to right, corresponds to the physical range, left to right.
- The absence of register instance rows indicates that the register exists for documentation purposes, and no access method is described for the register.

Because there are multiple access methods for all the registers, each of the following subsections describes an aspect of the register instance table in isolation.

1.3.4.5.1 Content Ordering in a Row

Content in a register instance table row is ordered as follows:

- The text up to the first semicolon is the logical mnemonic.
 - See 1.3.3.1 [Logical Mnemonic].
- The text after the first semicolon is the physical mnemonic.
 - See 1.3.3.2 [Physical Mnemonic].
- Optionally, content after the physical mnemonic provides additional information about the access method for the register instances in the row.

BXXD00F0x000 (NB_VENDOR_ID)

Read-only. Reset: 1022h.	
Vendor ID Register	
IOHC::NB_VENDOR_ID_aliasHOS[T; BXXD00F0x000; BXX=IOHC::NB_BUS_NUM_CNTL_aliasSMN[NB_BUS_NUM]	
IOHC::NB_VENDOR_ID_aliasSMN; NBCFGx000000000; NBCFG=13B0_0000h	

Figure 4: Register Instance Table: Content Ordering in a Row

1.3.4.5.2 Multiple Instances Per Row

Multiple instances in a row is represented by a single dimension "range" in the logical mnemonic and the physical mnemonic.

The single dimension order of instances is the same for both the logical and physical mnemonic. The first logical

mnemonic is associated with the first physical mnemonic, so forth for the 2nd, up until the last.

- Brackets indicates a list, most significant to least significant.
- The ":" character indicates a continuous range between 2 values.
- The "," character separates non-contiguous values.
- There are some cases where more than one logical mnemonic maps to a single physical mnemonic.

Note that it is implied that the MSR {lthree,core,thread} parameters are not part of a range.

Example:

NAMESP::REGNAME_inst[BLOCK[5:0],BCST]_aliasHOST; FFF1x00000088_x[000[B:6]_0001,00000000]

- There are 7 instances.
- NAMESP is the namespace.
- 6 instances are represented by the sub-range 000[B:6] 0001.
- instBCST corresponds to FFF1x00000088 x00000000.
- __inst BLOCK 0 corresponds to FFF1x00000088_x00060001.
- ..
- _inst BLOCK 5 corresponds to FFF1x00000088_x000B0001.

1.3.4.5.3 MSR Access Method

The MSR parameters {lthree,core,thread} are implied by the identity of the core on which the RDMSR/WRMSR is being executed, and therefore are not represented in the physical mnemonic.

MSRs that are:

- per-thread have the {lthree,core,thread} parameters.
- per-core do not have the thread parameter.
- per-L3 do not have the {core,thread} parameters.
- common to all L3's do not have the {lthree,core,thread} parameters.

1.3.4.5.3.1 MSR Per-Thread Example

An MSR that is per-thread has all three {lthree,core,thread} parameters and all instances have the same physical mnemonic.

MSR0000_0010 [Time Stamp Counter] (TSC)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
Core::X86::M	Core::X86::Msr::TSC_lthree[1:0]_core[3:0]_thread[1:0];[MSR00000010]	
Bits	s Description	
63:0	TSC : time stamp counter . Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based	
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).	

Figure 5: Register Instance Table: MSR Example

1.3.4.5.3.2 MSR Range Example

An MSR can exist as a range for a parameter other than the {lthree,core,thread} parameters.

In the following example the n parameter is a range. The _n0 value corresponds to MSR0000_0201, and so on.

MSR0000_0201 [Variable-Size MTRRs Mask] (MtrrVarMask)

Reset: 0000_0000_0000 0000h. Core::X86::Msr::MtrrVarMask_n[7:0]_lthree[1:0]_core[3:0]; MSR0000_020[[F,D,B,9,7,5,3,1]]

Figure 6: Register Instance Table: MSR Range Example

1.3.4.5.4 BAR Access Method

The BAR access method is indicated by a physical mnemonic that has the form PREFIXxNUMBER.

• Example: APICx0000. The BAR prefix is "APIC".

The BAR prefix represents either a constant or an expression that consists of a register reference.

1.3.4.5.4.1 BAR as a Register Reference

A relocatable BAR is when the base of an IP is not a constant.

• The prefix NTBPRIBAR0 represents the base of the IP, the value of which comes from the register NBIFEPFNCFG::BASE ADDR 1 aliasHOST instNBIF0 func1[BASE ADDR].

NTBPRIBAR0x00000 (NTB_SMU_PCTRL0)

Reset: 0000_0000h.
NTB::NTB_SMU_PCTRL0_aliasHOSTPRI/ NTBPRIBAR0x00000;
NTBPRIBAR0=NBIFEPFNCFG::BASE_ADDR_1_aliasHOST_instNBIF0_func1[BASE_ADDR]
NTB::NTB_SMU_PCTRL0_aliasHOSTSEC; NTBSECBAR0s00000;
NTBSECBAR0=NBIFEPFNCFG::BASE ADDR 1 aliasHOST instNBIF2 func1[BASE ADDR]
NTB::NTB_SMU_PCTRL0_aliasSMN; NTBx00000000; NTB=0400_0000h

Figure 7: Register Instance Table: BAR as Register Reference

1.3.4.5.5 PCICFG Access Method

The PCICFG access method is indicated by a physical mnemonic that has the form DXXFXxNUMBER. There are 2 cases:

- Bus omitted and implied to be 00h.
- Bus represented as BXX and indicates that the bus is indicated by a register field.

Example:

- Example: D18F0x000. (The bus, when omitted, is implied to be 00h)
- Example: BXXD0F0x000. (The bus as an expression that includes a register reference)

1.3.4.5.5.1 PCICFG Bus Implied to be 00h

Example:

• The absence of a B before the D14 implies that the bus is 0. FCH::ITF::LPC::PciDevVendID_aliasHOST_D14F3x000

Figure 8: Register Instance Table: Bus Implied to be 00h

1.3.4.5.6 Data Port Access Method

A data port requires that the data port select be written before the register is accessed via the data port.

Example:

- The data port select value follows the "_x".
- The data port select register follows the "DataPortWrite=".

DF::FabricBlockInstanceCount_inst[PIE0,BCST]_aliasHOST; D18F0x040_x[00050001,00000000]; DataPortWrite=DF::FabricConfigAccessControl DF::FabricBlockInstanceCount_inst[PIE0,BCST]_aliasSMN; DFF0x00000040_x[00050001,00000000]; DFF0=0001_C000h; DataPortWrite=DF::FabricConfigAccessControl

Figure 9: Register Instance Table: Data Port Select

1.3.4.6 Register Field Format

The register field definition are all rows that follow the Bits/Description row. Each field row represents the definition of a bit range, with the bit ranges ordered from most to least significant. There are 2 columns, with the left column defining the field bit range, and the right column containing the field definition.

There are 2 field definition formats, simple and complex. If the description can be described in the simple one paragraph format then the simple format is used, else the complex format is used.

1.3.4.7 Simple Register Field Format

The simple register format compresses all content into a single paragraph with the following implied order:

- 1. Field name (required)
 - Allowed to be Reserved. See 1.3.4.9 [Field Name is Reserved].
 - "FFXSE" in the example figure.
- 2. Field title
 - "fast FXSAVE/FRSTOR enable" in the example figure.
- 3. Field Access Type. See 1.3.4.10 [Field Access Type].
 - In the example figure the access type is "Read-write".
- 4. Field Reset. See 1.3.4.11 [Field Reset].
 - In the example figure the reset is warm reset and "0".
- 5. Field Init. See 1.3.4.12 [Field Initialization].
- 6. Field Check. See 1.3.4.13 [Field Check].
- 7. Field Valid Values, if the valid values are single bit (E.g. 0=, 1=). See 1.3.4.14 [Field Valid Values].
 - In the example figure the 1= definition begins with "Enables" and ends with "mechanism".
 - In the example figure there is no 0= definition.
- 8. Field description, if it is a single paragraph.
 - In the example figure the field description begins with "This is" and ends with "afterwards".

All fields that don't exist are omitted.

14 FFXSE: fast FXSAVE/FRSTOR enable. Read-write Reset: 0. 1=Enables the fast FXSAVE/FRSTOR mechanism. A 64-bit operating system may enable the fast FXSAVE/FRSTOR mechanism if (Core::X86::Cpuid::FeatureExtIdEdx[FFXSR] == 1). This bit is set once by the operating system and its value is not changed afterwards.

1.3.4.8 Complex Register Field Format

Content that can't be expressed in the single paragraph format is broken out to a separate sub-row (a definition column row).

Additional sub-rows are added in the following order:

- 1. Complex expression for {Reset,AccessType,Init,Check}.
- 2. Instance specific {Reset,AccessType,Init,Check} values.
- 3. Description, if more than 1 paragraph.
- 4. Valid values, if more than 0=/1=. Or a Valid bit table. (see figure)

The following figure highlights a complex access type specification.

63:0 APerfReadOnly: read-only actual core clocks counter. Reset: 0. This register increments in proportion to the actual number of core clocks cycles while the core is in C0. See Core::X86::Msr::MPerfReadOnly. This register is not affected by writes to Core::X86::Msr::APERF. AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock] ? Read-only,Volatile : Read-write,Volatile.

Figure 11: Register Field Sub-Row for {Reset, AccessType, Init, Check}

The following figure highlights a complex description specification.

4	INVDWBINVD : INVD to WBINVD conversion . Read-write. Reset: 1. Check: 1. 1=Convert INVD to WBINVD.
	Description : This bit is required to be set for normal operation when any of the following are true:
	An L2 is shared by multiple threads.
	An L3 is shared by multiple cores.
	CC6 is enabled.
	Probe filter is enabled.

Figure 12: Register Field Sub-Row for Description

The following figure highlights a complex valid value table, used either when the field is more than 1 bit or when the definition is more than a single sentence.

2:1	CpuWdtTimeBase: CPU watchdog timer time base. Read-write. Reset: 0. Specifies the time base for			
	the timeout period specified in CpuWdtCountSel.			
	ValidValues:			
	Value Description			
	00ь	1.31ms		
	01b	1.28us		
	10b	Reserved (5ns)		
l l	11b	Reserved		

Figure 13: Register Field Sub-Row for Valid Value Table

The following figure highlights a valid bit table which is used when each bit has a specific function.

55:52	Reserved	L.	
51:48	SliceMask. Read-write. Reset: 0.		
	ValidVal	ues:	
	Bit	Description	
	[0]	L3 Slice 0 mask.	
	[1]	L3 Slice 1 mask.	
	[2]	L3 Slice 2 mask.	
	[3]	L3 Slice 3 mask.	

Figure 14: Register Field Sub-Row for Valid Bit Table

1.3.4.9 Field Name is Reserved

When a register field name is Reserved, and it does not explicitly specify an access type, then the implied access type is "Reserved-write-as-read".

- The Reserved-write-as-read access type is:
 - Reads must not depend on the read value.
 - Writes must only write the value that was read.

1.3.4.10 Field Access Type

•

The AccessType keyword is optional and specifies the access type for a register field. The access type for a field is a comma separated list of the following access types.

Term	Description				
Read-only	Readable; writes are ignored.				
Read-write	Readable and writable.				
Read	Readable; must be associated with one of the following {Write-once, Write-1-only, Write-1-to- clear, Error-on-write}.				
Write-once	Capable of being written once; all subsequent writes have no effect. If not associated with Read, then reads are undefined.				
Write-only	Writable. Reads are undefined.				
Write-1-only	Writing a 1 sets to a 1; Writing a 0 has no effect. If not associated with Read, then reads are undefined.				
Write-1-to-clear	Writing a 1 clears to a 0; Writing a 0 has no effect. If not associated with Read, then reads are undefined.				
Write-0-only	Writing a 0 clears to a 0; Writing a 1 has no effect. If not associated with Read, then reads are undefined.				
Error-on-read	h-read Error occurs on read.				
Error-on-write	Error occurs on write.				
Error-on-write-0	-write-0 Error occurs on bitwise write of 0.				
Error-on-write-1	Error occurs on bitwise write of 1.				
Inaccessible	Not readable or writable (e.g., Hide ? Inaccessible : Read-Write).				
Configurable					
Unpredictable	The behavior of both reads and writes is unpredictable.				
Reserved-write-	Reads are undefined. Must always write 1.				
as-1					

Table 8: AccessType Definitions

Reserved-write-	Reads are undefined. Must always write 0.			
as-0				
	Indicates that a register field value may be modified by hardware, firmware, or microcode when fetching the first instruction and/or might have read or write side effects. No read may depend on the results of a previous read and no write may be omitted based on the value of a previous read or write.			

1.3.4.10.1 Conditional Access Type Expression

The ternary operator can be used to express an access type that is conditional on an expression that can contain any of the following:

- A register field value
- A constant
- A definition

1.3.4.11 Field Reset

The Reset keyword is optional and specifies the value for a register field at the time that hardware exits reset, before firmware initialization initiates.

Unless preceded by one of the following prefixes, the reset value is called warm reset and the value is applied at both warm and cold reset.

Table 9: Reset Type Definitions

Туре	Description
Cold	Cold reset. The value is applied only at cold reset.
Fixed	The value applies at all time.

1.3.4.12 Field Initialization

The Init keyword is optional and specifies an initialization recommendation for a register field.

If present, then there is an optional prefix that specifies the owner of the initialization. See Table 10 [Init Type Definitions].

• Example: Init: BIOS,2'b00. //A initialization recommendation for a field to be programmed by BIOS.

Туре	Description
BIOS	Initialized by AMD provided AMD Generic Encapsulated Software Architecture (AGESA TM)
	x86 software.
SBIOS	Initialized by OEM or IBV provided x86 software, also called Platform BIOS.
OS	Initialized by OS or Driver.

Table 10: Init Type Definitions

1.3.4.13 Field Check

The Check keyword is optional and specifies the value that is recommended for firmware/software to write for a register field. It is a recommendation, not a requirement, and may not under all circumstances be what software programs.

1.3.4.14 Field Valid Values

A register can optionally have either a valid values table or a valid bit table:

- A valid values table specifies the definition for specific field values.
- A valid bit table specifies the definition for specific field bits.

2 Core Complex (CCX)

2.1 Processor x86 Core

2.1.1 Secure Virtual Machine Mode (SVM)

Support for SVM mode is indicated by Core::X86::Cpuid::FeatureExtIdEcx[SVM].

2.1.1.1 BIOS support for SVM Disable

The BIOS should include the following user setup options to enable and disable AMD Virtualization[™] technology.

2.1.1.1.1 Enable AMD VirtualizationTM

- Core::X86::Msr::VM_CR[SvmeDisable] = 0.
- Core::X86::Msr::VM_CR[Lock] = 1.
- Core::X86::Msr::SvmLockKey[SvmLockKey] = 0000_0000_0000_0000h.

2.1.1.1.2 Disable AMD VirtualizationTM

- Core::X86::Msr::SvmLockKey[SvmLockKey] = 0000_0000_0000_0000h.
- Core::X86::Msr::VM_CR[SvmeDisable] = 1.
- Core::X86::Msr::VM_CR[Lock] = 1.

The BIOS may also include the following user setup options to disable AMD Virtualization technology.

2.1.1.1.3 Disable AMD Virtualization[™], with a user supplied key

- Core::X86::Msr::VM CR[SvmeDisable] = 1.
- Core::X86::Msr::VM_CR[Lock] = 1.
- Core::X86::Msr::SvmLockKey[SvmLockKey] programmed with value supplied by user. This value should be stored in NVRAM.

2.1.2 Effective Frequency

The effective frequency interface allows software to discern the average, or effective, frequency of a given core over a configurable window of time. This provides software a measure of actual performance rather than forcing software to assume the current frequency of the core is the frequency of the last P-state requested. Core::X86::Msr::MPERF is incremented by hardware at the P0 frequency while the core is in C0. Core::X86::Msr::APERF increments in proportion to the actual number of core clocks cycles while the core is in C0.

The following procedure calculates effective frequency using Core::X86::Msr::MPERF and Core::X86::Msr::APERF:

- 1. At some point in time, write 0 to both MSRs.
- 2. At some later point in time, read both MSRs.
- 3. Effective frequency = (value read from Core::X86::Msr::APERF / value read from Core::X86::Msr::MPERF) * P0 frequency.

Additional notes:

- The amount of time that elapses between steps 1 and 2 is determined by software.
- It is software's responsibility to disable interrupts or any other events that may occur in between the write of Core::X86::Msr::MPERF and the write of Core::X86::Msr::APERF in step 1 or between the read of Core::X86::Msr::MPERF and the read of Core::X86::Msr::APERF in step 2.
- The behavior of Core::X86::Msr::MPERF and Core::X86::Msr::APERF may be modified by Core::X86::Msr::HWCR[EffFreqCntMwait].
- The effective frequency interface provides +/- 50MHz accuracy if the following constraints are met:
 - Effective frequency is read at most one time per millisecond.
 - When reading or writing Core::X86::Msr::MPERF and Core::X86::Msr::APERF software executes only MOV instructions, and no more than 3 MOV instructions, between the two RDMSR or WRMSR instructions.
 - Core::X86::Msr::MPERF and Core::X86::Msr::APERF are invalid if an overflow occurs.

2.1.3 Address Space

2.1.3.1 Virtual Address Space

The processor supports 48-bit address bits of virtual memory space (256 TB) as indicated by Core::X86::Cpuid::LongModeInfo.

2.1.3.2 Physical Address Space

The processor supports a 48-bit physical address space. See Core::X86::Cpuid::LongModeInfo. The processor master aborts the following upper-address transactions (to address PhysAddr):

• Link or core requests with non-zero PhysAddr[63:48].

2.1.3.3 System Address Map

The processor defines a reserved memory address region starting at FFFD_0000_0000h and extending up to FFFF_FFFF. System software must not map memory into this region. Downstream host accesses to the reserved address region results in a page fault. Upstream system device accesses to the reserved address region results in an undefined operation.

2.1.3.3.1 Memory Access to the Physical Address Space

All memory accesses to the physical address space from a core are sent to its associated Data Fabric (DF). All memory accesses from a link are routed through the DF. An IO link access to physical address space indicates to the DF the cache attribute (Coherent or Non-coherent, based on bit[0] of the Sized Read and Write commands).

A core access to physical address space has two important attributes that must be determined before issuing the access to the NB: the memory type (e.g., WB, WC, UC; as described in the MTRRs) and the access destination (DRAM or MMIO).

If the memory map maps a region as DRAM that is not populated with real storage behind it, then that area of DRAM must be mapped as UC memtype.

This mechanism is managed by the BIOS and does not require any setup or changes by system software.

2.1.3.3.1.1 Determining Memory Type

The memory type for a core access is determined by the highest priority of the following ranges that the access falls in: 1=Lowest priority.

- 1. The memory type as determined by architectural mechanisms.
 - See the APM2 chapter titled "Memory System", sections "Memory-Type Range Registers" and "Page-Attribute Table Mechanism".
 - See the APM2 chapter titled "Nested Paging", section "Combining Memory Types, MTRRs".
 - See Core::X86::Msr::MTRRdefType, Core::X86::Msr::MtrrVarBase, Core::X86::Msr::MtrrVarMask, Core::X86::Msr::MtrrFix_64K and Core::X86::Msr::MtrrFix_16K_0 through Core::X86::Msr::MtrrFix_4K_7.
- 2. TSeg & ASeg SMM mechanism. (see Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask)
- 3. CR0[CD]: If (CR0[CD]==1) then MemType=CD.
- 4. MMIO configuration space, APIC space.
 - MMIO APIC space and MMIO config space must not overlap.
 - MemType=UC.
- 5. If ("In SMM Mode"&& ~((Core::X86::Msr::SMMMask[AValid] && "The address falls within the ASeg region") || (Core::X86::Msr::SMMMask[TValid] && "The address falls within the TSeg region"))) then MemType=CD.

2.1.4 Configuration Space

PCI-defined configuration space was originally defined to allow up to 256 bytes of register space for each function of each device; these first 256 bytes are called base configuration space (BCS). It was expanded to support up to 4096 bytes per function; bytes 256 through 4095 are called extended configuration space (ECS).

The processor includes configuration space registers located in both BCS and ECS. Processor configuration space is accessed through bus 0, devices 18h to 1Fh, where device 18h corresponds to node 0 and device 1Fh corresponds to node 7. See 2.1.4.3 [Processor Configuration Space].

Configuration space is accessed by the processor through two methods as follows:

- IO-space configuration: IO instructions to addresses CF8h and CFCh.
 - Enabled through IO::IoCfgAddr[ConfigEn], which allows access to BCS.
 - Use of IO-space configuration can be programmed to generate GP faults through Core::X86::Msr::HWCR[IoCfgGpFault].
 - SMI trapping for these accesses is specified by Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS and Core::X86::Msr::SMI_ON_IO_TRAP.
- MMIO configuration: configuration space is a region of memory space.
 - The base address and size of this range is specified by Core::X86::Msr::MmioCfgBaseAddr. The size is controlled by the number of configuration-space bus numbers supported by the system. Accesses to this range are converted configuration space as follows:
 - Address[31:0] = {0h, bus[7:0], device[4:0], function[2:0], offset[11:0]}.

The BIOS may use either configuration space access mechanism during boot. Before booting the OS, BIOS must disable IO access to ECS, enable MMIO configuration and build an ACPI defined MCFG table. BIOS ACPI code must use MMIO to access configuration space.

2.1.4.1 MMIO Configuration Coding Requirements

MMIO configuration space accesses must use the uncacheable (UC) memory type.

Instructions used to read MMIO configuration space are required to take the following form: mov eax/ax/al, any_address_mode;

Instructions used to write MMIO configuration space are required to take the following form: mov any_address_mode, eax/ax/al;

No other source/target registers may be used other than eax/ax/al.

In addition, all such accesses are required not to cross any naturally aligned DW boundary. Access to MMIO configuration space registers that do not meet these requirements result in undefined behavior

2.1.4.2 MMIO Configuration Ordering

Since MMIO configuration cycles are not serializing in the way that IO configuration cycles are, their ordering rules relative to posted may result in unexpected behavior.

Therefore, processor MMIO configuration space is designed to match the following ordering relationship that exists naturally with IO-space configuration: if a core generates a configuration cycle followed by a posted write cycle, then the posted write is held in the processor until the configuration cycle completes. As a result, any unexpected behavior that might have resulted if the posted-write cycle were to pass MMIO configuration cycle is avoided.

2.1.4.3 **Processor Configuration Space**

Accesses to unimplemented registers of implemented functions are ignored: writes dropped; reads return 0. Accesses to unimplemented functions also ignored: writes are dropped; however, reads return all F's. The processor does not log any master abort events for accesses to unimplemented registers or functions.

Accesses to device numbers of devices not implemented in the processor are routed based on the configuration map registers. If such requests are master aborted, then the processor can log the event.

2.1.5 PCI Configuration Legacy Access

IOx0CF8 [IO-Space Configuration Address] (IO::IoCfgAddr)

Read-write. Reset: 0000_0000h.

IO::IoCfgAddr, and IO::IoCfgData are used to access system configuration space, as defined by the PCI specification. IO::IoCfgAddr provides the address register and IO::IoCfgData provides the data port. Software sets up the configuration address by writing to IO::IoCfgAddr. Then, when an access is made to IO::IoCfgData, the processor generates the corresponding configuration access to the address specified in IO::IoCfgAddr. See 2.1.4 [Configuration Space].

IO::IoCfgAddr may only be accessed through aligned, DW IO reads and writes; otherwise, the accesses are passed to the appropriate IO link. Accesses to IO::IoCfgAddr and IO::IoCfgData received from an IO link are treated as all other IO transactions received from an IO link. IO::IoCfgAddr and IO::IoCfgData in the processor are not accessible from an IO link

min.				
_aliasIO	IOx0CF8; IO=0000_0000h			
Bits	Description			
31	ConfigEn: configuration space enable. Read-write. Reset: 0. 0=IO read and write accesses are passed to the			
	appropriate IO link and no configuration access is generated. 1=IO read and write accesses to IO::IoCfgData are			
	translated into configuration cycles at the configuration address specified by this register.			
30:28	Reserved.			
27:24	ExtRegNo: extended register number. Read-write. Reset: 0h. ExtRegNo provides bits[11:8] and RegNo			
	provides bits[7:2] of the byte address of the configuration register.			
23:16	BusNo: bus number. Read-write. Reset: 00h. Specifies the bus number of the configuration cycle.			
15:11	Device: device number. Read-write. Reset: 00h. Specifies the device number of the configuration cycle.			
10:8	Function. Read-write. Reset: 0h. Specifies the function number of the configuration cycle.			
7:2	RegNo: register address. Read-write. Reset: 00h. See IO::IoCfgAddr[ExtRegNo].			

1:0 Reserved.

IOx0CFC [IO-Space Configuration Data Port] (IO::IoCfgData)

Read-write. Reset: 0000_0000h.			
-			

2.1.6 Register Sharing

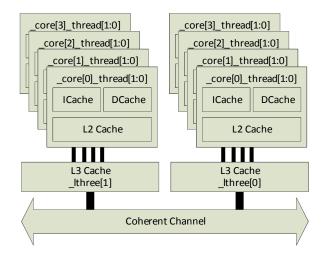


Figure 15: Register Sharing Domains

MSR0000	_0010	[Time	Stamp	Counter]	(TSC)
---------	-------	-------	-------	----------	-------

	ite,Vol <u>atile. Reset: 0000_0000_</u> 0000_0000h.		
Core::X86::Msr::TSQ_lthree[1:0]_core[3:0]_thread[1:0]_MSR00000010			
Bits	Description		
	TSC : time stamp counter . Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based		

Figure 16: Instance Parameters

Instances of core registers are designated as lthree[n:0]_core[n:0]_thread[1:0]. Core registers may be shared at various levels of hierarchy as one register instance per die, per L3 complex, per core or per thread. The absence of the instance parameter _thread[1:0] signifies that there is not a specific instance of said register per thread and thus the register is shared between thread 1 and thread 0. Similarly, the absence of the instance parameter _core[n:0] signifies that there is not a specific instance parameter _core[n:0] signifies that there is not a specific instance of said register per core and thus the register is shared by all cores in that L3 complex, and so on. Software must coordinate writing to shared registers with other threads in the same sharing hierarchy level.

2.1.7 Timers

Each core includes the following timers. These timers do not vary in frequency regardless of the current P-state or C-state.

- Core::X86::Msr::TSC; the TSC increments at the rate specified by the P0 Pstate
- The APIC timer (Core::X86::Apic::TimerInitialCount and Core::X86::Apic::TimerCurrentCount), which increments at the rate of 2xCLKIN; the APIC timer may increment in units of between 1 and 8.

2.1.8 Interrupts

2.1.8.1 System Management Mode (SMM)

System management mode (SMM) is typically used for system control activities such as power management. These activities are typically transparent to the operating system.

2.1.8.1.1 SMM Overview

SMM is entered by a core on the next instruction boundary after a system management interrupt (SMI) is received and recognized. A core may be programmed to broadcast a special cycle to the system, indicating that it is entering SMM mode. The core then saves its state into the SMM memory state save area and jumps to the SMI service routine (or SMI handler). The pointer to the SMI handler is specified by MSRs. The code and data for the SMI handler are stored in the SMM memory area, which may be isolated from the main memory accesses.

The core returns from SMM by executing the RSM instruction from the SMI handler. The core restores its state from the SMM state save area and resumes execution of the instruction following the point where it entered SMM. The core may be programmed to broadcast a special bus cycle to the system, indicating that it is exiting SMM mode.

2.1.8.1.2 Mode and Default Register Values

The software environment after entering SMM has the following characteristics:

- Addressing and operation is in Real mode.
 - A far jump, call or return in the SMI handler can only address the lower 1M of memory, unless the SMI handler first switches to protected mode.
 - If (Core::X86::Msr::SMM_BASE[SmmBase]>=0010_0000h) then:
 - The value of the CS selector is undefined upon SMM entry.
 - The undefined CS selector value should not be used as the target of a far jump, call, or return.
- 4-Gbyte segment limits.
- Default 16-bit operand, address, and stack sizes (instruction prefixes can override these defaults).
- Control transfers that do not override the default operand size truncate the EIP to 16 bits.
- Far jumps or calls cannot transfer control to a segment with a base address requiring more than 20 bits, as in Real mode segment-base addressing, unless a change is made into protected mode.
- Interrupt vectors use the Real mode interrupt vector table.
- The IF flag in EFLAGS is cleared (INTR is not recognized).
- The TF flag in EFLAGS is cleared.
- The NMI and INIT interrupts are masked.
- Debug register DR7 is cleared (debug traps are disabled).

The SMM base address is specified by Core::X86::Msr::SMM_BASE[SmmBase]. Important offsets to the base address pointer are:

- Core::X86::Msr::SMM_BASE[SmmBase] + 8000h: SMI handler entry point.
- Core::X86::Msr::SMM_BASE[SmmBase] + FE00h FFFFh: SMM state save area.

2.1.8.1.3 SMI Sources And Delivery

The processor accepts SMIs as link-defined interrupt messages only. The core/node destination of these SMIs is a function of the destination field of these messages. However, the expectation is that all such SMI messages are specified to be delivered globally (to all cores of all nodes).

There are also several local events that can trigger SMIs. However, these local events do not generate SMIs directly. Each of them triggers a programmable IO cycle that is expected to target the SMI command port in the IO hub and trigger a global SMI interrupt message back to the coherent fabric.

Local sources of SMI events that generate the IO cycle specified in Core::X86::Msr::SmiTrigIoCycle are:

- In the core, as specified by:
 - Core::X86::Msr::McExcepRedir.
 - Core::X86::Msr::SMI ON IO TRAP.
 - All local APIC LVT registers programmed to generate SMIs.

The status for these is stored in Core::X86::Smm::LocalSmiStatus.

2.1.8.1.4 SMM Initial State

٠

After storing the save state, execution starts at Core::X86::Msr::SMM_BASE[SmmBase] + 08000h. The SMM initial state is specified in the following table.

Register	SMM Initial State
CS	SmmBase[19:4]
DS	0000h
ES	0000h
FS	0000h
GS	0000h
SS	0000h
General-Purpose Registers	Unmodified
EFLAGS	0000_0002h
RIP	0000_0000_0000_8000h
CR0	Bits 0, 2, 3, and 31 cleared (PE, EM, TS, and PG); remainder is unmodified
CR4	0000_0000_0000_0000h
GDTR	Unmodified
LDTR	Unmodified
IDTR	Unmodified
TR	Unmodified
DR6	Unmodified
DR7	0000_0000_0000_0400h
EFER	All bits are cleared except bit 12 (SVME) which is unmodified.

Table 11: SMM Initial State

2.1.8.1.5 SMM Save State

In the following table, the offset field provides the offset from the SMM base address specified by Core::X86::Msr::SMM_BASE[SmmBase].

Offset	Size	Content	ts	Access
FE00h	Word	ES	Selector	Read-only
FE02h	6 Bytes		Reserved	
FE08h	Quadword	1	Descriptor in memory format	
FE10h	Word	CS	Selector	Read-only
FE12h	6 Bytes	1	Reserved	
FE18h	Quadword	1	Descriptor in memory format	
FE20h	Word	SS	Selector	Read-only
FE22h	6 Bytes		Reserved	
FE28h	Quadword	1	Descriptor in memory format	
FE30h	Word	DS	Selector	Read-only
FE32h	6 Bytes	-	Reserved	
FE38h	Quadword	-	Descriptor in memory form	
FE40h	Word	FS	Selector	Read-only
FE42h	2 Bytes	10	Reserved	
FE44h	Doublewor	-	FS Base {16'b[47], 47:32}(note 1)	
1 124411	d		15 Dase (100[47], 47.52)(note 1)	
FE48h	Quadword	-	Descriptor in memory format	
FE50h	Word	GS	Selector	Read-only
FE52h	2 Bytes	05	Reserved	itead-only
FE54h	Doublewor	-	GS Base {16'b[47], 47:32}(note 1)	
FE34II	d		$GS Dase {10 0[47], 47.52}(note 1)$	
FE58h	Quadword	-	Descriptor in memory format	
FE60h	4 Bytes	GDTR	Reserved	Read-only
FE64h	Word	ODIK	Limit	Iteau-only
FE66h	2 Bytes	-	Reserved	
FE68h		-		
	Quadword	LDTD	Descriptor in memory format	Deed only
FE70h FE72h	Word	LDTR	Selector	Read-only
	Word	-	Attributes	
FE74h	Doublewor d		Limit	
FE78h	Quadword		Base	
FE80h	4 Bytes	IDTR	Reserved	Read-only
FE84h	Word	-	Limit	
FE86h	2 Bytes	-	Reserved	
FE88h	Quadword	1	Base	
FE90h	Word	TR	Selector	Read-only
FE92h	Word	1	Attributes	
FE94h	Doublewor	1	Limit	
1 27 11	d			
FE98h	Quadword	1	Base	
FEA0h	Quadword	IO RES	START RIP	
FEA8h	Quadword	_	START RCX	
FEB0h	Quadword		START RSI	
FEB8h	Quadword		START_RDI	
FEC0h	Doublewor		86::Smm::TrapOffset [SMM IO Trap Offset]	Read-only
	d			Keau-only
FEC4	Doublewor d	Core::X	86::Smm::LocalSmiStatus	Read-only

FEC8h	Byte	Core::X86::Smm::IoRestart	Read-write
FEC9h	Byte	Core::X86::Smm::AutoHalt	Read-write
FECAh	Byte	Core::X86::Smm::NmiMask	Read-write
FECBh	5 Bytes	Reserved	
FED0h	Quadword	EFER	Read-only
FED8h	Quadword	Core::X86::Smm::SvmState	Read-only
FEE0h	Quadword	Guest VMCB physical address	Read-only
FEE8h	Quadword	SVM Virtual Interrupt Control	Read-only
FEF0h	16 Bytes	Reserved	
FEFCh	Doublewor d	Core::X86::Smm::SmmRevID	Read-only
FF00h	Doublewor d	Core::X86::Smm::SmmBase	Read-write
FF04h	28 Bytes	Reserved	
FF20h	Quadword	Guest PAT	Read-only
FF28h	Quadword	Host EFER (note 2)	
FF30h	Quadword	Host CR4 (note 2)	
FF38h	Quadword	Nested CR3 (note 2)	
FF40h	Quadword	Host CR0 (note 2)	
FF48h	Quadword	CR4	
FF50h	Quadword	CR3	
FF58h	Quadword	CR0	
FF60h	Quadword	DR7	Read-only
FF68h	Quadword	DR6	
FF70h	Quadword	RFLAGS	Read-write
FF78h	Quadword	RIP	Read-write
FF80h	Quadword	R15	
FF88h	Quadword	R14	
FF90h	Quadword	R13	
FF98h	Quadword	R12	
FFA0h	Quadword	R11	
FFA8h	Quadword	R10	
FFB0h	Quadword	R9	
FFB8h	Quadword	R8	
FFC0h	Quadword	RDI	Read-write
FFC8h	Quadword	RSI	
FFD0h	Quadword	RBP	
FFD8h	Quadword	RSP	
FFE0h	Quadword	RBX	
FFE8h	Quadword	RDX	
FFF0h	Quadword	RCX	
FFF8h	Quadword	RAX	
Notes:			·

extended). The 16 LSBs contain bits[47:32].

2. Only used for an SMI in guest mode with nested paging enabled.

The SMI save state includes most of the integer execution unit. Not included in the save state are: the floating point state, MSRs, and CR2. In order to be used by the SMI handler, these must be saved and restored. The save state is the same,

regardless of the operating mode (32-bit or 64-bit).

2.1.8.1.6 System Management State

The following are offsets in the SMM save state area.

SMMxFEC0 [SMM IO Trap Offset] (Core::X86::Smm::TrapOffset)

Read-only, Volatile. Reset: 0000_0000h.

If the assertion of SMI is recognized on the boundary of an IO instruction, Core::X86::Smm::TrapOffset contains information about that IO instruction. For example, if an IO access targets an unavailable device, the system can assert SMI and trap the IO instruction. Core::X86::Smm::TrapOffset then provides the SMI handler with information about the IO instruction that caused the trap. After the SMI handler takes the appropriate action, it can reconstruct and then re-execute the IO instruction from SMM. Or, more likely, it can use Core::X86::Smm::IoRestart to cause the core to re-execute the IO instruction immediately after resuming from SMM.

Bits Description

31:16 **Port**: **trapped IO port address**. Read-only, Volatile. Reset: 0000h. This provides the address of the IO instruction.

1		
	15:12	BPR: IO breakpoint match. Read-only, Volatile. Reset: 0h.
	11	TF: EFLAGS TF value. Read-only, Volatile. Reset: 0.
	10:7	Reserved.
	6	SZ32: size 32 bits. Read-only, Volatile. Reset: 0. 1=Port access was 32 bits.
	5	SZ16: size 16 bits. Read-only, Volatile. Reset: 0. 1=Port access was 16 bits.
	4	SZ8: size 8 bits. Read-only, Volatile. Reset: 0. 1=Port access was 8 bits.
	3	REP: repeated port access. Read-only, Volatile. Reset: 0.
	2	STR: string-based port access. Read-only, Volatile. Reset: 0.
	1	V: IO trap word valid. Read-only, Volatile. Reset: 0. 0=The other fields of this offset are not valid.

- 1 V: **IO trap word valid**. Read-only, Volatile. Reset: 0. 0=The other fields of this offset are not valid. 1=The core entered SMM on an IO instruction boundary; all information in this offset is valid.
- 0 **RW**: port access type. Read-only, Volatile. Reset: 0. 0=IO write (OUT instruction). 1=IO read (IN instruction).

SMMxFEC4 [Local SMI Status] (Core::X86::Smm::LocalSmiStatus)

SWIWEXFEC4 [Local SWI Status] (Core::A80::Smin::LocalSmiStatus)			
Read-	Read-only, Volatile. Reset: 0000 0000h.		
This o	ffset stores status bits associated with SMI sources local to the core. For each of these bits, 1=The associated		
mecha	mechanism generated an SMI.		
Bits	ts Description		
31:9	Reserved.		
8	MceRedirSts: machine check exception redirection status. Read-only, Volatile. Reset: 0. This bit is associated		
	with the SMI source specified in Core::X86::Msr::McExcepRedir[RedirSmiEn].		
7:4	Reserved.		
3:0	IoTrapSts: IO trap status. Read-only, Volatile. Reset: 0h. Each of these bits is associated with each of the		
	respective SMI sources specified in Core::X86::Msr::SMI_ON_IO_TRAP.		

SMMxFEC8 [IO Restart Byte] (Core::X86::Smm::IoRestart)

Read-write. Reset: 00h.

If the core entered SMM on an IO instruction boundary, the SMI handler may write this to FFh. This causes the core to re-execute the trapped IO instruction immediately after resuming from SMM. The SMI handler should only write to this byte if Core::X86::Smm::TrapOffset[V] == 1; otherwise, the behavior is undefined.

If a second SMI is asserted while a valid IO instruction is trapped by the first SMI handler, the core services the second SMI prior to re-executing the trapped IO instruction. Core::X86::Smm::TrapOffset[V] == 0 during the second entry into SMM, and the second SMI handler must not rewrite this byte.

If there is a simultaneous SMI IO instruction trap and debug breakpoint trap, the processor first responds to the SMI and postpones recognizing the debug exception until after resuming from SMM. If debug registers other than DR6 and DR7 are used while in SMM, they must be saved and restored by the SMI handler. If Core::X86::Smm::IoRestart is set to FFh when the RSM instruction is executed, the debug trap does not occur until after the IO instruction is re-executed.

Bits Description

7:0 **RST: SMM IO Restart Byte**. Read-write. Reset: 00h.

SMMxFEC9 [Auto Halt Restart Offset] (Core::X86::Smm::AutoHalt)

Read-	Read-write. Reset: 00h.		
Bits	Description		
7:1	Reserved.		
0	HLT : halt restart. Read-write. Reset: 0. 0=Entered SMM on a normal x86 instruction boundary. 1=Entered SMM from the Halt state. Upon SMM entry, this bit indicates whether SMM was entered from the Halt state. Before returning from SMM, this bit can be written by the SMI handler to specify whether the return from SMM should take the processor back to the Halt state or to the instruction-execution state specified by the SMM state save area (normally, the instruction after the halt). Clearing this bit the returns to the instruction specified in the SMM save state. Setting this bit returns to the halt state. If the return from SMM takes the processor back to the Halt state. If the return from SMM takes the processor back to the Halt state. If the return from SMM takes the processor back to the Halt state, the HLT instruction is not refetched and re-executed. However, the Halt special bus cycle is broadcast and the processor enters the Halt state.		

SMMxFECA [NMI Mask] (Core::X86::Smm::NmiMask)

Read-write. Reset: 00h.		
Bits	Description	
7:1	Reserved.	
0	NmiMask: NMI Mask. Read-write. Reset: 0. 0=NMI not masked. 1=NMI masked. Specifies whether NMI was	
	masked upon entry to SMM.	
SMMxFFD8 [SMM SVM State] (Core··X86··Smm··SvmState)		

SMMxFED8 [SMM SVM State] (Core::X86::Smm::SvmState)

Read-only, Volatile. Reset: 0000 0000 0000 0000h.

This o	This offset stores the SVM state of the processor upon entry into SMM.		
Bits	Description		
63:5	Reserved		
4	SmmFromSev . Read-only, Volatile. Reset: 0. 1= SMM was entered while executing on a guest with SEV enabled.		
3	HostEflagesIF: host EFLAGS IF. Read-only, Volatile. Reset: 0.		
2:0	SvmState	e. Read-only, Volatile. Reset: 0h.	
	ValidValues:		
	Value	Description	
	0h	SMM entered from a non-guest state.	
	1h Reserved.		
	2h SMM entered from a guest state.		
	5h-3h	Reserved.	
	6h	SMM entered from a guest state with nested paging enabled.	
	7h	Reserved.	

SMMxFEFC [SMM Revision Identifier] (Core::X86::Smm::SmmRevID)

Read-	Read-only. Reset: 0003_0064h.		
This o	This offset stores the SVM state of the processor upon entry into SMM.		
Bits	Description		
31:18	Reserved.		
17	BRL. Read-only. Reset: 1. 1=Base relocation supported.		
16	IOTrap. Read-only. Reset: 1. 1=IO trap supported.		

15:0 **Revision**. Read-only. Reset: 0064h.

SMMxFE00 [SMM Base Address] (Core::X86::Smm::SmmBase)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.

This offset stores the base of the SMM-State of the processor upon entry into SMM.

Bits Description

63:32 Reserved.

31:0 SmmBase. Read-write, Volatile. Reset: 0000_0000h. See Core::X86::Msr::SMM_BASE[SmmBase].

2.1.8.1.7 Exceptions and Interrupts in SMM

When SMM is entered, the core masks INTR, NMI, SMI, and INIT interrupts. The core clears the IF flag to disable INTR interrupts. To enable INTR interrupts within SMM, the SMM handler must set the IF flag to 1.

Generating an INTR interrupt can be used for unmasking NMI interrupts in SMM. The core recognizes the assertion of NMI within SMM immediately after the completion of an IRET instruction. Once NMI is recognized within SMM, NMI recognition remains enabled until SMM is exited, at which point NMI masking is restored to the state it was in before entering SMM.

While in SMM, the core responds to STPCLK interrupts, as well as to all exceptions that may be caused by the SMI handler.

2.1.8.1.8 The Protected ASeg and TSeg Areas

These ranges are controlled by Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask; see those registers for details.

2.1.8.1.9 SMM Special Cycles

Special cycles can be initiated on entry and exit from SMM to acknowledge to the system that these transitions are occurring. These are controlled by Core::X86::Msr::HWCR[RsmSpCycDis,SmiSpCycDis].

2.1.8.1.10 Locking SMM

The SMM registers (Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask) can be locked from being altered by setting Core::X86::Msr::HWCR[SmmLock]. SBIOS must lock the SMM registers after initialization to prevent unexpected changes to these registers.

2.1.8.2 Local APIC

2.1.8.2.1 Local APIC Functional Description

The local APIC contains logic to receive interrupts from a variety of sources and to send interrupts to other local APICs, as well as registers to control its behavior and report status. Interrupts can be received from:

- IO devices including the IO hub (IO APICs)
- Other local APICs (inter-processor interrupts)
- APIC timer
- Thermal events
- Performance counters

- Legacy local interrupts from the IO hub (INTR and NMI)
- APIC internal errors

The APIC timer, thermal events, performance counters, local interrupts, and internal errors are all considered local interrupt sources, and their routing is controlled by local vector table entries. These entries assign a message type and vector to each interrupt, allow them to be masked, and track the status of the interrupt.

IO and inter-processor interrupts have their message type and vector assigned at the source and are unaltered by the local APIC. They carry a destination field and a mode bit that together determine which local APIC(s) accepts them. The destination mode (DM) bit specifies if the interrupt request packet should be handled in physical or logical destination mode.

2.1.8.2.1.1 Detecting and Enabling

APIC is detected and enabled via Core::X86::Cpuid::FeatureIdEdx[APIC].

The local APIC is enabled via Core::X86::Msr::APIC_BAR[ApicEn]. Reset forces APIC disabled.

2.1.8.2.1.2 APIC Register Space

MMIO APIC space:

- Memory mapped to a 4 KB range. The memory type of this space is the UC memory type. The base address of this range is specified by {Core::X86::Msr::APIC_BAR[ApicBar[47:12]],000h}.
- The mnemonic is defined to be APICXXX; XXX is the byte address offset from the base address.
- MMIO APIC registers memory in xAPIC mode is defined by the register starting with Core::X86::Apic::ApicId at offset (Core::X86::Msr::APIC_BAR[ApicBar[47:12]] + 20h) ending with
- Core::X86::Apic::ExtendedInterruptLvtEntries at offsets Core::X86::Msr::APIC_BAR[ApicBar[47:12]] + 533h.
- Treated as normal memory space when APIC is disabled, as specified by Core::X86::Msr::APIC_BAR[ApicEn].

2.1.8.2.1.3 ApicId Enumeration Requirements

Note: SOC15 does not require contiguous ApicId assignments.

Operating systems are expected to use Core::X86::Cpuid::SizeId[ApicIdSize], the number of least significant bits in the Initial APIC ID that indicate core ID within a processor, in constructing per-core CPUID masks. Core::X86::Cpuid::SizeId[ApicIdSize] determines the maximum number of cores (MNC) that the processor could theoretically support, not the actual number of cores that are actually implemented or enabled on the processor, as indicated by Core::X86::Cpuid::SizeId[NC].

Each Core::X86::Apic::ApicId[ApicId] register is preset as follows:

- ApicId[6] = Socket ID.
- ApicId[5:4] = Node ID.
- ApicId[3] = Logical CCX L3 complex ID
- ApicId[2:0]= (SMT) ? {LogicalCoreID[1:0],ThreadId} : {1'b0,LogicalCoreID[1:0]}.

2.1.8.2.1.4 Physical Destination Mode

The interrupt is only accepted by the local APIC whose Core::X86::Apic::ApicId[ApicId] matches the destination field of the interrupt. Physical mode allows up to 255 APICs to be addressed individually.

2.1.8.2.1.5 Logical Destination Mode

56255 Rev 3.03 - July, 2018

A local APIC accepts interrupts selected by Core::X86::Apic::LocalDestination and the destination field of the interrupt using either cluster or flat format as configured by Core::X86::Apic::DestinationFormat[Format].

If flat destinations are in use, bits[7:0] of Core::X86::Apic::LocalDestination[Destination] are checked against bits[7:0] of the arriving interrupt's destination field. If any bit position is set in both fields, the local APIC is a valid destination. Flat format allows up to 8 APICs to be addressed individually.

If cluster destinations are in use, bits[7:4] of Core::X86::Apic::LocalDestination[Destination] are checked against bits[7:4] of the arriving interrupt's destination field to identify the cluster. If all of bits[7:4] match, then bits[3:0] of Core::X86::Apic::LocalDestination[Destination] and the interrupt destination are checked for any bit positions that are set in both fields to identify processors within the cluster. If both conditions are met, the local APIC is a valid destination. Cluster format allows 15 clusters of 4 APICs each to be addressed.

2.1.8.2.1.6 Interrupt Delivery

SMI, NMI, INIT, Startup, and External interrupts are classified as non-vectored interrupts.

When an APIC accepts a non-vectored interrupt, it is handled directly by the processor instead of being queued in the APIC. When an APIC accepts a fixed or lowest-priority interrupt, it sets the bit in Core::X86::Apic::InterruptRequest corresponding to the vector in the interrupt. For local interrupt sources, this comes from the vector field in that interrupt's local vector table entry. The corresponding bit in Core::X86::Apic::TriggerMode is set if the interrupt is level-triggered and cleared if edge-triggered. If a subsequent interrupt with the same vector arrives when the corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] is already set, the two interrupts are collapsed into one. Vectors 15-0 are reserved.

2.1.8.2.1.7 Vectored Interrupt Handling

Core::X86::Apic::TaskPriority and Core::X86::Apic::ProcessorPriority each contain an 8-bit priority divided into a main priority (bits[7:4]) and a priority sub-class (bits[3:0]). The task priority is assigned by software to set a threshold priority at which the processor is interrupted.

The processor priority is calculated by comparing the main priority (bits[7:4]) of Core::X86::Apic::TaskPriority[Priority] to bits[7:4] of the 8-bit encoded value of the highest bit set in Core::X86::Apic::InService. The processor priority is the higher of the two main priorities.

The processor priority is used to determine if any accepted interrupts (indicated by Core::X86::Apic::InterruptRequest[RequestBits]) are high enough priority to be serviced by the processor. When the processor is ready to service an interrupt, the highest bit in Core::X86::Apic::InterruptRequest[RequestBits] is cleared, and the corresponding bit is set in Core::X86::Apic::InService[InServiceBits].

When the processor has completed service for an interrupt, it performs a write to Core::X86::Apic::EndOfInterrupt, clearing the highest bit in Core::X86::Apic::InService[InServiceBits] and causing the next-highest interrupt to be serviced. If the corresponding bit in Core::X86::Apic::TriggerMode[TriggerModeBits] is set, a write to Core::X86::Apic::EndOfInterrupt is performed on all APICs to complete service of the interrupt at the source.

2.1.8.2.1.8 Interrupt Masking

Interrupt masking is controlled by the Core::X86::Apic::ExtendedApicControl. If

Core::X86::Apic::ExtendedApicControl[IerEn] is set, Core::X86::Apic::InterruptEnable are used to mask interrupts. Any bit in Core::X86::Apic::InterruptEnable[InterruptEnableBits] that is clear indicates the corresponding interrupt is masked. A masked interrupt is not serviced and the corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] remains set.

2.1.8.2.1.9 Spurious Interrupts

In the event that the task priority is set to or above the level of the interrupt to be serviced, the local APIC delivers a spurious interrupt vector to the processor, as specified by Core::X86::Apic::SpuriousInterruptVector. Core::X86::Apic::InService is not changed and no write to Core::X86::Apic::EndOfInterrupt occurs.

2.1.8.2.1.10 Spurious Interrupts Caused by Timer Tick Interrupt

A typical interrupt is asserted until it is serviced. An interrupt is deasserted when software clears the interrupt status bit within the interrupt service routine. Timer tick interrupt is an exception, since it is deasserted regardless of whether it is serviced or not.

The processor is not always able to service interrupts immediately (i.e., when interrupts are masked by clearing EFLAGS.IM).

If the processor is not able to service the timer tick interrupt for an extended period of time, the INTR caused by the first timer tick interrupt asserted during that time is delivered to the local APIC in ExtInt mode and latched, and the subsequent timer tick interrupts are lost. The following cases are possible when the processor is ready to service interrupts:

- An ExtInt interrupt is pending, and INTR is asserted. This results in timer tick interrupt servicing. This occurs 50 percent of the time.
- An ExtInt interrupt is pending, and INTR is deasserted. The processor sends the interrupt acknowledge cycle, but when the PIC receives it, INTR is deasserted, and the PIC sends a spurious interrupt vector. This occurs 50 percent of the time.

There is a 50 percent probability of spurious interrupts to the processor.

2.1.8.2.1.11 Lowest-Priority Interrupt Arbitration

Fixed and non-vectored interrupts are accepted by their destination APICs without arbitration.

Delivery of lowest-priority interrupts requires all APICs to arbitrate to determine which one accepts the interrupt. If Core::X86::Apic::SpuriousInterruptVector[FocusDisable] is clear, then the focus processor for an interrupt always accepts the interrupt. A processor is the focus of an interrupt if it is already servicing that interrupt (corresponding bit in Core::X86::Apic::InService[InServiceBits] is set) or if it already has a pending request for that interrupt (corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] is set). If Core::X86::Apic::ExtendedApicControl[IerEn] is set the interrupt must also be enabled in Core::X86::Apic::InterruptEnable[InterruptEnableBits] for a processor to be the focus processor. If there is no focus processor for an interrupt, or focus processor checking is disabled, then each APIC calculates an arbitration priority value, stored in Core::X86::Apic::ArbitrationPriority, and the one with the lowest result accepts the interrupt.

The arbitration priority value is calculated by comparing Core::X86::Apic::TaskPriority[Priority] with the 8-bit encoded value of the highest bit set in Core::X86::Apic::InterruptRequest[RequestBits] (IRRVec) and the 8-bit encoded value of the highest bit set Core::X86::Apic::InService[InServiceBits] (ISRVec). If Core::X86::Apic::ExtendedApicControl[IerEn] is set the IRRVec and ISRVec are based off the highest enabled interrupt. The main priority bits[7:4] are compared as follows:

```
if ((TaskPriority[Priority[7:4]] >= InterruptRequest[IRRVec[7:4]])
&&(TaskPriority[Priority[7:4]] > InService[ISRVec[7:4]])) {
ArbitrationPriority[Priority] = TaskPriority[Priority]
} elsif { (InterruptRequest[IRRVec[7:4]] > InService[ISRVec[7:4]])
ArbitrationPriority[Priority] = {InterruptRequest[IRRVec[7:4]],0h}
} else {
```

```
ArbitrationPriority[Priority] = {InService[ISRVect[7:4]],0h}
}
```

2.1.8.2.1.12 Inter-Processor Interrupts

The Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandHigh provide a mechanism for generating interrupts in order to redirect an interrupt to another processor, originate an interrupt to another processor, or allow a processor to interrupt itself. A write to register Core::X86::Apic::InterruptCommandLow causes an interrupt to be generated with the properties specified by the Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandHigh fields.

Message type (bits[10:8]) == 011b (Remote Read) is deprecated.

Not all combinations of ICR fields are valid. Only the following combinations are valid: Note: x indicates a don't care.

Table 13: ICR Valid Combinations

Message Type	Trigger Mode	Level	Destination Shorthand
Fixed	Edge	X	x
	Level	Assert	X
Lowest Priority, SMI, NMI, INIT	Edge	X	Destination or all excluding self
	Level	Assert	Destination or all excluding self
Startup	X	X	Destination or all excluding self

2.1.8.2.1.13 APIC Timer Operation

The local APIC contains a 32-bit timer, controlled by Core::X86::Apic::TimerLvtEntry,

Core::X86::Apic::TimerInitialCount, and Core::X86::Apic::TimerDivideConfiguration. The processor bus clock is divided by the value in Core::X86::Apic::TimerDivideConfiguration[Div[3:0]] to obtain a time base for the timer. When Core::X86::Apic::TimerInitialCount[Count] is written, the value is copied into Core::X86::Apic::TimerCurrentCount. Core::X86::Apic::TimerCurrentCount[Count] is decremented at the rate of the divided clock. When the count reaches 0, a timer interrupt is generated with the vector specified in Core::X86::Apic::TimerLvtEntry[Vector]. If Core::X86::Apic::TimerLvtEntry[Mode] specifies periodic operation, Core::X86::Apic::TimerCurrentCount[Count] is reloaded with the Core::X86::Apic::TimerInitialCount[Count] value, and it continues to decrement at the rate of the divided clock. If Core::X86::Apic::TimerLvtEntry[Mask] is set, timer interrupts are not generated.

2.1.8.2.1.14 Generalized Local Vector Table

All LVTs (Core::X86::Apic::ThermalLvtEntry to Core::X86::Apic::LVTLINT, and

Core::X86::Apic::ExtendedInterruptLvtEntries) support a generalized message type as follows:

- 000b=Fixed
- 010b=SMI
- 100b=NMI
- 111b=ExtINT
- All other messages types are reserved.

2.1.8.2.1.15 State at Reset

At power-up or reset, the APIC is hardware disabled (Core::X86::Msr::APIC_BAR[ApicEn] == 0) so only SMI, NMI, INIT, and ExtInt interrupts may be accepted.

The APIC can be software disabled through Core::X86::Apic::SpuriousInterruptVector[APICSWEn]. The software disable has no effect when the APIC is hardware disabled.

When a processor accepts an INIT interrupt, the APIC is reset as at power-up, with the exception that:

- Core::X86::Apic::ApicId is unaffected.
- Pending APIC register writes complete.

2.1.8.2.2 Local APIC Registers

APICx020 [APIC ID] (Core::X86::Apic::ApicId)

Read-	Read-only. Reset: XX00 0000h.	
_lthree[1	_three[1:0]_core[3:0]_thread[1:0]; APICx020; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:24	ApicId: APIC ID. Read-only. Reset: XXh. The reset value varies based on core number. See 2.1.8.2.1.3 [ApicId	
	Enumeration Requirements].	
23:0	Reserved.	

APICx030 [APIC Version] (Core::X86::Apic::ApicVersion)

Read-o	Read-only. Reset: 80XX 0010h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; APICx030; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	ts Description		
31	ExtApicSpace: extended APIC register space present. Read-only. Reset: 1. 1=Indicates the presence of		
	extended APIC register space starting at Core::X86::Apic::ExtendedApicFeature.		
30:25	Reserved.		
24	DirectedEoiSupport: directed EOI support. Read-only. Reset: Fixed,0. 0=Directed EOI capability not		
	supported.		
23:16	MaxLvtEntry. Read-only. Reset: XXh. Specifies the number of entries in the local vector table minus one.		
15:8	Reserved.		
7:0	Version. Read-only. Reset: 10h. Indicates the version number of this APIC implementation.		

APICx080 [Task Priority] (Core::X86::Apic::TaskPriority)

Read-write. Reset: 0000 0000h.

_lthree[1	_three[1:0]_core[3:0]_thread[1:0]; APICx080; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:8	Reserved.	
7:0	Priority. Read-write. Reset: 00h. This field is assigned by software to set a threshold priority at which the core is	
	interrupted.	

APICx090 [Arbitration Priority] (Core::X86::Apic::ArbitrationPriority)

Read-	Read-only, Volatile. Reset: 0000 0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; APICx090; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:8	Reserved.		
	Priority . Read-only, Volatile. Reset: 00h. Indicates the current priority for a pending interrupt, or a task or		
	interrupt being serviced by the core. The priority is used to arbitrate between cores to determine which accepts a		
	lowest-priority interrupt request.		

APICx0A0 [Processor Priority] (Core::X86::Apic::ProcessorPriority)

Read-only Volatile Reset: 0000 0000h

[lthree[1:0]_core[3:0]_thread[1:0]; APICx0A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description	
31:8	Reserved.	
7:0	Priority. Read-only, Volatile. Reset: 00h. Indicates the core's current priority servicing a task or interrupt, and is	
	used to determine if any pending interrupts should be serviced. It is the higher value of the task priority value and	
	the current highest in-service interrupt.	

APICx0B0 [End of Interrupt] (Core::X86::Apic::EndOfInterrupt)

Write-only.

This register is written by the software interrupt handler to indicate the servicing of the current interrupt is complete. lthree[1:0] core[3:0] thread[1:0]; APICx0B0; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

Bits Description

31:0 Reserved. Write-only.

APICx0C0 [Reserved] (Core::X86::Apic::RemoteRead)

Read-only. Reset: 0000 0000h.

Remote Read is deprecated.

_three[1:0]_core[3:0]_thread[1:0]; APICx0C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Bits Description

31:0 Reserved. Read-only. Reset: 0000 0000h.

APICx0D0 [Logical Destination] (Core::X86::Apic::LocalDestination)

Read-	Read-write, Volatile. Reset: 0000_0000h.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx0D0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:24	Destination. Read-write, Volatile. Reset: 00h. This APIC's destination identification. Used to determine which	
	interrupts should be accepted.	
23:0	Reserved.	

APICx0E0 [Destination Format] (Core::X86::Apic::DestinationFormat)

Read-	d-write. Reset: 0000_0000h.	
Only s	supported	in xAPIC mode.
_lthree[1	:0]_core[3:0]	_thread[1:0]; APICx0E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
Bits	ts Description	
31:28	Format.	Read-write. Reset: 0h. Controls which format to use when accepting interrupts with a logical destination
	mode.	
	ValidValues:	
	Value Description	
	0h	Cluster destinations are used.
	Eh-1h	Reserved.
	Fh	Flat destinations are used.
27:0	Reserved	·

APICx0F0 [Spurious-Interrupt Vector] (Core::X86::Apic::SpuriousInterruptVector)

Reset:	Reset: 0000_00FFh.	
_lthree[1	:0]_core[3:0]_thread[1:0]; APICx0F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:13	Reserved.	
12	EoiBroadcastDisable: EOI broadcast disable. Read-only. Reset: 0.	
11:10	Reserved.	
9	FocusDisable. Read-write. Reset: 0. 1=Disable focus core checking during lowest-priority arbitrated interrupts.	

FocusDisable. Read-write. Reset: 0. I=Disable focus core checking during lowest-priority arbitrated interrupts.

	APICSWEn: APIC software enable. Read-write, Volatile. Reset: 0. 0=SMI, NMI, INIT, LINT[1:0], and Startup
	interrupts may be accepted; pending interrupts in Core::X86::Apic::InService and
	Core::X86::Apic::InterruptRequest are held, but further fixed, lowest-priority, and ExtInt interrupts are not
	accepted. All LVT entry mask bits are set and cannot be cleared.
7:0	Vector. Read-write, Volatile. Reset: FFh. The vector that is sent to the core in the event of a spurious interrupt.

APICx1[0...7]0 [In-Service] (Core::X86::Apic::InService)

Read-only, Volatile. Reset: 0000 0000h.

The in-service registers provide a bit per interrupt to indicate that the corresponding interrupt is being serviced by the core. The first 16 InServiceBits of the first Core::X86::Apic::InService register are reserved.

lthree[1:0] core[3:0] thread[1:0] n0: APICx100: APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

_lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx110; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
_lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx120; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
_lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx130; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
_lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx140; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
_lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx150; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
[htree[1:0]_core[3:0]_thread[1:0]_n6; APICx160; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
_lthree[1:0]_core[3:0]_thread[1:0]_n7; APICx170; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}
Bits Description
31:0 InServiceBits. Read-only, Volatile. Reset: 0000 0000h. These bits are set when the corresponding interrupt is

being serviced by the core.

APICx1[8...F]0 [Trigger Mode] (Core::X86::Apic::TriggerMode)

Read-only, Volatile. Reset: 0000 0000h.

The trigger mode registers provide a bit per interrupt to indicate the assertion mode of each interrupt. The first 16 TriggerModeBits of the each thread's APIC[1F0:180] registers are reserved.

lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx180; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx190; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

[three[1:0]_core[3:0]_thread[1:0]_n2; APICx1A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

[three[1:0]_core[3:0]_thread[1:0]_n3; APICx1B0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

[three[1:0]_core[3:0]_thread[1:0]_n4; APICx1C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0] core[3:0] thread[1:0] n5; APICx1D0; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

 three[1:0]_core[3:0]_thread[1:0]_n6; APICx1E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

 three[1:0]_core[3:0]_thread[1:0]_n7; APICx1F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Bits | Description

31:0 **TriggerModeBits**. Read-only, Volatile. Reset: 0000 0000h. The corresponding trigger mode bit is updated when an interrupt is accepted. 1=Level-triggered interrupt. 0=Edge-triggered interrupt.

APICx2[0...7]0 [Interrupt Request] (Core::X86::Apic::InterruptRequest)

Read-only. Reset: 0000 0000h.

The interrupt request registers provide a bit per interrupt to indicate that the corresponding interrupt has been accepted by the APIC. The first 16 RequestBits of the first Core::X86::Apic::InterruptRequest register are reserved.

lthree[1:0] core[3:0] thread[1:0] n0; APICx200; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

```
lthree[1:0] core[3:0] thread[1:0] n1; APICx210; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}
```

Ithree[1:0] core[3:0] thread[1:0] n2; APICx220; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

lthree[1:0] core[3:0] thread[1:0] n3; APICx230; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx240; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx250; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n6; APICx260; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0] core[3:0] thread[1:0] n7; APICx270; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

Bits | Description

31:0 RequestBits. Read-only. Reset: 0000 0000h. The corresponding request bit is set when the an interrupt is accepted by the APIC.

APICx280 [Error Status] (Core::X86::Apic::ErrorStatus)

Writes to this register trigger an update of the register state. The value written by software is arbitrary. Each write causes the internal error state to be loaded into this register, clearing the internal error state. Consequently, a second write prior

to the occurrence of another error causes the register to be overwritten with cleared data.

_lthree[1:0]_core[3:0]_thread[1:0]; APICx280; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Description		
Reserved.		
IllegalRegAddr: illegal register address. Read-write. Reset: 0. This bit indicates that an access to a nonexistent		
register location within this APIC was attempted. Can only be set in xAPIC mode.		
RcvdIllegalVector: received illegal vector. Read-write. Reset: 0. This bit indicates that this APIC has received a		
message with an illegal vector (00h to 0Fh for fixed and lowest priority interrupts).		
SentIllegalVector. Read-write. Reset: 0. This bit indicates that this APIC attempted to send a message with an		
illegal vector (00h to 0Fh for fixed and lowest priority interrupts).		
Reserved.		
RcvAcceptError: receive accept error. Read-write. Reset: 0. This bit indicates that a message received by this		
APIC was not accepted by this or any other APIC.		
SendAcceptError. Read-write. Reset: 0. This bit indicates that a message sent by this APIC was not accepted by		
any APIC.		
Reserved.		

APICx300 [Interrupt Command Low] (Core::X86::Apic::InterruptCommandLow)

Reset:	eset: 0000_0000h.		
	hree[1:0]_core[3:0]_thread[1:0]; APICx300; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Descripti		
	Reserved		
19:18	DestShrt	hnd: destination shorthand. Read-write. Reset: 0h.	
		on: Provides a quick way to specify a destination for a message.	
		uding self or all excluding self is used, then destination mode is ignored and physical is automatically	
	used.		
	ValidVal	ues:	
	Value	Description	
	0h	No shorthand (Destination field).	
	1h	Self.	
	2h	All including self.	
	3h	All excluding self. (This sends a message with a destination encoding of all 1s, so if lowest priority is	
		used the message could end up being reflected back to this APIC.)	
17:16	RemoteR	RdStat. Read-only. Reset: 0h.	
	ValidVal	ues:	
	Value	Description	
	0h	Read was invalid.	
	1h	Delivery pending.	
	2h	Delivery complete and access was valid.	
	3h	Reserved.	
15	TM: trig	ger mode. Read-write. Reset: 0. 0=Edge triggered. 1=Level triggered. Indicates how this interrupt is	
	triggered.		
14	Level. Re	ead-write. Reset: 0. 0=Deasserted. 1=Asserted.	
13	Reserved		
12	DS: inter	rupt delivery status. Read-only. Reset: 0. 0=Idle. 1=Send pending. In xAPIC mode this bit is set to	
	indicate the	hat the interrupt has not yet been accepted by the destination core(s). Software may repeatedly write	
		6::Apic::InterruptCommandLow without polling the DS bit; all requested IPIs are delivered.	
11	DM: dest	ination mode. Read-write. Reset: 0. 0=Physical. 1=Logical.	
10:8	MsgType	e. Read-write. Reset: 0h. The message types are encoded as follows:	
	ValidVal	ues:	

Value	Description
0h	Fixed
1h	Lowest Priority.
2h	SMI
3h	Reserved.
4h	NMI
5h	INIT
6h	Startup
7h	External interrupt.

7:0 Vector. Read-write. Reset: 00h. The vector that is sent for this interrupt source.

APICx310 [Interrupt Command High] (Core::X86::Apic::InterruptCommandHigh)

Read-	Read-write. Reset: 0000_0000h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx310; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:24	DestinationField. Read-write. Reset: 00h. The destination encoding used when		
	Core::X86::Apic::InterruptCommandLow[DestShrthnd] is 00b.		
23:0	Reserved.		

APICx320 [LVT Timer] (Core::X86::Apic::TimerLvtEntry)

Reset:	Reset: 0001_0000h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx320; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:18	Reserved.		
17	Mode. Read-write. Reset: 0. 0=One-shot. 1=Periodic.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	Reserved.		
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType: message type. Read-write. Reset: 0h. See2.1.8.2.1.14 [Generalized Local Vector Table].		
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.		

APICx330 [LVT Thermal Sensor] (Core::X86::Apic::ThermalLvtEntry)

Reset:	Reset: 0001_0000h.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; APICx330; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	Reserved.		
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType: message type. Read-write. Reset: 0h. See2.1.8.2.1.14 [Generalized Local Vector Table].		
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.		

APICx340 [LVT Performance Monitor] (Core::X86::Apic::PerformanceCounterLvtEntry)

Reset: 0001_0000h. Interrupts for this local vector table are caused by overflows of:

- Core::X86::Msr::PERF_LEGACY_CTL(Performance Event Select [3:0])].
 - Core::X86::Msr::PERF CTL(Performance Event Select [5:0])].

lthree[1	[:0] core[3:0] thread[1:0]; APICx340; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}
Bits	
31:17	Reserved.
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.
15:13	Reserved.
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. Indicates that the interrupt
	has not yet been accepted by the core.
11	Reserved.
10:8	MsgType: message type. Read-write. Reset: 0h. See2.1.8.2.1.14 [Generalized Local Vector Table].
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.

APICx3[5...6]0 [LVT LINT[1:0]] (Core::X86::Apic::LVTLINT)

Reset:	Reset: 0001_0000h.		
	_lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx350; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1	:0]_core[3:0]_thread[1:0]_n1; APICx360; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15	TM: trigger mode. Read-write. Reset: 0. 0=Edge. 1=Level.		
14	RmtIRR. Read-only, Volatile. Reset: 0. If trigger mode is level, remote Core::X86::Apic::InterruptRequest is set		
	when the interrupt has begun service. Remote Core::X86::Apic::InterruptRequest is cleared when the end of		
	interrupt has occurred.		
13	Reserved. Read-write. Reset: 0.		
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType: message type. Read-write. Reset: 0h. See2.1.8.2.1.14 [Generalized Local Vector Table].		
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.		

APICx370 [LVT Error] (Core::X86::Apic::ErrorLvtEntry)

Reset:	Reset: 0001_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; APICx370; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	Reserved.		
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType: message type. Read-write. Reset: 0h. See 2.1.8.2.1.14 [Generalized Local Vector Table].		
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.		

APICx380 [Timer Initial Count] (Core::X86::Apic::TimerInitialCount)

Read-write, Volatile. Reset: 0000_0000h.	
--	--

_lthree[1:0]_core[3:0]_thread[1:0]; APICx380; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Bits Description

31:0 **Count**. Read-write, Volatile. Reset: 0000_0000h. The value copied into the current count register when the timer is loaded or reloaded.

APICx390 [Timer Current Count] (Core::X86::Apic::TimerCurrentCount)

Read-only, Volatile. Reset: 0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; APICx390; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Bits Description

31:0 **Count**. Read-only, Volatile. Reset: 0000_0000h. The current value of the counter.

APICx3E0 [Timer Divide Configuration] (Core::X86::Apic::TimerDivideConfiguration)

	Read-write. Reset: 0000_0000h.		
_lthree[1	1:0]_core[3:0]	_thread[1:0]; APICx3E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Descript	ion	
31:4	Reserved	L	
3:0	Div[3:0]	. Read-write. Reset: 0h. Div[2] is unused.	
	ValidVal	ues:	
	Value	Description	
	Oh	Divide by 2.	
	1h	Divide by 4.	
	2h	Divide by 8.	
	3h	Divide by 16.	
	7h-4h	Reserved.	
	8h	Divide by 32.	
	9h	Divide by 64.	
	Ah	Divide by 128.	
	Bh	Divide by 1.	
	Fh-Ch	Reserved.	

APICx400 [Extended APIC Feature] (Core::X86::Apic::ExtendedApicFeature)

Read-o	Read-only. Reset: 0004_0007h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx400; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:24	Reserved.		
23:16	ExtLvtCount: extended local vector table count. Read-only. Reset: 04h. This specifies the number of extended		
	LVT registers (Core::X86::Apic::ExtendedInterruptLvtEntries) in the local APIC.		
15:3	Reserved.		
2	ExtApicIdCap: extended APIC ID capable. Read-only. Reset: 1. 1=The processor is capable of supporting an		
	8-bit APIC ID, as controlled by Core::X86::Apic::ExtendedApicControl[ExtApicIdEn].		
1	SeoiCap: specific end of interrupt capable. Read-only. Reset: 1. 1=The		
	Core::X86::Apic::SpecificEndOfInterrupt is present.		
0	IerCap: interrupt enable register capable. Read-only. Reset: 1. This bit indicates that the		
	Core::X86::Apic::InterruptEnable are present. See2.1.8.2.1.8 [Interrupt Masking].		

APICx410 [Extended APIC Control] (Core::X86::Apic::ExtendedApicControl)

Read-write. Reset: 0000_0000h. _three[1:0]_core[3:0]_thread[1:0]; APICx410; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits Description	
31:3	Reserved.
2	ExtApicIdEn: extended APIC ID enable. Read-write. Reset: 0. 1=Enable 8-bit APIC ID;
	Core::X86::Apic::ApicId[ApicId] supports an 8-bit value; an interrupt broadcast in physical destination mode
	requires that the IntDest[7:0]=1111_1111b (instead of xxxx_1111b); a match in physical destination mode occurs
	when $(IntDest[7:0] == ApicId[7:0])$ instead of $(IntDest[3:0] == ApicId[3:0])$.
1	SeoiEn. Read-write. Reset: 0. 1=Enable SEOI generation when a write to
	Core::X86::Apic::SpecificEndOfInterrupt is received.
0	IerEn . Read-write. Reset: 0. 1=Enable writes to the interrupt enable registers.

APICx420 [Specific End Of Interrupt] (Core::X86::Apic::SpecificEndOfInterrupt)

Read-write. Reset: 0000 0000h.

_1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx420; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
	Bits	Description
3	31:8	Reserved.
	7:0	EoiVec: end of interrupt vector. Read-write. Reset: 00h. A write to this field causes an end of interrupt cycle to
		be performed for the vector specified in this field. The behavior is undefined if no interrupt is pending for the

specified interrupt vector.

APICx4[8...F]0 [Interrupt Enable] (Core::X86::Apic::InterruptEnable)

Read-write. Reset: FFFF FFFFh.	
_lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx480; APIC={Core::X86:::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx490; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx4A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
[lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx4B0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
[lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx4C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx4D0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_three[1:0]_core[3:0]_thread[1:0]_n6; APICx4E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
[lthree[1:0]_core[3:0]_thread[1:0]_n7; APICx4F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits Description	
31:0 InterruptEnableBits . Read-write. Reset: FFFF_FFFFh. The interrupt enable bits can be used to enable each of	
the 256 interrupts.	

APICx5[0...3]0 [Extended Interrupt Local Vector Table] (Core::X86::Apic::ExtendedInterruptLvtEntries)

Reset: 0001_	0000h.
--------------	--------

Assignments conventions:

- APIC500 provides a local vector table entry for IBS.
- APIC510 provides a local vector table entry for error thresholding. See Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]

• APIC520 provides a local vector table entry for Deferred errors. See MCi CONFIG[DeferredIntType].

_lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx500; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Ithree[I	$[tnree[1:0]_core[3:0]_tnread[1:0]_n0; APICx500; APIC={Core::X80::Msr::APIC_BAR[ApicBar[4/:12]], 000n}$	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx510; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx520; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
_lthree[1	_three[1:0]_core[3:0]_thread[1:0]_n3; APICx530; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:17	Reserved.	
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.	
15:13	Reserved.	
12	DS: interrupt delivery status. Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. Indicates that the interrupt	
	has not yet been accepted by the core.	
11	Reserved.	
10:8	MsgType: message type. Read-only. Reset: 0h. See2.1.8.2.1.14 [Generalized Local Vector Table].	
7:0	Vector. Read-write. Reset: 00h. Interrupt vector number.	

2.1.9 **CPUID Instruction**

Processor feature capabilities and configuration information are provided through the CPUID instruction. The information is accessed by (1) selecting the CPUID function setting EAX and optionally ECX for some functions, (2) executing the CPUID instruction, and (3) reading the results in the EAX, EBX, ECX, and EDX registers. The syntax CPUID FnXXXX_XXX_EiX[_xYYY] refers to the function where EAX == X, and optionally ECX == Y, and the registers specified by EiX. EiX can be any single register such as {EAX, EBX, ECX, and EDX}, or a range of registers, such as E[C,B,A]X. Undefined function numbers return 0's in all 4 registers.

Unless otherwise specified, single-bit feature fields are encoded as 1=Feature is supported by the processor; 0=Feature is not supported by the processor.

2.1.9.1 CPUID Instruction Functions

Processor feature capabilities and configuration information are provided through the CPUID instruction. The information is accessed by (1) selecting the CPUID function setting EAX and optionally ECX for some functions, (2) executing the CPUID instruction, and (3) reading the results in the EAX, EBX, ECX, and EDX registers. The syntax CPUID FnXXXXXX_EiX[_xYYY] refers to the function where EAX==X, and optionally ECX==Y, and the registers specified by EiX. EiX can be any single register such as {EAX, EBX, ECX, and EDX}, or a range of registers, such as E[C,B,A]X. Undefined function numbers return 0's in all 4 registers.

Unless otherwise specified, single-bit feature fields are encoded as 1=Feature is supported by the processor; 0=Feature is not supported by the processor. CPUID functions not listed are reserved.

The following provides processor specific details about CPUID.

CPUID_Fn00000000_EAX [Processor Vendor and Largest Standard Function Number] (Core::X86::Cpuid::LargFuncNum)

Read-only. Reset: 0000 000Dh.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EAX

Bits Description

31:0 **LFuncStd**: **largest standard function**. Read-only. Reset: Fixed,0000_000Dh. The largest CPUID standard function input value supported by the processor implementation.

CPUID_Fn00000000_EBX [Processor Vendor (ASCII Bytes [3:0])] (Core::X86::Cpuid::ProcVendEbx)

Read-only. Reset: 6874 7541h.

Core::X86::Cpuid::ProcVendEbx and Core::X86::Cpuid::ProcVendExtEbx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EBX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,6874_7541h. ASCII Bytes [3:0] ("h t u A") of the string "AuthenticAMD".

CPUID_Fn00000000_ECX [Processor Vendor (ASCII Bytes [11:8])] (Core::X86::Cpuid::ProcVendEcx)

Read-only. Reset: 444D_4163h.

Core::X86::Cpuid::ProcVendEcx and Core::X86::Cpuid::ProcVendExtEcx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_ECX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,444D_4163h. ASCII Bytes [11:8] ("D M A c") of the string "AuthenticAMD".

CPUID_Fn00000000_EDX [Processor Vendor (ASCII Bytes [7:4])] (Core::X86::Cpuid::ProcVendEdx)

Read-only. Reset: 6974 6E65h.

Core::X86::Cpuid::ProcVendEdx and Core::X86::Cpuid::ProcVendExtEdx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EDX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,6974_6E65h. ASCII Bytes [7:4] ("i t n e") of the string "AuthenticAMD".

CPUID_Fn00000001_EAX [Family, Model, Stepping Identifiers] (Core::X86::Cpuid::FamModStep)

Read-only. Reset: 0080_0FX2h.

Core::X86::Cpuid::FamModStep and Core::X86::Cpuid::FamModStepExt return the same value.

Family is an 8-bit value and is defined as: Family[7:0]=({0000b,BaseFamily[3:0]}+ExtendedFamily[7:0]).

• E.g., If BaseFamily[3:0] == Fh and ExtendedFamily[7:0] == 08h, then Family[7:0] = 17h.

Model is an 8-bit value and is defined as: Model[7:0]={ExtendedModel[3:0],BaseModel[3:0]}.

- E.g., If ExtendedModel[3:0] == 1h and BaseModel[3:0] == 8h, then Model[7:0] = 18h.
- Model numbers vary with product.

Model numbers are are assigned a letter, 0h = "A", 1h = "B", and so on. Model and Stepping form the Revision. E.g., B2. lthree[1:0] core[3:0] thread[1:0]: CPUID En00000001 EAX

_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EAX
Bits	Description
31:28	Reserved.
27:20	ExtFamily: extended family. Read-only. Reset: 08h.
19:16	ExtModel: extended model. Read-only. Reset: 0h.
15:12	Reserved.
11:8	BaseFamily. Read-only. Reset: Fh.
7:4	BaseModel. Read-only. Reset: Xh. Model numbers vary with product.
3:0	Stepping. Read-only. Reset: 2h.

CPUID_Fn00000001_EBX [LocalApicId, LogicalProcessorCount, CLFlush] (Core::X86::Cpuid::FeatureIdEbx)

Read-o	Read-only.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EBX	
Bits	Description	
31:24	LocalApicId: initial local APIC physical ID. Read-only. Reset: XXh.	
23:16	LogicalProcessorCount : logical processor count . Read-only. Reset: Fixed,(Core::X86::Cpuid::SizeId[NC] + 1).	
	Specifies the number of threads in the processor as Core::X86::Cpuid::SizeId[NC]+1.	
15:8	CLFlush: CLFLUSH size in quadwords. Read-only. Reset: Fixed,08h.	
7:0	Reserved.	

CPUID_Fn0000001_ECX [Feature Identifiers] (Core::X86::Cpuid::FeatureIdEcx)

D 1		
	Read-only.	
	These values can be over-written by Core::X86::Msr::CPUID_Features.	
	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_ECX	
Bits	Description	
31	Reserved. Read-only. Reset: Fixed,0. Reserved for use by hypervisor to indicate guest status.	
30	RDRAND: RDRAND instruction support. Read-only. Reset: Fixed,1.	
29	F16C: half-precision convert instruction support. Read-only. Reset: Fixed, 1.	
28	AVX: AVX instruction support. Read-only. Reset: Fixed,1.	
27	OSXSAVE: OS enabled support for XGETBV/XSETBV. Read-only. Reset: X. 1=The OS has enabled support	
	for XGETBV/XSETBV instructions to query processor extended states.	
26	XSAVE: XSAVE (and related) instruction support. Read-only. Reset: Fixed, 1. 1=Support provided for the	
	XSAVE, XRSTOR, XSETBV, and XGETBV instructions and the XFEATURE_ENABLED_MASK register.	
25	AES: AES instruction support. Read-only. Reset: X.	
24	Reserved.	
23	POPCNT: POPCNT instruction. Read-only. Reset: Fixed,1.	
22	MOVBE: MOVBE instruction support. Read-only. Reset: Fixed,1.	
21	X2APIC: x2APIC capability. Read-only. Reset: Fixed,0.	
20	SSE42: SSE4.2 instruction support. Read-only. Reset: Fixed,1.	
19	SSE41: SSE4.1 instruction support. Read-only. Reset: Fixed,1.	
18	Reserved.	
17	PCID: process context identifiers support. Read-only. Reset: Fixed,0.	
16:14	Reserved.	
13	CMPXCHG16B: CMPXCHG16B instruction. Read-only. Reset: Fixed,1.	
12	FMA: FMA instruction support. Read-only. Reset: Fixed, 1.	
11:10	Reserved.	
9	SSSE3: supplemental SSE3 extensions. Read-only. Reset: Fixed,1.	
8:4	Reserved.	

3	Monitor: Monitor/Mwait instructions. Read-only. Reset: !Core::X86::Msr::HWCR[MonMwaitDis].
2	Reserved.
1	PCLMULQDQ: PCLMULQDQ instruction support. Read-only. Reset: X.
0	SSE3: SSE3 extensions. Read-only. Reset: Fixed,1.
CPUI	D_Fn0000001_EDX [Feature Identifiers] (Core::X86::Cpuid::FeatureIdEdx)
Read-	
	values can be over-written by Core::X86::Msr::CPUID_Features.
	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EDX
	Description
	Reserved.
28	HTT: hyper-threading technology. Read-only. Reset: Fixed, (Core::X86::Cpuid::SizeId[NC] != 0). 0=Single
	thread product (Core::X86::Cpuid::SizeId[NC]==0). 1=Multi thread product (Core::X86::Cpuid::SizeId[NC] !=
	0).
27	Reserved.
26	SSE2: SSE2 extensions. Read-only. Reset: Fixed,1.
25	SSE: SSE extensions. Read-only. Reset: Fixed, 1.
24	FXSR: FXSAVE and FXRSTOR instructions. Read-only. Reset: Fixed,1.
23	MMX: MMX TM instructions. Read-only. Reset: Fixed, 1.
22:20	Reserved.
19	CLFSH: CLFLUSH instruction. Read-only. Reset: Fixed,1.
18	Reserved.
17	PSE36: page-size extensions. Read-only. Reset: Fixed, 1.
16	PAT: page attribute table. Read-only. Reset: Fixed,1.
15	CMOV: conditional move instructions, CMOV, FCOMI, FCMOV. Read-only. Reset: Fixed, 1.
14	MCA: machine check architecture, MCG_CAP. Read-only. Reset: Fixed,1.
13	PGE: page global extension, CR4.PGE. Read-only. Reset: Fixed,1.
12	MTRR: memory-type range registers. Read-only. Reset: Fixed,1.
11	SysEnterSysExit: SYSENTER and SYSEXIT instructions. Read-only. Reset: Fixed, 1.
10	Reserved.
9	APIC: advanced programmable interrupt controller (APIC) exists and is enabled. Read-only. Reset: X.
	Core::X86::Msr::APIC_BAR[ApicEn].
8	CMPXCHG8B: CMPXCHG8B instruction. Read-only. Reset: Fixed,1.
7	MCE: machine check exception, CR4.MCE. Read-only. Reset: Fixed,1.
6	PAE: physical-address extensions (PAE). Read-only. Reset: Fixed,1.
5	MSR: AMD model-specific registers (MSRs), with RDMSR and WRMSR instructions. Read-only. Reset:
	Fixed,1.
4	TSC: time stamp counter, RDTSC/RDTSCP instructions, CR4.TSD. Read-only. Reset: Fixed,1.
3	PSE: page-size extensions (4 MB pages). Read-only. Reset: Fixed,1.
2	DE: debugging extensions, IO breakpoints, CR4.DE. Read-only. Reset: Fixed,1.
1	VME: virtual-mode enhancements. Read-only. Reset: Fixed,1.
0	FPU: x87 floating point unit on-chip. Read-only. Reset: Fixed,1.

CPUID_Fn0000005_EAX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEax)

Read-o	only. Reset: 0000_0040h.
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EAX
Bits	Description
31:16	Reserved.
15:0	MonLineSizeMin: smallest monitor-line size in bytes. Read-only. Reset: Fixed,0040h.

CPUID_Fn0000005_EBX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEbx)

Read-only. Reset: 0000_0040h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EBX

Bits Description

31:16 Reserved.

15:0 MonLineSizeMax: largest monitor-line size in bytes. Read-only. Reset: Fixed,0040h.

CPUID_Fn0000005_ECX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEcx)

Read-only. Reset: 0000 0003h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_ECX

- Bits Description
- 31:2 Reserved.

1 **IBE: interrupt break-event**. Read-only. Reset: Fixed, 1.

0 **EMX: enumerate MONITOR/MWAIT extensions**. Read-only. Reset: Fixed, 1.

CPUID_Fn00000005_EDX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEdx)

Read-only. Reset: 0000_0011h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EDX

Bits Description

31:8 Reserved.

7:4 MWaitC1SubStates: number of C1 sub-cstates supported by MWAIT. Read-only. Reset: Fixed,1h.

3:0 MWaitC0SubStates: number of C0 sub-cstates supported by MWAIT. Read-only. Reset: Fixed,1h.

CPUID_Fn00000006_EAX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEax)

Read-	Read-only. Reset: 0000_0004h.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000006_EAX	
Bits	Description	
31:3	Reserved.	
2	ARAT: always running APIC timer. Read-only. Reset: Fixed,1. 1=Indicates support for APIC timer always	
	running feature.	
1:0	Reserved.	

CPUID_Fn00000006_EBX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEbx)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_EBX

Bits Description

31:0 Reserved.

CPUID_Fn0000006_ECX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEcx)

 Read-only. Reset: 0000_0001h.

 These values can be over-written by Core::X86::Msr::CPUID_PWR_THERM.

 _three[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000006_ECX

 Bits
 Description

 31:1
 Reserved.

 0
 EffFreq: effective frequency interface. Read-only. Reset: Fixed, 1. 1=Indicates presence of Core::X86::Msr::MPERF and Core::X86::Msr::APERF.

CPUID_Fn0000006_EDX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEdx)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_EDX

Bits Description

31:0 Reserved.

CPUID_Fn00000007_EAX_x00 [Structured Extended Feature Identifiers] (Core::X86::Cpuid::StructExtFeatIdEax0)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EAX_x00

Bits Description

31:0 StructExtFeatIdMax. Read-only. Reset: Fixed,0000_0000h. Valid ECX sub-leaf values starting from 0.

CPUID_Fn00000007_EBX_x00 [Structured Extended Feature Identifiers] (Core::X86::Cpuid::StructExtFeatIdEbx0)

<u>`</u>	
	only. Reset: 209C_01A9h.
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EBX_x00
Bits	Description
31:30	Reserved.
29	SHA. Read-only. Reset: Fixed,1.
28:24	Reserved.
23	CLFSHOPT. Read-only. Reset: Fixed, 1.
22:21	Reserved.
20	SMAP: Secure Mode Access Prevention is supported. Read-only. Reset: Fixed, 1.
19	ADX: ADCX and ADOX are present. Read-only. Reset: Fixed,1.
18	RDSEED: RDSEED is present. Read-only. Reset: Fixed,1.
17:9	Reserved.
8	BMI2: bit manipulation group 2 instruction support. Read-only. Reset: Fixed, 1.
7	SMEP: Supervisor Mode Execution protection. Read-only. Reset: Fixed,1.
6	Reserved.
5	AVX2: AVX extension support. Read-only. Reset: Fixed, 1.
4	Reserved.
3	BMI1: bit manipulation group 1 instruction support. Read-only. Reset: Fixed, 1.
2:1	Reserved.
0	FSGSBASE: FS and GS base read write instruction support. Read-only. Reset: Fixed,1.
CDUU	

CPUID_Fn00000007_ECX_x00 [Structured Extended Feature Identifier] (Core::X86::Cpuid::StructExtFeatIdEcx0)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_ECX_x00

Bits Description

31:0 Reserved.

CPUID_Fn00000007_EDX_x00 [Structured Extended Feature Identifiers] (Core::X86::Cpuid::StructExtFeatIdEdx0)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EDX_x00

Bits Description

31:0 Reserved.

CPUID_Fn000000B_EAX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEax)

 Read-only. Reset: 0000_0000h.

 _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn000000B_EAX

 Bits
 Description

 31:0
 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000B_EBX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEbx)

Read-only. Reset: 0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_EBX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000B_ECX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEcx)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_ECX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000B_EDX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEdx)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_EDX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000D_EAX_x00 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEax00)

Read-only. Reset: 0000 0007h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EAX_x00

Bits Description

-	DIUS	Descripti	UII			
	31:0	XFeatureSupportedMask[31:0]. Read-only. Reset: Fixed,0000_0007h.				
		ValidValues:				
		Bit	Name	Description		
		[0]	X86	X87 Support.		
		[1]	SSE	128-bit SSE Support.		
		[2]	AVX	256-bit AVX support.		
		[31:3]		Reserved.		

CPUID_Fn000000D_EBX_x00 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEbx00)

Read-o	Read-only, Volatile. Reset: XXXX_XXXh.				
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EBX_x00				
Bits	Description				
31:0	XFeatureEnabledSizeMax. Read-only,Volatile. Reset: XXXX_XXXh.				
	ValidValu	ies:			
	Value	Description			
	0000_0	Reserved.			
	23Fh-				
	0000_0				
	000h				
	0000_0	legacy header + FPU/SSE size; (XCR0[AVX]==0)			
	240h				
	0000_0	Reserved.			
	33Fh-				
	0000_0				
	241h				
	0000_0	legacy header + FPU/SSE + AVX size; (XCR0[AVX]==1)			
	340h				
	FFFF_F	Reserved.			
	FFFh-				
	0000_0				
	341h				

CPUID_Fn000000D_ECX_x00 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEcx00)

Read-	only. Rese	t: XXXX_XXXh.	
_lthree[1		_thread[1:0]; CPUID_Fn000000D_ECX_x00	
Bits	Description		
31:0	XFeatureSupportedSizeMax. Read-only. Reset: Fixed,XXXX_XXXh. Size in bytes of XSAVE/XRSTOR area		
	for all features that the core supports. See		
	Core::X86::Cpuid::ProcExtStateEnumEbx00[XFeatureEnabledSizeMax].		
	ValidValues:		
	Value	Description	
	0000_0	Reserved.	
	23Fh-		
	0000_0		
	000h		
	0000_0	legacy header + FPU/SSE size; (XCR0[AVX]==0)	
	240h		
	0000_0	Reserved.	
	33Fh-		
	0000_0		
	241h		
	0000 0	legacy header + FPU/SSE + AVX size; (XCR0[AVX]==1)	
	340h		
	FFFF F	Reserved.	
	FFFh-		
	0000 0		
	341h		

CPUID_Fn000000D_EDX_x00 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEdx00)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x00

Bits Description

31:0 **XFeatureSupportedMask[63:32]**. Read-only. Reset: Fixed,0000_0000h. Upper portion of

XFeatureSupportedMask.

CPUID_Fn000000D_EAX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEax01)

Read-only. Reset: 0000_000Fh.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EAX_x01		
Bits	Description		
31:4	Reserved.		
3	XSAVES. Read-only. Reset: Fixed,1. XSAVES,XRSTORS, and IA32_XSS supported.		
2	XGETBV . Read-only. Reset: Fixed,1. XGETBV with ECX=1 supported.		
1	XSAVEC. Read-only. Reset: Fixed, 1. XSAVEC and compact XRSTOR supported.		
0	XSAVEOPT: XSAVEOPT is available. Read-only. Reset: Fixed,1.		

CPUID_Fn0000000D_EBX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEbx01)

Read-only, Volatile. Reset: XXXX_XXXh.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EBX_x01

Bits	Description		
31:0	XFeatureEnabledSizeMax . Read-only, Volatile. Reset: XXXX_XXXh. Reset is 512 + ((XCR0[AVX]) ? 256 :		
	0).		
	ValidValues:		

Value	Description
0000_0	Reserved.
23Fh-	
0000_0	
000h	
0000_0	legacy header + FPU/SSE size; (XCR0[AVX]==0)
240h	
0000_0	Reserved.
33Fh-	
0000_0	
241h	
0000_0	legacy header + FPU/SSE + AVX size; (XCR0[AVX]==1)
340h	
FFFF F	Reserved.
FFFh-	
0000_0	
341h	

CPUID_Fn000000D_ECX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEcx01)

Read-only. Reset: 0000_0000h. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_ECX_x01

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000D_EDX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEdx01)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x01

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000 0000h.

CPUID_Fn000000D_EAX_x02 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEax02)

Read-only. Reset: 0000 0100h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EAX_x02

Bits Description

31:0 YmmSaveStateSize: YMM save state byte size. Read-only. Reset: Fixed,0000 0100h.

CPUID_Fn000000D_EBX_x02 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEbx02)

Read-only. Reset: 0000_0240h. _three[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EBX_x02

Bits Description

31:0 YmmSaveStateOffset: YMM save state byte offset. Read-only. Reset: Fixed,0000_0240h.

CPUID_Fn000000D_ECX_x02 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEcx02)

Read-only. Reset: 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_ECX_x02

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000 0000h.

CPUID_Fn000000D_EDX_x02 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEdx02)

Read-only. Reset: 0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x02

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn80000000_EAX [Largest Extended Function Number] (Core::X86::Cpuid::LargExtFuncNum)

Read-only. Reset: 8000 001Fh.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000000_EAX

Bits Description

31:0 **LFuncExt**: **largest extended function**. Read-only. Reset: Fixed,8000_001Fh. The largest CPUID extended function input value supported by the processor implementation.

CPUID_Fn80000000_EBX [Processor Vendor (ASCII Bytes [3:0])] (Core::X86::Cpuid::ProcVendExtEbx)

Read-only. Reset: 6874 7541h.

Core::X86::Cpuid::ProcVendEbx and Core::X86::Cpuid::ProcVendExtEbx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000000_EBX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,6874_7541h. ASCII Bytes [3:0] ("h t u A") of the string "AuthenticAMD".

CPUID_Fn80000000_ECX [Processor Vendor (ASCII Bytes [11:8])] (Core::X86::Cpuid::ProcVendExtEcx)

Read-only. Reset: 444D 4163h.

Core::X86::Cpuid::ProcVendEcx and Core::X86::Cpuid::ProcVendExtEcx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000000_ECX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,444D_4163h. ASCII Bytes [11:8] ("D M A c") of the string "AuthenticAMD".

CPUID_Fn80000000_EDX [Processor Vendor (ASCII Bytes [7:4])] (Core::X86::Cpuid::ProcVendExtEdx)

Read-only. Reset: 6974 6E65h.

Core::X86::Cpuid::ProcVendEdx and Core::X86::Cpuid::ProcVendExtEdx return the same value.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000000_EDX

Bits Description

31:0 Vendor. Read-only. Reset: Fixed,6974_6E65h. ASCII Bytes [7:4] ("i t n e") of the string "AuthenticAMD".

CPUID_Fn80000001_EAX [Family, Model, Stepping Identifiers] (Core::X86::Cpuid::FamModStepExt)

Read-only. Reset: 0080 0FX2h.

Core::X86::Cpuid::FamModStep and Core::X86::Cpuid::FamModStepExt return the same value. See Core::X86::Cpuid::FamModStep.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EAX

Bits Description

31:28 Reserved.

27:20 ExtFamily: extended family. Read-only. Reset: 08h.

19:16 ExtModel: extended model. Read-only. Reset: 0h.

15:12 Reserved.

11:8 **BaseFamily**. Read-only. Reset: Fh.

7:4 **BaseModel**. Read-only. Reset: Xh. Model numbers vary with product.

3:0 **Stepping**. Read-only. Reset: 2h.

CPUID_Fn80000001_EBX [BrandId Identifier] (Core::X86::Cpuid::BrandId)

Read-only. Reset: X000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EBX

Bits	Description		
31:28	28 PkgType: package type. Read-only. Reset: Xh. Specifies the package type.		
	ValidValues:		
	Value	Description	
	1h-0h	Reserved.	
	2h	AM4	
	Fh-3h	Reserved.	
27:0	Reserved	1.	

CPUID_Fn80000001_ECX [Feature Identifiers] (Core::X86::Cpuid::FeatureExtIdEcx)

Read-only.			
	These values can be over-written by Core::X86::Msr::CPUID_ExtFeatures.		
	lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_ECX		
Bits	Description		
31:30	Reserved.		
29	MwaitExtended. Read-only. Reset: !Core::X86::Msr::HWCR[MonMwaitDis]. 1=MWAITX and MONITORX		
	capability is supported.		
28	PerfCtrExtLLC: Last Level Cache performance counter extensions. Read-only. Reset: Fixed, 1. 1=Indicates		
	support for Core::X86::Msr::ChL3PmcCfg and Core::X86::Msr::ChL3Pmc L3 performance counter extensions.		
	L3 performance counter extensions support. See 2.1.11.4 [L3 Cache Performance Monitor Counters] and 2.1.11		
	[Performance Monitor Counters].		
27	PerfTsc: performance time-stamp counter supported. Read-only. Reset: Fixed,0.		
26	DataBreakpointExtension . Read-only. Reset: Fixed, 1. 1=Indicates data breakpoint support for		
	Core::X86::Msr::DR0_ADDR_MASK, Core::X86::Msr::DR1_ADDR_MASK,		
0.7.0.4	Core::X86::Msr::DR2_ADDR_MASK and Core::X86::Msr::DR3_ADDR_MASK.		
25:24			
23	PerfCtrExtCore: core performance counter extensions support. Read-only. Reset: Fixed, 1. 1=Indicates		
	support for Core::X86::Msr::PERF_CTL and Core::X86::Msr::PERF_CTR. See See 2.1.11.3 [Core Performance		
- 22	Monitor Counters] and 2.1.11 [Performance Monitor Counters].		
22	TopologyExtensions: topology extensions support . Read-only. Reset: Fixed, 1. 1=Indicates support for		
21.10	Core::X86::Cpuid::CachePropEax0 and Core::X86::Cpuid::ExtApicId.		
	Reserved.		
17	TCE: translation cache extension. Read-only. Reset: Fixed,1.		
16	FMA4: 4-operand FMA instruction support. Read-only. Reset: Fixed,0.		
15	LWP: lightweight profiling support. Read-only. Reset: Fixed,0.		
14	Reserved.		
13	WDT: watchdog timer support. Read-only. Reset: Fixed,1.		
12	SKINIT: SKINIT and STGI support. Read-only. Reset: Fixed,1.		
11	XOP: extended operation support. Read-only. Reset: Fixed,0.		
10	IBS: Instruction Based Sampling. Read-only. Reset: 0.		
9	OSVW: OS Visible Work-around support. Read-only. Reset: Fixed, 1.		
8	ThreeDNowPrefetch: Prefetch and PrefetchW instructions. Read-only. Reset: Fixed,1.		
7	MisAlignSse: Misaligned SSE Mode. Read-only. Reset: Fixed, 1.		
6	SSE4A: EXTRQ, INSERTQ, MOVNTSS, and MOVNTSD instruction support. Read-only. Reset: Fixed, 1.		
5	ABM: advanced bit manipulation. Read-only. Reset: Fixed, 1. LZCNT instruction support.		
4	AltMovCr8: LOCK MOV CR0 means MOV CR8. Read-only. Reset: Fixed,1.		
3	ExtApicSpace: extended APIC register space. Read-only. Reset: Fixed, 1.		
2	SVM: Secure Virtual Mode feature. Read-only. Reset: Fixed,1. Indicates support for: VMRUN, VMLOAD,		
	VMSAVE, CLGI, VMMCALL, and INVLPGA.		
1	CmpLegacy : core multi-processing legacy mode . Read-only. Reset: Fixed,(Core::X86::Cpuid::SizeId[NC] > 0).		

	0=Single core product (Core::X86::Cpuid::SizeId[NC] == 0). 1=Multi core product
	(Core::X86::Cpuid::SizeId[NC] !=0).
0	LahfSahf: LAHF/SAHF instructions. Read-only. Reset: Fixed, 1.
CPUI	D_Fn80000001_EDX [Feature Identifiers] (Core::X86::Cpuid::FeatureExtIdEdx)
Read-o	only. Reset: 2FD3 FXFFh.
These	values can be over-written by Core::X86::Msr::CPUID_ExtFeatures.
	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EDX
	Description
31	ThreeDNow: 3DNow! TM instructions. Read-only. Reset: Fixed,0.
30	ThreeDNowExt: AMD extensions to 3DNow! TM instructions. Read-only. Reset: Fixed,0.
29	LM: long mode. Read-only. Reset: Fixed,1.
28	Reserved.
27	RDTSCP: RDTSCP instruction. Read-only. Reset: Fixed,1.
26	Page1GB: one GB large page support. Read-only. Reset: Fixed,1.
25	FFXSR: FXSAVE and FXRSTOR instruction optimizations. Read-only. Reset: Fixed,1.
24	FXSR: FXSAVE and FXRSTOR instructions. Read-only. Reset: Fixed,1.
23	MMX: MMX [™] instructions. Read-only. Reset: Fixed,1.
22	MmxExt: AMD extensions to MMX [™] instructions. Read-only. Reset: Fixed,1.
21	Reserved.
20	NX: no-execute page protection. Read-only. Reset: Fixed,1.
19:18	Reserved.
17	PSE36: page-size extensions. Read-only. Reset: Fixed,1.
16	PAT: page attribute table. Read-only. Reset: Fixed,1.
15	CMOV: conditional move instructions, CMOV, FCOMI, FCMOV. Read-only. Reset: Fixed,1.
14	MCA: machine check architecture, MCG CAP. Read-only. Reset: Fixed,1.
13	PGE: page global extension, CR4.PGE. Read-only. Reset: Fixed, 1.
12	MTRR: memory-type range registers. Read-only. Reset: Fixed, 1.
11	SysCallSysRet: SYSCALL and SYSRET instructions. Read-only. Reset: Fixed,1.
10	Reserved.
9	APIC: advanced programmable interrupt controller (APIC) exists and is enabled. Read-only. Reset: X.
-	Reset is Core::X86::Msr::APIC BAR[ApicEn].
8	CMPXCHG8B: CMPXCHG8B instruction. Read-only. Reset: Fixed,1.
7	MCE: machine check exception, CR4.MCE. Read-only. Reset: Fixed,1.
6	PAE: physical-address extensions (PAE). Read-only. Reset: Fixed, 1.
5	MSR: model-specific registers (MSRs), with RDMSR and WRMSR instructions. Read-only. Reset: Fixed,1.
4	TSC: time stamp counter, RDTSC/RDTSCP instructions, CR4.TSD. Read-only. Reset: Fixed,1.
3	PSE: page-size extensions (4 MB pages). Read-only. Reset: Fixed,1.
2	DE: debugging extensions, IO breakpoints, CR4.DE . Read-only. Reset: Fixed,1.
1	VME: virtual-mode enhancements. Read-only. Reset: Fixed,1.
0	FPU: x87 floating point unit on-chip . Read-only. Reset: Fixed,1.
~	

CPUID_Fn80000002_EAX [Processor Name String Identifier (Bytes [3:0])] (Core::X86::Cpuid::ProcNameStr0Eax)

(CorcXooCpuid FochanicstroEax)				
Read-only.				
Is an alias of Core::X86::Msr::ProcNameString_n0.				
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EAX				
Bits Description				
31:24 ProcNameByte3: processor name, byte3. Read-only. Reset:				

Core::X86::Msr::ProcNameString_n0[CpuNameString3].

23:16	ProcNameByte2: processor name, byte2. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n0[CpuNameString2].	
15:8	ProcNameByte1: processor name, byte1. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n0[CpuNameString1].	
7:0	ProcNameByte0: processor name, byte0. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n0[CpuNameString0].	

CPUID_Fn80000002_EBX [Processor Name String Identifier (Bytes [7:4])] (Core::X86::Cpuid::ProcNameStr0Ebx)

Read-o	Read-only.		
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n0.		
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EBX		
Bits	Description		
31:24	ProcNameByte7: processor name, byte 7. Read-only. Reset:		
	Core::X86::Msr::ProcNameString_n0[CpuNameString7].		
23:16	ProcNameByte6: processor name, byte 6. Read-only. Reset:		
	Core::X86::Msr::ProcNameString_n0[CpuNameString6].		
15:8	ProcNameByte5: processor name, byte 5. Read-only. Reset:		
	Core::X86::Msr::ProcNameString_n0[CpuNameString5].		
	ProcNameByte4: processor name, byte 4. Read-only. Reset:		
	Core::X86::Msr::ProcNameString_n0[CpuNameString4].		

CPUID_Fn80000002_ECX [Processor Name String Identifier (Bytes [11:8])] (Core::X86::Cpuid::ProcNameStr0Ecx)

Read-o	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n1.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_ECX	
Bits	Description	
31:24	ProcNameByte11: processor name, byte 11. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n1[CpuNameString3].	
23:16	ProcNameByte10: processor name, byte 10. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n1[CpuNameString2].	
15:8	ProcNameByte9: processor name, byte 9. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n1[CpuNameString1].	
7:0	ProcNameByte8: processor name, byte 8. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n1[CpuNameString0].	

CPUID_Fn80000002_EDX [Processor Name String Identifier (Bytes [15:12])] (Core::X86::Cpuid::ProcNameStr0Edx)

Read-o	only.
Is an a	lias of Core::X86::Msr::ProcNameString_n1.
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EDX
Bits	Description
31:24	ProcNameByte15: processor name, byte 15. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n1[CpuNameString7].
23:16	ProcNameByte14: processor name, byte 14. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n1[CpuNameString6].
15:8	ProcNameByte13: processor name, byte 13. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n1[CpuNameString5].
7:0	ProcNameByte12: processor name, byte 12. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n1[CpuNameString4].

CPUID Fn80000003 EAX [Processor Name String Identifier (Bytes [19:16])] (Core::X86::Cpuid::ProcNameStr1Eax)

Read-o	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n2.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_EAX	
Bits	Description	
31:24	ProcNameByte19: processor name, byte 19. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n2[CpuNameString3].	
23:16	ProcNameByte18: processor name, byte 18. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n2[CpuNameString2].	
15:8	ProcNameByte17: processor name, byte 17. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n2[CpuNameString1].	
7:0	ProcNameByte16: processor name, byte 16. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n2[CpuNameString0].	

CPUID Fn80000003 EBX [Processor Name String Identifier (Bytes [23:20])] (Core::X86::Cpuid::ProcNameStr1Ebx)

-

CPUID_Fn80000003_ECX [Processor Name String Identifier (Bytes [27:24])] (Core::X86::Cpuid::ProcNameStr1Ecx)

Read-	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n3.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_ECX	
Bits	Description	
31:24	ProcNameByte27: processor name, byte 27. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n3[CpuNameString3].	
23:16	ProcNameByte26: processor name, byte 26. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n3[CpuNameString2].	
15:8	ProcNameByte25: processor name, byte 25. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n3[CpuNameString1].	
7:0	ProcNameByte24: processor name, byte 24. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n3[CpuNameString0].	

CPUID_Fn80000003_EDX [Processor Name String Identifier (Bytes [31:28])] (Core::X86::Cpuid::ProcNameStr1Edx)

Read-only.		
Is an alias of Core::X86::Msr::ProcNameString n3.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_EDX		
Bits Description		
31:24 ProcNameByte31: processor name, byte 31. Read-only. Reset:		

31:24 **ProcNameByte31**: processor name, byte 31. Read-only. Reset:

	Core::X86::Msr::ProcNameString_n3[CpuNameString7].
23:16	ProcNameByte30: processor name, byte 30. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n3[CpuNameString6].
15:8	ProcNameByte29: processor name, byte 29. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n3[CpuNameString5].
7:0	ProcNameByte28: processor name, byte 28. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n3[CpuNameString4].

CPUID_Fn80000004_EAX [Processor Name String Identifier (Bytes [35:32])] (Core::X86::Cpuid::ProcNameStr2Eax)

Read-o	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n4.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EAX	
Bits	Description	
31:24	ProcNameByte35: processor name, byte 35. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n4[CpuNameString3].	
23:16	ProcNameByte34: processor name, byte 34. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n4[CpuNameString2].	
15:8	ProcNameByte33: processor name, byte 33. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n4[CpuNameString1].	
7:0	ProcNameByte32: processor name, byte 32. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n4[CpuNameString0].	

CPUID_Fn80000004_EBX [Processor Name String Identifier (Bytes [39:36])] (Core::X86::Cpuid::ProcNameStr2Ebx)

Read-	only.
Is an a	lias of Core::X86::Msr::ProcNameString_n4.
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EBX
Bits	Description
31:24	ProcNameByte39: processor name, byte 39. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n4[CpuNameString7].
23:16	ProcNameByte38: processor name, byte 38. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n4[CpuNameString6].
15:8	ProcNameByte37: processor name, byte 37. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n4[CpuNameString5].
7:0	ProcNameByte36: processor name, byte 36. Read-only. Reset:
	Core::X86::Msr::ProcNameString_n4[CpuNameString4].

CPUID_Fn80000004_ECX [Processor Name String Identifier (Bytes [43:40])] (Core::X86::Cpuid::ProcNameStr2Ecx)

-		
Read-	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n5.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_ECX	
Bits	Description	
31:24	ProcNameByte43: processor name, byte 43. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString3].	
23:16	ProcNameByte42: processor name, byte 42. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString2].	
15:8	ProcNameByte41: processor name, byte 41. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString1].	
7:0	ProcNameByte40: processor name, byte 40. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString0].	

CPUID_Fn80000004_EDX [Processor Name String Identifier (Bytes [47:44])] (Core::X86::Cpuid::ProcNameStr2Edx)

Read-o	Read-only.	
Is an a	lias of Core::X86::Msr::ProcNameString_n5.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EDX	
Bits	Description	
31:24	ProcNameByte47: processor name, byte 47. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString7].	
23:16	ProcNameByte46: processor name, byte 46. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString6].	
15:8	ProcNameByte45: processor name, byte 45. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString5].	
7:0	ProcNameByte44: processor name, byte 44. Read-only. Reset:	
	Core::X86::Msr::ProcNameString_n5[CpuNameString4].	

CPUID Fn80000005 EAX [L1 TLB 2M/4M Identifiers] (Core::X86::Cpuid::L1Tlb2M4M)

Read-	only.
This f	unction provides the processor's first level cache and TLB characteristics for each core.
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_EAX
Bits	Description
31:24	L1DTlb2and4MAssoc: data TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed,FFh. See
	Core::X86::Cpuid::L1DcId[L1DcAssoc].
23:16	L1DTlb2and4MSize: data TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset: Fixed,64.
	The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require two 2 MB
	entries, so the number of entries available for the 4 MB page size is one-half the returned value.
15:8	L1ITIb2and4MAssoc: instruction TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed, FFh.
	See Core::X86::Cpuid::L1DcId[L1DcAssoc].
7:0	L1ITIb2and4MSize: instruction TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:
	Fixed,64. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require
	two 2 MB entries, so the number of entries available for the 4 MB page size is one-half the returned value.

CPUID_Fn80000005_EBX [L1 TLB 4K Identifiers] (Core::X86::Cpuid::L1Tlb4K)

Read-only.			
See Core::X86::Cpuid::L1Tlb2M4M.			
_lthree[]	1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_EBX		
Bits	Description		
31:24	L1DTlb4KAssoc: data TLB associativity for 4 KB pages. Read-only. Reset: Fixed, FFh. See		
	Core::X86::Cpuid::L1DcId[L1DcAssoc].		
23:16	L1DTlb4KSize: data TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,64.		
15:8	L1ITlb4KAssoc: instruction TLB associativity for 4 KB pages. Read-only. Reset: Fixed, FFh. See		
	Core::X86::Cpuid::L1DcId[L1DcAssoc].		
7:0	L1ITlb4KSize: instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,64.		

CPUID_Fn80000005_ECX [L1 Data Cache Identifiers] (Core::X86::Cpuid::L1DcId)

Read-only.

This function provides first level cache characteristics for each core.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_ECX		
Bits	Description		
31:24	L1DcSize: L1 data cache size in KB. Read-only. Reset: Fixed, 32.		
23:16	L1DcAssoc: L1 data cache associativity. Read-only. Reset: Fixed,8.		
	ValidValues:		

[Value	Description	
	00h	Reserved	
	01h	1 way (direct mapped)	
	02h	2 way	
	03h	3 way	
	FEh-	<value> way</value>	
	04h		
	FFh	Fully associative	
15:8	L1DcLir	L1DcLinesPerTag: L1 data cache lines per tag. Read-only. Reset: Fixed,01h.	
7:0	L1DcLineSize: L1 data cache line size in bytes. Read-only. Reset: Fixed,64.		

CPUID_Fn80000005_EDX [L1 Instruction Cache Identifiers] (Core::X86::Cpuid::L1IcId)

Read-	only.		
This f	unction p	rovides first level cache characteristics for each core.	
]_thread[1:0]; CPUID_Fn80000005_EDX	
Bits	Description		
31:24	L1IcSize: L1 instruction cache size KB. Read-only. Reset: Fixed,64.		
23:16	L1IcAss	oc: L1 instruction cache associativity. Read-only. Reset: Fixed,4.	
	ValidValues:		
	Value	Description	
	00h	Reserved	
	01h	1 way (direct mapped)	
	02h	2 way	
	03h	3 way	
	04h	4 way	
	FEh-	<value> way</value>	
	05h		
	FFh	Fully associative	
15:8	L1IcLinesPerTag: L1 instruction cache lines per tag. Read-only. Reset: Fixed,01h.		
7:0	L1IcLineSize: L1 instruction cache line size in bytes. Read-only. Reset: Fixed,64.		

CPUID Fn80000006 EAX [L2 TLB 2M/4M Identifiers] (Core::X86::Cpuid::L2Tlb2M4M)

_	_		
Read-	only.		
		ovides the processor's second level cache and TLB characteristics for each core.	
		_thread[1:0]; CPUID_Fn80000006_EAX	
Bits	Descript	ion	
31:28	L2DTlb2and4MAssoc: L2 data TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Xh.		
	ValidValues:		
	Value	Description	
	1h-0h	Reserved.	
	2h	2 ways	
	3h	3 ways	
	Fh-4h	Reserved.	
27:16	L2DTlb2and4MSize: L2 data TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:		
	Fixed,1536. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require		
	two 2 MB entries, so the number of entries available for the 4 MB page size is one-half the returned value.		
15:12	L2ITIb2and4MAssoc: L2 instruction TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed,6.		
	ValidValues:		
	Value	Description	
	5h-0h	Reserved.	

	6h	8 ways			
	Fh-7h	Reserved.			
11:0	L2ITIb2and4MSize: L2 instruction TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:				
	Fixed,1024. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require				
	two 2 MB entries, so the number of entries available for the 4 MB page size is one-half the returned value.				
PUI	D Fn800	00006_EBX [L2 TLB 4K Identifiers] (Core::X86::Cpuid::L2Tlb4K)			
	only.				
his f	unction pr	ovides the processor's second level cache and TLB characteristics for each core.			
		_thread[1:0]; CPUID_Fn80000006_EBX			
	Descript				
1:28	L2DTlb4KAssoc: L2 data TLB associativity for 4 KB pages. Read-only. Reset: Xh.				
	ValidValues:				
	Value	Description			
	4h-0h	Reserved.			
	5h	6 ways			
	6h	8 ways			
	Fh-7h	Reserved.			
7:16	L2DTlb4	IKSize: L2 data TLB number of entries for 4 KB pages . Read-only. Reset: Fixed, 1536.			
5:12	L2ITlb4	KAssoc: L2 instruction TLB associativity for 4 KB pages. Read-only. Reset: Fixed,6.			
	ValidVal				
	Value	Description			
	5h-0h	Reserved.			
	6h	8 ways			
	Fh-7h	Reserved.			
11:0	L	Reserved. KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed, 1024.			
	L2ITlb4	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed, 1024.			
CPUI	L2IT1b4 D_Fn800				
CPUI Lead-	L2ITlb4 D_Fn800 only.	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId)			
C PUI Lead-	L2ITlb4 D_Fn800 only. unction pr	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. D0006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core.			
CPUI Lead- This f	L2ITIb4 D_Fn800 only. unction pr 1:0]_core[3:0]	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX ion			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues:			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh-	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues:			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal ValidVal 00FFh- 0000h 0100h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. _thread[1:0]; CPUID_Fn8000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 256 KB			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr i:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 0100h 01FFh-	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 0100h 01FFh- 0101h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 256 KB Reserved.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 01FFh- 0101h 0200h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]: CPUID_Fn8000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 256 KB Reserved. 512 KB			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 0100h 01FFh- 0101h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]; CPUID_Fn80000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 256 KB Reserved.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr i:0]_core[3:0] Descript L2Size: 1 ValidVal ValidVal 00FFh- 0000h 010Fh- 0101h 0200h 03FFh-	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]: CPUID_Fn8000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 256 KB Reserved. 512 KB			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 01FFh- 0101h 0200h 03FFh- 0201h 0400h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 01FFh- 0101h 0200h 03FFh- 0201h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr 1:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 01FFh- 0101h 0200h 03FFh- 0201h 0400h 07FFh-	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core.			
CPUI ead- his f three[1 Bits	L2ITlb4 D_Fn800 only. unction pr i:0]_core[3:0] Descript L2Size: 1 ValidVal Value 00FFh- 0000h 01FFh- 0101h 0200h 03FFh- 0201h 0400h 07FFh- 0401h	KSize: L2 instruction TLB number of entries for 4 KB pages. Read-only. Reset: Fixed,1024. 00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId) ovides second level cache characteristics for each core. thread[1:0]; CPUID_Fn8000006_ECX ion L2 cache size in KB. Read-only. Reset: Fixed,0200h. ues: Description Reserved. 512 KB Reserved. 1 MB Reserved.			

ValidVa Value	Description	
Oh	Disabled.	
1h	1 way (direct mapped)	
2h	2 ways	
3h	Reserved.	
4h	4 ways	
5h	Reserved.	
6h	8 ways	
7h	Reserved.	
8h	16 ways	
9h	Reserved.	
Ah	32 ways	
Bh	48 ways	
Ch	64 ways	
Dh	96 ways	
Eh	128 ways	
Fh	Fully associative	
L2Lines	PerTag: L2 cache lines per tag. Read-only. Reset: Fixed,1h.	
L2Lines	2LineSize: L2 cache line size in bytes. Read-only. Reset: Fixed,64.	

CPUID_Fn80000006_EDX [L3 Cache Identifiers] (Core::X86::Cpuid::L3CacheId)

Read-o	only.		
This fi	unction pr	ovides third level cache characteristics shared by all cores of a processor.	
		_thread[1:0]; CPUID_Fn80000006_EDX	
Bits	ts Description		
31:18	L3Size: L3 cache size. Read-only. Reset: XXXXh. The L3 cache size in 512 KB units.		
	ValidValues:		
	Value	Description	
	0000h	Disabled.	
	3FFFh-	(<value> *0.5) MB</value>	
	0001h		
17:16	Reserved		
15:12	L3Assoc: L3 cache associativity. Read-only. Reset: Xh.		
	ValidValues:		
	Value	Description	
	7h-0h	Reserved.	
	8h	16 Ways	
	9h	Reserved.	
	Ah	32 Ways	
	Bh	48 Ways	
	Ch	64 Ways	
	Dh	96 Ways	
	Eh	128 Ways	
	Fh	Reserved.	
11:8	L3LinesPerTag: L3 cache lines per tag. Read-only. Reset: Fixed, 1h.		
7:0	L3LineSize: L3 cache line size in bytes. Read-only. Reset: Fixed,64.		

CPUID_Fn80000007_EAX [Reserved] (Core::X86::Cpuid::ProcFeedbackCap)

Read-only. Reset: 0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EAX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn8000007_EBX [RAS Capabilities] (Core::X86::Cpuid::RasCap)

	Read-only. Reset: 0000_000Xh.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EBX			
Bits	Description			
31:4	Reserved.			
3	ScalableMca. Read-only. Reset: Fixed, 1. 0=Scalable MCA is not supported. 1=Scalable MCA is supported. See			
	3.2 [Machine Check Architecture Extensions] and MCA_CONFIG[McaX] for the respective bank.			
2	HWA: hardware assert supported. Read-only. Reset: Fixed,0.			
1	SUCCOR: Software uncorrectable error containment and recovery capability. Read-only. Reset: X. The			
	processor supports software containment of uncorrectable errors through context synchronizing data poisoning			
	and deferred error interrupts; MSR Core::X86::Msr::McaIntrCfg, MCA_STATUS[Deferred] and			
	MCA_STATUS[Poison] exist.			
0	McaOverflowRecov: MCA overflow recovery support. Read-only. Reset: Fixed, 1. 0=MCA overflow			
	conditions require software to shut down the system. 1=MCA overflow conditions (MCi_STATUS[Overflow] ==			
	1) are not fatal; software may safely ignore such conditions. See 3 [Machine Check Architecture].			

CPUID_Fn80000007_ECX [Advanced Power Management Information] (Core::X86::Cpuid::ApmInfoEcx)

Read-only. Reset: 0000_0000h. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007 ECX

Bits Description

31:0 CmpUnitPwrSampleTimeRatio. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn80000007_EDX [Advanced Power Management Information] (Core::X86::Cpuid::ApmInfoEdx)

Read-only. Reset: 0000_6789h.			
This function provides advanced power management feature identifiers.			
	_three[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EDX		
Bits	Description		
31:15	Reserved.		
14	RAPL: running average power limit. Read-only. Reset: Fixed,1.		
13	ConnectedStandby: Connected Standby. Read-only. Reset: Fixed,1.		
12	ApmPwrReporting: APM power reporting. Read-only. Reset: Fixed,0.		
11	ProcFeedbackInterface: processor feedback interface. Read-only. Reset: Fixed, 0. 1=Indicates support for		
	processor feedback interface; Core::X86::Cpuid::ProcFeedbackCap.		
10	EffFreqRO: read-only effective frequency interface. Read-only. Reset: Fixed, 1. Indicates presence of		
	Core::X86::Msr::MPerfReadOnly and Core::X86::Msr::APerfReadOnly.		
9	CPB : core performance boost . Read-only. Reset: 1. 1=Indicates presence of Core::X86::Msr::HWCR[CpbDis]		
	and support for core performance boost.		
8	TscInvariant: TSC invariant. Read-only. Reset: Fixed, 1. The TSC rate is invariant.		
7	HwPstate: hardware P-state control. Read-only. Reset: Fixed, 1. Core::X86::Msr::PStateCurLim,		
	Core::X86::Msr::PStateCtl and Core::X86::Msr::PStateStat exist.		
6	OneHundredMHzSteps: 100 MHz multiplier Control. Read-only. Reset: Fixed,0.		
5:4	Reserved.		
3	TTP: THERMTRIP. Read-only. Reset: Fixed,1.		
2	VID: Voltage ID control. Read-only. Reset: Fixed,0. Function replaced by HwPstate.		
1	FID: Frequency ID control. Read-only. Reset: Fixed, 0. Function replaced by HwPstate.		
0	TS: Temperature sensor. Read-only. Reset: Fixed,1.		
•			

CPUID_Fn80000008_EAX [Long Mode Address Size Identifiers] (Core::X86::Cpuid::LongModeInfo)

Read-	Read-only. Reset: 0000_3030h.			
This p	This provides information about the maximum physical and linear address width supported by the processor.			
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000008_EAX				
Bits	Descript	ion		
31:24	Reserved.			
23:16	23:16 GuestPhysAddrSize: maximum guest physical byte address size in bits. Read-only. Reset: Fix			
	ValidValues:			
	Value	Description		
	00h	The maximum guest physical address size defined by PhysAddrSize.		
	FFh-	The maximum guest physical address size defined by GuestPhysAddrSize.		
	01h			
15:8	LinAddrSize: Maximum linear byte address size in bits. Read-only. Reset: Fixed, 30h.			
7:0	PhysAddrSize: Maximum physical byte address size in bits. Read-only. Reset: Fixed, 30h.			

CPUID_Fn80000008_EBX [Extended Feature Extensions ID EBX] (Core::X86::Cpuid::FeatureExtIdEbx)

Read-only. Reset: 0000_0007h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000008_EBX	
Bits	Description	
31:3	Reserved.	
2	XSaveErPtr. Read-only. Reset: Fixed, 1. 1=FXSAVE, XSAVE, FXSAVEOPT, XSAVEC, XSAVES always save	
	error pointers and FXRSTOR, XRSTOR, XRSTORS always restore error pointers is supported.	
1	IRPerf: instructions retired count support. Read-only. Reset: Fixed, 1. 1=Core::X86::Msr::IRPerfCount	
	supported.	
0	CLZERO: Clear Zero Instruction. Read-only. Reset: Fixed, 1. CLZERO instruction zero's out the 64 byte cache	
	line specified in RAX. Note: CLZERO instruction operations are cache-line aligned and RAX[5:0] is ignored.	

CPUID_Fn80000008_ECX [Size Identifiers] (Core::X86::Cpuid::SizeId)

Read-o	Read-only. Reset: 0000_X0XXh.	
This p	This provides information about the number of threads supported by the processor.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000008_ECX	
Bits	Description	
31:18	Reserved.	
17:16	PerfTscSize: performance time-stamp counter size. Read-only. Reset: Fixed,0h.	
	ApicIdSize: APIC ID size. Read-only. Reset: Xh. The number of bits in the initial	
	Core::X86::Apic::ApicId[ApicId] value that indicate thread ID within a package.	
11:8	Reserved.	
7:0	NC: number of threads - 1. Read-only. Reset: XXh. The number of threads in the package is NC+1 (eg., if	
	NC=0, then there is one thread).	

CPUID_Fn8000000A_EAX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEax)

Read-only. Reset: 0000_0001h.	
This provides SVM revision. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then	
Core::X86::Cpuid::SvmRevFeatIdEax is reserved.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EAX	
Bits	Description
31:8	Reserved.
7:0	SvmRev: SVM revision. Read-only. Reset: Fixed,01h.

CPUID_Fn8000000A_EBX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEbx)

Read-only, Volatile. Reset: 0000_8000h.

This provides SVM revision and feature information. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then Core::X86::Cpuid::SvmRevFeatIdEbx is reserved.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EBX

Bits Description

31:0 **NASID**: number of address space identifiers (ASID). Read-only, Volatile. Reset: 0000_8000h.

CPUID_Fn8000000A_EDX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEdx)

Read-only. Reset: 0001_B4FFh.

This provides SVM feature information. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then Core::X86::Cpuid::SvmRevFeatIdEdx is reserved.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EDX

Bits	Description
31:17	Reserved.

16 **vGIF: virtualized GIF**. Read-only. Reset: Fixed,1.

15 V VMSAVE VMLOAD: virtualized VMLOAD and VMSAVE. Read-only. Reset: Fixed,1.

14 Reserved.

13 **AVIC: AMD virtual interrupt controller**. Read-only. Reset: Fixed,1. 1=Support indicated for SVM mode virtualized interrupt controller; Indicates support for Core::X86::Msr::AvicDoorbell.

12 PauseFilterThreshold: PAUSE filter threshold. Read-only. Reset: Fixed,1.

11 Reserved.

10 **PauseFilter**: **pause intercept filter**. Read-only. Reset: Fixed,1.

- 9:8 Reserved.
- 7 **DecodeAssists**: decode assists. Read-only. Reset: Fixed, 1.

6 **FlushByAsid**: **flush by ASID**. Read-only. Reset: Fixed,1.

- 5 VmcbClean: VMCB clean bits. Read-only. Reset: Fixed, 1.
- 4 **TscRateMsr: MSR based TSC rate control**. Read-only. Reset: Fixed, 1. 1=Indicates support for TSC ratio Core::X86::Msr::TscRateMsr.

3 NRIPS: NRIP Save. Read-only. Reset: Fixed, 1.

2 **SVML**: **SVM lock**. Read-only. Reset: Fixed,1.

1 **LbrVirt**: **LBR virtualization**. Read-only. Reset: Fixed, 1.

0 **NP: nested paging**. Read-only. Reset: Fixed,1.

CPUID_Fn80000019_EAX [L1 TLB 1G Identifiers] (Core::X86::Cpuid::L1Tlb1G)

Read-only. This function provides first level TLB characteristics for 1GB pages. __lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000019_EAX Bits Description 31:28 L1DTlb1GAssoc: L1 data TLB associativity for 1 GB pages. Read-only. Reset: Fixed,Fh. See Core::X86::Cpuid::L2CacheId[L2Assoc].

- 27:16 L1DTlb1GSize: L1 data TLB number of entries for 1 GB pages. Read-only. Reset: Fixed,64.
- 15:12 L1ITlb1GAssoc: L1 instruction TLB associativity for 1 GB pages. Read-only. Reset: Fixed,Fh. See Core::X86::Cpuid::L2CacheId[L2Assoc].

11:0 L1ITlb1GSize: L1 instruction TLB number of entries for 1 GB pages. Read-only. Reset: Fixed,64.

CPUID_Fn80000019_EBX [L2 TLB 1G Identifiers] (Core::X86::Cpuid::L2Tlb1G)

Read-only. Reset: 0000_0000h.

This provides 1 GB paging information. The associativity fields are defined by Core::X86::Cpuid::L2Tlb2M4M, Core::X86::Cpuid::L2Tlb4K, Core::X86::Cpuid::L2CacheId and Core::X86::Cpuid::L3CacheId. lthree[1:0] core[3:0] thread[1:0]; CPUID Fn80000019 EBX

Bits Description

31:28 L2DTlb1GAssoc: L2 data TLB associativity for 1 GB pages. Read-only. Reset: Fixed,0h. See

 Core::X86::Cpuid::L2CacheId[L2Assoc].

 27:16
 L2DTlb1GSize: L2 data TLB number of entries for 1 GB pages. Read-only. Reset: Fixed,000h.

 15:12
 L2ITlb1GAssoc: L2 instruction TLB associativity for 1 GB pages. Read-only. Reset: Fixed,0h. See Core::X86::Cpuid::L2CacheId[L2Assoc].

11:0 **L2ITIb1GSize: L2 instruction TLB number of entries for 1 GB pages**. Read-only. Reset: Fixed,000h.

CPUID_Fn8000001A_EAX [Performance Optimization Identifiers] (Core::X86::Cpuid::PerfOptId)

Read-only. Reset: 0000 0003h.

This function returns performance related information. For more details on how to use these bits to optimize software, see the optimization guide.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001A_EAX

- Bits Description
- 31:3 Reserved.
- 2 **FP256**. Read-only. Reset: Fixed,0.
- 1 **MOVU**. Read-only. Reset: Fixed,1.
- 0 **FP128**. Read-only. Reset: Fixed,1.

CPUID_Fn8000001B_EAX [Instruction Based Sampling Identifiers] (Core::X86::Cpuid::IbsIdEax)

Read-only. Reset: 0000_03FFh. This function returns IBS feature information.

lthree[1:0] core[3:0] thread[1:0]; CPUID Fn8000001B EAX

Bits | Description 31:11 Reserved. IbsOpData4: IBS op data 4 MSR supported. Read-only. Reset: Fixed,0. 10 IbsFetchCtlExtd: IBS fetch control extended MSR supported. Read-only. Reset: Fixed, 1. Indicates support for 9 Core::X86::Msr::IC IBS EXTD CTL. **OpBrnFuse:** fused branch micro-op indication supported. Read-only. Reset: Fixed, 1. Indicates support for 8 Core::X86::Msr::IBS OP DATA[IbsOpBrnFuse]. 7 RipInvalidChk: invalid RIP indication supported. Read-only. Reset: Fixed.1. Indicates support for Core::X86::Msr::IBS OP DATA[IbsRipInvalid]. OpCntExt: IbsOpCurCnt and IbsOpMaxCnt extend by 7 bits. Read-only. Reset: Fixed, 1. Indicates support 6 for Core::X86::Msr::IBS OP CTL[IbsOpCurCnt[26:20],IbsOpMaxCnt[26:20]]. BrnTrgt: branch target address reporting supported. Read-only. Reset: Fixed,1. 5 4 **OpCnt: op counting mode supported**. Read-only. Reset: Fixed, 1. 3 RdWrOpCnt: read write of op counter supported. Read-only. Reset: Fixed,1. 2 **OpSam: IBS execution sampling supported.** Read-only. Reset: Fixed, 1. FetchSam: IBS fetch sampling supported. Read-only. Reset: Fixed, 1. 1 **IBSFFV: IBS feature flags valid**. Read-only. Reset: Fixed, 1. 0

CPUID_Fn8000001D_EAX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEax0)

 Core::X86::Cpuid::CachePropEax0 reports topology information for the DC.

 If (Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions] == 0) then CPUID Fn8000001D_E[D,C,B,A]X are reserved.

 __three[1:0]_core[3:0]; CPUID_Fn800001D_EAX_x00

 Bits
 Description

 31:26
 Reserved.

 25:14
 NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh. The number of logical processors sharing this cache is NumSharingCache+1.

 13:10
 Reserved.

 9
 FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0. 1=Cache is fully associative.

 8
 SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed,1. 1=Cache is self initializing; cache does

	not need s	software initialization.
7:5	CacheLe	vel: cache level. Read-only. Reset: Fixed, 1h. Identifies the cache level.
	ValidValu	ues:
	Value	Description
	0h	Reserved.
	1h	Level 1
	2h	Level 2
	3h	Level 3
	7h-4h	Reserved.
4:0	CacheTy	pe: cache type. Read-only. Reset: Fixed,01h. Identifies the type of cache.
	ValidValues:	
	Value	Description
	00h	Null; no more caches.
	01h	Data cache.
	02h	Instruction cache.
	03h	Unified cache.
	1Fh-04h	Reserved.

CPUID_Fn8000001D_EAX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEax1)

Read-only. Reset: 0XXX_X122h.	
Core::X86::Cpuid::CachePropEax1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x01
Bits	Description
31:26	Reserved.
25:14	NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh. See
	Core::X86::Cpuid::CachePropEax0[NumSharingCache].
13:10	Reserved.
9	FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0. See
	Core::X86::Cpuid::CachePropEax0[FullyAssociative].
8	SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed,1. See
	Core::X86::Cpuid::CachePropEax0[SelfInitialization].
7:5	CacheLevel: cache level. Read-only. Reset: Fixed, 1h. Identifies the cache level. See
	Core::X86::Cpuid::CachePropEax0[CacheLevel].
4:0	CacheType: cache type. Read-only. Reset: Fixed,02h. See Core::X86::Cpuid::CachePropEax0[CacheType].

CPUID_Fn8000001D_EAX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEax2)

Read-o	only. Reset: 0XXX_X143h.	
Core::	Core::X86::Cpuid::CachePropEax2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x02	
Bits	Description	
31:26	Reserved.	
25:14	NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh.	
	Core::X86::Cpuid::CachePropEax0[NumSharingCache].	
13:10	Reserved.	
9	FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0.	
	Core::X86::Cpuid::CachePropEax0[FullyAssociative].	
8	SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed, 1.	
	Core::X86::Cpuid::CachePropEax0[SelfInitialization].	
7:5	CacheLevel: cache level. Read-only. Reset: Fixed, 2h. Identifies the cache level.	
	Core::X86::Cpuid::CachePropEax0[CacheLevel].	

4:0 **CacheType**: cache type. Read-only. Reset: Fixed,03h. Core::X86::Cpuid::CachePropEax0[CacheType].

CPUID_Fn8000001D_EAX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEax3)

Read-only. Reset: 0XXX X163h.		
Core::X86::Cpuid::CachePropEax3 reports topology information for the L3.		
	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x03	
Bits	Description	
31:26	Reserved.	
25:14	NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh. The number of	
	logical processors sharing this cache is NumSharingCache+1.	
13:10	Reserved.	
9	FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0.	
	Core::X86::Cpuid::CachePropEax0[FullyAssociative].	
8	SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed,1.	
	Core::X86::Cpuid::CachePropEax0[SelfInitialization].	
7:5	CacheLevel: cache level. Read-only. Reset: Fixed, 3h. Identifies the cache level.	
	Core::X86::Cpuid::CachePropEax0[CacheLevel].	
4:0	CacheType: cache type. Read-only. Reset: Fixed,03h. Core::X86::Cpuid::CachePropEax0[CacheType].	

CPUID_Fn8000001D_EAX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEax4)

Read	Read-only. Reset: 0000 0000h.	
Core	Core::X86::Cpuid::CachePropEax4 reports done/null. See Core::X86::Cpuid::CachePropEax0.	
_lthree	_three[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x04	
Bits	Description	
31:5	5 Reserved.	

4:0 **CacheType**: cache type. Read-only. Reset: Fixed,00h. Core::X86::Cpuid::CachePropEax0[CacheType].

CPUID_Fn8000001D_EBX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEbx0)

Read-only. Reset: 01C0_003Fh.		
Core::	Core::X86::Cpuid::CachePropEbx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x00	
Bits	Description	
31:22	CacheNumWays: cache number of ways. Read-only. Reset: Fixed,007h. Cache number of ways is	
	CacheNumWays + 1.	
21:12	CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h. Cache partitions is	
	CachePhysPartitions + 1.	
11:0	CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh. Cache line size in bytes is	
	CacheLineSize + 1.	

 CPUID_Fn8000001D_EBX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEbx1)

 Read-only. Reset: 00C0_003Fh.

 Core::X86::Cpuid::CachePropEbx1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.

 __lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x01

 Bits
 Description

 31:22
 CacheNumWays: cache number of ways. Read-only. Reset: Fixed,003h.

 Core::X86::Cpuid::CachePropEbx0[CacheNumWays].

 21:12
 CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h.

 Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].

 11:0
 CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh.

 Core::X86::Cpuid::CachePropEbx0[CacheLineSize].

 CPUID_Fn8000001D_EBX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEbx2)

Read-only. Reset: 01C0_003Fh.

Core::X86::Cpuid::CachePropEbx2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x02	
Bits	Description	
31:22	CacheNumWays: cache number of ways. Read-only. Reset: Fixed,007h. See	
	Core::X86::Cpuid::CachePropEbx0[CacheNumWays].	
21:12	CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h. See	
	Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].	
11:0	CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh. See	
	Core::X86::Cpuid::CachePropEbx0[CacheLineSize].	

CPUID_Fn8000001D_EBX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEbx3)

Read-only. Reset: 03C0_003Fh.		
Core::X86::Cpuid::CachePropEbx3 reports topology information for the L3. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x03		
Bits Description		
31:22 CacheNumWays: cache number of ways. Read-only. Reset: Fixed,00Fh. See		
Core::X86::Cpuid::CachePropEbx0[CacheNumWays].		
21:12 CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h. See		
Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].		
11:0 CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh. See		
Core::X86::Cpuid::CachePropEbx0[CacheLineSize].		

CPUID_Fn8000001D_EBX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEbx4)

Read-only. Reset: 0000 0000h.

Core::X86::Cpuid::CachePropEax4 reports done/null. See Core::X86::Cpuid::CachePropEax0.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x04

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn8000001D_ECX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEcx0)

Read-only. Reset: 0000 003Fh.

Core::X86::Cpuid::CachePropEcx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x00

Bits Description

31:0 **CacheNumSets: cache number of sets**. Read-only. Reset: Fixed,0000_003Fh. Cache number of sets is CacheNumSets+1.

CPUID_Fn8000001D_ECX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEcx1)

Read-only. Reset: 0000_00FFh.

Core::X86::Cpuid::CachePropEcx1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.		
lthree[1:0] core[3:0] thread[1:0]; CPUID Fn8000001D ECX x01		
Bits	Description	
31:0	CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000_00FFh. See	
	Core::X86::Cpuid::CachePropEcx0[CacheNumSets].	

CPUID_Fn8000001D_ECX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEcx2)

Read-only. Reset: 0000_03FFh.

Core::X86::Cpuid::CachePropEcx2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x02

Bits Description

31:0 CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000 03FFh. See

Core::X86::Cpuid::CachePropEcx0[CacheNumSets].

CPUID_Fn8000001D_ECX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEcx3)

Read	nly Recei	:: 0000 XXXXh	
	Read-only. Reset: 0000_XXXXh.		
	Core::X86::Cpuid::CachePropEcx3 reports topology information for the L3. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x03		
-	Descripti		
31:0		mSets: cache number of sets. Read-only. Reset: 0000_XXXXh. See	
	Core::X8	6::Cpuid::CachePropEcx0[CacheNumSets].	
	ValidValu	ies:	
	Value	Description	
	0000_0	Reserved.	
	FFEh-		
	0 0000		
	000h		
	0000 0	4096 L3 Cache Sets.	
	FFFh		
	0000_1	Reserved.	
	FFEh-		
	0000 1		
	000h		
	0000 1	8192 L3 Cache Sets.	
	FFFh		
	FFFF_F	Reserved.	
	FFFh-		
	0000 2		
	000h_2		

CPUID_Fn8000001D_ECX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEcx4)

Read-only. Reset: 0000 0000h.

Core::X86::Cpuid::CachePropEax3 reports done/null. See Core::X86::Cpuid::CachePropEax0.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x04

Bits Description

31:0 CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn8000001D_EDX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEdx0)

Read-only. Reset: 0000_000h.

Core::X86::Cpuid::CachePropEdx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x00

Bits	Description	
31:2	Reserved.	
1	CacheInclusive: cache inclusive. Read-only. Reset: Fixed,0. 0=Cache is not inclusive of lower cache levels.	
	1=Cache is inclusive of lower cache levels.	
0	WBINVD: Write-Back Invalidate/Invalidate. Read-only. Reset: Fixed, 0. 0=WBINVD/INVD invalidates all	
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD not ensured to invalidate all	
	lower level caches of non-originating cores sharing this cache.	

CPUID_Fn8000001D_EDX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEdx1)

Read-only. Reset: 0000 0000h.

Bits Description

31:2	Reserved.
1	CacheInclusive: cache inclusive. Read-only. Reset: Fixed,0. See
	Core::X86::Cpuid::CachePropEdx0[CacheInclusive].
	WBINVD: Write-Back Invalidate/Invalidate. Read-only. Reset: Fixed, 0. 0=WBINVD/INVD invalidates all
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD not guaranteed to invalidate
	all lower level caches of non-originating cores sharing this cache. See
	Core::X86::Cpuid::CachePropEdx0[WBINVD].

CPUID_Fn8000001D_EDX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEdx2)

Read-only. Reset: 0000 0002h.

Core::X86::Cpuid::CachePropEdx2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x02

Bits	Description	
31:2	Reserved.	
	CacheInclusive: cache inclusive. Read-only. Reset: Fixed, 1. See	
	Core::X86::Cpuid::CachePropEdx0[CacheInclusive].	
	WBINVD: Write-Back Invalidate/Invalidate. Read-only. Reset: Fixed, 0. 0=WBINVD/INVD invalidates all	
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD not guaranteed to invalidate	
	all lower level caches of non-originating cores sharing this cache.	

CPUID_Fn8000001D_EDX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEdx3)

Read-only. Reset: 0000_0001h.			
Core::X86::Cpuid::CachePropEdx3 reports reports topology information for the L3. See			
	X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x03			
Bits	Description		
31:2	Reserved.		
1	CacheInclusive: cache inclusive. Read-only. Reset: Fixed,0. See		
	Core::X86::Cpuid::CachePropEdx0[CacheInclusive].		
0	WBINVD: Write-Back Invalidate/Invalidate. Read-only. Reset: Fixed, 1. 0=WBINVD/INVD invalidates all		
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD not guaranteed to invalidate		
	all lower level caches of non-originating cores sharing this cache.		
all lower level caches of non-originating cores sharing this cache.			

CPUID_Fn8000001D_EDX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEdx4)

Read-only. Reset: 0000_0000h.			
Core::X86::Cpuid::CachePropEax3 reports done/null. See Core::X86::Cpuid::CachePropEax0.			
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x04			
Bits	Bits Description		
31:0	31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.		

CPUID_Fn8000001E_EAX [Extended APIC ID] (Core::X86::Cpuid::ExtApicId)

Read-only.

If Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions] == 0 then CPUID Fn8000001E_E[D,C,B,A]X are reserved. If (Core::X86::Msr::APIC_BAR[ApicEn] == 0) then Core::X86::Cpuid::ExtApicId[ExtendedApicId] is reserved. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_EAX

Bits Description

31:0 **ExtendedApicId**: **extended APIC ID**. Read-only. See 2.1.8.2.1.3 [ApicId Enumeration Requirements]. Reset: Core::X86::Msr::APIC_BAR[ApicEn] ? Fixed, {00_0000h , Core::X86::Apic::ApicId[ApicId]} : Fixed,0000_0000h.

CPUID_Fn8000001E_EBX [Core Identifiers] (Core::X86::Cpuid::CoreId)

Read-only. Reset: 0000_XXXXh.

See Core::X86::Cpuid::ExtApicId.

1000 0	See ColeNooepuluExtriptetu.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_EBX			
Bits	Description		
31:16	Reserved.		
15:8	ThreadsPerCore: threads per core. Read-only. Reset: XXh. The number of threads per core is		
	ThreadsPerCore+1.		
7:0	CoreId: core ID. Read-only. Reset: Fixed,XXh.		
	Description: For Family 17, Model 1, Revision 1 and later:		
	$CoreId = ({2'b0, DieId[1:0], LogicalComplexId[0], LogicalThreadId[2:0]} >> SMT).$		

CPUID_Fn8000001E_ECX [Node Identifiers] (Core::X86::Cpuid::NodeId)

Read-	Read-only. Reset: 0000_0XXXh.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_ECX		
Bits	Descript	ion	
31:11	Reserved	1.	
10:8 NodesPerProcessor: Node per processor. Read-only. Reset: XXXb.			
ValidValues:			
	Value	Description	
	0h	1 node per processor.	
	1h	2 nodes per processor.	
	2h	Reserved.	
	3h	4 nodes per processor.	
	7h-4h	Reserved.	
7:0	7:0 NodeId: Node ID. Read-only. Reset: Fixed,XXh.		

CPUID_Fn8000001F_EAX [AMD Secure Encryption EAX] (Core::X86::Cpuid::SecureEncryptionEax)

Read-only. Reset: 0000_000Fh.

_three[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_EAX		
Bits	Description	
31:4	Reserved.	
3	SevEs. Read-only. Reset: Fixed,1.	
2	VmPgFlush: VM Page Flush MSR is supported. Read-only. Reset: Fixed, 1. See	
	Core::X86::Msr::VMPAGE_FLUSH.	
1	SEV: Secure Encrypted Virtualization supported. Read-only. Reset: Fixed,1.	
0	SME: Secure Memory Encryption supported. Read-only. Reset: Fixed, 1.	

CPUID_Fn8000001F_EBX [AMD Secure Encryption EBX] (Core::X86::Cpuid::SecureEncryptionEbx)

Read-	Read-only. Reset: 0000_016Fh.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_EBX		
Bits	Description		
31:12	Reserved.		
11:6	MemEncryptPhysAddWidth. Read-only. Reset: 05h. Reduction of physical address space in bits when memory		
	encryption is enabled (0 indicates no reduction).		
	ValidValues:		
Value Description		Description	
	00h	Physical Address width is not reduced.	
01hPhysical Address width is reduced by one.02hPhysical Address width is reduced by two.03hPhysical Address width is reduced by three.		Physical Address width is reduced by one.	
		Physical Address width is reduced by two.	
		Physical Address width is reduced by three.	
	04h	Physical Address width is reduced by four.	
	05h	Physical Address width is reduced by five.	

3Fh-06h Reserved.

5:0 **CBit**. Read-only. Reset: 2Fh. Page table bit number used to enable memory encryption.

CPUID_Fn8000001F_ECX [AMD Secure Encryption ECX] (Core::X86::Cpuid::SecureEncryptionEcx)

Read-only. Reset: 0000 000Fh.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_ECX

Bits Description

31:0 **NumEncryptedGuests**. Read-only. Reset: 0000_000Fh. Number of encrypted guests supported simultaneously.

CPUID_Fn8000001F_EDX [Minimum ASID] (Core::X86::Cpuid::SecureEncryptionEdx)

Read-only. Reset: 0000_000Xh.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_EDX

Bits Description

31:0 **MinimumSEVASID**: **Minimum SEV enabled, SEV-ES disabled ASID**. Read-only. Reset: 0000_000Xh. Indicates the minimum ASID value that must be used for an SEV-enabled, SEV-ES-disabled guest.

2.1.10 MSR Registers

2.1.10.1 MSRs - MSR0000_xxxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSR0000_0010 [Time Stamp Counter] (Core::X86::Msr::TSC)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

The TSC uses a common reference for all sockets, cores and threads.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000010

 Bits
 Description

 63:0
 TSC: time stamp counter. Read-write, Volatile. Reset: 0000_0000_00000_0000h. The TSC increments at the P0 frequency. The TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).

MSR0000_001B [APIC Base Address] (Core::X86::Msr::APIC_BAR)

Reset: 0000 0000 FEE0 0X00h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000001B

Bits	Description	
63:48	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.	
47:12	ApicBar[47:12]: APIC base address register. Read-write. Reset: 0_000F_EE00h. Specifies the base address,	
	physical address [47:12], for the APICXX register set in xAPIC mode. See 2.1.8.2.1.2 [APIC Register Space].	
11	ApicEn: APIC enable. Read-write. Reset: 0. 0=Disable Local Apic. 1=Local APIC is enabled in xAPIC mode.	
	See 2.1.8.2.1.2 [APIC Register Space].	
10	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0.	
9	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0.	
8	BSC : boot strap core. Read-write, Volatile. Reset: X. 0=The core is not the boot core of the BSP. 1=The core is	
	the boot core of the BSP.	
7.0	Reserved Read-only Error-on-write-1 Reset: Fixed 00h	

7:0 Reserved. Read-only,Error-on-write-1. Reset: Fixed,00h.

MSR0000_002A [Cluster ID] (Core::X86::Msr::EBL_CR_POWERON)

Reset: 0000_0000_0000_0000h.

Writes to this register result in a GP fault with error code 0.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000002A

Bits Description

63:18 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000_0000_0000h.

17:16 **ClusterID**. Read,Error-on-write. Reset: 0h. The field does not affect hardware.

15:0 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.

MSR0000_008B [Patch Level] (Core::X86::Msr::PATCH_LEVEL)

Read,Error-on-write,Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]; MSR000008B

Bits Description

63:32 Reserved.

31:0 **PatchLevel**. Read,Error-on-write,Volatile. Reset: 0000_0000h. This returns an identification number for the microcode patch that has been loaded. If no patch has been loaded, this returns 0.

MSR0000_00E7 [Max Performance Frequency Clock Count] (Core::X86::Msr::MPERF)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR000000E7

Bits Description

63:0 **MPERF**: **maximum core clocks counter**. Read-write, Volatile. Reset: 0000_0000_0000_0000h. Incremented by hardware at the P0 frequency while the core is in C0. This register does not increment when the core is in the stop-grant state. In combination with Core::X86::Msr::APERF, this is used to determine the effective frequency of the core. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. This field uses software P-state numbering. See Core::X86::Msr::HWCR[EffFreqCntMwait], 2.1.2 [Effective Frequency]

MSR0000_00E8 [Actual Performance Frequency Clock Count] (Core::X86::Msr::APERF)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR000000E8

Bits Description 63:0 APERF: actual core clocks counter. Read-write, Volatile. Reset: 0000_0000_0000_0000h. This register increments in proportion to the actual number of core clocks cycles while the core is in C0. The register does not increment when the core is in the stop-grant state. See Core::X86::Msr::MPERF.

MSR0000_00FE [MTRR Capabilities] (Core::X86::Msr::MTRRcap)

Read,Error-on-write. Reset: 0000_0000_0000_0508h.		
_lthree[1	_lthree[1:0]_core[3:0]; MSR000000FE	
Bits	Description	
63:11	Reserved.	
10	MtrrCapWc: write-combining memory type. Read,Error-on-write. Reset: 1. 1=The write combining memory	
	type is supported.	
9	Reserved.	
8	MtrrCapFix: fixed range register. Read, Error-on-write. Reset: 1. 1=Fixed MTRRs are supported.	
7:0	MtrrCapVCnt: variable range registers count. Read, Error-on-write. Reset: 08h. Specifies the number of	
	variable MTRRs supported.	

MSR0000_0174 [SYSENTER CS] (Core::X86::Msr::SYSENTER_CS)

Read-write. Reset: 0000_0000_0000_0000h.			
_lthree[1	lthree[1:0] core[3:0] thread[1:0]; MSR00000174		
Bits	Description		
63:16	Reserved.		
15:0	SysEnterCS: SYSENTER target CS. Read-write. Reset: 0000h. Holds the called procedure code segment.		

MSR0000_0175 [SYSENTER ESP] (Core::X86::Msr::SYSENTER_ESP)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000175

- Bits Description
- 63:32 Reserved.

31:0 **SysEnterESP: SYSENTER target SP**. Read-write. Reset: 0000_0000h. Holds the called procedure stack pointer.

MSR0000_0176 [SYSENTER EIP] (Core::X86::Msr::SYSENTER_EIP)

Read-write. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000176 Bits Description

63:32 Reserved.

31:0 **SysEnterEIP**: **SYSENTER target IP**. Read-write. Reset: 0000_0000h. Holds the called procedure instruction pointer.

MSR0000_0179 [Global Machine Check Capabilities] (Core::X86::Msr::MCG_CAP)

Reset: 0000 0000 01XXh.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000179	
Bits	Bits Description	
63:9	Reserved.	
8	McgCtlP: MCG CTL register present. Read-only,Error-on-write. Reset: Fixed,1. 1=The machine check control	
	registers (MCi_CTL) are present. See 3 [Machine Check Architecture].	
7:0	Count. Read-only, Error-on-write, Volatile. Reset: XXh. Indicates the number of error reporting banks visible to	
	each core.	

MSR0000_017A [Global Machine Check Status] (Core::X86::Msr::MCG_STAT)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

See 3 [Machine Check Architecture].

_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000017A

_ L		
Bits	Description	
63:3	Reserved.	
2	MCIP: machine check in progress. Read-write, Volatile. Reset: 0. 1=A machine check is in progress. Machine	
	check progress.	
1	EIPV: error instruction pointer valid. Read-write, Volatile. Reset: 0. 1=The instruction pointer that was pushed	
	onto the stack by the machine check mechanism references the instruction that caused the machine check error.	
0	RIPV: restart instruction pointer valid. Read-write, Volatile. Reset: 0. 0=The interrupt was not precise and/or	
	the process (task) context may be corrupt; continued operation of this process may not be possible without	
	intervention, however system processing or other processes may be able to continue with appropriate software	
1	clean up. 1=Program execution can be reliably restarted at the EIP address on the stack.	

MSR0000_017B [Global Machine Check Exception Reporting Control] (Core::X86::Msr::MCG_CTL)

Read-write. Reset: 0000 0000 0000 0000h.

This register controls enablement of the individual error reporting banks; see 3 [Machine Check Architecture]. When a machine check register bank is not enabled in MCG_CTL, errors for that bank are not logged or reported, and actions enabled through the MCA are not taken; each MCi_CTL register identifies which errors are still corrected when MCG_CTL[i] is disabled.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000017B

Bits Description

63:23 Reserved.

22:0 MCnEn. Read-write. Reset: 00_0000h. 1=The MC0 machine check register bank is enabled.

MSR0000_01D9 [Debug Control] (Core::X86::Msr::DBG_CTL_MSR)

Reset: 0000_0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR000001D9		
Bits	ts Description		
63:7	Reserved.		
6	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0.		
5:2	PB: performance monitor pin control. Read-write. Reset: 0h. This field does not control any hardware.		
1	BTF . Read-write. Reset: 0. 1=Enable branch single step.		
0	LBR. Read-write. Reset: 0. 1=Enable last branch record.		

MSR0000_01DB [Last Branch From IP] (Core::X86::Msr::BR_FROM)

 Bits
 Description

 63:0
 LastPrenchEremIP. Read Error on write Valatile. Reset: 0000, 0000

63:0 **LastBranchFromIP**. Read,Error-on-write,Volatile. Reset: 0000_0000_0000h. Loaded with the segment offset of the branch instruction.

MSR0000_01DC [Last Branch To IP] (Core::X86::Msr::BR_TO)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSR000001DC		
Bit	Description	
63:0	LastBranchToIP. Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h. Holds the target RIP of the last	
	branch that occurred before an exception or interrupt.	

MSR0000_01DD [Last Exception From IP] (Core::X86::Msr::LastExcpFromIp)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSR000001DD

 Bits
 Description

 63:0
 LastIntFromIP. Read,Error-on-write,Volatile. Reset: 0000_0000_00000_0000h. Holds the source RIP of the last branch that occurred before the exception or interrupt.

MSR0000_01DE [Last Exception To IP] (Core::X86::Msr::LastExcpToIp)

Read,Error-on-write,Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]	_thread[1:0]; MSR000001DE
------------------------	---------------------------

Bit	Description	
63:	LastIntToIP. Read, Error-on-write, Volatile. Reset: 0000_0000_0000_0000h. Holds the target RIP	of the last
	branch that occurred before the exception or interrupt.	

MSR0000_020[0...E] [Variable-Size MTRRs Base] (Core::X86::Msr::MtrrVarBase)

Reset: 0000_XXXX_XXXX_X00Xh.

Each MTRR (Core::X86::Msr::MtrrVarBase, Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7, or Core::X86::Msr::MTRRdefType) specifies a physical address range and a corresponding memory type (MemType) associated with that range. Setting the memory type to an unsupported value results in a #GP.

The variable-size MTRRs come in pairs of base and mask registers (MSR0000_0200 and MSR0000_0201 are the first pair, etc.). Variables MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeEn]. A core access--with address CPUAddr--is determined to be within the address range of a variable-size MTRR if the following equation is true:

CPUAddr[47:12] & PhyMask[47:12] == PhyBase[47:12] & PhyMask[47:12].

For example, if the variable MTRR spans 256 KB and starts at the 1 MB address the PhyBase would be set to 0_0010_0000h and the PhyMask to F_FFFC_0000h (with zeros filling in for bits[11:0]). This results in a range from 0_0010_0000h to 0_0013_FFFFh.

Bits	Description		
63:48	Reserved	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.	
47:12	PhyBase	PhyBase: base address. Read-write. Reset: X XXXX XXXXh.	
11:3	Reserved	Reserved. Read-only,Error-on-write-1. Reset: Fixed,000h.	
2:0	MemType: memory type. Read-write. Reset: XXXb. Address range from 00000h to 0FFFFh.		
	ValidValues:		
	Value Description		
0h UC or uncacheable.		UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	

MSR0000_020[1...F] [Variable-Size MTRRs Mask] (Core::X86::Msr::MtrrVarMask)

Reset:	Reset: 0000 XXXX XXXX XX00h.	
_lthree[1	1:0]_core[3:0]_n[7:0]; MSR0000_020[F,D,B,9,7,5,3,1]	
Bits	Bits Description	
63:48	63:48 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.	
47:12	47:12 PhyMask: address mask. Read-write. Reset: X_XXXX_XXXh.	
11	Valid: valid. Read-write. Reset: X. 1=The variable-size MTRR pair is enabled.	

10:0 Reserved. Read-only,Error-on-write-1. Reset: Fixed,000h.

MSR0000_0250 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_64K)

		Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through		
	Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed			
MTRF	MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that			
		estination based on the access type. Writing reserved MemType values causes an error-on-write.		
_lthree[1		_nSIZE64K; MSR00000250		
Bits	Descript	ion		
63:61	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60		_64K_70000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are	marked as destined for DRAM.		
	AccessTy	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59		n_64K_70000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Rese			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
58:56	58:56 MemType 64K 70000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
6h WB or write back.		WB or write back.		
	Reserved.			

55.52	D 1	Deside whe Proventies at Deside the Prince d Ob	
	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
52	RdDram_64K_60000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
51		_64K_60000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	<u> </u>	the range are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50:48	• •	e_64K_60000: memory type. Read-write. Reset: XXXb.	
	ValidValı		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
17.15			
47:45		Read-only,Error-on-write-1. Reset: Fixed,0h.	
44		_64K_50000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	<u> </u>	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
43	WrDram	_64K_50000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86	6::Msr::SYS_CFG[MtrrFixDramModEn]?X:Fixed,0.	
42:40	MemTyp	e 64K 50000: memory type. Read-write. Reset: XXXb.	
	ValidValı		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	311-211 4h		
		WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
39:37	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36		_64K_40000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35	WrDram	_64K_40000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.	
34:32		e 64K 40000: memory type. Read-write. Reset: XXXb.	
	Valid Valu		

Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 81:29 Reserved. 82:29 Reserved. 7h Reserved. 83:29 Reserved. 7h Reserved. 84:0000: read DRAM. 0=Reat accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Valid Values: Valid Values: Valid Values: Valid Values: 1h WC or write combining. 3h-2h Reserved. 1h<	
In WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write protect. 6h WB or write back. 7h Reserved. 31:29 Reserved. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: Value Value Description 0h UC or write combining. 3h-2h Reserved. 4h WT or wr	
3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 31:29 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 21 Reserved. 22 Reserved. 23<	
4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 31:29 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: ValidValues: Valid Description 0 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write protect. 6h WB or write back. 7h Reserved. 21 Reserved. 22 Reserved. 23:21 Reserved. 23:21 Reserved. 24 RuD	
Sh WP or write protect. 6h WB or write back. 7h Reserved. 31:29 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: memory to PWrite accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. 23:21 Reserved. 23:21 Reserved. 23:21 Reserved. 24 MDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO.	
6h WB or write back. 7h Reserved. 31:29 Reserved. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. 28 AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? K : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as destined for DRAM. 26:20 MemType_64K_30000: memory type. Read-write: Reset: XXXb. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. 27 Value Description 0h UC or uncacheable. 11 11h WC or write combining. 3h-2h 3h-2h Reserved. 4h 4h WT or write through. 5h 5h WP or write protect. 6h 6h WB or write back. 7h 7h Reserved. 7h </td	
7h Reserved. 31:29 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: Value Value Description 0h UC or uncacheable. 11 WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 21 Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MttrrFixDramModEn] ? Read-w	
31:29 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 28 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 4A AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: range are marked as destined for DRAM. 23:21 Reserved. 4h WT or write through. 5h WP or write back. 7h Reserved. 23:21 Reserved. AccessType: Core::X86::Msr::SYS_	
 RdDram_64K_30000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. Walue Description Que U Description Que U Description Que U Cor uncacheable. Que Varue Description <	
range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. AccessType: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 21 Reserved. 23 Reserved. 24 WrDram_64K_20000: write DRAM. 0=Wri	
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: Value Description 0h UC or uncacheable. 1h WC or write through. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. 24 McDram_64K_20000: read DRAM. 25	
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
 27 WrDram_64K_30000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 24 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? N : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. ValidValues: ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
26:24 MemType_64K_30000: memory type. Read-write. Reset: XXXb. Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. 24 RdDram_64K_20000: read DRAM.	
0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
1h WC or write combining. 3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 20 RccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
3h-2h Reserved. 4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 20 RccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
4h WT or write through. 5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. 20 RccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
5h WP or write protect. 6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
6h WB or write back. 7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
7h Reserved. 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
 23:21 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 20 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. 	
 RdDram_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. 	
 range are marked as destined for DRAM. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. 	
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
 Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. 	
19 WrDram_64K_20000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.	
the range are marked as destined for DRAM.	
•	
Accessive: Core.: A80.: WISF.: 5 Y 5 CFG[MITFIXDramModen] ? Read-write : Read, Error-on-write-1. Reset.	
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]?X:Fixed,0.	
18:16 MemType 64K 20000: memory type. Read-write. Reset: XXXb.	
ValidValues:	
Value Description	
0h UC or uncacheable.	
1h WC or write combining.	
3h-2h Reserved.	
4h WT or write through.	
5h WP or write protect.	
6h WB or write back.	
7h Reserved.	
15:13 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
12 RdDram_64K_10000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
range are marked as destined for DRAM.	

	AccessTy	ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
11		n_64K_10000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		66::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8		be 64K 10000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
7:5	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
4	RdDram 64K 00000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
	range are marked as destined for DRAM. Address range from 00000h to 0FFFFh.			
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
3	WrDram_64K_00000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM. Address range from 00000h to 0FFFFh.			
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
2:0	MemType_64K_00000: memory type. Read-write. Reset: XXXb. Address range from 00000h to 0FFFFh.			
	ValidVal			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		

MSR0000_0258 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_16K_0)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

_lthree[1	_three[1:0]_core[3:0]_nSIZE16K0; MSR00000258		
Bits	its Description		
63:61	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.		
60	RdDram_16K_9C000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to		
	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		

59		n_16K_9C000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to e are marked as destined for DRAM.			
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
58:56	MemType_16K_9C000: memory type. Read-write. Reset: XXXb.				
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
55:53	Reserved	I. Read-only,Error-on-write-1. Reset: Fixed,0h.			
52		n_16K_98000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to th			
		e marked as destined for DRAM.			
	AccessT	ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X8	36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
51		n_16K_98000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
	-	e are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
50:48	MemType_16K_98000: memory type. Read-write. Reset: XXXb.				
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
47:45	Reserved	d. Read-only,Error-on-write-1. Reset: Fixed,0h.			
44	RdDram_16K_94000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the				
	range are marked as destined for DRAM.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
43	WrDram_16K_94000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
	the range are marked as destined for DRAM.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
42:40					
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			

	_	
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
36		16K 90000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
	range are marked as destined for DRAM.	
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35	WrDram	16K_90000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
34:32	МетТур	e_16K_90000: memory type. Read-write. Reset: XXXb.
	ValidVal	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
31:29	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
28		16K 8C000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
27	WrDram	16K_8C000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
26:24	МетТур	e_16K_8C000: memory type. Read-write. Reset: XXXb.
	ValidVal	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23:21	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
20		16K_88000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		_16K_88000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write : Read,Error-on-write-1. Reset:

		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
8:16					
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
5:13	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.			
12		16K_84000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to th			
12		marked as destined for DRAM.			
		/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
11		16K 84000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
		are marked as destined for DRAM.			
	AccessTy	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.			
0:8		be 16K 84000: memory type. Read-write. Reset: XXXb.			
	ValidVal				
	Value	Description			
	Oh	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
	L				
7:5		. Read-only,Error-on-write-1. Reset: Fixed,0h.			
4	RdDram_16K_80000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the				
	range are marked as destined for DRAM. Address range from 80000h to 83FFFh.				
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
3	WrDram_16K_80000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
	the range are marked as destined for DRAM. Address range from 80000h to 83FFFh.				
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
2 0					
2:0	MemType_16K_80000: memory type. Read-write. Reset: XXXb. Address range from 80000h to 83FFFh.				
	ValidValues:				
	Value	Description			
	Oh	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
l	5h	WP or write protect.			

6h	WB or write back.	ſ
7h	Reserved.	

MSR0000_0259 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_16K_1)

		$9 [FIXed-Size M KKS] (Core::X60::MSF::MIFFIX_IOK_I)$				
		Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through				
		:::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed				
		e the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that				
		estination based on the access type. Writing reserved MemType values causes an error-on-write.				
		_nSIZE16K1; MSR00000259				
	Descript					
		I. Read-only,Error-on-write-1. Reset: Fixed,0h.				
60		<u>16K_BC000</u> : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to				
	the range are marked as destined for DRAM.					
		AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
		36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
59		n_16K_BC000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
	the range are marked as destined for DRAM.					
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
		36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
58:56	•	pe_16K_BC000: memory type. Read-write. Reset: XXXb.				
	ValidVa					
	Value	Description				
	0h	UC or uncacheable.				
	1h	WC or write combining.				
	3h-2h	Reserved.				
	4h	WT or write through.				
	5h	WP or write protect.				
	6h	WB or write back.				
	7h	Reserved.				
55:53	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.				
52	RdDram 16K B8000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to					
	the range are marked as destined for DRAM.					
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:					
	Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.					
51	WrDram 16K B8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to					
01	the range are marked as destined for DRAM.					
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:					
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.					
50:48	MemType 16K B8000: memory type. Read-write. Reset: XXXb.					
	ValidValues:					
	Value	Description				
	Oh	UC or uncacheable.				
	1h	WC or write combining.				
	3h-2h	Reserved.				
	4h	WT or write through.				
	5h	WP or write protect.				
	6h	WB or write back.				
	7h	Reserved.				
		NG561 VEU.				
47:45		l. Read-only,Error-on-write-1. Reset: Fixed,0h.				

	the range	are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
43		16K B4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.		
42.40		e 16K B4000: memory type. Read-write. Reset: XXXb.		
12.10	ValidValu			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
		Reserved.		
	3h-2h			
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
39:37	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36	RdDram_16K_B0000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35	WrDram_16K_B0000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
34:32	MemType_16K_B0000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
		WB or write back.		
	6h			
	7h	Reserved.		
		. Read-only,Error-on-write-1. Reset: Fixed,0h.		
28	the range	_16K_AC000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to are marked as destined for DRAM.		
	2	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27		_16K_AC000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
26.24		e 16K AC000: memory type. Read-write. Reset: XXXb.		
20.24	ValidValu			
	Value	Description		
1	0h	UC or uncacheable.		

I I	11	
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23:21	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
20	RdDram	_16K_A8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		_16K_A8000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
18:16		e_16K_A8000: memory type. Read-write. Reset: XXXb.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
15:13	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
12	RdDram	_16K_A4000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
	the range	are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11		16K_A4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	•	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
10.0		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
10:8	V I	e_16K_A4000: memory type. Read-write. Reset: XXXb.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5		. Read-only,Error-on-write-1. Reset: Fixed,0h.
4		_16K_A0000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
		are marked as destined for DRAM. Address range from A0000h to A3FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:

	Core…X8	36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3			
3		n_16K_A0000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		e are marked as destined for DRAM. Address range from A0000h to A3FFFh.	
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
2:0	MemTy	be_16K_A0000: memory type. Read-write. Reset: XXXb. Address range from A0000h to A3FFFh.	
ValidValues:		ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	

MSR0000_0268 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_0)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

- ·	J U	_nSIZE4K0; MSR00000268
Bits	Descripti	
63:61	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
60		
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59	WrDram_4K_C7000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
58:56	MemTyp	e_4K_C7000: memory type. Read-write. Reset: XXXb.
	ValidVal	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
55:53	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.
52	RdDram	4K_C6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
51	WrDram	4K_C6000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.

		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50·48		e 4K C6000: memory type. Read-write. Reset: XXXb.	
	ValidVal		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:45	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
44		_4K_C5000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
43		_4K_C5000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	0	are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:40		e_4K_C5000: memory type. Read-write. Reset: XXXb.	
	ValidVal		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
39:37	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
36	RdDram_4K_C4000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
36			
36	range are	marked as destined for DRAM.	
36	range are AccessTy	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	range are AccessTy Core::X8	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
36 35	range are AccessTy Core::X8 WrDram	marked as destined for DRAM. 'pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. _4K_C4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	range are AccessTy Core::X8 WrDram the range	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C4000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.	
	range are AccessTy Core::X8 WrDram the range AccessTy	marked as destined for DRAM. 'pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. _4K_C4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8	<pre>marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. a_4K_C4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. pe_4K_C4000: memory type. Read-write. Reset: XXXb.</pre>	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp	<pre>marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. a_4K_C4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. pe_4K_C4000: memory type. Read-write. Reset: XXXb.</pre>	
	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp ValidVal	<pre>marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. a_4K_C4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. be_4K_C4000: memory type. Read-write. Reset: XXXb. ues:</pre>	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp ValidVal Value	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C4000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. rpe=4K_C4000: memory type. Read-write. Reset: XXXb. ues: Description	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp ValidVal Value Oh	marked as destined for DRAM. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. a 4K_C4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. rpe_4K_C4000: memory type. Read-write. Reset: XXXb. ues: Description UC or uncacheable.	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp ValidVal Value Oh 1h	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C4000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. be_4K_C4000: memory type . Read-write. Reset: XXXb. ues: Description UC or uncacheable. WC or write combining. Reserved.	
35	range are AccessTy Core::X8 WrDram the range AccessTy Core::X8 MemTyp ValidVal Value Oh 1h 3h-2h	marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. rpe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. re_4K_C4000: memory type. Read-write. Reset: XXXb. ues: Description UC or uncacheable. WC or write combining.	

	7h	Reserved.		
31:29	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.		
28	RdDram_4K_C3000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
	range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
27		_4K_C3000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
26.24		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
26:24	MemType_4K_C3000: memory type. Read-write. Reset: XXXb. ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	311-211 4h	WT or write through.		
	5h	WP or write protect.		
	5h 6h	WB or write back.		
	7h	Reserved.		
23.21				
20	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. RdDram 4K C2000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
20	range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
19	WrDram	4K_C2000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
18:16	MemType_4K_C2000: memory type. Read-write. Reset: XXXb.			
	ValidValu			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h 5h	WT or write through.		
	5h 6h	WP or write protect. WB or write back.		
	7h	Reserved.		
15.12				
15:13 12		Read-only,Error-on-write-1. Reset: Fixed,0h.		
12	RdDram_4K_C1000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
11		4K C1000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8	MemTyp	e_4K_C1000: memory type. Read-write. Reset: XXXb.		

	ValidVal	ues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
4	RdDram_4K_C0000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
	range are marked as destined for DRAM. Address range from C0000h to C0FFFh.			
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
3	WrDram_4K_C0000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
5	the range are marked as destined for DRAM. Address range from C0000h to C0FFFh.			
	Core::X86::Msr::SYS CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
2:0	MemType_4K_C0000: memory type. Read-write. Reset: XXXb. Address range from C0000h to C0FFFh.			
	ValidVal			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		

MSR0000_0269 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_1)

See Co	re::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through	
Core::	[86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the approp	oriate Fixed
MTRF	s override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, it	that
determ	ne the destination based on the access type. Writing reserved MemType values causes an error-on-wri	te.
_lthree[1	0]_core[3:0]_nSIZE4K1; MSR00000269	
Bits	Description	
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
60	RdDram_4K_CF000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read acc	cesses to the
	range are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1	. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59	WrDram_4K_CF000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write a	iccesses to
	the range are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1	. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
58:56	MemType_4K_CF000: memory type. Read-write. Reset: XXXb.	
	ValidValues:	
	Value Description	

ı r	1	
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
55:53	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
52		4K CE000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
1 1		marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
51	WrDram	_4K_CE000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
50:48	МетТур	e_4K_CE000: memory type. Read-write. Reset: XXXb.
	ValidValu	ies:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
47:45	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
44		4K CD000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
43	WrDram	_4K_CD000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
42:40		e_4K_CD000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
36		_4K_CC000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
	<u> </u>	marked as destined for DRAM.
[AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:

	Coro	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35			
33		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
31.32	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. MemType_4K_CC000: memory type. Read-write. Reset: XXXb.		
54.52	ValidValues:		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
21.20			
		Read-only,Error-on-write-1. Reset: Fixed,0h.	
28		_4K_CB000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
	U	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.	
27		4K CB000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
21		are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.		
26:24		e 4K CB000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		
	vanu van		
	Value		
	r	Description UC or uncacheable.	
	Value	Description UC or uncacheable.	
	Value Oh	Description	
	Value Oh 1h	Description UC or uncacheable. WC or write combining. Reserved.	
	Value 0h 1h 3h-2h	Description UC or uncacheable. WC or write combining. Reserved. WT or write through.	
	Value 0h 1h 3h-2h 4h	Description UC or uncacheable. WC or write combining. Reserved.	
	Value 0h 1h 3h-2h 4h 5h	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect.	
23:21	Value 0h 1h 3h-2h 4h 5h 6h 7h	DescriptionUC or uncacheable.WC or write combining.Reserved.WT or write through.WP or write protect.WB or write back.Reserved.	
23:21	Value 0h 1h 3h-2h 4h 5h 6h 7h Reserved.	DescriptionUC or uncacheable.WC or write combining.Reserved.WT or write through.WP or write protect.WB or write back.	
	Value 0h 1h 3h-2h 4h 5h 6h 7h Reserved. RdDram	DescriptionUC or uncacheable.WC or write combining.Reserved.WT or write through.WP or write protect.WB or write back.Reserved.Reserved.Read-only,Error-on-write-1. Reset: Fixed,0h.	
	Value0h1h3h-2h4h5h6h7hReservedRdDramrange are	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Reserved. Reserved. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
	Value0h1h3h-2h4h5h6h7hReservedRdDramrange areAccessTy	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Reserved. WB or write back. Reserved. At CA000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_CA000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are AccessTy Core::X80 WrDram the range	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are AccessTy Core::X86 WrDram the range AccessTy	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram the range AccessTy Core::X80	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram the range AccessTy Core::X80 MemTyp	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are AccessTy Core::X86 WrDram the range AccessTy Core::X86 MemTyp ValidVali	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. _4K_CA000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_CA000: memory type. Read-write. Reset: XXXb. tes:	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram the range AccessTy Core::X80 WrDram the range AccessTy Core::X80 ValidValue	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_CA000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e (AK_CA000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_CA000: memory type . Read-write. Reset: XXXb. tes: Description	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram the range AccessTy Core::X80 WrDram the range AccessTy Core::X80 MemTyp ValidValue Oh	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_CA000: memory type. Read-write. Reset: XXXb. tes: Description UC or uncacheable.	
20	Value Oh 1h 3h-2h 4h 5h 6h 7h Reserved RdDram range are AccessTy Core::X80 WrDram the range AccessTy Core::X80 WrDram the range AccessTy Core::X80 ValidValue	Description UC or uncacheable. WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_CA000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_CA000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e (AK_CA000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_CA000: memory type . Read-write. Reset: XXXb. tes: Description	

the range are marked as MMIO. 1=Read accesses to the fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. o the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. t: XXXb.			
fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. to the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
IodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. io the range are marked as MMIO. 1=Write accesses to IodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
IodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. io the range are marked as MMIO. 1=Write accesses to IodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. to the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0. to the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
Fixed,0. o the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
Fixed,0. o the range are marked as MMIO. 1=Write accesses to fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
o the range are marked as MMIO. 1=Write accesses to IodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
fodEn] ? Read-write : Read,Error-on-write-1. Reset: Fixed,0.			
Fixed,0.			
Fixed,0.			
t: XXXb.			
Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. RdDram 4K C8000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
range are marked as destined for DRAM. Address range from C8000 to C8FFF.			
Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
to the range are marked as MMIO. 1=Write accesses to			
the range are marked as destined for DRAM. Address range from C8000 to C8FFF.			
Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.			
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
MemType_4K_C8000: memory type. Read-write. Reset: XXXb. Address range from C8000 to C8FFF.			
ValidValues:			

MSR0000_026A [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_2)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

lthroo[1	·01_core[3:0]	nSIZE4K2; MSR0000026A	
Bits	Descripti		
63:61		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
60		4K_D7000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59		_4K_D7000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
58:56		e_4K_D7000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
55:53	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
52		_4K_D6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
51	WrDram_4K_D6000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	-	are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
50.19		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
30.48	MemType_4K_D6000: memory type. Read-write. Reset: XXXb. ValidValues:		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
47:45		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
44			
44	RdDram_4K_D5000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
43		4K D5000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
42:40	MemTyp	e_4K_D5000: memory type. Read-write. Reset: XXXb.	

	ValidVal Value			
		Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
9:37	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36		_4K_D4000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.		
		/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35		<u>1</u>_4K_D4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
	Core::X8	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: /6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
4:32	MemTyp	be_4K_D4000: memory type. Read-write. Reset: XXXb.		
	ValidVal	ues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
1.20	L .	Read-only,Error-on-write-1. Reset: Fixed,0h.		
28	RdDram_4K_D3000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
27	WrDram_4K_D3000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.			
6.0.1	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
0:24	MemType_4K_D3000: memory type. Read-write. Reset: XXXb.			
	ValidVal			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		

	range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19		4K D2000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	0	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0.		
18:16		e 4K D2000: memory type. Read-write. Reset: XXXb.	
	ValidValı		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
15.13		Read-only,Error-on-write-1. Reset: Fixed,0h.	
13.13		_4K_D1000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
12		marked as destined for DRAM.	
	•	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
11		_4K_D1000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8		e 4K D1000: memory type. Read-write. Reset: XXXb.	
	ValidValı		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:5		Read-only,Error-on-write-1. Reset: Fixed,0h.	
4		4K_D0000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM. Address range from D0000h to D0FFFh.	
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3	WrDram	4K D0000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM. Address range from D0000h to D0FFFh.	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:0		e_4K_D0000: memory type. Read-write. Reset: XXXb. Address range from D0000h to D0FFFh.	
	ValidValı	les:	

Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

MSR0000_026B [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_3)

110100	<u> </u>	$\mathbf{D} \left[\mathbf{F} \mathbf{X} \mathbf{C} \mathbf{U} \mathbf{C} \mathbf{U} \mathbf{C} \mathbf{U} \mathbf{C} \mathbf{U} \mathbf{C} \mathbf{U} \mathbf{U} \mathbf{U} \mathbf{U} \mathbf{U} \mathbf{U} \mathbf{U} U$		
See Co	ore::X86::	Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through		
		::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed		
		e the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that		
		estination based on the access type. Writing reserved MemType values causes an error-on-write.		
_lthree[1	1:0]_core[3:0]	_nSIZE4K3; MSR0000026B		
Bits	Descript	ion		
63:61	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram	RdDram_4K_DF000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
	AccessTy	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDran	WrDram 4K DF000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	the range are marked as destined for DRAM.		
	AccessTy	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56	MemTy	MemType 4K DF000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
55.53	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
52		RdDram 4K DE000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
52	range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
51	WrDram 4K DE000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
01	the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
50:48		MemType 4K DE000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
		· · · · · · · · · · · · · · · · · · ·		
	3h-2h	Reserved.		

[4h	WT or write through.		
	5h	WP or write protect.		
	-	WB or write back.		
	6h			
	7h	Reserved.		
		. Read-only,Error-on-write-1. Reset: Fixed,0h.		
44	RdDram_4K_DD000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43	WrDran	_4K_DD000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
12 10				
42:40	MemType_4K_DD000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
39:37		. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36	range are AccessTy	_ 4K_DC000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35	WrDran	_4K_DC000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
31.37	MemType_4K_DC000: memory type. Read-write. Reset: XXXb.			
2.J2	ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
31:29	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.			
28	RdDram_4K_DB000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27	WrDram	_4K_DB000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		

		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
26.24		e 4K DB000: memory type. Read-write. Reset: XXXb.	
20.21	ValidValues:		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
23:21		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20		_4K_DA000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
10		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19		_4K_DA000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.	
-		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
18.16		e 4K DA000: memory type. Read-write. Reset: XXXb.	
10.10	ValidVal		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved	
15.13		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
		4K D9000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	2	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
11	WrDram	4K_D9000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8	MemType_4K_D9000: memory type. Read-write. Reset: XXXb.		
	ValidVal		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	

	7h	Reserved.
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
4	RdDram	_4K_D8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM. Address range from D8000h to D8FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		_4K_D8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM. Address range from D8000h to D8FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:0	МетТур	e_4K_D8000: memory type. Read-write. Reset: XXXb. Address range from D8000h to D8FFFh.
	ValidValu	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
6h WB or write back.		WB or write back.
	7h	Reserved.

MSR0000_026C [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_4)

		- [) () (
		Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through
		::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed
		e the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that
		estination based on the access type. Writing reserved MemType values causes an error-on-write.
	<u> </u>	_nSIZE4K4; MSR0000026C
	Descript	
		l. Read-only,Error-on-write-1. Reset: Fixed,0h.
60		_4K_E7000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
	•	e marked as destined for DRAM.
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
59		n_4K_E7000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	•	e are marked as destined for DRAM.
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Rese		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
58:56	MemTyp	be_4K_E7000: memory type. Read-write. Reset: XXXb.
	ValidVal	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
55:53	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.
_		

52		_4K_E6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
51		WrDram 4K E6000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50:48	MemType_4K_E6000: memory type. Read-write. Reset: XXXb.		
	ValidValu	ies:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
47:45	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.	
44		4K E5000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43	WrDram	4K_E5000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
42:40	MemType_4K_E5000: memory type. Read-write. Reset: XXXb.		
	ValidValu		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
39:37	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.	
36		_4K_E4000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
35		_4K_E4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range are marked as destined for DRAM.		
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Erro Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
34:32	MemType_4K_E4000: memory type. Read-write. Reset: XXXb. ValidValues:		
	Value	Description	

. r				
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
31:29	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.		
28		4K_E3000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
	<u> </u>	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27		4K E3000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.		
26:24		e 4K E3000: memory type. Read-write. Reset: XXXb.		
	ValidValı			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
23:21		Read-only,Error-on-write-1. Reset: Fixed,0h.		
23.21		4K E2000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
1 1	range are	marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
19		4K E2000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
the range are marked as destined for DRA				
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.		
18:16	МетТур	e 4K E2000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
15:13		Read-only,Error-on-write-1. Reset: Fixed,0h.		
13.13		4K E1000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		_4K_E1000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
1	AUC5519	pe. corexooivisis i 5_cro[ivium ixDrannviouEn] ? Keau-white . Keau,Enor-on-white-1. Keset.		

	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn]?X:Fixed,0.
11		4K E1000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
10:8	• •	e_4K_E1000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
4	RdDram	_4K_E0000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM. Address range from E0000h to E0FFFh.
		5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		_4K_E0000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM. Address range from E0000h to E0FFFh.
		5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
2.0		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
2:0	2:0 MemType_4K_E0000: memory type. Read-write. Reset: XXXb. Address range from E0000h to E0FFH	
	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_026D [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_5)

 See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through

 Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed

 MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that

 determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

 _three[1:0]_core[3:0]_nSIZE4K5; MSR0000026D

 Bits
 Description

 63:61
 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.

 60
 RdDram_4K_EF000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

 AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

59 WrDram_4K_EF000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to

	the range	e are marked as destined for DRAM.			
		AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
58:56	MemType_4K_EF000: memory type. Read-write. Reset: XXXb.				
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
55:53	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.			
52		4K EE000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
52		marked as destined for DRAM.			
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X8	66::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
51		a 4K EE000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
		are marked as destined for DRAM.			
	0	ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.			
50:48					
	ValidValues:				
	Value	Description			
	Oh	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
17.15		I. Read-only,Error-on-write-1. Reset: Fixed,0h.			
+7.43 44					
44	RdDram_4K_ED000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
43	WrDram 4K ED000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
чJ		the range are marked as destined for DRAM. 0=write accesses to the range are marked as MMIO. 1=w			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
42:40	MemType 4K ED000: memory type. Read-write. Reset: XXXb.				
12.40	ValidValues:				
	Value	Description			
	Oh	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			

	6h	WB or write back.	
	6h		
20.25	7h	Reserved.	
		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
36		_4K_EC000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35		_4K_EC000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
34.32		e_4K_EC000: memory type. Read-write. Reset: XXXb.	
51.52	ValidValues:		
	Value	Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
		WB or write back.	
	6h		
	7h	Reserved.	
		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
28	RdDram_4K_EB000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.		
	Core::X8	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
27	27 WrDram_4K_EB000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=W the range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
26:24	MemTyp	e_4K_EB000: memory type. Read-write. Reset: XXXb.	
	ValidVal	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h		
22.21		Reserved.	
23:21		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20		_4K_EA000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
10			
19		1_4K_EA000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
	Core.: A8	$0visis$ i s _Cru[iviuirixDialiliviuuEli] (A . rixeu, 0 .	

-	ValidVal	ues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
5:13	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
12		4K_E9000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
	•	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.		
11	WrDran	4K E9000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
0:8	MemTy	be_4K_E9000: memory type. Read-write. Reset: XXXb.		
	ValidVal	ues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
4		4K E8000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
•	range are marked as destined for DRAM. Address range from E8000h to E8FFFh.			
	U	6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
		/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.		
3	WrDran	4K E8000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM. Address range from E8000h to E8FFFh.		
	Core::X8	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
		/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
2:0	MemType_4K_E8000: memory type. Read-write. Reset: XXXb. Address range from E8000h to E8FFFh.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		

7h Reserved.

MSR0000 026E [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix 4K 6)

		E [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_6) Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through		
		::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed		
		e the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that		
		estination based on the access type. Writing reserved MemType values causes an error-on-write.		
		_nSIZE4K6; MSR0000026E		
	Descript			
		l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram_4K_F7000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
00		marked as destined for DRAM.		
	<u> </u>	ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	-	66::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDram 4K F7000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
0,5	the range are marked as destined for DRAM.			
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56		be_4K_F7000: memory type. Read-write. Reset: XXXb.		
	ValidVal			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
55.52	L			
	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.			
52	RdDram_4K_F6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
	range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
51	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
51	WrDram_4K_F6000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.			
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.		
50.48		be 4K F6000 : memory type . Read-write. Reset: XXXb.		
20.10	ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
47:45		l. Read-only,Error-on-write-1. Reset: Fixed,0h.		

		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43		n_4K_F5000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
	U			
		ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
2:40		pe 4K F5000: memory type. Read-write. Reset: XXXb.		
2.10	ValidValues:			
	Value	Description		
	Oh	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
9:37		l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36	RdDran	n_4K_F4000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	•	e marked as destined for DRAM.		
	AccessT	ype: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35	WrDram_4K_F4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
	the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
4:32	MemType_4K_F4000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
1:29				
28				
20	RdDram_4K_F3000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
	-			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
27		a 4K F3000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
21		e are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		36::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
6.21		pe 4K F3000: memory type. Read-write. Reset: XXXb.		
0.24	ValidVal			
	Value	Description		
	II value			
	Oh	LIC or upgesheadle		
	0h 1h	UC or uncacheable. WC or write combining.		

	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
23:21	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20		4K_F2000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19	WrDram	_4K_F2000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
18:16	МетТур	e_4K_F2000: memory type. Read-write. Reset: XXXb.	
	ValidValu	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
15:13		Read-only,Error-on-write-1. Reset: Fixed,0h.	
		•	
12	range are	_4K_F1000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
11			
11		are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
10:8	MemType_4K_F1000: memory type. Read-write. Reset: XXXb.		
	ValidValu	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:5		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
4		4K_F0000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
-	range are	marked as destined for DRAM. Address range from F0000h to F0FFF.	
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
	AccessType: Core::X86::Msr::SYS_CFG[MttrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	

6h

7h

WrDram 4K F0000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to 3 the range are marked as destined for DRAM. Address range from F0000h to F0FFF. Core::X86::Msr::SYS CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0. MemType 4K F0000: memory type. Read-write. Reset: XXXb. Address range from F0000h to F0FFFh. 2:0 ValidValues: Value Description 0h UC or uncacheable. 1h WC or write combining. 3h-2h Reserved. WT or write through. 4h WP or write protect. 5h

MSR0000 026F [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix 4K 7)

WB or write back.

Reserved.

a a				
See Co	ore::X86::	Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through		
Core::	X86::Msr	::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed		
		e the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that		
detern	nine the de	estination based on the access type. Writing reserved MemType values causes an error-on-write.		
_lthree[1	1:0]_core[3:0]	_nSIZE4K7; MSR0000026F		
Bits	Descript	ion		
63:61	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60		_4K_FF000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are	marked as destined for DRAM.		
	AccessTy	/pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59		1_4K_FF000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56	MemType_4K_FF000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
55:53	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,0h.		
	DJD	_4K_FE000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
52	KaDran	range are marked as destined for DRAM.		
	range are	marked as destined for DRAM.		
	range are AccessTy			
	range are AccessTy Core::X8	marked as destined for DRAM. /pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
52	range are AccessTy Core::X8 WrDran	marked as destined for DRAM. /pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: /6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		

[Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
50:48	MemType_4K_FE000: memory type. Read-write. Reset: XXXb.			
	ValidValu	 1es:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
47:45	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.		
44	RdDram	_4K_FD000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43		4K FD000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
-		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
42:40		e_4K_FD000: memory type. Read-write. Reset: XXXb.		
	ValidValu	les:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
39:37	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.		
36		4K_FC000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35	WrDram_4K_FC000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
	the range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
34:32	MemType_4K_FC000: memory type. Read-write. Reset: XXXb.			
		ValidValues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
1	7h	Reserved.		

	-		
31:29	9 Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
28	RdDram	4K FB000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27			
21	the range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
26:24		e 4K FB000: memory type. Read-write. Reset: XXXb.	
20.24	ValidVal		
	Value		
		Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
23:21	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20		4K FA000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
20		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19		4K_FA000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
17	the range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
18.16		e_4K_FA000: memory type. Read-write. Reset: XXXb.	
10.10	ValidVal		
	Value	Description	
		*	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
15:13	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
12		4K F9000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
11		4K F9000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
11		are marked as destined for DRAM.	
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MttrFixDramModEn] ? X : Fixed,0.	
10:8		e 4K F9000: memory type. Read-write. Reset: XXXb.	
10.0			
	ValidValu	ues:	

	Value	Description
	Oh	UC or uncacheable.
	1h	
		WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5		. Read-only,Error-on-write-1. Reset: Fixed,0h.
4	RdDram	_4K_F8000 : read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM. Address range from F8000h to F8FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		
		are marked as destined for DRAM. Address range from F8000h to F8FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
2:0		e_4K_F8000 : memory type . Read-write. Reset: XXXb. Address range from F8000h to F8FFFh.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_0277 [Page Attribute Table] (Core::X86::Msr::PAT)

Reset:	0007_040	06_0007_0406h.	
This re	This register specifies the memory type based on the PAT, PCD, and PWT bits in the virtual address page tables.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000277		
Bits	Descript	ion	
63:59	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,00h.	
58:56	PA7Men	nType . Read-write. Reset: 0h. Default UC. MemType for {PAT, PCD, PWT} = 7h.	
	ValidVal	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
55:51	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,00h.	
50:48	PA6Men	nType . Read-write. Reset: 7h. Default UC. MemType for {PAT, PCD, PWT} = 6h.	
	ValidVal	ues:	

[Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
47:43	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,00h.			
		nType . Read-write. Reset: 4h. Default WT. MemType for {PAT, PCD, PWT} = 5h.			
	ValidVa				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
39:35	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,00h.			
		nType . Read-write. Reset: 6h. Default WB. MemType for {PAT, PCD, PWT} = 4h.			
_	ValidVa				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
31:27	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,00h.			
	PA3MemType . Read-write. Reset: 0h. Default UC. MemType for {PAT, PCD, PWT} = 3h.				
	ValidVa				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
23:19	Reserved	l. Read-only,Error-on-write-1. Reset: Fixed,00h.			
		nType . Read-write. Reset: 7h. Default UC. MemType for {PAT, PCD, PWT} = 2h.			
	ValidVa				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
		· · · · · · · · · · · · · · · · · · ·			

4h	WT or write through.		
5h	WP or write protect.		
6h	WB or write back.		
7h	Reserved.		
Reserved	d. Read-only,Error-on-write-1. Reset: Fixed,00h.		
PA1Mer	nType . Read-write. Reset: 4h. Default WT. MemType for {PAT, PCD, PWT} = 1h.		
ValidValues:			
Value	Description		
0h	UC or uncacheable.		
1h	WC or write combining.		
3h-2h	Reserved.		
4h	WT or write through.		
5h	WP or write protect.		
6h	WB or write back.		
7h	Reserved.		
Reserved	d. Read-only,Error-on-write-1. Reset: Fixed,00h.		
PA0Mer	nType . Read-write. Reset: 6h. MemType for {PAT, PCD, PWT} = 0h.		
ValidVa	lues:		
Value	Description		
0h	UC or uncacheable.		
1h	WC or write combining.		
3h-2h	Reserved.		
4h	WT or write through.		
5h	WP or write protect.		
6h	WB or write back.		
7h	Reserved.		
	5h6h7hReservedPA1MerValidVaValue0h1h3h-2h4h5h6h7hReservedPA0MerValidVaValidVaValidVa1h3h-2h4h5h6h1h3h-2h4h5h6h		

MSR0000_02FF [MTRR Default Memory Type] (Core::X86::Msr::MTRRdefType)

Reset:	0000_0000_0000h.
See Co	ore::X86::Msr::MtrrVarBase for general MTRR information.
_lthree[1	:0]_core[3:0]; MSR000002FF
Bits	Description
63:12	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0_0000_0000_0000h.
11	MtrrDefTypeEn: variable and fixed MTRR enable. Read-write. Reset: 0. 0=Fixed and variable MTRRs are not
	enabled. 1=Core::X86::Msr::MtrrVarBase, and Core::X86::Msr::MtrrFix_64K through
	Core::X86::Msr::MtrrFix_4K_7 are enabled.
10	MtrrDefTypeFixEn: fixed MTRR enable. Read-write. Reset: 0. 0=Core::X86::Msr::MtrrFix_64K through
	Core::X86::Msr::MtrrFix_4K_7 are not enabled. 1=Core::X86::Msr::MtrrFix_64K through
	Core::X86::Msr::MtrrFix_4K_7 are enabled. This field is ignored (and the fixed MTRRs are not enabled) if
	Core::X86::Msr::MTRRdefType[MtrrDefTypeEn] == 0.
9:8	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.
7:0	MemType: memory type. Read-write. Reset: 00h.
	Description : If MtrrDefTypeEn == 1 then MemType specifies the memory type for memory space that is not
	specified by either the fixed or variable range MTRRs. If MtrrDefTypeEn == 0 then the default memory type for
	all of memory is UC.
	Valid encodings are {00000b, Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7[2:0]}.
	Other write values cause a GP(0).

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSRC000 0080 [Extended Feature Enable] (Core::X86::Msr::EFER) Reset: 0000 0000 0000 0000h. SKINIT Execution: 0000 0000 0000 0000h. lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000080 **Bits** Description 63:16 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0000 0000 0000h. 15 Reserved. FFXSE: fast FXSAVE/FRSTOR enable. Read-write. Reset: 0. 1=Enables the fast FXSAVE/FRSTOR 14 mechanism. A 64-bit operating system may enable the fast FXSAVE/FRSTOR mechanism if (Core::X86::Cpuid::FeatureExtIdEdx[FFXSR] == 1). This bit is set once by the operating system and its value is not changed afterwards. LMSLE: long mode segment limit enable. Read-write. Reset: 0. 1=Enables the long mode segment limit check 13 mechanism. 12 SVME: secure virtual machine (SVM) enable. Reset: Fixed,0. 1=SVM features are enabled. AccessType: Core::X86::Msr::VM CR[SvmeDisable] ? Read-only,Error-on-write-1 : Read-write. **NXE**: **no-execute page enable**. Read-write. Reset: 0. 1=The no-execute page protection feature is enabled. 11 LMA: long mode active. Read-only. Reset: 0. 1=Indicates that long mode is active. 10 9 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0. 8 LME: long mode enable. Read-write. Reset: 0. 1=Long mode is enabled. 7:1 Reserved. Read-only. Reset: Fixed,00h. SYSCALL: system call extension enable. Read-write. Reset: 0. 1=SYSCALL and SYSRET instructions are 0 enabled. This adds the SYSCALL and SYSRET instructions which can be used in flat addressed operating systems as low latency system calls and returns.

MSRC000_0081 [SYSCALL Target Address] (Core::X86::Msr::STAR)

Read-write. Reset: 0000 0000 0000 0000h.

This register holds the target address used by the SYSCALL instruction and the code and stack segment selector bases used by the SYSCALL and SYSRET instructions.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000081

Bits Description

63:48 SysRetSel: SYSRET CS and SS. Read-write. Reset: 0000h.

47:32 SysCallSel: SYSCALL CS and SS. Read-write. Reset: 0000h.

31:0 **Target: SYSCALL target address**. Read-write. Reset: 0000_0000h.

MSRC000_0082 [Long Mode SYSCALL Target Address] (Core::X86::Msr::STAR64)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000082

 Bits
 Description

 63:0
 LSTAR: long mode target address. Read-write. Reset: 0000_0000_0000h. Target address for 64-bit mode calling programs. The address stored in this register must be in canonical form (if not canonical, a #GP fault occurs).

MSRC000_0083 [Compatibility Mode SYSCALL Target Address] (Core::X86::Msr::STARCOMPAT)

Read-write. Reset: 0000_0000_0000_0000h.

	Description
63:0	CSTAR: compatibility mode target address. Read-write. Reset: 0000_0000_0000_0000h. Target address for
	compatibility mode. The address stored in this register must be in canonical form (if not canonical, a #GP fault

occurs).

MSRC000_0084 [SYSCALL Flag Mask] (Core::X86::Msr::SYSCALL_FLAG_MASK)

 Reset: 0000_0000_0000_0000h.

 _lthree[1:0]_core[3:0]_thread[1:0]; MSRC000084

 Bits
 Description

 63:32
 Reserved. Read-only. Reset: Fixed,0000_0000h.

 31:0
 Mask: SYSCALL flag mask. Read-write. Reset: 0000_0000h. This register holds the EFLAGS mask used by the SYSCALL instruction. 1=Clear the corresponding EFLAGS bit when executing the SYSCALL instruction.

MSRC000_00E7 [Read-Only Max Performance Frequency Clock Count] (Core::X86::Msr::MPerfReadOnly)

Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC00000E7

Bits	Description
63:0	MPerfReadOnly: read-only maximum core clocks counter. Reset: 0000_0000_0000_0000h. Incremented by
	hardware at the P0 frequency while the core is in C0. In combination with Core::X86::Msr::APerfReadOnly, this
	is used to determine the effective frequency of the core. A read of this MSR in guest mode is affected by
	Core::X86::Msr::TscRateMsr. This field uses software P-state numbering. See
	Core::X86::Msr::HWCR[EffFreqCntMwait], 2.1.2 [Effective Frequency]. This register is not affected by writes to
	Core::X86::Msr::MPERF.
	AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock] ? Read-only,Volatile : Read-write,Volatile.

MSRC000_00E8 [Read-Only Actual Performance Frequency Clock Count] (Core::X86::Msr::APerfReadOnly)

Reset: 0000_0000_0000_0000h. _lthree[1:0]_core[3:0]_thread[1:0]; MSRC00000E8

Bits Description

63:0 APerfReadOnly: read-only actual core clocks counter. Reset: 0000_0000_0000_0000h. This register increments in proportion to the actual number of core clocks cycles while the core is in C0. See Core::X86::Msr::MPerfReadOnly. This register is not affected by writes to Core::X86::Msr::APERF. AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock] ? Read-only, Volatile : Read-write, Volatile.

MSRC000_00E9 [Instructions Retired Performance Count] (Core::X86::Msr::IRPerfCount)

Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC00000E9

Bits Description

63:0 **IRPerfCount: instructions retired counter**. Reset: 0000_0000_0000_0000h. Dedicated Instructions Retired register increments on once for every instruction retired. See Core::X86::Msr::HWCR[IRPerfEn].

AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock] ? Read-only, Volatile : Read-write, Volatile.

MSRC000_0100 [FS Base] (Core::X86::Msr::FS_BASE)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000100

Bits Description

63:0 **FSBase: expanded FS segment base**. Read-write. Reset: 0000_0000_0000_0000h. This register provides access to the expanded 64-bit FS segment base. The address stored in this register must be in canonical form (if not canonical, a #GP fault fill occurs).

MSRC000_0101 [GS Base] (Core::X86::Msr::GS_BASE)

Read-write. Reset: 0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000101

Bits Description

63:0 **GSBase: expanded GS segment base**. Read-write. Reset: 0000_0000_0000_0000h. This register provides access to the expanded 64-bit GS segment base. The address stored in this register must be in canonical form (if not

canonical, a #GP fault fill occurs).

MSRC000_0102 [Kernel GS Base] (Core::X86::Msr::KernelGSbase)

Read-write. Reset: 0000_0000_0000_0000h.	
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC0000102
Bits	Description
63:0	KernelGSBase: kernel data structure pointer. Read-write. Reset: 0000_0000_0000_0000h. This register holds
	the kernel data structure pointer which can be swapped with the GS_BASE register using the SwapGS instruction.
	The address stored in this register must be in canonical form (if not canonical, a #GP fault occurs).

MSRC000_0103 [Auxiliary Time Stamp Counter] (Core::X86::Msr::TSC_AUX)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000103

- Bits Description
- 63:32 Reserved.
- 31:0 **TscAux: auxiliary time stamp counter data**. Read-write, Volatile. Reset: 0000_0000h. It is expected that this is initialized by privileged software to a meaningful value, such as a processor ID. This value is returned in the RDTSCP instruction.

MSRC000_0104 [Time Stamp Counter Ratio] (Core::X86::Msr::TscRateMsr)

Reset: 0000 0001 0000 0000h.

Core::X86::Msr::TscRateMsr allows the hypervisor to control the guest's view of the Time Stamp Counter. It provides a multiplier that scales the value returned when Core::X86::Msr::TSC[TSC], Core::X86::Msr::MPERF[MPERF], and Core::X86::Msr::MPerfReadOnly[MPerfReadOnly] are read by a guest running under virtualization. This allows the hypervisor to provide a consistent TSC, MPERF, and MPerfReadOnly rate for a guest process when moving that process between cores that have a differing P0 rate. The TSC Ratio MSR does not affect the value read from the TSC, MPERF, and MPerfReadOnly MSRs when read when in host mode or when virtualization is not being used or when accessed by code executed in system management mode (SMM) unless the SMM code is executed within a guest container. The TSC Ratio value does not affect the rate of the underlying TSC, MPERF, and MPerfReadOnly counters, or the value that gets written to the TSC, MPERF, and MPerfReadOnly MSRs counters on a write by either the host or the guest. The TSC Ratio MSR contains a fixed-point number in 8.32 format, which is 8 bits of integer and 32 bits of fraction. This number is the ratio of the desired P0 frequency to the P0 frequency of the core. The reset value of the TSC Ratio MSR is 1.0, which results in a guest frequency matches the core P0 frequency.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0000104

Bits Description

- 63:40 Reserved. Read-only,Error-on-write-1. Reset: Fixed,00 0000h.
- 39:32 **TscRateMsrInt**: **time stamp counter rate integer**. Read-write. Reset: 01h. Specifies the integer part of the MSR TSC ratio value.
- 31:0 **TscRateMsrFrac**: time stamp counter rate fraction. Read-write. Reset: 0000_0000h. Specifies the fractional part of the MSR TSC ratio value.

MSRC000_0410 [MCA Interrupt Configuration] (Core::X86::Msr::McaIntrCfg)

Read-	Read-write. Reset: 0000_0000_0000h.	
MSRC00	MSRC0000410	
Bits	Description	
63:16	Reserved.	
15:12	ThresholdLvtOffset. Read-write. Reset: 0h. For error thresholding interrupts, specifies the address of the LVT	
	entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	
	Core::X86::Apic::ExtendedInterruptLvtEntries).	
11:8	Reserved.	
7:4	DeferredLvtOffset. Read-write. Reset: 0h.	
	Description : For deferred error interrupts, specifies the address of the LVT	

3:0

entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see APIC[530:500]). Reserved.

2.1.10.2.1 MSRs - MSRC000_2xxx

The MCA registers including the legacy aliases (MSR0000_000[1:0], MSR0000_04xx) are mapped to MSRC000_2xxx. See 3.17 [MCA Registers].

2.1.10.3 MSRs - MSRC001_0xxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSRC001_000[0...3] [Performance Event Select [3:0]] (Core::X86::Msr::PERF_LEGACY_CTL)

Read-v	Read-write. Reset: 0000_0000_0000_0000h.	
The le	The legacy alias of Core::X86::Msr::PERF_CTL. See Core::X86::Msr::PERF_CTL.	
_lthree[1	:0]_core[3:0]_thread[1:0]_n[3:0]; MSRC001_000[3:0]	
Bits	Description	
63:42	Reserved.	
41:40	HostGuestOnly: count only host/guest events. Read-write. Reset: 0h.	
39:36	Reserved.	
35:32	EventSelect[11:8]: performance event select. Read-write. Reset: 0h.	
31:24	CntMask: counter mask. Read-write. Reset: 00h.	
23	Inv: invert counter mask. Read-write. Reset: 0.	
22	En: enable performance counter. Read-write. Reset: 0.	
21	Reserved.	
20	Int: enable APIC interrupt. Read-write. Reset: 0.	
19	Reserved.	
18	Edge: edge detect. Read-write. Reset: 0.	
17:16	OsUserMode: OS and user mode. Read-write. Reset: 0h.	
15:8	UnitMask: event qualification. Read-write. Reset: 00h. When selecting an event for which not all UnitMask bits	
	are defined, the undefined UnitMask bits should be set to zero.	
7:0	EventSelect[7:0]: event select. Read-write. Reset: 00h.	

MSRC001_000[4...7] [Performance Event Counter [3:0]] (Core::X86::Msr::PERF_LEGACY_CTR)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

The legacy alias of Core::X86::Msr::PERF_CTR. See Core::X86::Msr::PERF_CTR.

_lthree[1:0]_core[3:0]_thread[1:0]_n[3:0]; MSRC001_000[7:4]

- Bits Description
- 63:48 Reserved.

47:0 CTR: performance counter value. Read-write, Volatile. Reset: 0000_0000_0000h.

MSRC001_0010 [System Configuration] (Core::X86::Msr::SYS_CFG)

Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]; MSRC0010010

Bits Description

63:24 Reserved.

23 **SMEE**: secure memory encryption enable. Reset: 0. Init: BIOS,1. 0=Memory encryption features are disabled. 1=Memory encryption features are enabled. Once Core::X86::Msr::HWCR[SmmLock] is set, this bit cannot be

	cleared until a reset.
	AccessType: Core::X86::Msr::HWCR_thread0[SmmLock] ? Read,Write-1-only : Read-write.
22	Tom2ForceMemTypeWB: top of memory 2 memory type write back. Read-write. Reset: 0. 1=The default
	memory type of memory between 4GB and TOM2 is write back instead of the memory type defined by
	Core::X86::Msr::MTRRdefType[MemType]. For this bit to have any effect,
	Core::X86::Msr::MTRRdefType[MtrrDefTypeEn] must be 1. MTRRs and PAT can be used to override this
	memory type.
21	MtrrTom2En: MTRR top of memory 2 enable. Read-write. Reset: 0. 0=Core::X86::Msr::TOM2 is disabled. 1=
	Core::X86::Msr::TOM2 is enabled.
20	MtrrVarDramEn: MTRR variable DRAM enable. Read-write. Reset: 0. Init: BIOS,1.
	0=Core::X86::Msr::TOP_MEM and IORRs are disabled. 1=These registers are enabled.
19	MtrrFixDramModEn: MTRR fixed RdDram and WrDram modification enable. Read-write. Reset: 0.
	Check: 0. 0=Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7 [RdDram,WrDram] read
	values is masked 00b; writing does not change the hidden value. 1=Core::X86::Msr::MtrrFix_64K through
	Core::X86::Msr::MtrrFix_4K_7 [RdDram,WrDram] access type is Read-write. Not shared between threads.
	Controls access to Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7 [RdDram,WrDram].
	This bit should be set to 1 during BIOS initialization of the fixed MTRRs, then cleared to 0 for operation.
18	MtrrFixDramEn: MTRR fixed RdDram and WrDram attributes enable. Read-write. Reset: 0. Init: BIOS,1.
	1=Enables the RdDram and WrDram attributes in Core::X86::Msr::MtrrFix_64K through
	Core::X86::Msr::MtrrFix_4K_7.
17:0	Reserved.

MSRC001_0015 [Hardware Configuration] (Core::X86::Msr::HWCR)

Reset:	0000_0000_0100_0010h.
	:0]_core[3:0]_thread[1:0]; MSRC0010015
Bits	Description
63:31	Reserved.
30	IRPerfEn: enable instructions retired counter. Read-write. Reset: 0. 1=Enable Core::X86::Msr::IRPerfCount.
29:28	Reserved.
27	EffFreqReadOnlyLock: read-only effective frequency counter lock. Write-1-only. Reset: 0. Init: BIOS,1.
	1=Core::X86::Msr::MPerfReadOnly, Core::X86::Msr::APerfReadOnly and Core::X86::Msr::IRPerfCount are
	read-only.
26	EffFreqCntMwait: effective frequency counting during mwait. Read-write. Reset: 0. 0=The registers do not
	increment. 1=The registers increment. Specifies whether Core::X86::Msr::MPERF and Core::X86::Msr::APERF
	increment while the core is in the monitor event pending state. See 2.1.2 [Effective Frequency].
25	CpbDis: core performance boost disable. Read-write. Reset: 0. 0=CPB is requested to be enabled. 1=CPB is
	disabled. Specifies whether core performance boost is requested to be enabled or disabled. If core performance
	boost is disabled while a core is in a boosted P-state, the core automatically transitions to the highest performance
	non-boosted P-state.
24	TscFreqSel: TSC frequency select. Read-only. Reset: 1. 1=The TSC increments at the P0 frequency.
23:22	Reserved.
21	LockTscToCurrentP0: lock the TSC to the current P0 frequency. Read-write. Reset: 0. 0=The TSC will count
	at the P0 frequency. 1=The TSC frequency is locked to the current P0 frequency at the time this bit is set and
	remains fixed regardless of future changes to the P0 frequency.
20	IoCfgGpFault: IO-space configuration causes a GP fault. Read-write. Reset: 0. 1=IO-space accesses to
	configuration space cause a GP fault. The fault is triggered if any part of the IO read/write address range is
	between CF8h and CFFh, inclusive. These faults only result from single IO instructions, not to string and REP IO
	instructions. This fault takes priority over the IO trap mechanism described by
	Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS.
19	Reserved.
18	McStatusWrEn: machine check status write enable. Read-write. Reset: 0. 0=MCi_STATUS registers are

	readable; writing a non-zero pattern to these registers causes a general protection fault. 1=MCi_STATUS registers are read-write, including reserved fields; do not cause general protection faults; such writes update all implemented bits in these registers; All fields of all threshold registers are Read-write when accessed from MSR
	space, including Locked, except BlkPtr which is always read-only; McStatusWrEn does not change the access
	type for the thresholding registers accessed via configuration space.
	Description : McStatusWrEn can be used to debug machine check exception and interrupt handlers.
17	See 3 [Machine Check Architecture].
17	Wrap32Dis : 32-bit address wrap disable . Read-write. Reset: 0. 1=Disable 32-bit address wrapping. Software can use Wrap32Dis to access physical memory above 4 Gbytes without switching into 64-bit mode. To do so,
	software should write a greater-than 4 Gbyte address to Core::X86::Msr::FS_BASE and
	Core::X86::Msr::GS_BASE. Then it would address ±2 Gbytes from one of those bases using normal memory reference instructions with a FS or GS override prefix. However, the INVLPG, FST, and SSE store instructions
	generate 32-bit addresses in legacy mode, regardless of the state of Wrap32Dis.
16:15	Reserved.
14	RsmSpCycDis: RSM special bus cycle disable. Reset: 0. 0=A link special bus cycle, SMIACK, is generated on
	a resume from SMI.
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Read-only : Read-write.
13	SmiSpCycDis: SMI special bus cycle disable. Reset: 0. 0=A link special bus cycle, SMIACK, is generated when
	an SMI interrupt is taken.
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Read-only : Read-write.
12:11	Reserved.
10	MonMwaitUserEn: MONITOR/MWAIT user mode enable. Read-write. Reset: 0. 0=The MONITOR and
	MWAIT instructions are supported only in privilege level 0; these instructions in privilege levels 1 to 3 cause a
	#UD exception. 1=The MONITOR and MWAIT instructions are supported in all privilege levels. The state of this
	bit is ignored if MonMwaitDis is set.
9	MonMwaitDis: MONITOR and MWAIT disable. Read-write. Reset: 0. 1=The MONITOR and MWAIT
	opcodes become invalid. This affects what is reported back through Core::X86::Cpuid::FeatureIdEcx[Monitor].
8	IgnneEm: IGNNE port emulation enable. Read-write. Reset: 0. 1=Enable emulation of IGNNE port.
7	AllowFerrOnNe: allow FERR on NE. Read-write. Reset: 0. 0=Disable legacy FERR signaling and generate
6.5	FERR exception directly. 1=Legacy FERR signaling.
6:5	Reserved. INVDWBINVD: INVD to WBINVD conversion. Read-write. Reset: 1. Check: 1. 1=Convert INVD to
4	WBINVD: INVD to WBINVD conversion. Read-write. Reset: 1. Check: 1. 1–Convert INVD to WBINVD.
	Description: This bit is required to be set for normal operation when any of the following are true:
	• An L2 is shared by multiple threads.
	• An L3 is shared by multiple cores.
	• CC6 is enabled.
	Probe filter is enabled.
3	TIbCacheDis : cacheable memory disable . Read-write. Reset: 0. 1=Disable performance improvement that assumes that the PML4, PDP, PDE and PTE entries are in cacheable WB DRAM.
	Description: Operating systems that maintain page tables in any other memory type must set the TlbCacheDis bit
	to insure proper operation.
	• TlbCacheDis does not override the memory type specified by the SMM ASeg and TSeg memory regions
	controlled by Core::X86::Msr::SMMAddr Core::X86::Msr::SMMMask.
2:1	Reserved.
0	SmmLock: SMM code lock. Read, Write-1-only. Reset: 0. Init: BIOS, 1. Check: 1. 1=SMM code in the ASeg and
	TSeg range and the SMM registers are read-only and SMI interrupts are not intercepted in SVM. See 2.1.8.1.10
	[Locking SMM].

MSRC001_001[6...8] [IO Range Base] (Core::X86::Msr::IORR_BASE)

Read-write. Reset: 0000_XXXX_XXXX_X0XXh.

Core::X86::Msr::IORR BASE and Core::X86::Msr::IORR MASK combine to specify the two sets of base and mask pairs for two IORR ranges. A core access, with address CPUAddr, is determined to be within IORR address range if the following equation is true:

CPUAddr[47:12] & PhyMask[47:12] == PhyBase[47:12] & PhyMask[47:12].

BIOS can use the IORRs to create an IO hole within a range of addresses that would normally be mapped to DRAM. It can also use the IORRs to re-assert a DRAM destination for a range of addresses that fall within a bigger IO hole that overlays DRAM.

lthree[1:0]_core[3:0]_n[1:0]; MSRC001_001[8,6]

Bits Description

63:48	Reserved.
47:12	PhyBase: physical base address. Read-write. Reset: X_XXXX_XXXh.
11:5	Reserved.
4	RdMem: read from memory. Read-write. Reset: X. 0=Read accesses to the range are directed to IO. 1=Read
	accesses to the range are directed to system memory.
3	WrMem: write to memory. Read-write. Reset: X. 0=Write accesses to the range are directed to IO. 1=Write
	accesses to the range are directed to system memory.
$2 \cdot 0$	Beserved

2.0 | Reserved.

MSRC001 001[7...9] [IO Range Mask] (Core::X86::Msr::IORR MASK)

Read-write. Reset: 0000 0000 0000 0000h.

See Core::X86::Msr::IORR BASE.

lthree[1:0] core[3:0] n[1:0]; MSRC001 001[9,7]

Bits Description

63:48 Reserved.

47:12 PhyMask: physical address mask. Read-write. Reset: 0 0000 0000h.

Valid. Read-write. Reset: 0. 1=The pair of registers that specifies an IORR range is valid. 11

10:0 Reserved.

MSRC001_001A [Top Of Memory] (Core::X86::Msr::TOP MEM)

Read-write. Reset: 0000 XXXX XXX0 0000h.

lthree[1:0] core[3:0]; MSRC001001A **Bits** Description 63:48 Reserved.

47:23 **TOM[47:23]: top of memory.** Read-write. Reset: XXX XXXXh. Specifies the address that divides between MMIO and DRAM. This value is normally placed below 4G. From TOM to 4G is MMIO; below TOM is DRAM. See 2.1.3.3 [System Address Map].

22:0 Reserved.

MSRC001 001D [Top Of Memory 2] (Core::X86::Msr::TOM2)

Read-write. Reset: 0000 XXXX XXX0 0000h.

lthree[1:0]_core[3:0]; MSRC001001D **Bits** Description 63:48 Reserved. 47:23 **TOM2[47:23]**: second top of memory. Read-write. Reset: XXX XXXXh. Specifies the address divides between MMIO and DRAM. This value is normally placed above 4G. From 4G to TOM2 - 1 is DRAM; TOM2 and above is MMIO. See 2.1.3.3 [System Address Map]. This register is enabled by Core::X86::Msr::SYS CFG[MtrrTom2En]. 22:0 Reserved.

MSRC001 0022 [Machine Check Exception Redirection] (Core::X86::Msr::McExcepRedir)

Read-write. Reset: 0000 0000 0000 0000h.

This register can be used to redirect machine check exceptions (MCEs) to SMIs or vectored interrupts. If both

RedirSmiEn and RedirVecEn are set, then undefined behavior results.

_lthree[1	lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010022	
Bits	Description	
63:10	Reserved.	
9	RedirSmiEn. Read-write. Reset: 0. 1=Redirect MCEs (that are directed to this core) to generate an SMI-trigger	
	IO cycle via Core::X86::Msr::SmiTrigIoCycle. The status is stored in	
	Core::X86::Smm::LocalSmiStatus[MceRedirSts].	
8	RedirVecEn. Read-write. Reset: 0. 1=Redirect MCEs (that are directed to this core) to generate a vectored	
	interrupt, using the interrupt vector specified in RedirVector.	
7:0	RedirVector. Read-write. Reset: 00h. See RedirVecEn.	

MSRC001_003[0...5] [Processor Name String] (Core::X86::Msr::ProcNameString)

Read-write. Reset: XXXX_XXXX_XXXX_XXXA.

These 6 registers hold the CPUID name string in ASCII. The state of these registers are returned by CPUID instructions, Core::X86::Cpuid::ProcNameStr0Eax through Core::X86::Cpuid::ProcNameStr2Edx. BIOS should set these registers to the product name for the processor as provided by AMD. Each register contains a block of 8 ASCII characters; the least byte corresponds to the first ASCII character of the block; the most-significant byte corresponds to the last character of the block. MSRC001_0030 contains the first block of the name string; MSRC001_0035 contains the last block of the name string.

_lthree[1:0]_core[3:0]_thread[1:0]_n[5:0]; MSRC001_003[5:0]

Bits	Description
63:56	CpuNameString7. Read-write. Reset: XXh.
55:48	CpuNameString6. Read-write. Reset: XXh.
47:40	CpuNameString5. Read-write. Reset: XXh.
39:32	CpuNameString4. Read-write. Reset: XXh.
31:24	CpuNameString3. Read-write. Reset: XXh.
23:16	CpuNameString2. Read-write. Reset: XXh.
15:8	CpuNameString1. Read-write. Reset: XXh.
7:0	CpuNameString0. Read-write. Reset: XXh.

MSRC001_005[0...3] [IO Trap] (Core::X86::Msr::SMI_ON_IO_TRAP)

Read-write. Reset: 0000_0000_0000_0000h.

Core::X86::Msr::SMI_ON_IO_TRAP and Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS provide a mechanism for executing the SMI handler if a an access to one of the specified addresses is detected. Access address and access type checking is performed before IO instruction execution. If the access address and access type match one of the specified IO address and access types, then: (1) the IO instruction is not executed; (2) any breakpoint, other than the single-step breakpoint, set on the IO instruction is not taken (the single-step breakpoint is taken after resuming from SMM); and (3) issue the SMI-trigger IO cycle specified by Core::X86::Msr::SmiTrigIoCycle if enabled. The status is stored in Core::X86::Smm::LocalSmiStatus[IoTrapSts].

IO-space configuration accesses are special IO accesses. An IO access is defined as an IO-space configuration access when IO instruction address bits[31:0] are CFCh, CFDh, CFEh, or CFFh when IO-space configuration is enabled (IO::IoCfgAddr[ConfigEn]). The access address for a configuration space access is the current value of IO::IoCfgAddr[BusNo,Device,Function,RegNo]. The access address for an IO access that is not a configuration access is equivalent to the IO instruction address, bits[31:0].

Bits Description

63 SmiOnRdEn: enable SMI on IO read. Read-write. Reset: 0. 1=Enables SMI generation on a read access.

62 SmiOnWrEn: enable SMI on IO write. Read-write. Reset: 0. 1=Enables SMI generation on a write access.

61	ConfigSmi: configuration space SMI. Read-write. Reset: 0. 0=IO access (that is not an IO-space configuration			
	access). 1=Configuration access.			
60:56	Reserved.			
55:32	SmiMask[23:0]. Read-write. Reset: 00 0000h. 1=Do not mask address bit. 0=Mask address bit. SMI IO trap			
	mask.			
31:0	SmiAddr[31:0]. Read-write. Reset: 0000_0000h. SMI IO trap address.			
MCD	COOL OOSA [IO Trop Control] (Corrow VOG Manus MI ON IO TRAD CTL STS)			
	C001_0054 [IO Trap Control] (Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS)			
	0000_0000_0000h.			
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC0010054			
Bits	Description			
63:32	Reserved. Read-only. Reset: Fixed,0000_0000h.			
31:16	Reserved.			
15	IoTrapEn: IO trap enable. Read-write. Reset: 0. 1=Enable IO and configuration space trapping specified by			
	Core::X86::Msr::SMI_ON_IO_TRAP and Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS.			
14:8	Reserved.			
7	SmiEn3. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[3] is enabled.			
6	Reserved.			
5	SmiEn2. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[2] is enabled.			
4				

4 Reserved.

3 **SmiEn1**. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[1] is enabled.

2 Reserved.

1 SmiEn0. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI ON IO TRAP n[0] is enabled.

0 Reserved.

MSRC001_0055 [Reserved.] (Core::X86::Msr::IntPend)

Read-only. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]; MSRC0010055

Bits Description

63:0 Reserved. Read-only. Reset: Fixed,0000_0000_0000.

MSRC001_0056 [SMI Trigger IO Cycle] (Core::X86::Msr::SmiTrigIoCycle)

Read-write. Reset: 0000_0000_0000_0000h.

See 2.1.8.1.3 [SMI Sources And Delivery]. This register specifies an IO cycle that may be generated when a local SMI trigger event occurs. If IoCycleEn is set and there is a local SMI trigger event, then the IO cycle generated is a byte read or write, based on IoRd, to address IoPortAddress. If the cycle is a write, then IoData contains the data written. If the cycle is a read, the value read is discarded. If IoCycleEn is clear and a local SMI trigger event occurs, then undefined behavior results.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010056

Bits Description

63:27 Reserved.

26 **IoRd**: **IO Read**. Read-write. Reset: 0. 0=IO write. 1=IO read.

25 **IoCycleEn: IO cycle enable**. Read-write. Reset: 0. 1=The SMI trigger IO cycle is enabled to be generated.

24 Reserved.

23:16 **IoData**. Read-write. Reset: 00h.

15:0 **IoPortAddress**. Read-write. Reset: 0000h.

MSRC001_0058 [MMIO Configuration Base Address] (Core::X86::Msr::MmioCfgBaseAddr)

Reset: 0000 XXXX XXX0 0000h.

See 2.1.4 [Configuration Space] for a description of MMIO configuration space.

_lthree[1:0]_core[3:0]; MSRC0010058

Bits	Descript	ion		
63:48	Reserved	Reserved. Read-only. Reset: Fixed,0000h.		
47:20		gBaseAddr[47:20]: MMIO configuration base address bits[47:20]. Read-write. Reset:		
		XXXh. Specifies the base address of the MMIO configuration range.		
19:6		. Read-only. Reset: Fixed,0000h.		
5:2		ge: bus range identifier. Read-write. Reset: 0h. Specifies the number of buses in the MMIO		
		tion space range. The size of the MMIO configuration space is 1 MB times the number of buses.		
	ValidVal			
	Value	Description		
	0h	1		
	1h	2		
	2h	4		
	3h	8		
	4h	16		
	5h	32		
	6h	64		
	7h	128		
	8h	256		
	Fh-9h	Reserved		
1	Reserved	•		
0	Enable.	Read-write. Reset: 0. 1=MMIO configuration space is enabled.		

MSRC001_0061 [P-state Current Limit] (Core::X86::Msr::PStateCurLim)

Reset:	Reset: 0000_0000_00XXh.			
_lthree[]	_lthree[1:0]_core[3:0]; MSRC0010061			
Bits	Description			
63:7	Reserved.			
6:4	PstateMaxVal: P-state maximum value. Read, Error-on-write, Volatile. Reset: XXXb. Specifies the lowest-			
	performance non-boosted P-state (highest non-boosted value) allowed. Attempts to change			
	Core::X86::Msr::PStateCtl[PstateCmd] to a lower-performance P-state (higher value) are clipped to the value of			
	this field.			
3	Reserved. Read-only. Reset: Fixed,0.			
2:0	CurPstateLimit: current P-state limit. Read, Error-on-write, Volatile. Reset: XXXb. Specifies the highest-			
	performance P-state (lowest value) allowed. CurPstateLimit is always bounded by			
	Core::X86::Msr::PStateCurLim[PstateMaxVal]. Attempts to change the CurPstateLimit to a value greater (lower			
	performance) than Core::X86::Msr::PStateCurLim[PstateMaxVal] leaves CurPstateLimit unchanged.			

MSRC001_0062 [P-state Control] (Core::X86::Msr::PStateCtl)

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010062		
Bits	Description		
63:3	Reserved. Read, Error-on-write-1.		
2:0	PstateCmd: P-state change command. Read-write. Reset: XXXb. Cold reset value varies by product; after a		
	warm reset, value initializes to the P-state the core was in prior to the reset. Writes to this field cause the core to		
	change to the indicated non-boosted P-state number, specified by Core::X86::Msr::PStateDef. 0=P0, 1=P1, etc. P-		
	state limits are applied to any P-state requests made through this register. Reads from this field return the last		
	written value, regardless of whether any limits are applied.		

MSRC001_0063 [P-state Status] (Core::X86::Msr::PStateStat)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000_000Xh. _lthree[1:0]_core[3:0]; MSRC0010063

	Descripti	
	Reserved	
2:0	componer Core::X8	e: current P-state. Read,Error-on-write,Volatile. Reset: XXXb. This field provides the frequency at of the current non-boosted P-state of the core (regardless of the source of the P-state change, includin 6::Msr::PStateCtl[PstateCmd]. 0=P0, 1=P1, etc. The value of this field is updated when the COF s to a new value associated with a P-state.
MSRO	C001_006	[4B] [P-state [7:0]] (Core::X86::Msr::PStateDef)
Read-	write. Rese	et: X000_0000_XXXX_XXXh.
		gisters specify the frequency and voltage associated with each of the core P-states.
		d in these registers is required to be programmed to the same value in all cores of a processor, but are
		ferent between processors in a multi-processor system. All other fields in these registers are required to
		to the same value in each core of the coherent fabric.
		_thread[1:0]_n[7:0]; MSRC001_006[B:4]
	Descripti	
63	MSR is v	. Read-write. Reset: X. 0=The P-state specified by this MSR is not valid. 1=The P-state specified by this alid. The purpose of this register is to indicate if the rest of the P-state information in the register is validet; it controls no hardware.
62.22	Reserved.	
		urrent divisor. Read-write. Reset: XXb. See IddValue.
		: current value. Read-write. Reset: XXXXXXXb. After a reset, IddDiv and IddValue combine to
29.22		e expected maximum current dissipation of a single core that is in the P-state corresponding to the MSI
		These values are intended to be used to create ACPI-defined PSS objects. The values are expressed in
		y are not intended to convey final product power levels; they may not match the power levels specified
		ver and Thermal Datasheets.
21.14		7:0]: core VID. Read-write. Reset: XXXXXXXb.
13:8		d: core divisor ID. Read-write. Reset: XXXXXb. Specifies the core frequency divisor; see CpuFid.
	For value 4-cycle da divide ste	s [1Ah:08h], 1/8th integer divide steps supported down to VCO/3.25 (Note, L3/L2 fifo logic related to ata heads-up requires core to be 1/3 of L3 frequency or higher). For values [30h:1Ch], 1/4th integer ps supported down to VCO/6 (DID[0] should zero if DID[5:0]>1Ah). (Note, core and L3 frequencies DMHz are not supported by the architecture). Core supports DID up to 30h, but L3 must be 2Ch
	ValidValu	
	Value	Description
	00h	Off
	07h-01h	Reserved.
	08h	VCO/1
ľ	09h	VCO/1.125
	1Ah-	
	11111-	VCO/ <value 8=""></value>
	0Ah	VCO/ <value 8=""></value>
	11	VCO/ <value 8=""> Reserved.</value>
	0Ah	
	0Ah 1Bh	Reserved.
	0Ah 1Bh 1Ch	Reserved. VCO/ <value 8=""></value>
	0Ah 1Bh 1Ch 1Dh	Reserved. VCO/ <value 8=""> Reserved.</value>
	0Ah 1Bh 1Ch 1Dh 1Eh 1Fh	Reserved. VCO/ <value 8=""> Reserved. VCO/<value 8=""> Reserved.</value></value>
	0Ah 1Bh 1Ch 1Dh 1Eh 1Fh 20h	Reserved. VCO/ <value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""></value></value></value>
	0Ah 1Bh 1Ch 1Dh 1Eh 1Fh 20h 21h	Reserved. VCO/ <value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved.</value></value></value></value>
	0Ah 1Bh 1Ch 1Dh 1Eh 1Fh 20h 21h 22h	Reserved. VCO/ <value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""></value></value></value></value></value>
	0Ah 1Bh 1Ch 1Dh 1Eh 1Fh 20h 21h	Reserved. VCO/ <value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved. VCO/<value 8=""> Reserved.</value></value></value></value>

	26h	VCO/ <value 8=""></value>
	27h	Reserved.
	28h	VCO/ <value 8=""></value>
	29h	Reserved.
	2Ah	VCO/ <value 8=""></value>
	2Bh	Reserved.
	2Ch	VCO/ <value 8=""></value>
	3Fh-	Reserved.
	2Dh	
7:0		7:0]: core frequency ID. Read-write. Reset: XXh. Specifies the core frequency multiplier. The core
	COF is a	function of CpuFid and CpuDid, and defined by CoreCOF.
	ValidValı	1es:
	Value	Description
	0Fh-00h	Reserved.
	FFh-	<value>*25</value>
	10h	

MSRC001_0073 [C-state Base Address] (Core::X86::Msr::CStateBaseAddr)

Read-write. Reset: 0000_0000_0000_0000h. _lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010073

BitsDescription63:16Reserved.

05.10	100501 VOC		
15:0	state entr entry. Wi	ddr : C-state address . Read-write. Reset: 0000h. Specifies the IO addresses trapped by the core for C- y requests. A value of 0 in this field specifies that the core does not trap any IO addresses for C-state riting values greater than FFF8h into this field result in undefined behavior. All other values cause the ap IO addresses CstateAddr through CstateAddr+7.	
		4 [CPU Watchdog Timer] (Core::X86::Msr::CpuWdtCfg)	
Read-	write. Res	et: 0000_0000_0000_0000h.	
-		; MSRC0010074	
Bits	Descript		
63:7	Reserved		
6:3	CpuWdtCountSel : CPU watchdog timer count select . Read-write. Reset: 0h. CpuWdtCountSel and CpuWdtTimeBase together specify the time period required for the WDT to expire. The time period is ((the multiplier specified by CpuWdtCountSel) * (the time base specified by CpuWdtTimeBase)). The actual timeout period may be anywhere from zero to one increment less than the values specified, due to non-deterministic		
	behavior		
	ValidValues:		
	Value Description		
	Oh	4095	
	1h	2047	
	2h	1023	
	$\frac{2n}{3h}$	511	
	-		
	4h	255	
	5h	127	
	6h	63	
	7h	31	
	8h	8191	
	9h	16383	

1				
	Fh-Ah	Reserved		
2:1	CpuWd	tTimeBase: CPU watchdog timer time base. Read-write. Reset: 0h. Specifies the time base for the		
	timeout period specified in CpuWdtCountSel.			
ValidValues:				
	Value	Description		
	0h	1.31ms		
	1h	1.28us		
	3h-2h	Reserved		
0	CpuWd	tEn: CPU watchdog timer enable. Read-write. Reset: 0. Init: BIOS,1. 1=The WDT is enabled.		

MSRC001_0111 [SMM Base Address] (Core::X86::Msr::SMM_BASE)

Reset: 0000 0000 0003 0000h.

This holds the base of the SMM memory region. The value of this register is stored in the save state on entry into SMM (see 2.1.8.1.5 [SMM Save State]) and it is restored on returning from SMM. The 16-bit CS (code segment) selector is loaded with SmmBase[19:4] on entering SMM. SmmBase[3:0] is required to be 0. The SMM base address can be changed in two ways:

• The SMM base address, at offset FF00h in the SMM state save area, may be changed by the SMI handler. The RSM instruction updates SmmBase with the new value.

Normal WRMSR access to this register.

_three[1:0]_core[3:0]_thread[1:0]; MSRC0010111

 Bits
 Description

 63:32
 Reserved.

 31:0
 SmmBase. Reset: 0003_0000h.

 AccessType: Core::X86::Msr::HWCR[SmmLock] ? Read-only : Read-write.

MSRC001 0112 [SMM TSeg Base Address] (Core::X86::Msr::SMMAddr)

Configurable. Reset: 0000 0000 0000 0000h.

See 2.1.8.1 [System Management Mode (SMM)] and 2.1.3.3.1 [Memory Access to the Physical Address Space]. See Core::X86::Msr::SMMMask for more information about the ASeg and TSeg address ranges.

Each CPU access, directed at CPUAddr, is determined to be in the TSeg range if the following is true:

CPUAddr[47:17] & TSegMask[47:17] == TSegBase[47:17] & TSegMask[47:17].

For example, if TSeg spans 256 KB and starts at the 1 MB address. The Core::X86::Msr::SMMAddr[TSegBase[47:17]] would be set to 0010_0000h and the Core::X86::Msr::SMMMask[TSegMask[47:17]] to FFFC_0000h (with zeros filling in for bits[16:0]). This results in a TSeg range from 0010_0000 to 0013_FFFFh. __lthree[1:0]_core[3:0]; MSRC0010112

 Bits
 Description

 63:48
 Reserved.

 47:17
 TSegBase[47:17]: TSeg address range base. Configurable. Reset: 0000_0000h. AccessType: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.

 16:0
 Reserved.

MSRC001_0113 [SMM TSeg Mask] (Core::X86::Msr::SMMMask)

Configurable. Reset: 0000_0000_0000_0000h.

See 2.1.8.1 [System Management Mode (SMM)].

The ASeg address range is located at a fixed address from A0000h–BFFFFh. The TSeg range is located at a variable base (specified by Core::X86::Msr::SMMAddr[TSegBase[47:17]]) with a variable size (specified by

Core::X86::Msr::SMMMask[TSegMask[47:17]]). These ranges provide a safe location for SMM code and data that is not readily accessible by non-SMM applications. The SMI handler can be located in one of these two ranges, or it can be located outside these ranges. These ranges must never overlap each other.

This register specifies how accesses to the ASeg and TSeg address ranges are controlled as follows:

- If [A,T] Valid == 1, then:
 - If in SMM, then:
 - If [A, T]Close == 0, then the accesses are directed to DRAM with memory type as specified in [A, T]MTypeDram.
 - If [A, T]Close == 1, then instruction accesses are directed to DRAM with memory type as specified in [A, T]MTypeDram and data accesses are directed at MMIO space and with attributes based on [A, T]MTypeIoWc.
 - If not in SMM, then the accesses are directed at MMIO space with attributes based on [A,T]MTypeIoWc.
- See 2.1.3.3.1.1 [Determining Memory Type].

	_lthree[1:0]_core[3:0]; MSRC0010113	
Bits	Descript	ion
63:48	Reserved	
47:17		sk[47:17]: TSeg address range mask. Configurable. Reset: 0000_0000h. See
		6::Msr::SMMAddr. AccessType: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
	Reserved	
14:12		Dram: TSeg address range memory type. Configurable. Reset: 0h. Specifies the memory type for
		cesses to the TSeg range that are directed to DRAM. AccessType:
		86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
11	Reserved	
10:8		Dram: ASeg Range Memory Type. Configurable. Reset: 0h. Specifies the memory type for SMM
		to the ASeg range that are directed to DRAM. AccessType: (Core::X86::Msr::HWCR[SmmLock])?
		y : Read-write.
	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:6	Reserved	
5		IoWc: non-SMM TSeg address range memory type. Configurable. Reset: 0. 0=UC (uncacheable).
	1=WC (w	vrite combining). Specifies the attribute of TSeg accesses that are directed to MMIO space. AccessType:

(Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.

AMTypeIoWc: non-SMM ASeg address range memory type. Configurable. Reset: 0. 0=UC (uncacheable). 4 1=WC (write combining). Specifies the attribute of ASeg accesses that are directed to MMIO space. AccessType:

	(Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
3	TClose: send TSeg address range data accesses to MMIO. Configurable. Reset: 0. 1=When in SMM, direct
	data accesses in the TSeg address range to MMIO space. See AClose. AccessType:
	(Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
2	AClose: send ASeg address range data accesses to MMIO. Configurable. Reset: 0. 1=When in SMM, direct
	data accesses in the ASeg address range to MMIO space. [A,T]Close allows the SMI handler to access the MMIO
	space located in the same address region as the [A,T]Seg. When the SMI handler is finished accessing the MMIO
	space, it must clear the bit. Failure to do so before resuming from SMM causes the CPU to erroneously read the
	save state from MMIO space. AccessType: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
1	TValid: enable TSeg SMM address range. Configurable. Reset: 0. 1=The TSeg address range SMM enabled.
	AccessType: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.
0	AValid: enable ASeg SMM address range. Configurable. Reset: 0. 1=The ASeg address range SMM enabled.
	AccessType: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.

MSRC001_0114 [Virtual Machine Control] (Core::X86::Msr::VM_CR)

	Reset: 0000_0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC0010114		
Bits	Description		
63:32	Reserved.		
31:5	Reserved. Read-only, Error-on-write-1. Reset: 000_0000h.		
4	SvmeDisable: SVME disable. Configurable. Reset: 0. 0=Core::X86::Msr::EFER[SVME] is read-write.		
	1=Core::X86::Msr::EFER[SVME] is Read-only,Error-on-write-1. See Lock for the access type of this field.		
	Attempting to set this field when (Core::X86::Msr::EFER[SVME]==1) causes a #GP fault, regardless of the state		
	of Lock. See the APM2 section titled "Enabling SVM" for software use of this field.		
3	Lock: SVM lock. Read-only, Volatile. Reset: 0. 0=SvmeDisable is read-write. 1=SvmeDisable is read-only. See		
	Core::X86::Msr::SvmLockKey[SvmLockKey] for the condition that causes hardware to clear this field.		
2	Reserved.		
1	InterceptInit: intercept INIT. Read-write, Volatile. Reset: 0. 0=INIT delivered normally. 1=INIT translated into		
	a SX interrupt. This bit controls how INIT is delivered in host mode. This bit is set by hardware when the SKINIT		
	instruction is executed.		
0	Reserved.		

MSRC001_0115 [IGNNE] (Core::X86::Msr::IGNNE)

Reset:	Reset: 0000_0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC0010115		
Bits	Description		
63:32	Reserved.		
31:1	Reserved. Read-only, Error-on-write-1. Reset: 0000_0000h.		
0	IGNNE : current IGNNE state. Read-write. Reset: 0. This bit controls the current state of the processor internal		
	IGNNE signal.		

MSRC001_0116 [SMM Control] (Core::X86::Msr::SMM_CTL)

Reset: 0000 0000 0000 0000h.

The bits in this register are processed in the order of: SmmEnter, SmiCycle, SmmDismiss, RsmCycle and SmmExit. However, only the following combination of bits may be set in a single write (all other combinations result in undefined behavior):

- SmmEnter and SmiCycle.
- SmmEnter and SmmDismiss.
- SmmEnter, SmiCycle and SmmDismiss.
- SmmExit and RsmCycle.

Software is responsible for ensuring that SmmEnter and SmmExit operations are properly matched and are not nested. _lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010116

Bits	Description	
63:5	Reserved. Error-on-read, Error-on-write-1. Reset: 000_0000_0000_0000h.	
4	RsmCycle: send RSM special cycle. Reset: 0. 1=Send a RSM special cycle.	
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Error-on-read,Error-on-write : Write-only,Error-on-read.	
3	SmmExit: exit SMM. Reset: 0. 1=Exit SMM.	
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Error-on-read,Error-on-write : Write-only,Error-on-read.	
2	SmiCycle: send SMI special cycle. Reset: 0. 1=Send a SMI special cycle.	
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Error-on-read,Error-on-write : Write-only,Error-on-read.	
1	SmmEnter: enter SMM. Reset: 0. 1=Enter SMM.	
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Error-on-read,Error-on-write : Write-only,Error-on-read.	
0	SmmDismiss: clear SMI. Reset: 0. 1=Clear the SMI pending flag.	
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Error-on-read,Error-on-write : Write-only,Error-on-read.	

MSRC001_0117 [Virtual Machine Host Save Physical Address] (Core::X86::Msr::VM_HSAVE_PA)

Reset: 0000_0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC0010117	
Bits	Description	
63:48	Reserved. Read-only, Error-on-write-1. Reset: 0000h.	
47:12	2 VM_HSAVE_PA: physical address of host save area. Read-write. Reset: 0 0000 0000h. This register contains	
	the physical address of a 4-KB region where VMRUN saves host state and where vm-exit restores host state from.	
	Writing this register causes a #GP if (FFFF_FFF_Fh >= VM_HSAVE_PA >= FFFD_0000_0h) or if either the	
	TSEG or ASEG regions overlap with the range defined by this register.	
11:0	Reserved. Read-only, Error-on-write-1. Reset: 000h.	

MSRC001_0118 [SVM Lock Key] (Core::X86::Msr::SvmLockKey)

Read-write. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010118

Bits Description

63:0 **SvmLockKey**: **SVM lock key**. Read-write. Reset: Fixed,0000_0000_0000_0000h. Writes to this register when (Core::X86::Msr::VM_CR[Lock] == 0) modify SvmLockKey. If ((Core::X86::Msr::VM_CR[Lock] == 1) && (SvmLockKey!=0) && (The write value == The value stored in SvmLockKey)) for a write to this register then hardware updates Core::X86::Msr::VM_CR[Lock]=0.

MSRC001_011A [Local SMI Status] (Core::X86::Msr::LocalSmiStatus)

Read-write. Reset: 0000_0000_0000_0000h.

This register returns the same information that is returned in Core::X86::Smm::LocalSmiStatus portion of the SMM save state. The information in this register is only updated when Core::X86::Msr::SMM_CTL[SmmDismiss] is set by software.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001011A

Bits Description

63:32 Reserved.

31:0 LocalSmiStatus. Read-write. Reset: 0000 0000h. See Core::X86::Smm::LocalSmiStatus.

MSRC001_011B [AVIC Doorbell] (Core::X86::Msr::AvicDoorbell)

Write-only,Error-on-read. Reset: 0000_0000_0000_0000h.

The ApicId is a physical APIC Id; not valid for logical APIC ID.

Enable: (Core::X86::Cpuid::SvmRevFeatIdEdx[AVIC]==1).

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001011B Bits Description

63.8	Reserved. Write-only Error-on-read.	Reset: 00	0000	0000	0000h	

7:0 ApicId: APIC ID [7:0]. Write-only, Error-on-read. Reset: 00h.

MSRC001_011E [VM Page Flush] (Core::X86::Msr::VMPAGE_FLUSH)

Reset:	t: XXXX_XXXX_XXXX_XXXh.			
Writes	to this M	SR cause 4KB of encrypted, guest-tagged data to be flushed from caches if present.		
_lthree[1	:0]_core[3:0]	_thread[1:0]; MSRC001011E		
Bits	Descript	ion		
63:12	2 VirtualAddr. Reset: X_XXXX_XXXX_XXXh. Guest physical address of page to flush.			
	AccessType: Core::X86::Msr::SYS_CFG[SMEE] ? Write-only,Error-on-read : Error-on-read,Error-on-write.			
11:0	ASID. Reset: XXXh. ASID to use for flush. Writing reserved values generates #GP.			
	AccessType: Core::X86::Msr::SYS_CFG[SMEE] ? Write-only,Error-on-read : Error-on-read,Error-on-write.			
	ValidValues:			
	Value Description			
	00Fh- Valid ASID			
	000h			
	FFFh-	FFFh- Reserved.		
	010h			

MSRC001_0130 [Guest Host Communication Block] (Core::X86::Msr::GHCB)

Read-write. Reset: 0000 0000 0000 0000h.

If Core::X86::Msr::GHCB is accessed in hypervisor mode, #GP is generated.

- _lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010130
- Bits Description

63:0 **GHCBPA**. Read-write. Reset: 0000_0000_0000_0000h. Guest physical address of GHCB.

MSRC001_0131 [SEV Status] (Core::X86::Msr::SEV_Status)

Read,I	Read,Error-on-write. Reset: 0000_0000_0000_0000h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010131		
Bits	Description		
63:2	Reserved.		
1	SevEsEnabled. Read, Error-on-write. Reset: 0. 1=The guest was launched with the Sev-ES feature enabled in		
	VMCB offset 90h.		
0	SevEnabled. Read, Error-on-write. Reset: 0. 1=The guest was launched with SEV feature enabled in VMCB		
	offset 90h.		

MSRC001_0140 [OS Visible Work-around Length] (Core::X86::Msr::OSVW_ID_Length)

Read-	Read-write. Reset: 0000_0000_0000_0000h.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010140	
Bits	Description	
63:16	Reserved.	
15:0	OSVWIdLength: OS visible work-around ID length. Read-write. Reset: 0000h. See the Revision Guide for the	
	definition of this field; see 1.2 [Reference Documents].	

MSRC001_0141 [OS Visible Work-around Status] (Core::X86::Msr::OSVW_Status)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0010141

Bits Description

63:0 **OsvwStatusBits: OS visible work-around status bits**. Read-write. Reset: 0000_0000_0000_0000h. See the Revision Guide for the definition of this field; see 1.2 [Reference Documents].

MSRC001_020[0...A] [Performance Event Select [5:0]] (Core::X86::Msr::PERF_CTL)

Read-write. Reset: 0000 0000 0000 0000h.

See 2.1.11 [Performance Monitor Counters]. Core::X86::Msr::PERF_LEGACY_CTL is an alias of MSRC001_020[6,4,2,0].

Bits	Descripti	thread[1:0]_n[5:0]; MSRC001_020[A,8,6,4,2,0]			
	2 Reserved.				
	HostGuestOnly: count only host/guest events. Read-write. Reset: 0h.				
11.10	ValidValues:				
	Value	Description			
	Oh	Count all events, irrespective of guest/host.			
	1h	Count guest events if $[SVME] == 1$.			
	2h	Count bost events if $[SVME] == 1$.			
	3h				
20.26		Count an guest and nost events in [3 v ME] 1.			
	Reserved.	- 4[11.9]			
		ect[11:8]: performance event select. Read-write. Reset: 0h.			
31:24	CntMask: counter mask. Read-write. Reset: 00h. Controls the number of events counted per clock cycle.				
	ValidValu				
	Value	Description			
	00h	The corresponding PERF_CTR[5:0] register increments by the number of events occurring in a clock			
		cycle. Maximum number of events in one cycle is 32.			
	/Fh-01h	When $Inv = 0$, the corresponding PERF_CTR[5:0] register increments by 1, if the number of events			
		occurring in a clock cycle is greater than or equal to the CntMask value. When $Inv == 1$, the			
		corresponding PERF_CTR[5:0] register increments by 1, if the number of events occurring in a clock			
	FFh-	cycle is less than CntMask value. Reserved.			
		Keselveu.			
22	80h Inv: invert counter mask. Read-write. Reset: 0. See CntMask.				
23 22					
		le performance counter. Read-write. Reset: 0. 1=Performance event counter is enabled.			
21	Reserved.				
20		int: enable APIC interrupt . Read-write. Reset: 0. 1=APIC performance counter LVT interrupt is enabled to			
	generate an interrupt via Core::X86::Apic::PerformanceCounterLvtEntry when the performance counter overflows.				
19	Reserved.				
19					
10	Edge : edge detect . Read-write. Reset: 0. 0=Level detect. 1=Edge detect. Read-write. The edge count mode increments the counter when a transition happens on the monitored event. If the event selected is changed without				
		the counter, an extra edge is falsely detected when the first event is a static 0 and the second event is a			
	static one. To avoid this false edge detection, disable the counter when changing the event and then enable the				
		ith a second MSR write.			
17.16		lode: OS and user mode. Read-write. Reset: 0h.			
17.10	ValidValu				
	Value	Description			
	Oh	Count no events.			
	1h	Count user events (CPL>0).			
	2h	Count OS events (CPL=0).			
	211 3h				
15.0		Count all events, irrespective of the CPL.			
15:8	UnitMask: event qualification. Read-write. Reset: 00h. Each UnitMask bit further specifies or qualifies the				
	event specified by EventSelect. All events selected by UnitMask are simultaneously monitored. Unless otherwise				
	stated, the UnitMask values shown may be combined (logically ORed) to select any desired combination of the				
	sub-events for a given event. In some cases, certain combinations can result in misleading counts, or the				
	UnitMask value is an ordinal rather than a bit mask. These situations are described where applicable, or should be				
	obvious from the event descriptions. For events where no UnitMask table is shown, the UnitMask is Unused. When selecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set				
	to zero.				

7:0 **EventSelect[7:0]**: **event select**. Read-write. Reset: 00h. EventSelect[11:0] = {EventSelect[11:8], EventSelect[7:0]}. EventSelect specifies the event or event duration in a processor unit to be counted by the corresponding PERF_CTR[5:0] register. The events are specified in 2.1.11.3 [Core Performance Monitor Counters]. Some events are reserved; when a reserved event is selected, the results are undefined.

MSRC001_020[1...B] [Performance Event Counter [5:0]] (Core::X86::Msr::PERF_CTR)

Reset: 0000_0000_0000_0000h.

See Core::X86::Msr::PERF_CTL. Core::X86::Msr::PERF_LEGACY_CTR is an alias of MSRC001_020[7,5,3,1]. Also can be read via x86 instructions RDPMC ECX=[05:00].

_lthree[1:0]_core[3:0]_thread[1:0]_n[5:0]; MSRC001_020[B,9,7,5,3,1]

Bits Description

63:48 Reserved. Read-only. Reset: Fixed,0000h.

47:0 **CTR**: **performance counter value**. Read-write, Volatile. Reset: 0000_0000_0000h.

MSRC001_023[0...A] [L3 Performance Event Select [5:0]] (Core::X86::Msr::ChL3PmcCfg)

Read-	write. Rese	et: 0000_0000_0000h.		
	[1:0]_n[5:0]; MSRC001_023[A,8,6,4,2,0]			
Bits	Descripti			
63:56		Lask. Read-write. Reset: 00h. Controls which of the 8 threads in the complex are being counted.		
	ValidVal			
	Bit	Description		
	[0]	Core 0 Thread 0 mask.		
	[1]	Core 0 Thread 1 mask.		
	[2]	Core 1 Thread 0 mask.		
	[3]	Core 1 Thread 1mask.		
	[4]	Core 2 Thread 0 mask.		
	[5]	Core 2 Thread 1 mask.		
	[6]	Core 3 Thread 0 mask.		
	[7]	Core 3 Thread 1 mask.		
55:52	Reserved	·		
51:48				
	ValidValues:			
	Bit Description			
	[0] L3 Slice 0 mask.			
	[1]	L3 Slice 1 mask.		
	[2]	L3 Slice 2 mask.		
	[3]	L3 Slice 3 mask.		
47:23	Reserved			
22	Enable: Enable L3 performance counter. Read-write. Reset: 0. 1=Enable.			
21:16	Reserved.			
15:8		k: event qualification. Read-write. Reset: 00h. Each UnitMask bit further specifies or qualifies the		
		cified by EventSelect. All events selected by UnitMask are simultaneously monitored. Unless otherwise		
	stated, the UnitMask values shown may be combined (logically ORed) to select any desired combination of the			
	sub-events for a given event. In some cases, certain combinations can result in misleading counts, or the			
		value is an ordinal rather than a bit mask. These situations are described where applicable, or should be		
		rom the event descriptions. For events where no UnitMask table is shown, the UnitMask is Unused.		
	to zero.	ecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set		
7:0		: event select. Read-write. Reset: 00h.		
/.0	Evenuser	. Event select. Acad-witte. Reset. 0011.		

MSRC001_023[1...B] [L3 Performance Event Counter [5:0]] (Core::X86::Msr::ChL3Pmc)

Reset: 0000_0000_0000h.		
Also can be read via x86 instructions RDPMC ECX=[0F:0A].		
_lthree[1:0]_n[5:0]; MSRC001_023[B,9,7,5,3,1]		
Bits Description		
63:49 Reserved.		
48 Overflow . Read-write. Reset: 0.		
47:32 CountHi. Read-write, Volatile. Reset: 0000h.		
31:0 CountLo. Read-write, Volatile. Reset: 0000_0000h.		
MSRC001_0299 [RAPL Power Unit] (Core::X86::Msr::RAPL_PWR_UNIT)		
Read-only, Volatile. Reset: 0000 0000 000A 1003h.		
lthree[1:0]: MSRC0010299		

_lthree[]	:0]; MSRC00	10299		
Bits	Descripti	on		
63:20	Reserved.	Reserved.		
19:16	TU: Time	e Units in seconds. Read-only, Volatile. Reset: Ah. Time information (in Seconds) is based on the		
	multiplier	; 1/2^TU; where TU is an unsigned integer. Default value is 1010b, indicating time unit is in 976		
	microseco	onds increment.		
	ValidValu	ues:		
	Value	Description		
	Fh-0h	1/2^ <value> Seconds</value>		
15:13	Reserved.			
12:8	ESU: Energy Status Units. Read-only, Volatile. Reset: 10h. Energy information (in Joules) is based on the			
	multiplier, 1/2^ESU; where ESU is an unsigned integer. Default value is 10000b, indicating energy status unit is			
	in 15.3 micro-Joules increment.			
	ValidValues:			
	Value Description			
	1Fh-00h	1/2^ <value> Joules</value>		
7:4	Reserved			
3:0	PU: Power Units. Read-only, Volatile. Reset: 3h. Power information (in Watts) is based on the multiplier, 1/			
	2^PU; where PU is an unsigned integer. Default value is 0011b, indicating power unit is in 1/8 Watts increment.			
	ValidValu	ues:		
	Value	Description		

MSRC001_029A [Core Energy Status] (Core::X86::Msr::CORE_ENERGY_STAT)

Read-	Read-only,Volatile. Reset: 0000_0000_0000_0000h.	
_lthree[1	:0]_core[3:0]; MSRC001029A	
Bits	Description	
63:32	Reserved.	
31:0 TotalEnergyConsumed. Read-only,Volatile. Reset: 0000_0000h.		
MSRC001 029B [Package Energy Status] (Core::X86::Msr::PKG ENERGY STAT)		

Read-only, Volatile. Reset: 0000 0000 0000 0000h.

1/2^<Value> Watts

lthree[1:0];	MSRC001029B

Fh-0h

Bits Description

63:32 Reserved.

31:0 TotalEnergyConsumed. Read-only, Volatile. Reset: 0000 0000h.

2.1.10.4 MSRs - MSRC001_1xxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSRC001_1002 [CPUID Features for CPUID Fn0000007_E[A,B]X] (Core::X86::Msr::CPUID_7_Features)

Read-write.		
Core::X86::Msr::CPUID_7_Features[63:32] provides control over values read from		
Core::X86::Cpuid::StructExtFeatIdEax0; Core::X86::Msr::CPUID_7_Features[31:0] provides control over values read		
	from Core::X86::Cpuid::StructExtFeatIdEbx0.	
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011002		
Bits	*	
63:30	Reserved.	
29	SHA. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SHA].	
28:24	Reserved.	
23	CLFSHOPT. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[CLFSHOPT].	
22:21	Reserved.	
20	SMAP. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SMAP].	
19	ADX. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[ADX].	
18	RDSEED. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[RDSEED].	
17:9	Reserved.	
8	BMI2. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[BMI2].	
7	SMEP. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SMEP].	
6	Reserved.	
5	AVX2. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[AVX2].	
4	Reserved.	
3	BMI1. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[BMI1].	
2:1	Reserved.	
0	FSGSBASE. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[FSGSBASE].	

MSRC001_1003 [Thermal and Power Management CPUID Features] (Core::X86::Msr::CPUID_PWR_THERM)

Read-write.		
Core::X86::Msr::CPUID PWR THERM provides control over values read from		
Core::X86::Cpuid::ThermalPwrMgmtEcx.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011003		
Bits	Description	
63:1	Reserved.	
0	EffFreq. Read-write. Reset: Core::X86::Cpuid::ThermalPwrMgmtEcx[EffFreq].	

MSRC001_1004 [CPUID Features for CPUID Fn00000001_E[C,D]X] (Core::X86::Msr::CPUID_Features)

MSRC001_1004 [C1 UID Features for C1 UID Filoso000001_E[C,D]A] (CoreA80NistC1 UID_Features)		
Read-write.		
Core::X86::Msr::CPUID Features[63:32] provides control over values read from Core::X86::Cpuid::FeatureIdEcx;		
Core::X86::Msr::CPUID Features[31:0] provides control over values read from Core::X86::Cpuid::FeatureIdEdx.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011004	
Bits	Description	
63	Reserved.	
62	RDRAND. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[RDRAND].	
61	F16C. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[F16C].	
60	AVX. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[AVX].	
59	OSXSAVE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[OSXSAVE]. Modifies	
	Core::X86::Cpuid::FeatureIdEcx[OSXSAVE] only if CR4[OSXSAVE].	

XSAVE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[XSAVE].
AES. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[AES]. Modifies
Core::X86::Cpuid::FeatureIdEcx[AES] only if the reset value is 1.
Reserved.
POPCNT. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[POPCNT].
MOVBE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[MOVBE].
Reserved.
SSE42. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE42].
SSE41. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE41].
Reserved.
PCID. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[PCID].
Reserved.
CMPXCHG16B. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[CMPXCHG16B].
FMA. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[FMA].
Reserved.
SSSE3. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSSE3].
Reserved.
Monitor. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[Monitor]. Modifies
Core::X86::Cpuid::FeatureIdEcx[Monitor] only if ~Core::X86::Msr::HWCR[MonMwaitDis].
Reserved.
PCLMULQDQ. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[PCLMULQDQ]. Modifies
Core::X86::Cpuid::FeatureIdEcx[PCLMULQDQ] only if the reset value is 1.
SSE3. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE3].
Reserved.
HTT. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[HTT].
Reserved.
SSE2. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SSE2].
SSE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SSE].
FXSR. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[FXSR].
MMX: MMX [™] instructions. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MMX].
Reserved.
CLFSH. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CLFSH].
Reserved.
PSE36. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PSE36].
PAT. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PAT].
CMOV. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CMOV].
MCA. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MCA].
PGE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PGE].
MTRR. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MTRR].
SysEnterSysExit. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SysEnterSysExit].
Reserved.
APIC. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[APIC]. Modifies
Core::X86::Cpuid::FeatureIdEdx[APIC] only if Core::X86::Msr::APIC_BAR[ApicEn].
CMPXCHG8B. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CMPXCHG8B].
MCE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MCE].
PAE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PAE].
MSR. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MSR].
TSC . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[TSC].

- 2 **DE**. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[DE].
- 1 **VME**. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[VME].

0 **FPU**. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[FPU].

MSRC001_1005 [CPUID Features for CPUID Fn80000001_E[C,D]X] (Core::X86::Msr::CPUID_ExtFeatures)

Read-v	
	X86::Msr::CPUID_ExtFeatures[63:32] provides control over values read from
	X86::Cpuid::FeatureExtIdEcx; Core::X86::Msr::CPUID_ExtFeatures[31:0] provides control over values read from
	X86::Cpuid::FeatureExtIdEdx.
	:0]_core[3:0]_thread[1:0]; MSRC0011005
	Description
	Reserved.
61	MwaitExtended. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[MwaitExtended].
60	PerfCtrExtLLC. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtLLC].
59	PerfTsc. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfTsc].
58	DataBreakpointExtension. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].
57	Reserved.
56	PerfCtrExtDF. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtDF].
55	PerfCtrExtCore. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtCore].
54	TopologyExtensions. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions].
53:50	Reserved.
49	TCE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[TCE].
48	FMA4. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[FMA4]. Init: 0.
47	LWP. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[LWP].
46	Reserved.
45	WDT. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[WDT].
44	SKINIT. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SKINIT].
43	XOP. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[XOP].
42	IBS. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[IBS]. Init: BIOS,0. To enable the IBS feature, use
	BIOS setup option.
41	OSVW. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[OSVW].
40	ThreeDNowPrefetch. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ThreeDNowPrefetch].
39	MisAlignSse. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[MisAlignSse].
38	SSE4A. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SSE4A].
37	ABM. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ABM].
36	AltMovCr8. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[AltMovCr8].
35	ExtApicSpace. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ExtApicSpace].
34	SVM. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SVM].
33	CmpLegacy. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[CmpLegacy].
32	LahfSahf. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[LahfSahf].
31	ThreeDNow: 3DNow! TM instructions. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[ThreeDNow].
30	ThreeDNowExt. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[ThreeDNowExt].
29	LM. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[LM].
28	Reserved.
27	RDTSCP. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[RDTSCP].
26	Page1GB. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[Page1GB].
25	FFXSR . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FFXSR].
23	FXSR . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FXSR].
23	MMX : MMX[™] instructions . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MMX].
25	minizis, minizis misti actionis, noual write, nesoti, core2800epulai catarel.nial.ax[minizis].

22	MmxExt. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MmxExt].
21	Reserved.
20	NX. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[NX].
19:18	Reserved.
17	PSE36. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PSE36].
16	PAT. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PAT].
15	CMOV. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[CMOV].
14	MCA. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MCA].
13	PGE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PGE].
12	MTRR. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MTRR].
11	SysCallSysRet. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[SysCallSysRet].
10	Reserved.
9	APIC. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[APIC].
8	CMPXCHG8B. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[CMPXCHG8B].
7	MCE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MCE].
6	PAE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PAE].
5	MSR. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MSR].
4	TSC. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[TSC].
3	PSE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PSE].
2	DE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[DE].
1	VME. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[VME].
0	FPU. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FPU].

MSRC001_1019 [Address Mask For DR1 Breakpoint] (Core::X86::Msr::DR1_ADDR_MASK)

Read-write. Reset: 0000 0000 0000 0000h.

Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011019

 Bits
 Description

 63:32
 Reserved.

31:0 AddrMask: mask for DR linear address data breakpoint DR1. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR1_ADDR_MASK. AddrMask[11:0] qualifies the DR1 linear address instruction breakpoint, allowing the DR1 instruction breakpoint on a range of addresses in memory.

MSRC001_101A [Address Mask For DR2 Breakpoint] (Core::X86::Msr::DR2_ADDR_MASK)

Read-write. Reset: 0000 0000 0000 0000h.

Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001101A

Bits Description

63:32 Reserved.

31:0 AddrMask: mask for DR linear address data breakpoint DR2. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR0_ADDR_MASK. AddrMask[11:0] qualifies the DR2 linear address instruction breakpoint, allowing the DR2 instruction breakpoint

on a range of addresses in memory.

MSRC001_101B [Address Mask For DR3 Breakpoint] (Core::X86::Msr::DR3_ADDR_MASK)

Read-write. Reset: 0000 0000 0000 0000h.

Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001101B

Bits Description

63:32 Reserved.

31:0 AddrMask: mask for DR linear address data breakpoint DR3. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR0_ADDR_MASK. AddrMask[11:0] qualifies the DR3 linear address instruction breakpoint, allowing the DR3 instruction breakpoint on a range of addresses in memory.

MSRC001_1023 [Table Walker Configuration] (Core::X86::Msr::TW_CFG)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1:0]_core[3:0]; MSRC0011023	
Bits	Description
63:50	Reserved.
49	TwCfgCombineCr0Cd: combine CR0_CD for both threads of a core. Read-write. Reset: 0. Init: BIOS,1.
	1=The host Cr0_Cd values from the two threads are OR'd together and used by both threads.
48:0	Reserved.

MSRC001_1027 [Address Mask For DR0 Breakpoints] (Core::X86::Msr::DR0_ADDR_MASK)

Read-write. Reset: 0000_0000_0000_0000h.

Support for DR0[31:12] is indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension]. See Core::X86::Msr::DR1 ADDR MASK.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011027

Bits Description

63:32 Reserved.

31:0 **DR0**: mask for DR0 linear address data breakpoint. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR1_ADDR_MASK. This field qualifies the DR0 linear address data breakpoint, allowing the DR0 data breakpoint on a range of addresses in memory. AddrMask[11:0] qualifies the DR0 linear address instruction breakpoint, allowing the DR0 instruction breakpoint on a range of addresses in memory. DR0[31:12] is only valid for data breakpoints. The legacy DR0 breakpoint function is provided by DR0[31:0] == 0000_0000h). The mask bits are active high. DR0 is always used, and it can be used in conjunction with any debug function that uses DR0.

MSRC001_1030 [IBS Fetch Control] (Core::X86::Msr::IBS_FETCH_CTL)

Reset: 0000_0000_0000_0000h.

See 2.1.12 [Instruction Based Sampling (IBS)].

The IBS fetch sampling engine is described as follows:

- The periodic fetch counter is an internal 20-bit counter:
 - The periodic fetch counter [19:4] is set to IbsFetchCnt[19:4] and the periodic fetch counter [3:0] is set according to IbsRandEn when IbsFetchEn is changed from 0 to 1.
 - It increments for every fetch cycle that completes when IbsFetchEn == 1 and IbsFetchVal == 0.
 The periodic fetch counter is undefined when IbsFetchEn == 0 or IbsFetchVal == 1.
 - When IbsFetchCnt[19:4] is read it returns the current value of the periodic fetch counter [19:4].
- When the periodic fetch counter reaches {IbsFetchMaxCnt[19:4],0h} and the selected instruction fetch completes or is aborted:
 - IbsFetchVal is set to 1.
 - Drivers can't assume that IbsFetchCnt[19:4] is 0 when IbsFetchVal == 1.
 - The status of the operation is written to the IBS fetch registers (this register,
- Core::X86::Msr::IBS_FETCH_LINADDR and Core::X86::Msr::IBS_FETCH_PHYSADDR).
- An interrupt is generated as specified by Core::X86::Msr::IBS_CTL. The interrupt service routine associated with this interrupt is responsible for saving the performance information stored in IBS execution registers.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011030	
Bits	Description
63:59	Reserved.
58	IbsFetchL2Miss: L2 cache miss for the sampled fetch. Read-only, Volatile. Reset: 0. 1=The instruction fetch
	missed in the L2 Cache. Qualified by (IbsFetchComp $== 1$).
57	Ibs DendEn: rendem instruction fetch tagging enable Dead write Deset: 0. 0-Dits[2:0] of the fetch counter

57 [IbsRandEn: random instruction fetch tagging enable. Read-write. Reset: 0. 0=Bits[3:0] of the fetch counter

	are set to	0h when IbsFetchEn is set to start the fetch counter. 1=Bits[3:0] of the fetch counter are randomized
	when IbsFetchEn is set to start the fetch counter.	
56	IbsL2Tlt	Miss: instruction cache L2TLB miss. Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in
	the L2 TI	
55	the L1 TI	Miss: instruction cache L1TLB miss . Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in
54:53		PgSz: instruction cache L1TLB page size . Read-only, Volatile. Reset: 0h. Indicates the page size of the
54.55		n in the L1 TLB. This field is only valid if IbsPhyAddrValid == 1.
	ValidVal	
	Value	Description
	0h	4 KB
	1h	2 MB
	2h	1 GB
	3h	Reserved
52	IbsPhyA	ddrValid: instruction fetch physical address valid. Read-only, Volatile. Reset: 0. 1=The physical
		1 Core::X86::Msr::IBS_FETCH_PHYSADDR and the IbsL1TlbPgSz field are valid for the instruction
	fetch.	
51	IbsIcMis	s: instruction cache miss. Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in the
	instructio	n cache.
50		Comp: instruction fetch complete. Read-only, Volatile. Reset: 0. 1=The instruction fetch completed and
		s available for use by the instruction decoder.
49		Val: instruction fetch valid. Read-only, Volatile. Reset: 0. 1=New instruction fetch data available. When
		set, the fetch counter stops counting and an interrupt is generated as specified by
		6::Msr::IBS_CTL. This bit must be cleared for the fetch counter to start counting. When clearing this bit, can write 0000h to IbsFetchCnt[19:4] to start the fetch counter at IbsFetchMaxCnt[19:4].
48		En: instruction fetch enable. Read-write. Reset: 0. 1=Instruction fetch sampling is enabled.
		Lat: instruction fetch latency. Read-only, Volatile. Reset: 0000h. Indicates the number of clock cycles
47.32		in the instruction fetch was initiated to when the data was delivered to the core. If the instruction fetch is
		d before the fetch completes, this field returns the number of clock cycles from when the instruction
		initiated to when the fetch was abandoned.
31:16	IbsFetch	Cnt[19:4]. Read-write, Volatile. Reset: 0000h. Provides read/write access to bits[19:4] of the periodic
	fetch cou	nter. Programming this field to a value greater than or equal to IbsFetchMaxCnt[19:4] results in
	undefined	l behavior.
15:0		MaxCnt[19:4]. Read-write. Reset: 0000h. Specifies bits[19:4] of the maximum count value of the
		etch counter. Programming this field to 0000h and setting IbsFetchEn results in undefined behavior.
	Bits[3:0]	of the maximum count are always 0000b.

MSRC001_1031 [IBS Fetch Linear Address] (Core::X86::Msr::IBS_FETCH_LINADDR)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Reset: 0000_0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011031		
Bits	Description	
63:0	IbsFetchLinAd: instruction fetch linear address. Read-write, Volatile. Reset: 0000_0000_0000_0000h.	
	Provides the linear address in canonical form for the tagged instruction fetch.	

MSRC001_1032 [IBS Fetch Physical Address] (Core::X86::Msr::IBS_FETCH_PHYSADDR)

Reset: 0000_0000_0000	0_0000h.
-----------------------	----------

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011032

Bits Description

63:48 Reserved. Read-only. Reset: Fixed,0000h.

47:0 **IbsFetchPhysAd: instruction fetch physical address**. Read-write, Volatile. Reset: 0000_0000_0000h. Provides

the physical address for the tagged instruction fetch. The lower 12 bits are not modified by address translation, so they are always the same as the linear address. This field contains valid data only if Core::X86::Msr::IBS_FETCH_CTL[IbsPhyAddrValid] is asserted.

MSRC001_1033 [IBS Execution Control] (Core::X86::Msr::IBS_OP_CTL)

Reset: 0000 0000 0000 0000h.

See 2.1.12 [Instruction Based Sampling (IBS)].

The IBS execution sampling engine is described as follows for IbsOpCntCtl == 1. If IbsOpCntCtl == 1n then references to "periodic op counter" mean "periodic cycle counter".

- The periodic op counter is an internal 27-bit counter:
 - It is set to IbsOpCurCnt[26:0] when IbsOpEn is changed from 0 to 1.
 - It increments every dispatched op when IbsOpEn == 1 and IbsOpVal == 0.
 - The periodic op counter is undefined when IbsOpEn == 0 or IbsOpVal == 1.
 - When IbsOpCurCnt[26:0] is read then it returns the current value of the periodic micro-op counter [26:0].
 - When the periodic micro-op counter reaches IbsOpMaxCnt:
 - The next dispatched micro-op is tagged if IbsOpCntCtl == 1. A valid op in the next dispatched line is tagged if IbsOpCntCtl == 0. See IbsOpCntCtl.
 - The periodic micro-op counter [26:7]=0; [6:0] is randomized by hardware.
 - The periodic micro-op counter is not modified when a tagged micro-op is flushed.
- When a tagged micro-op is retired:
 - IbsOpVal is set to 1.
 - Drivers can't assume that IbsOpCurCnt is 0 when IbsOpVal == 1.
- The status of the operation is written to the IBS execution registers (this register, Core::X86::Msr::IBS_OP_RIP, Core::X86::Msr::IBS_OP_DATA, Core::X86::Msr::IBS_OP_DATA2, Core::X86::Msr::IBS_OP_DATA3, Core::X86::Msr::IBS_DC_LINADDR and Core::X86::Msr::IBS_DC_PHYSADDR).
- An interrupt is generated as specified by Core::X86::Msr::IBS_CTL. The interrupt service routine associated with this interrupt is responsible for saving the performance information stored in IBS execution registers.

lthree[1:0] core[3:0] thread[1:0]; MSRC0011033

Bits	Descripti		
63:59	Reserved.		
58:32	IbsOpCurCnt[26:0]: periodic op counter current count. Read-write, Volatile. Reset: 000 0000h. Returns the		
	current va	lue of the periodic op counter.	
31:27	Reserved.		
26:20	IbsOpMa	axCnt[26:20]: periodic op counter maximum count. Read-write. Reset: 00h. See IbsOpMaxCnt[19:4].	
19	IbsOpCntCtl: periodic op counter count control. Read-write. Reset: 0. 0=Count clock cycles; a 1-of-4 round-		
	robin cou	nter selects an op in the next dispatch line; if the op pointed to by the round-robin counter is invalid,	
	then the n	ext younger valid op is selected. 1=Count dispatched Micro-Ops; when a roll-over occurs, the counter is	
	preloaded	with a pseudorandom 7 bit value between 1 and 127.	
18	IbsOpVa	I: micro-op sample valid. Read-write, Volatile. Reset: 0. 1=New instruction execution data available;	
		lic op counter is disabled from counting. An interrupt may be generated when this bit is set as specified	
	by Core::	X86::Msr::IBS_CTL[LvtOffset].	
17	IbsOpEn	: micro-op sampling enable. Read-write. Reset: 0. 1=Instruction execution sampling enabled.	
16	Reserved.		
15:0	IbsOpMaxCnt[19:4] : periodic op counter maximum count. Read-write. Reset: 0000h. IbsOpMaxCnt[26:0] =		
		axCnt[26:20], IbsOpMaxCnt[19:4], 0000b}. Specifies maximum count value of the periodic op counter.	
	Bits [3:0] of the maximum count are always 0000b.		
	ValidValues:		
	Value	Description	
	0008h-	Reserved.	
	0000h		
	FFFFh-	<value> *16 Ops.</value>	

0009h

MSRC001_1034 [IBS Op Logical Address] (Core::X86::Msr::IBS_OP_RIP)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

 Ithree[1:0]_core[3:0]_thread[1:0]; MSRC0011034

 Bits
 Description

 63:0
 IbsOpRip: micro-op linear address. Read-write, Volatile. Reset: 0000_0000_00000_0000h. Linear address in canonical form for the instruction that contains the tagged micro-op.

MSRC001_1035 [IBS Op Data] (Core::X86::Msr::IBS_OP_DATA)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.

_lthree[1	ree[1:0]_core[3:0]_thread[1:0]; MSRC0011035	
Bits	Description	
63:41	Reserved.	
40	IbsOpMicrocode. Read-write, Volatile. Reset: 0. 1=Tagged operation from microcode.	
39	IbsOpBrnFuse: fused branch micro-op. Read-write, Volatile. Reset: 0. 1=Tagged operation was a fused branch	
	micro-op. Support indicated by Core::X86::Cpuid::IbsIdEax[OpBrnFuse].	
38	IbsRipInvalid: RIP is invalid. Read-write, Volatile. Reset: 0. 1=Tagged operation RIP is invalid. Support	
	indicated by Core::X86::Cpuid::IbsIdEax[RipInvalidChk].	
37	IbsOpBrnRet: branch micro-op retired. Read-write, Volatile. Reset: 0. 1=Tagged operation was a branch micro-	
	op that retired.	
36	IbsOpBrnMisp: mispredicted branch micro-op. Read-write, Volatile. Reset: 0. 1=Tagged operation was a	
	branch micro-op that was mispredicted. Qualified by IbsOpBrnRet == 1.	
35	IbsOpBrnTaken: taken branch micro-op. Read-write, Volatile. Reset: 0. 1=Tagged operation was a branch	
	micro-op that was taken. Qualified by $IbsOpBrnRet == 1$.	
34	IbsOpReturn: return micro-op. Read-write, Volatile. Reset: 0. 1=Tagged operation was return micro-op.	
	Qualified by ($IbsOpBrnRet == 1$).	
33:32	Reserved.	
31:16	IbsTagToRetCtr: micro-op tag to retire count. Read-write, Volatile. Reset: 0000h. This field returns the number	
	of cycles from when the micro-op was tagged to when the micro-op was retired. This field is equal to	
	IbsCompToRetCtr when the tagged micro-op is a NOP.	
15:0	IbsCompToRetCtr: micro-op completion to retire count. Read-write, Volatile. Reset: 0000h. This field returns	
	the number of cycles from when the micro-op was completed to when the micro-op was retired.	

MSRC001_1036 [IBS Op Data 2] (Core::X86::Msr::IBS_OP_DATA2)

000_000	0_000_0000h.	
Data is only valid for load operations that miss both the L1 data cache and the L2 cache. If a load operation crosses a		
ine bound	lary, the data returned in this register is the data for the access to the lower cache line.	
0]_core[3:0]_	_thread[1:0]; MSRC0011036	
Descripti	on	
Reserved.		
CacheHi	tSt: IBS cache hit state. Read-write, Volatile. Reset: 0. 0=M State. 1=O State. Valid when the data	
source typ	pe is Cache(2h).	
RmtNode	e: IBS request destination node. Read-write, Volatile. Reset: 0. 0=The request is serviced by the NB in	
the same	node as the core. 1=The request is serviced by the NB in a different node than the core. Valid when	
NbIbsRec	ISrc is non-zero.	
Reserved.		
DataSrc: northbridge IBS request data source. Read-write. Reset: 0h.		
ValidValues:		
Value	Description	
0h	No valid status.	
	only vali ne bound <u>core[3:0]</u> Descripti Reserved CacheHir ource ty] RmtNode he same VbIbsRec Reserved DataSrc: ValidValie	

1h	Reserved.
2h	Cache: data returned from another cores cache.
3h	DRAM: data returned from DRAM.
4h	Reserved for remote cache.
6h-5h	Reserved.
7h	Other: data returned from MMIO/Config/PCI/APIC.

MSRC001_1037 [IBS Op Data 3] (Core::X86::Msr::IBS_OP_DATA3)

Read-write, Volatile. Reset: 0000 0000 0000 0000h. If a load or store operation crosses a 256-bit boundary, the data returned in this register is the data for the access to the data below the 256-bit boundary. _lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011037 **Bits** Description 63:48 IbsTlbRefillLat: L1 DTLB refill latency. Read-write, Volatile. Reset: 0000h. The number of cycles from when a L1 DTLB refill is triggered by a tagged op to when the L1 DTLB fill has been completed. 47:32 **IbsDcMissLat**: data cache miss latency. Read-write, Volatile. Reset: 0000h. Indicates the number of clock cycles from when a miss is detected in the data cache to when the data was delivered to the core. The value returned by this counter is not valid for data cache writes or prefetch instructions. IbsOpDcMissOpenMemRegs: outstanding memory requests on DC fill. Read-write, Volatile. Reset: 00h. The 31:26 number of allocated, valid DC MABs when the MAB corresponding to a tagged DC miss op is deallocated. Includes the MAB allocated by the sampled op. 00000b=No information provided. 25:22 **IbsOpMemWidth**: **load/store size in bytes**. Read-write, Volatile. Reset: 0h. Report the number of bytes the load or store is attempting to access. ValidValues: Value Description No information provided. 0h 1h Byte. 2h Word. 3h DW 4h OW. OW. 5h Fh-6h Reserved. 21 **IbsSwPf:** software prefetch. Read-write, Volatile. Reset: 0. 1=The op is a software prefetch. IbsL2Miss: L2 cache miss for the sampled operation. Read-write, Volatile. Reset: 0. 1=The operation missed in 20 the L2, regardless of whether the op initiated the request to the L2. 19 IbsDcL2TlbHit1G: data cache L2TLB hit in 1G page. Read-write Volatile. Reset: 0, 1=The physical address for the tagged load or store operation was present in a 1G page table entry in the data cache L2TLB. IbsDcPhyAddrValid: data cache physical address valid. Read-write, Volatile. Reset: 0. 1=The physical address 18 in Core::X86::Msr::IBS DC PHYSADDR is valid for the load or store operation. IbsDcLinAddrValid: data cache linear address valid. Read-write, Volatile. Reset: 0. 1=The linear address in 17 Core::X86::Msr::IBS DC LINADDR is valid for the load or store operation. DcMissNoMabAlloc: DC miss with no MAB allocated. Read-write, Volatile. Reset: 0. 1=The tagged load or 16 store operation hit on an already allocated MAB. **IbsDcLockedOp**: locked operation. Read-write, Volatile. Reset: 0. 1=Tagged load or store operation is a locked 15 operation. IbsDcUcMemAcc: UC memory access. Read-write, Volatile. Reset: 0. 1=Tagged load or store operation accessed 14 uncacheable memory. IbsDcWcMemAcc: WC memory access. Read-write, Volatile. Reset: 0. 1=Tagged load or store operation 13 accessed write combining memory. 12:9 Reserved.

8	IbsDcMisAcc: misaligned access. Read-write, Volatile. Reset: 0. 1=The tagged load or store operation crosses a
	256 bit address boundary.
7	IbsDcMiss: data cache miss. Read-write, Volatile. Reset: 0. 1=The cache line used by the tagged load or store
	was not present in the data cache.
6	IbsDcL2tlbHit2M: data cache L2TLB hit in 2M page. Read-write, Volatile. Reset: 0. 1=The physical address
	for the tagged load or store operation was present in a 2M page table entry in the data cache L2TLB.
5	IbsDcL1TlbHit1G: data cache L1TLB hit in 1G page. Read-write, Volatile. Reset: 0. 1=The physical address
	for the tagged load or store operation was present in a 1G page table entry in the data cache L1TLB.
4	IbsDcL1TlbHit2M: data cache L1TLB hit in 2M page. Read-write, Volatile. Reset: 0. 1=The physical address
	for the tagged load or store operation was present in a 2M page table entry in the data cache L1TLB.
3	IbsDcL2TlbMiss: data cache L2TLB miss. Read-write, Volatile. Reset: 0. 1=The physical address for the tagged
	load or store operation was not present in the data cache L2TLB.
2	IbsDcL1tlbMiss: data cache L1TLB miss. Read-write, Volatile. Reset: 0. 1=The physical address for the tagged
	load or store operation was not present in the data cache L1TLB.
1	IbsStOp: store op. Read-write, Volatile. Reset: 0. 1=Tagged operation is a store operation.
0	IbsLdOp : load op . Read-write, Volatile. Reset: 0. 1=Tagged operation is a load operation.

MSRC001_1038 [IBS DC Linear Address] (Core::X86::Msr::IBS_DC_LINADDR)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC0011038	
Bits	Description
63:0	IbsDcLinAd. Read-write, Volatile. Reset: 0000_0000_0000_0000h. Provides the linear address in canonical form
	for the tagged load or store operation. This field contains valid data only if
	Core::X86::Msr::IBS_OP_DATA3[IbsDcLinAddrValid] is asserted.

MSRC001_1039 [IBS DC Physical Address] (Core::X86::Msr::IBS_DC_PHYSADDR)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.

Bits	Description
63:48	Reserved.
47:0	IbsDcPhysAd: load or store physical address. Read-write, Volatile. Reset: 0000_0000_0000h. Provides the
	physical address for the tagged load or store operation. The lower 12 bits are not modified by address translation,
	so they are always the same as the linear address. This field contains valid data only if
	Core::X86::Msr::IBS_OP_DATA3[IbsDcPhyAddrValid] is asserted.

Read,Error-on-write. Reset: 0000_0000_0000_0X0Xh.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001103A	
Bits	Description	
63:9	Reserved.	
8	LvtOffsetVal: local vector table offset valid. Read, Error-on-write. Reset: X.	
7:4	Reserved.	
3:0	LvtOffset: local vector table offset. Read, Error-on-write. Reset: Xh.	

MSRC001_103B [IBS Branch Target Address] (Core::X86::Msr::BP_IBSTGT_RIP)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Support for this register indicated by Core::X86::Cpuid::IbsIdEax[BrnTrgt].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001103B

Bits Description

63:0 **IbsBrTarget**. Read-write, Volatile. Reset: 0000_0000_0000_0000h. The logical address in canonical form for the branch target. Contains a valid target if non-0. Qualified by Core::X86::Msr::IBS_OP_DATA[IbsOpBrnRet] == 1.

MSRC001_103C [IBS Fetch Control Extended] (Core::X86::Msr::IC_IBS_EXTD_CTL)

Read-	Read-only,Volatile. Reset: 0000_0000_0000_0000h.		
	Support for this register indicated by Core::X86::Cpuid::IbsIdEax[IbsFetchCtlExtd].		
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC001103C		
Bits	Description		
63:16	Reserved.		
15:0	IbsItlbRefillLat: ITLB Refill Latency for the sampled fetch, if there is a reload. Read-only, Volatile. Reset:		
	0000h. The number of cycles when the fetch engine is stalled for an ITLB reload for the sampled fetch. If there is		
	no reload, the latency is 0.		

2.1.11 Performance Monitor Counters

When selecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set to zero.

2.1.11.1 RDPMC Assignments

There are six core performance events counters per thread, six performance events counters per L3 complex and four Data Fabric performance events counters mapped to the RDPMC instruction as follows:

- The RDPMC[5:0] instruction accesses core events. See 2.1.11.3 [Core Performance Monitor Counters].
- The RDPMC[F:A] instruction accesses L3 cache events. See 2.1.11.4 [L3 Cache Performance Monitor Counters].

2.1.11.2 Large Increment per Cycle Events

The maximum increment for a regular performance event is 15 (i.e., a 4-bit event). However some event types can have a large increment every cycle (example: Core::X86::Pmc::Core::FpRetSseAvxOps).

An option is provided for merging a pair of even/odd performance monitors to acquire an accurate count. The even performance monitor is programmed with the desired event (example: Core::X86::Pmc::Core::FpRetSseAvxOps). The odd performance monitor is programmed with the event Core::X86::Pmc::Core::Merge with the enable bit (En) turned on and with the remaining bits off. The performance monitor combines the count value to an 8-bit increment event and extends the counter to a 64-bit counter.

Software wanting to preload a value to a merged counter pair writes the high-order 16-bit value to the low-order 16 bits of the odd counter and then writes the low-order 48-bit value to the even counter. Reading the even counter of the merged counter pair returns the full 64-bit value.

If an even performance monitor is programmed with the event Core::X86::Pmc::Core::Merge the read results are undetermined. If an even performance monitor is programmed with a non-merge-able event (i.e., less then 5-bit event) while the corresponding odd performance monitor is programmed as Merge, the read results are undetermined. When discontinuing use of a merged counter pair, clear the Merge event from the odd performance monitor.

PMCxFFF [Merge] (Core::X86::Pmc::Core::Merge)

See 2.	1.11.2 [Large Increment per Cycle Events].
PMCxF	FF
Bits	Description
7:0	Reserved.

2.1.11.3 Core Performance Monitor Counters

This section provides the core performance counter events that may be selected through

Core::X86::Msr::PERF_CTL[EventSelect[11:8],EventSelect[7:0],UnitMask]. See Core::X86::Msr::PERF_CTR. See Core::X86::Msr::PERF_LEGACY_CTL and Core::X86::Msr::PERF_LEGACY_CTR.

2.1.11.3.1 Floating Point (FP) Events

PMCx000 [FPU Pipe Assignment] (Core::X86::Pmc::Core::FpuPipeAssignment)

Read-only. Reset: 00h.

The number of operations (uOps) and dual-pipeuOps dispatched to each of the 4 FPU execution pipelines. This event reflects how busy the FPU pipelines are and may be used for workload characterization. This includes all operations performed by x87, MMXTM, and SSE instructions, including moves. Each increment represents a one-cycle dispatch event. This event is a speculative event. (See Core::X86::Pmc::Core::ExRetMmxFpInstr). Since this event includes non-numeric operations it is not suitable for measuring MFLOPS.

PMCx00	00
-	-

Bits	Description
7	Dual3: Total number multi-pipe uOps assigned to Pipe 3. Read-only. Reset: 0.
6	Dual2: Total number multi-pipe uOps assigned to Pipe 2. Read-only. Reset: 0.
5	Dual1: Total number multi-pipe uOps assigned to Pipe 1. Read-only. Reset: 0.
4	Dual0: Total number multi-pipe uOps assigned to Pipe 0. Read-only. Reset: 0.
3	Total3: Total number uOps assigned to Pipe 3. Read-only. Reset: 0.
2	Total2: Total number uOps assigned to Pipe 2. Read-only. Reset: 0.
1	Total1: Total number uOps assigned to Pipe 1. Read-only. Reset: 0.
0	Total0: Total number uOps assigned to Pipe 0. Read-only. Reset: 0.

PMCx001 [FP Scheduler Empty] (Core::X86::Pmc::Core::FpSchedEmpty)

This is a speculative event. The number of cycles in which the FPU scheduler is empty. Note that some Ops like FP loads bypass the scheduler. Invert this (Core::X86::Msr::PERF_CTL[Inv] == 1) to count cycles in which at least one FPU operation is present in the FPU.

PMCx001

Bits Description

7:0 Reserved.

PMCx002 [Retired x87 Floating Point Operations] (Core::X86::Pmc::Core::FpRetx87FpOps)

_	
Read-	write. Reset: 00h.
The n	umber of x87 floating-point Ops that have retired. The number of events logged per cycle can vary from 0 to 8.
PMCx00)2
Bits	Description
7:3	Reserved.
2	DivSqrROps: Divide and square root Ops. Read-write. Reset: 0.
1	MulOps: Multiply Ops. Read-write. Reset: 0.
0	AddSubOps: Add/subtract Ops. Read-write. Reset: 0.

PMCx003 [Retired SSE/AVX Operations] (Core::X86::Pmc::Core::FpRetSseAvxOps)

 Read-write. Reset: 00h.

 This is a retire-based event. The number of retired SSE/AVX FLOPS. The number of events logged per cycle can vary from 0 to 64. This event can count above 15. See 2.1.11.2 [Large Increment per Cycle Events].

 PMCx003
 Description

 7
 DpMultAddFlops: Double precision multiply-add FLOPS. Read-write. Reset: 0. Multiply-add counts as 2 FLOPS.

- 6 **DpDivFlops: Double precision divide/square root FLOPS**. Read-write. Reset: 0.
- 5 **DpMultFlops: Double precision multiply FLOPS**. Read-write. Reset: 0.

4	DpAddSubFlops: Double precision add/subtract FLOPS. Read-write. Reset: 0.
3	SpMultAddFlops: Single precision multiply-add FLOPS. Read-write. Reset: 0. Multiply-add counts as 2
	FLOPS.
2	SpDivFlops: Single-precision divide/square root FLOPS. Read-write. Reset: 0.
1	SpMultFlops: Single-precision multiply FLOPS. Read-write. Reset: 0.
0	

0 **SpAddSubFlops**: **Single-precision add/subtract FLOPS**. Read-write. Reset: 0.

PMCx004 [Number of Move Elimination and Scalar Op Optimization] (Core::X86::Pmc::Core::FpNumMovElimScalOp)

Read-write. Reset: 00h.

This is a dispatch based speculative event, and is useful for measuring the effectiveness of the Move elimination and Scalar code optimization schemes.

PMCx004

Bits | Description

7:4 Reserved.

- 3 **Optimized: Number of Scalar Ops optimized.** Read-write. Reset: 0.
- 2 **OptPotential: Number of Ops that are candidates for optimization (have Z-bit either set or pass)**. Readwrite. Reset: 0.
- 1 SseMovOpsElim: Number of SSE Move Ops eliminated. Read-write. Reset: 0.
- 0 SseMovOps: Number of SSE Move Ops. Read-write. Reset: 0.

PMCx005 [Retired Serializing Ops] (Core::X86::Pmc::Core::FpRetiredSerOps)

Read-	write. Reset: 00h.
The nu	umber of serializing Ops retired.
PMCx00)5
Bits	Description
7:4	Reserved.
3	X87CtrlRet: x87 control word mispredict traps due to mispredictions in RC or PC, or changes in mask bits.
	Read-write. Reset: 0.
2	X87BotRet: x87 bottom-executing uOps retired. Read-write. Reset: 0.
1	SseCtrlRet: SSE control word mispredict traps due to mispredictions in RC, FTZ or DAZ, or changes in
	mask bits. Read-write. Reset: 0.
0	SseBotRet: SSE bottom-executing uOps retired. Read-write. Reset: 0.

2.1.11.3.2 LS Events

PMCx024 [Bad Status 2] (Core::X86::Pmc::Core::LsBadStatus2)

Read-write. Reset: 00h.

Store To Load Interlock (STLI) are loads that were unable to complete because of a possible match with an older store, and the older store could not do STLF for some reason. There are a number of reasons why this occurs, and this perfmon organizes them into three major groups.

Bits	Description
7:3	Reserved.
2	StlfNoData . Read-write. Reset: 0. The load is capable of forwarding from an older store (i.e. the address match/overlap between the load and the older store) was good and everything works from an address perspective, but the store's data has not been produced by EX or FP yet so it can't be forwarded.
1	

1 **StliOther**. Read-write. Reset: 0. All the other reasons. The most common among these is that there is only a partial overlap between the store and the load, for example there's an 8B store to address A and a 16B load starting at address A. STLF can't be performed in this case because only some of the load's data is coming from

the store, so the load gets StliOther. Another StliOther case is if the load hits a non-cacheable store that's sitting in the non-cacheable buffers (WCBs).
StliNoState. Read-write. Reset: 0. The STLF is validated using DC way instead of an address compare. The store that wants to STLF is required to be a DC hit and have a valid DC way. The STLF candidate store is chosen based on address bits 11:0 overlap, and the DC way of that store is compared to the way of the load. If the store is in a DC miss state, then it doesn't have a valid DC way and so cannot validate STLF. The load gets StliNoState and can't complete.

PMCx025 [Locks] (Core::X86::Pmc::Core::LsLocks)

Read-	write. Reset: 00h.
Unit N	Aasks ORed.
PMCx02	5
Bits	Description
7:4	Reserved.
3	SpecLockMapCommit. Read-write. Reset: 0.
2	SpecLock. Read-write. Reset: 0.
1	NonSpecLock. Read-write. Reset: 0.
0	BusLock. Read-write. Reset: 0.

PMCx026 [Retired CLFLUSH Instructions] (Core::X86::Pmc::Core::LsRetClClush)

The nu	umber of retired CLFLUSH instructions. This is a non-speculative event.
PMCx02	26
Bits	Description
7:0	Reserved.

PMCx027 [Retired CPUID Instructions] (Core::X86::Pmc::Core::LsRetCpuid)

The m	umber of CPUID instructions retired.
PMCx02	27
Bits	Description
7:0	Reserved.

PMCx029 [LS Dispatch] (Core::X86::Pmc::Core::LsDispatch)

Read-	write. Reset: 00h.
Counts	s the number of operations dispatched to the LS unit. Unit Masks ADDed.
PMCx02	9
Bits	Description
7:3	Reserved.
2	LdStDispatch: Load-op-Stores. Read-write. Reset: 0.
1	StoreDispatch. Read-write. Reset: 0.
0	LdDispatch. Read-write. Reset: 0.

PMCx02B [SMIs Received] (Core::X86::Pmc::Core::LsSmiRx)

Count	s the number of SMIs received.
PMCx02	28
Bits	Description

PMCx035 [Store to Load Forward] (Core::X86::Pmc::Core::LsSTLF)

Numb	Number of STLF hits.		
PMCx03	PMCx035		
Bits	Description		
7:0	Reserved.		

PMCx037 [Store Commit Cancels 2] (Core::X86::Pmc::Core::LsStCommitCancel2)

Read-	Read-write. Reset: 00h.	
PMCx037		
Bits	Description	
7:1	Reserved.	
0	StCommitCancelWcbFull. Read-write. Reset: 0. A non-cacheable store and the non-cacheable commit buffer is	
	full.	

PMCx040 [Data Cache Accesses] (Core::X86::Pmc::Core::LsDcAccesses)

The number of accesses to the data cache for load and store references. This may include certain microcode scratchpad accesses, although these are generally rare. Each increment represents an eight-byte access, although the instruction may only be accessing a portion of that. This event is a speculative event.

PMCX040		
Bits	Description	

7:0 Description

7:0 Reserved.

PMCx043 [Data Cache Refills from System] (Core::X86::Pmc::Core::LsRefillsFromSys)

Read-	Read-write. Reset: 00h.	
Dema	Demand Data Cache Fills by Data Source.	
PMCx04	PMCx043	
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	
5	Reserved.	
4	LS_MABRESP_RMT_CACHE. Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node	
	is on a different die.	
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.	
2	Reserved.	
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX	
	and the address's Home Node is on this thread's die.	
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.	

PMCx045 [L1 DTLB Miss] (Core::X86::Pmc::Core::LsL1DTlbMiss)

Read-	Read-write. Reset: 00h.	
PMCx04	PMCx045	
Bits	Description	
7	TlbReload1GL2Miss. Read-write. Reset: 0.	
6	TlbReload2ML2Miss. Read-write. Reset: 0.	
5	TlbReload32KL2Miss. Read-write. Reset: 0.	
4	TlbReload4KL2Miss. Read-write. Reset: 0.	
3	TlbReload1GL2Hit. Read-write. Reset: 0.	
2	TlbReload2ML2Hit. Read-write. Reset: 0.	
1	TlbReload32KL2Hit. Read-write. Reset: 0.	
0	TlbReload4KL2Hit. Read-write. Reset: 0.	

PMCx046 [Tablewalker allocation] (Core::X86::Pmc::Core::LsTablewalker)

Read-	Read-write. Reset: 00h.	
PMCx04	PMCx046	
Bits	Description	
7:4	Reserved.	
3	PerfMonTablewalkAllocIside1. Read-write. Reset: 0.	

2 PerfMonTablewalkAllocIside0. Read-write. Reset: 0.

PerfMonTablewalkAllocDside1. Read-write. Reset: 0. 1

PerfMonTablewalkAllocDside0. Read-write. Reset: 0. 0

PMCx047 [Misaligned loads] (Core::X86::Pmc::Core::LsMisalAccesses)

PMCx047	
Bits	Description
7:0	Reserved.

PMCx04B [Prefetch Instructions Dispatched] (Core::X86::Pmc::Core::LsPrefInstrDisp)

Read-	Read-write. Reset: 00h.	
Softw	Software Prefetch Instructions Dispatched.	
PMCx04	PMCx04B	
Bits	Description	
7:3	Reserved.	
2	PrefetchNTA. Read-write. Reset: 0.	
1	StorePrefetchW. Read-write. Reset: 0.	
0	LoadPrefetchW: Prefetch, Prefetch_T0_T1_T2. Read-write. Reset: 0.	

PMCx052 [Ineffective Software Prefetchs] (Core::X86::Pmc::Core::LsInefSwPref)

Read-	Read-write. Reset: 00h.	
The nu	The number of software prefetches that did not fetch data outside of the processor core.	
PMCx05	PMCx052	
Bits	Description	
7:2	Reserved.	
1	MabMchCnt. Read-write. Reset: 0. Software PREFETCH instruction saw a match on an already-allocated miss	
	request buffer.	
0	DataPipeSwPfDcHit. Read-write. Reset: 0. Software PREFETCH instruction saw a DC hit.	

PMCx059 [Software Prefetch Data Cache Fills] (Core::X86::Pmc::Core::LsSwPfDcFills)

Read-write. Reset: 00h.		
Software Prefetch Data Cache Fills by Data Source		
PMCx05	PMCx059	
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	
5	Reserved.	
4	LS_MABRESP_RMT_CACHE. Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node	
	is on a different die.	
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.	
2	Reserved.	
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX	
	and the address's Home Node is on this thread's die.	
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.	
$\mathbf{D}\mathbf{M}\mathbf{C} = 0\mathbf{F}\mathbf{A} \begin{bmatrix} \mathbf{H}_{1} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{1} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{1} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{D}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{C} \begin{bmatrix} \mathbf{H}_{2} & \mathbf{H}_{2} & \mathbf{H}_{2} \end{bmatrix} = \mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}\mathbf{H}$		

PMCx05A [Hardware Prefetch Data Cache Fills] (Core::X86::Pmc::Core::LsHwPfDcFills)

Read-write. Reset: 00h.	
Hardware Prefetch Data Cache Fills by Data Source	
PMCx05A	
Bits	Description
7	Reserved.
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.

5	Reserved.
4	LS_MABRESP_RMT_CACHE. Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node
	is on a different die.
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.
2	Reserved.
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX
	and the address's Home Node is on this thread's die.
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.

PMCx05B [Table Walker Data Cache Fills by Data Source] (Core::X86::Pmc::Core::LsTwDcFills)

Read-	Read-write. Reset: 00h.		
PMCx05B			
Bits	Description		
7	Reserved.		
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.		
5	Reserved.		
4	LS_MABRESP_RMT_CACHE. Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node		
	is on a different die.		
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.		
2	Reserved.		
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX		
	and the address's Home Node is on this thread's die.		
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.		

PMCx076 [Cycles not in Halt] (Core::X86::Pmc::Core::LsNotHaltedCyc)

PMCx076	
Bits	Description
7:0	Reserved.

2.1.11.3.3 IC and BP Events

Note: All instruction cache events are speculative events unless specified otherwise.

PMCx080 [32 Byte Instruction Cache Fetch] (Core::X86::Pmc::Core::IcFw32)

The number of 32B fetch windows transferred from IC pipe to DE instruction decoder (includes non-cacheable and cacheable fill responses).

Bits	Description
7:0	Reserved.

PMCx081 [32 Byte Instruction Cache Misses] (Core::X86::Pmc::Core::IcFw32Miss)

The number of 32B fetch windows tried to read the L1 IC and missed in the full tag.		
PMCx08	PMCx081	
Bits	Description	
7:0	Reserved.	

PMCx082 [Instruction Cache Refills from L2] (Core::X86::Pmc::Core::IcCacheFillL2)

The number of 64 byte instruction cache line was fulfilled from the L2 cache.		
PMCx08	PMCx082	
Bits	Description	
7:0	Reserved.	

PMCx083 [Instruction Cache Refills from System] (Core::X86::Pmc::Core::IcCacheFillSys)

The number of 64 byte instruction cache line fulfilled from system memory or another cache.	
PMCx083	

BitsDescription7:0Reserved.

PMCx084 [L1 ITLB Miss, L2 ITLB Hit] (Core::X86::Pmc::Core::BpL1TlbMissL2Hit)

The number of instruction fetches that miss in the L1 ITLB but hit in the L2 ITLB.

PMCx084

Bits Description

7:0 Reserved.

PMCx085 [L1 ITLB Miss, L2 ITLB Miss] (Core::X86::Pmc::Core::BpL1TlbMissL2Miss)

The number of instruction fetches that miss in both the L1 and L2 TLBs.			
PMCx08	PMCx085		
Bits	Description		
7:0	Reserved.		

PMCx087 [Instruction Pipe Stall] (Core::X86::Pmc::Core::IcFetchStall)

Read-	Read-write. Reset: 00h.	
PMCx087		
Bits	Description	
7:3	Reserved.	
2	IcStallAny. Read-write. Reset: 0. Instruction Cache pipeline was stalled during this clock cycle for any reason.	
1	IcStallDqEmpty. Read-write. Reset: 0. Instruction Cache pipeline was stalled during this clock cycle due to	
	upstream not providing fetch addresses quickly.	
0	IcStallBackPressure. Read-write. Reset: 0. Instruction Cache pipeline was stalled during this clock cycle due to	
	downstream queues being full.	

PMCx08A [L1 BTB Correction] (Core::X86::Pmc::Core::BpL1BTBCorrect)

PMCx08A	
Bits	Description
7:0	Reserved.

PMCx08B [L2 BTB Correction] (Core::X86::Pmc::Core::BpL2BTBCorrect)

P	PMCx08B	
	Bits	Description
	7:0	Reserved.
_		

PMCx08C [Instruction Cache Lines Invalidated] (Core::X86::Pmc::Core::IcCacheInval)

Read-write. Reset: 0	Un.	
The number of instruction cache lines invalidated. A non-SMC event is CMC (cross modifying code), either from the		
other thread of the core or another core.		
PMCx08C		
Bits Description		
7:2 Reserved.		
1 L2Invalidati	ngProbe. Read-write. Reset: 0. IC line invalidated due to L2 invalidating probe (external or LS).	
0 FillInvalidat	ed. Read-write. Reset: 0. IC line invalidated due to overwriting fill response.	

PMCx099 [ITLB Reloads] (Core::X86::Pmc::Core::BpTlbRel)

The number of ITLB reload requests.			
PMCx09	MCx099		
Bits	Description		

7:0 Reserved.

PMCx28A [OC Mode Switch] (Core::X86::Pmc::Core::IcOcModeSwitch)

Read-write. Reset: 00h.	
PMCx28A	
Bits	Description
7:2	Reserved.
1	OcIcModeSwitch: OC to IC mode switch. Read-write. Reset: 0.
0	IcOcModeSwitch: IC to OC mode switch. Read-write. Reset: 0.

2.1.11.3.4 **DE Events**

PMCx0AF [Dynamic Tokens Dispatch Stall Cycles 0] (Core::X86::Pmc::Core::DeDisDispatchTokenStalls0)

Read-write Reset: 00h		
	Read-write. Reset: 00h.	
Cycles where a dispatch group is valid but does not get dispatched due to a token stall.		
PMCx0AF		
Bits Description		
7 Reserved.		
6 RetireTokenStall: RETIRE Tokens unavailable. Read-write. Reset: 0.		
5 AGSQTokenStall: AGSQ Tokens unavailable. Read-write. Reset: 0.		
4 ALUTokenStall: ALU tokens total unavailable. Read-write. Reset: 0.		
3 ALSQ3_0_TokenStall. Read-write. Reset: 0.		
2 ALSQ3TokenStall: ALSQ 3 Tokens unavailable. Read-write. Reset: 0.		
1 ALSQ2TokenStall: ALSQ 2 Tokens unavailable. Read-write. Reset: 0.		
0 ALSQ1TokenStall: ALSQ 1 Tokens unavailable. Read-write. Reset: 0.		

2.1.11.3.5 EX (SC) Events

PMCx0C0 [Retired Instructions] (Core::X86::Pmc::Core::ExRetInstr)

PMCx0C0	
Bits	Description
7:0	Reserved.

PMCx0C1 [Retired Uops] (Core::X86::Pmc::Core::ExRetCops)

The number of uOps retired. This includes all processor activity (instructions, exceptions, interrupts, microcode assists, etc.). The number of events logged per cycle can vary from 0 to 4.

- PMCx0C1
- Bits Description

7:0 Reserved.

PMCx0C2 [Retired Branch Instructions] (Core::X86::Pmc::Core::ExRetBrn)

The number of branch instructions retired. This includes all types of architectural control flow changes, including exceptions and interrupts.

- PMCx0C2
- Bits Description
- 7:0 Reserved.

PMCx0C3 [Retired Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnMisp)

The number of branch instructions retired, of any type, that were not correctly predicted. This includes those for which prediction is not attempted (far control transfers, exceptions and interrupts).

PMCx0C3	
Dita	Decomintion

Bits Description

7:0 Reserved.

PMCx0C4 [Retired Taken Branch Instructions] (Core::X86::Pmc::Core::ExRetBrnTkn)

The number of taken branches that were retired. This includes all types of architectural control flow changes, including exceptions and interrupts.

PMCx0C4

Bits Description

7:0 Reserved.

PMCx0C5 [Retired Taken Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnTknMisp)

The number of retired taken branch instructions that were mispredicted.

PMCx0C5

Bits Description

7:0 Reserved.

PMCx0C6 [Retired Far Control Transfers] (Core::X86::Pmc::Core::ExRetBrnFar)

The number of far control transfers retired including far call/jump/return, IRET, SYSCALL and SYSRET, plus exceptions and interrupts. Far control transfers are not subject to branch prediction.

PMCx0C6

Bits Description

7:0 Reserved.

PMCx0C7 [Retired Branch Resyncs] (Core::X86::Pmc::Core::ExRetBrnResync)

The number of resync branches. These reflect pipeline restarts due to certain microcode assists and events such as writes to the active instruction stream, among other things. Each occurrence reflects a restart penalty similar to a branch mispredict. This is relatively rare.

- PMCx0C7
- **Bits** Description

7:0 Reserved.

PMCx0C8 [Retired Near Returns] (Core::X86::Pmc::Core::ExRetNearRet)

The number of near return instructions (RET or RET Iw) retired. PMCx0C8

Bits Description

7:0 Reserved.

PMCx0C9 [Retired Near Returns Mispredicted] (Core::X86::Pmc::Core::ExRetNearRetMispred)

The number of near returns retired that were not correctly predicted by the return address predictor. Each such mispredict incurs the same penalty as a mispredicted conditional branch instruction.

PMCx0C9

Bits Description

7:0 Reserved.

PMCx0CA [Retired Indirect Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnIndMisp)

PMCx0CA

Bits Description

7:0 Reserved.

PMCx0CB [Retired MMXTM/FP Instructions] (Core::X86::Pmc::Core::ExRetMmxFpInstr)

Read-write. Reset: 00h.

The number of MMX, SSE or x87 instructions retired. The UnitMask allows the selection of the individual classes of instructions as given in the table. Each increment represents one complete instruction. Since this event includes non-

numeric instructions it is not suitable for measuring MFLOPS. PMCx0CB

Bits	Description
7:3	Reserved.
2	SseInstr. Read-write. Reset: 0. SSE instructions (SSE, SSE2, SSE3, SSSE3, SSE4A, SSE41, SSE42, AVX).
1	MmxInstr Read-write Reset 0 MMX instructions

I MmxInstr. Read-write. Reset: 0. MMX instructions.

0 **X87Instr: x87 instructions**. Read-write. Reset: 0.

PMCx0D1 [Retired Conditional Branch Instructions] (Core::X86::Pmc::Core::ExRetCond)

- PMCx0D1
 Bits Description
- 7:0 Reserved.

PMCx0D3 [Div Cycles Busy count] (Core::X86::Pmc::Core::ExDivBusy)

PMCx0I	03
Bits	Description
7:0	Reserved.

PMCx0D4 [Div Op Count] (Core::X86::Pmc::Core::ExDivCount)

PMCx0D4	
Bits	Description
7:0	Reserved.

PMCx1CF [Tagged IBS Ops] (Core::X86::Pmc::Core::ExTaggedIbsOps)

Read-	write. Reset: 00h.
PMCx10	CF
Bits	Description
7:3	Reserved.
2	IbsCountRollover. Read-write. Reset: 0. Number of times an op could not be tagged by IBS because of a
	previous tagged op that has not retired.
1	IbsTaggedOpsRet: Number of Ops tagged by IBS that retired. Read-write. Reset: 0.
0	IbsTaggedOps: Number of Ops tagged by IBS. Read-write. Reset: 0.

PMCx1D0 [Retired Fused Branch Instructions] (Core::X86::Pmc::Core::ExRetFusBrnchInst)

The number of fused retired branch instructions retired per cycle. The number of events logged per cycle can vary from 0 to 3.

PMCXIL	PMCXID0	
Bits	Description	
7:0	Reserved.	

2.1.11.3.6 L2 Cache Events.

PMCx060 [Requests to L2 Group1] (Core::X86::Pmc::Core::L2RequestG1)

Read-write. Reset: 00h.		
PMCx06	0	
Bits	Description	
7	RdBlkL. Read-write. Reset: 0.	
6	RdBlkX. Read-write. Reset: 0.	
5	LsRdBlkC_S. Read-write. Reset: 0.	
4	CacheableIcRead. Read-write. Reset: 0.	
3	ChangeToX. Read-write. Reset: 0.	

2	PrefetchL2. Read-write. Reset: 0. Assume core should also count these and allow the breakdown between H/W
	vs. S/W and LS vs. IC.
1	L2HwPf. Read-write. Reset: 0.
0	OtherRequests . Read-write. Reset: 0. Events covered by Core::X86::Pmc::Core::L2RequestG2.

PMCx061 [Requests to L2 Group2] (Core::X86::Pmc::Core::L2RequestG2)

Read-write. Reset: 00h.

Multi-events in that LS and IF requests can be received simultaneous.

PMCx061

Bits Description

- 7 **Group1**. Read-write. Reset: 0. All Group 1 commands not in unit0.
- 6 **LsRdSized**. Read-write. Reset: 0. RdSized, RdSized32, RdSized64.
- 5 **LsRdSizedNC**. Read-write. Reset: 0. RdSizedNC, RdSized32NC, RdSized64NC.
- 4 IcRdSized. Read-write. Reset: 0.
- 3 **IcRdSizedNC**. Read-write. Reset: 0.
- 2 **SmcInval**. Read-write. Reset: 0.
- 1 **BusLocksOriginator**. Read-write. Reset: 0.
- 0 **BusLocksResponses**. Read-write. Reset: 0.

PMCx062 [L2 Latency] (Core::X86::Pmc::Core::L2Latancy)

Read-write. Reset: 00h.

Total cycles spent waiting for L2 fills to complete from L3 or memory, divided by four. This may be used to calculate average latency by multiplying this count by four and then dividing by the total number of L2 fills (unit mask Core::X86::Pmc::Core::L2RequestG1 == FEh). Event counts are for both threads. To calculate average latency, the number of fills from both threads must be used.

PMCx062

Bits	Description
7:1	Reserved.
0	L2CyclesWaitingOnFills. Read-write. Reset: 0.

PMCx063 [LS to L2 WBC requests] (Core::X86::Pmc::Core::L2WbcReq)

Read-	Read-write. Reset: 00h.				
PMCx06	3				
Bits	Description				
7	Reserved.				
6	WcbWrite. Read-write. Reset: 0.				
5	WcbClose. Read-write. Reset: 0.				
4	CacheLineFlush. Read-write. Reset: 0.				
3	I_LineFlush. Read-write. Reset: 0.				
2	ZeroByteStore. Read-write. Reset: 0. This becomes WriteNoData at SDP; this count does not include DVM Sync				
	Ops and bus locks which are counted in Core::X86::Pmc::Core::L2RequestG2.				
1	LocalIcClr: Local IC Clear. Read-write. Reset: 0.				
0	CLZero: Cache Line Zero. Read-write. Reset: 0.				

PMCx064 [Core to L2 Cacheable Request Access Status] (Core::X86::Pmc::Core::L2CacheReqStat)

Read-write. Reset: 00h.

This event does not count accesses to the L2 cache by the L2 prefetcher, but it does count accesses by the L1 prefetcher.
PMCx064

Bits Description

7 LsRdBlkCS: LS ReadBlock C/S Hit. Read-write. Reset: 0.

6 **LsRdBlkLHitX**: **LS Read Block L Hit X**. Read-write. Reset: 0.

- 5 LsRdBlkLHitS: LsRdBlkL Hit Shared. Read-write. Reset: 0.
- 4 LsRdBlkX: LsRdBlkX/ChgToX Hit X. Read-write. Reset: 0. Count RdBlkX finding Shared as a Miss.
- 3 LsRdBlkC: LS Read Block C S L X Change to X Miss. Read-write. Reset: 0.
- 2 IcFillHitX: IC Fill Hit Exclusive Stale. Read-write. Reset: 0.
- 1 **IcFillHitS**: **IC Fill Hit Shared**. Read-write. Reset: 0.
- 0 IcFillMiss: IC Fill Miss. Read-write. Reset: 0.

PMCx06D [Cycles with fill pending from L2] (Core::X86::Pmc::Core::L2FillPending)

Read-	Read-write. Reset: 00h.			
Total o	Total cycles spent with one or more fill requests in flight from L2.			
PMCx06	5D			
Bits	Description			
7:1	Reserved.			
0	L2FillBusy. Read-write. Reset: 0.			

2.1.11.4 L3 Cache Performance Monitor Counters

This section provides the core performance counter events that may be selected through Core::X86::Msr::ChL3PmcCfg. See Core::X86::Msr::ChL3Pmc.

2.1.11.4.1 L3 Cache PMC Events

L3PMCx01 [L3 Cache Accesses] (Core::X86::Pmc::L3::L3RequestG1)

Read-	Read-write. Reset: 00h.				
L3PMC>	x01				
Bits	Description				
7	Caching: L3 cache accesses. Read-write. Reset: 0.				
6:0	Reserved.				

L3PMCx06 [L3 Miss] (Core::X86::Pmc::L3::L3CombClstrState)

Read-	Read-write. Reset: 00h.			
L3PMC>	x06			
Bits	Description			
7:1	Reserved.			
0	RequestMiss: L3 miss. Read-write. Reset: 0.			

2.1.12 Instruction Based Sampling (IBS)

IBS is a code profiling mechanism that enables the processor to select a random instruction fetch or micro-Op after a programmed time interval has expired and record specific performance information about the operation. An interrupt is generated when the operation is complete as specified by Core::X86::Msr::IBS_CTL. An interrupt handler can then read the performance information that was logged for the operation.

The IBS mechanism is split into two parts: instruction fetch performance controlled by Core::X86::Msr::IBS_FETCH_CTL; and instruction execution performance controlled by Core::X86::Msr::IBS_OP_CTL. Instruction fetch sampling provides information about instruction TLB and instruction cache behavior for fetched instructions. Instruction execution sampling provides information about micro-Op execution behavior. The data collected for instruction fetch performance is independent from the data collected for instruction execution performance. Support for the IBS feature is indicated by the Core::X86::Cpuid::FeatureExtIdEcx[IBS]. Instruction fetch performance is profiled by recording the following performance information for the tagged instruction fetch:

- If the instruction fetch completed or was aborted. See Core::X86::Msr::IBS_FETCH_CTL.
- The number of clock cycles spent on the instruction fetch. See Core::X86::Msr::IBS_FETCH_CTL.
- If the instruction fetch hit or missed the IC, hit/missed in the L1 and L2 TLBs, and page size. See Core::X86::Msr::IBS_FETCH_CTL.
- The linear address, physical address associated with the fetch. See Core::X86::Msr::IBS_FETCH_LINADDR, Core::X86::Msr::IBS_FETCH_PHYSADDR.

Instruction execution performance is profiled by tagging one micro-Op associated with an instruction. Instructions that decode to more than one micro-Op return different performance data depending upon which micro-Op associated with the instruction is tagged. These micro-Ops are associated with the RIP of the next instruction to retire. The following performance information is returned for the tagged micro-Op:

- Branch and execution status for micro-ops. See Core::X86::Msr::IBS_OP_DATA.
- Branch target address for branch micro-ops. See Core::X86::Msr::BP IBSTGT RIP.
- The logical address associated with the micro-Op. See Core::X86::Msr::IBS_OP_RIP.
- The linear and physical address associated with a load or store micro-Op. See Core::X86::Msr::IBS DC LINADDR, Core::X86::Msr::IBS DC PHYSADDR.
- The data cache access status associated with the micro-Op: DC hit/miss, DC miss latency, TLB hit/miss, TLB page size. See Core::X86::Msr::IBS OP DATA3.
- The number clocks from when the micro-Op was tagged until the micro-Op retires. See Core::X86::Msr::IBS OP DATA.
- The number clocks from when the micro-Op completes execution until the micro-Op retires. See Core::X86::Msr::IBS OP DATA.
- Source information for DRAM and MMIO. See Core::X86::Msr::IBS OP DATA2.

3 Machine Check Architecture

3.1 Overview

The processor contains logic and registers to detect, log, and correct errors in the data or control paths. The Machine Check Architecture (MCA) defines the facilities by which processor and system hardware errors are logged and reported to system software. This allows system software to perform a strategic role in recovery from and diagnosis of hardware errors.

Refer to the AMD64 Architecture Programmer's Manual for an architectural overview and methods for determining the processor's level of MCA support.

The ability of hardware to generate a machine check exception upon an error is indicated by Core::X86::Cpuid::FeatureIdEdx[MCE] or Core::X86::Cpuid::FeatureExtIdEdx[MCE].

3.2 Machine Check Architecture Extensions

Support for Machine Check Architecture (MCA) Extensions is indicated by Core::X86::Cpuid::RasCap[ScalableMca].

Features of the MCA Extensions include:

- Increased MCA Bank Count: Features to support an expansion of the number of MCA banks supported by AMD processors.
- MCA Extension Registers: Expanded information logged in MCA banks to allow for improved error handling, better diagnosability, and future scalability.
- MCA DOER/SEER Roles: Separation of MCA information to take advantage of emerging software roles, namely Error Management (Dynamic Operational Error Handling, or DOER) for managing running programs, and Fault Management (Symptom Elaboration of Errors, or SEER) for hardware diagnosability and reconfiguration. This clearer separation is accompanied by the assurances of architectural state (vs. implementation dependent state), so that operating systems can rely on the state and exploit new functionality.

3.3 Machine Check Global Registers

Core::X86::Cpuid::FeatureIdEdx[MCE] or Core::X86::Cpuid::FeatureExtIdEdx[MCE] indicates the presence of the following machine check registers:

- Core::X86::Msr::MCG_CAP
 - Reports how many machine check register banks are supported. This is a per-thread value, and reflects the number of MCA banks visible to that thread. Some banks may be RAZ/WRIG either due to the bank being reserved or unused on this processor or because the block's MCA bank is controlled by another thread.
- Core::X86::Msr::MCG_STAT
 - Provides basic information about processor state after the occurrence of a machine check error.
- Core::X86::Msr::MCG_CTL
 - Used by software to enable or disable the logging and reporting of machine check errors in the error reporting banks.

3.4 Machine Check Banks

A processor contains multiple blocks, and some of them have machine check banks. A machine check bank logs and reports errors to software. MCA bank MSRs are located at MSR C000_2[FFF:000]. All unimplemented MSRs in the

56255 Rev 3.03 - July, 2018

MCA MSR space are RAZ/WRIG. See 3.5 [Machine Check Bank Registers] for a description of an MCA bank. Each MCA bank allocates address space for 16 MCA registers.

System software should read Core::X86::Msr::MCG_CAP[Count] to determine the number of machine check banks visible to the thread. The banks are numbered from 0 to one less than the value found in Core::X86::Msr::MCG_CAP[Count]. For example, if the Count field indicates five banks are supported, they are numbered MC0 through MC4. Each bank can be accessed using its MSR range or, for banks MC0 through MC31, via the legacy MCA MSR range.

All processors maintain the same mapping of MSR number to MCA bank number (MSRC000_2000 for the beginning of MCA Bank 0, MSRC000_2010 for the beginning of MCA Bank 1, etc.), regardless of what block the bank represents (see 3.7 [Determining Bank Type]). MCA Bank 4 is always read-as-zero (RAZ/WRIG).

The processor ensures that non-zero error status in an MCA bank is visible to exactly one thread in a system, and that error notifications are directed to that thread. Hardware also makes MCA bank configuration and control registers available to exactly one thread. Banks associated with a CPU core are controlled by the thread executing on that core. Banks associated with other blocks are controlled by the lowest-numbered logical thread on the same die.

Blocks capable of supporting MCA banks are given in Table 14 [Blocks Capable of Supporting MCA Banks]. Whether a particular block implements an MCA bank is processor-specific and can be determined by querying MCA_IPID for each MCA bank.

Acronym	Block Function
LS	Load-Store Unit
IF	Instruction Fetch Unit
L2	L2 Cache Unit
DE	Decode Unit
EX	Execution Unit
FP	Floating Point Unit
L3	L3 Cache Unit
PIE	Power Management, Interrupts, Etc.
CS	Coherent Slave
UMC	Unified Memory Controller
PB	Parameter Block

Table 14: Blocks Capable of Supporting MCA Banks

3.5 Machine Check Bank Registers

Machine check bank registers include the legacy MCA registers as well as registers associated with the MCA Extensions. If Core::X86::Cpuid::RasCap[ScalableMca] is set, all machine check banks in the processor contain an MCA_CONFIG register. A given MCA bank supports the remaining MCA Extension registers if it sets MCA_CONFIG[McaX].

The legacy MCA registers include:

- MCA_CTL
 - Enables error reporting via machine check exception.
- MCA_STATUS
 - Logs information associated with errors.
- MCA_ADDR
 - Logs address information associated with errors.
- MCA_MISC0
 - Logs miscellaneous information associated with errors.

The MCA Extension registers include:

- MCA_CONFIG
 - Provide configuration capabilities for this MCA bank.
- MCA_IPID
 - Provides information on the block associated with this MCA bank.
- MCA_SYND
 - Logs physical location information associated with a logged error.
- MCA_DESTATUS
 - Logs status information associated with a deferred error.
- MCA_DEADDR
 - Logs address information associated with a deferred error.
- MCA_MISC[1:4]
 - Provides additional threshold counters within an MCA bank.

Table 15 [Legacy MCA Registers] provides links to the description of each block's Legacy MCA registers. Table 16 [MCAX Registers] provides links to the description of each block's MCA Extension Registers.

Block	MCA Register				
	CTL	STATUS	ADDR	MISC	CTL_MASK
LS	MCA::LS::MCA_CTL_LS	MCA::LS::MCA_STATUS_	MCA::LS::MCA_ADDR_L	MCA::LS::MCA_MISC0_L	MCA::LS::MCA_CTL_MA
		LS	S	S	SK_LS
IF	MCA::IF::MCA_CTL_IF	MCA::IF::MCA_STATUS_I	MCA::IF::MCA_ADDR_IF	MCA::IF::MCA_MISC0_IF	MCA::IF::MCA_CTL_MAS
		F			K_IF
L2	MCA::L2::MCA_CTL_L2	MCA::L2::MCA_STATUS_	MCA::L2::MCA_ADDR_L	MCA::L2::MCA_MISC0_L	MCA::L2::MCA_CTL_MA
		L2	2		SK_L2
DE	MCA::DE::MCA_CTL_DE	MCA::DE::MCA_STATUS_	MCA::DE::MCA_ADDR_D	MCA::DE::MCA_MISC0_D	
		DE	E		SK_DE
EX	MCA::EX::MCA_CTL_EX	MCA::EX::MCA_STATUS_	MCA::EX::MCA_ADDR_E	MCA::EX::MCA_MISC0_E	
		EX	X	X	SK_EX
FP	MCA::FP::MCA_CTL_FP	MCA::FP::MCA_STATUS_F	MCA::FP::MCA_ADDR_F	MCA::FP::MCA_MISC0_F	
		Р	Р	Р	SK_FP
L3	MCA::L3::MCA_CTL_L3	MCA::L3::MCA_STATUS_	MCA::L3::MCA_ADDR_L	MCA::L3::MCA_MISC0_L	
		L3	3	3	SK_L3
PIE	MCA::PIE::MCA_CTL_PIE		MCA::PIE::MCA_ADDR_P		
		PIE	IE		SK_PIE
CS	MCA::CS::MCA_CTL_CS	MCA::CS::MCA_STATUS_	MCA::CS::MCA_ADDR_C	MCA::CS::MCA_MISC0_C	
		CS	S	~	SK_CS
UMC	MCA::UMC::MCA_CTL_U				
	MC	S_UMC	LUMC		ASK_UMC
				MCA::UMC::MCA_MISC1	
				UMC	
РВ		MCA::PB::MCA_STATUS_	MCA::PB::MCA_ADDR_P		
		РВ	В	В	SK_PB

Table 15: Legacy MCA Registers

Table 16: MCAX Registers

Block	MCA Register					
	CONFIG	IPID	SYND	DESTATUS	DEADDR	
LS	MCA::LS::MCA_CONFIG	MCA::LS::MCA_IPID_LS	MCA::LS::MCA_SYND_L	MCA::LS::MCA_DESTAT_	MCA::LS::MCA_DEADDR	
	LS		S	LS	LS	
IF	MCA::IF::MCA_CONFIG_ IF	MCA::IF::MCA_IPID_IF	MCA::IF::MCA_SYND_IF			
L2	MCA::L2::MCA_CONFIG	MCA::L2::MCA_IPID_L2	MCA::L2::MCA_SYND_L2	MCA::L2::MCA_DESTAT_	MCA::L2::MCA_DEADDR	
	_L2			L2	_L2	
DE	MCA::DE::MCA_CONFIG	MCA::DE::MCA_IPID_DE	MCA::DE::MCA_SYND_D			
	_DE		Е			
EX	MCA::EX::MCA_CONFIG	MCA::EX::MCA_IPID_EX	MCA::EX::MCA_SYND_E			
	EX		Х			
FP	MCA::FP::MCA_CONFIG	MCA::FP::MCA_IPID_FP	MCA::FP::MCA_SYND_FP	'		
	FP					
L3	MCA::L3::MCA_CONFIG	MCA::L3::MCA_IPID_L3	MCA::L3::MCA_SYND_L3	MCA::L3::MCA_DESTAT_	MCA::L3::MCA_DEADDR	
	L3			L3	L3	
PIE	MCA::PIE::MCA_CONFI	MCA::PIE::MCA_IPID_PIE	MCA::PIE::MCA_SYND_P	MCA::PIE::MCA_DESTAT	MCA::PIE::MCA_DEADD	

CS	MCA::CS::MCA_CONFIG	MCA::CS::MCA_IPID_CS	MCA::CS::MCA_SYND_C	MCA::CS::MCA_DESTAT_	MCA::CS::MCA_DEADDR
	CS		S	CS	CS
UMC	MCA::UMC::MCA_CONF	MCA::UMC::MCA_IPID_U	MCA::UMC::MCA_SYND_	MCA::UMC::MCA_DESTA	MCA::UMC::MCA_DEAD
	IG_UMC	MC	UMC	T_UMC	DR_UMC
PB	MCA::PB::MCA_CONFIG	MCA::PB::MCA_IPID_PB	MCA::PB::MCA_SYND_P		
	PB		В		

3.6 Legacy MCA MSRs

Legacy MCA MSRs are aliased to the MCA MSRs for backward compatibility with older operating systems. The legacy MCA MSR address space is MSR0000_04[7F:00]. This legacy space contains room for 32 banks of 4 registers per bank. The MCA registers available in this space are:

- MCA CTL
- MCA_STATUS
- MCA_ADDR
- MCA_MISC0

Features and registers associated with the MCA Extensions are not available in this legacy space. AMD recommends that operating systems use the new MSR space, rather than rely on the legacy space.

MSR0000_0000 is aliased to MCA_ADDR for MCA Bank 0, and MSR0000_0001 is aliased to MCA_STATUS for MCA Bank 0.

3.7 Determining Bank Type

To determine which type of block is mapped to an MCA bank, software can query the MCA_IPID register within that bank. This register exists when MCA_CONFIG[McaX]=1 in a given bank.

MCA_IPID[HardwareID] provides the block type for the block that contains this MCA bank. For blocks that contain multiple MCA bank types (e.g., CPU cores), MCA_IPID[McaType] provides an identifier for the type of MCA bank. MCA_IPID[McaType] values are specific to a given MCA_IPID[HardwareID]. Therefore, an MCA bank type can be identified by the value of {MCA_IPID[Hwid], MCA_IPID[McaType]}. For instance, the CPU core's LS bank is identified by MCA::LS::MCA_IPID_LS[HardwareID]==176 and MCA::LS::MCA_IPID_LS[McaType]==0. An MCA_IPID[HardwareID] value of 0 indicates an unpopulated MCA bank that is ensured to be RAZ/WRIG.

MCA_IPID[InstanceId] provides a unique instance number to allow software to differentiate blocks with multiple identical instances within a processor.

3.8 Machine Check Errors

The classes of machine check errors are, in priority order from highest to lowest:

- Uncorrected
- Deferred
- Corrected

Uncorrected errors cannot be corrected by hardware. Uncorrected errors update the status and address registers if not masked from logging in MCA_CTL_MASK. Information in the status and address registers from a previously logged lower priority error is overwritten. Previously logged errors of the same priority are not overwritten. Uncorrected errors that are enabled for reporting in MCA_CTL result in reporting to software via machine check exceptions. If an uncorrected error is masked from logging, the error is ignored by hardware (exceptions are noted in the register definitions). If an uncorrected error is disabled from reporting, containment of the error and logging/reporting of subsequent errors may be affected. Therefore, enable reporting of unmasked uncorrected errors for normal operation.

56255 Rev 3.03 - July, 2018

Disable reporting of uncorrected errors only for debug purposes.

Deferred errors are errors that cannot be corrected by hardware, but do not cause an immediate interruption in program flow, loss of data integrity, or corruption of processor state. These errors indicate that data has been corrupted but not consumed; no exception is generated because the data has not been referenced by a core or an IO link. Hardware writes information to the status and address registers in the corresponding bank that identifies the source of the error if deferred errors are enabled for logging. If there is information in the status and address registers from a previously logged lower priority error, it is overwritten. Previously logged errors of the same or higher priority are not overwritten. Deferred errors are not reported via machine check exceptions; they can optionally be reported via LVT or SMI.

Corrected errors are those which have been corrected by hardware and cause no loss of data or corruption of processor state. Hardware writes the status and address registers in the corresponding register bank with information that identifies the source of the error if they are enabled for logging. Corrected errors are not reported via machine check exceptions. Some corrected errors may optionally be reported to software via error threshold.

An error to be logged when the status register contains valid data can result in an overflow condition. During error overflow conditions, the new error may not be logged or an error which has already been logged in the status register may be overwritten.

Table 17 [Error Overwrite Priorities] indicates which errors are overwritten in the error status registers.

			Older Error	
		Uncorrected	Deferred	Corrected
	Uncorrected	-	Overwrite	Overwrite
Newer	Deferred	-	-	Overwrite
Error	Corrected	-	-	-

Table 17: Error Overwrite Priorities

3.9 Machine Check Initialization

3.9.1 Initialization Sequence

The following initialization sequence must be followed:

- Platform firmware must initialize the MCA_CTL_MASK registers prior to the initialization of the MCA_CTL registers and Core::X86::Msr::MCG_CTL. Platform firmware and the operating system must not clear MCA_CTL_MASK bits that are set to 1.
- Platform firmware must initialize the MCA_CONFIG registers prior to initialization of the MCA_CTL registers.
- The MCA CTL registers must be initialized prior to enabling the error reporting banks in MCG \overline{CTL} .
- The Core::X86::Msr::MCG CTL register must be programmed identically for all cores in a processor.
- CR4.MCE must be set to enable machine check exceptions.

Platform firmware may initialize the MCA without setting CR4.MCE; this results in a shutdown on any machine check which would have caused a machine check exception (followed by a reboot if configured). Alternatively, platform firmware that wishes to ensure continued operation in the event that a machine check occurs during boot may write MCG_CTL with all ones and write zeros into each MCA_CTL register. With these settings, a machine check error results in MCA_STATUS being written without generating a machine check exception or a shutdown. Platform firmware may then poll MCA_STATUS registers during critical sections of boot to ensure system integrity. Note that the system may be operating with corrupt data before polling MCA_STATUS registers. Before passing control to the operating system,

platform firmware should restore the values of those registers to what the operating system is expecting.

3.9.2 Configuration Requirements

MCA_STATUS MSRs are cleared by hardware after a cold reset. If initializing after a warm reset, then platform firmware should check for valid MCA errors and if present save the status for later diagnostic use.

The operating system should configure the MCA CONFIG registers as follows:

- MCA_CONFIG[McaxEn]=1 if the operating system has been updated to use the MCA Extension MSR addresses. Otherwise, the operating system should preserve the platform firmware-programmed value of this field.
- MCA_CONFIG[LogDeferredInMcaStat] and MCA_CONFIG[DeferredIntType] to appropriate values based on OS support for deferred errors.

3.10 MCA Overflow Recovery

MCA Overflow Recovery is a feature allowing recovery of the system when the overflow bit is set. MCA Overflow Recovery is supported when Core::X86::Cpuid::RasCap[McaOverflowRecov]=1.

When MCA Overflow Recovery is supported, software may rely on MCA_STATUS[PCC]=1 to indicate all system-fatal conditions. When MCA Overflow Recovery is not supported, an uncorrected error logged with MCA_STATUS[OF]=1 may indicate the system-fatal condition that an error requiring software intervention was not logged. Therefore, software must terminate system processing whenever an uncorrected error is logged with MCA_STATUS[OF]=1.

3.11 MCA Recovery

MCA Recovery is a feature allowing recovery of the system when the hardware cannot correct an error. MCA Recovery is supported when Core::X86::Cpuid::RasCap[SUCCOR]=1.

When MCA Recovery is supported and an uncorrected error has been detected that the hardware can contain to the task or process to which the machine check has been delivered, it logs a context-synchronous uncorrectable error (MCA_STATUS[UC]=1, MCA_STATUS[PCC]=0). The rest of the system is unaffected and may continue running if supervisory software can terminate only the affected process or VM.

3.12 Use of MCA Information

The MCA registers contain information that can be used for multiple purposes. Some of this information is architecturally specified, and remains consistent from generation to generation, enabling portable, stable code. Some of this information is implementation specific; it is vital for diagnosis and other software functions, but may change with new implementations. It is important to understand how this information is categorized, and how it should be used. This section describes a framework for that.

There are two fundamental roles to be carried out after an error occurs; Error Management and Fault Management. All information required for Error Management is architectural and stable; some information required for Fault Management is also architectural.

3.12.1 Error Management

Error Management describes actions necessary by operational software (e.g., the operating system or the hypervisor) to manage running programs that are affected by the error. The list of possible actions for operational error management is generally fairly short: take no action; terminate a single affected process, program, or virtual machine; terminate system

operation. The Error Management role is defined as the DOER role (Dynamic Operational Error Handling). The name is intended to indicate an active role in managing running programs. Information used by the DOER is fairly limited and straightforward. It includes only those status fields needed to make decisions about the scope and severity of the error, and to determine what immediate action is to be taken.

The DOER fields are:

- MCG_STAT
 - Count
 - MCIP
 - RIPV
 - EIPV
- MCA_STATUS
 - Val
 - PCC
 - TCC
 - UC
 - MiscV
 - AddrV

3.12.2 Fault Management

Fault Management describes optional actions for purposes of diagnosis, repair, and reconfiguration of the underlying hardware. The Fault Management role is described as SEER (Symptom Elaboration of Errors) because it peers further into hardware behavior and may try to influence future behavior via Predictive Fault Analysis, reconfiguration, service actions, etc. Because the SEER depends on understanding specifics of hardware configuration, it necessarily requires implementation specific knowledge and is portable.

Fields that are not explicitly specified as DOER are SEER. By separating error handling software into DOER and SEER roles, programmers can create both simpler and more functional code. The terms DOER and SEER appear in other sections of this document as an aid to reasoning about error handling and understanding actions to be taken.

The MCA_STATUS[Deferred] bit is used for SEER functionality but is architectural.

3.13 Machine Check Error Handling

A machine check handler is invoked to handle an exception for a particular thread. The information needed by the machine check handler is not shared with other threads, so no cross-thread coordination or special handling is required. Specifically, all MCA banks are only visible from a single thread, so software on a single thread can access each bank through MSR space without contention from other threads.

At a minimum, the machine check handler must be capable of logging error information for later examination. The handler should log as much information as is needed to diagnose the error. More thorough exception handler implementations can analyze errors to determine if each error is recoverable by software. If a recoverable error is identified, the exception handler can attempt to correct the error and restart the interrupted program. An error may not be recoverable for the process or virtual machine it directly affects, but may be containable, so that other processes or virtual machines in the system are unaffected and system operation is recovered.

Machine check exception handlers that attempt to recover must be thorough in their analysis and the corrective actions they take. The following guidelines should be used when writing such a handler:

- Data collection:
 - Read Core::X86::Msr::MCG_CAP[Count] to determine the number of status registers visible to the

thread.

- All status registers in all error reporting banks must be examined to identify the cause of the machine check exception.
- Check the valid bit in each status register (MCA_STATUS[Val]). The remainder of the status register should be examined only when its valid bit is set.
- When identifying the error condition and determining how to handle the error, portable exception handlers should examine only DOER fields in machine check registers.
- Error handlers should collect all available MCA information, but should only interrogate details to the level which affects their actions. Lower level details may be useful for diagnosis and root cause analysis, but not for error handling.
- Error handlers should save the values in MCA_ADDR, MCA_MISCO, and MCA_SYND even if MCA_STATUS[AddrV], MCA_STATUS[MiscV], and MCA_STATUS[SyndV] are zero.
- DOER Error Management:
 - Check MCA_STATUS[PCC].
 - If PCC is set, error recovery is not possible. The handler should log the error information and terminate the system. If PCC is clear, the handler may continue with the following recovery steps.
 - Check MCA_STATUS[UC].
 - If UC is set, the processor did not correct the error. Continue with the following recovery steps.
 - If MCA Overflow Recovery is not supported, and MCA_STATUS[OF]=1, error recovery is not possible; follow the steps for PCC=1. See 3.10 [MCA Overflow Recovery].
 - If MCA Recovery is not supported, error recovery is not possible; follow the steps for PCC=1. See 3.11 [MCA Recovery].
 - If MCA Recovery is supported:
 - Check MCA_STATUS[TCC].
 - If TCC is set, the context of the process thread executing on the interrupted logical core may be corrupt and the thread cannot be recovered. The rest of the system is unaffected; it is possible to terminate only the affected process thread.
 - If TCC is clear, the context of the process thread executing on the interrupted logical core is not corrupt. Recovery of the process thread may be possible, but only if the uncorrected error condition is first corrected by software; otherwise, the interrupted process thread must be terminated.
 - Legacy exception handlers can check Core::X86::Msr::MCG_STAT[RIPV] and Core::X86::Msr::MCG_STAT[EIPV] in place of MCA_STATUS[TCC]. If RIPV=EIPV=1, the interrupted program can be restarted reliably. Otherwise, the program cannot be restarted reliably.
 - If UC is clear, the processor either corrected or deferred the error and no software action is needed. The handler can log the error information and continue process execution.
- Exit:
 - When an exception handler is able to successfully log an error condition, clear the MCA_STATUS registers prior to exiting the machine check handler.
 - Prior to exiting the machine check handler, clear Core::X86::Msr::MCG_STAT[MCIP]. MCIP indicates that a machine check exception is in progress. If this bit is set when another machine check exception occurs, the processor enters the shutdown state.

Table 18 [Error Scope Hierarchy] provides a hierarchy of error scopes to allow software to determine the potential ability to recover the system based on fields in MCA_STATUS when MCA_STATUS[Val]=1.

PCC	UC	TCC	Deferred	Comments
1	Х	Х	Х	Uncorrected system fatal error. Action required. A hardware-

				uncorrected error has corrupted system state. The error is fatal to the system and the system processing must be terminated.
0	1	1	X	Uncorrected thread fatal error. Action required. A hardware- uncorrected error has corrupted state for the process thread executing on the interrupted logical core. State for other process threads is unaffected.
0	1	0	X	Uncorrected recoverable error. Action required. A hardware-uncorrected error has not corrupted state of the process thread. Recovery of the process thread is possible if the uncorrected error is corrected by software.
0	0	0	1	Deferred error. Action optional. A hardware-uncorrected error has been discovered but not yet consumed. Error handling software may attempt to correct this error, or prevent access by processes which map the data, or make the physical resource containing the data inaccessible.
0	0	0	0	Corrected error. Action optional. A hardware-corrected error has been corrected. No action is required by error handling software.

SEER Fault Management can take place asynchronously from DOER Error Management if error details are passed to the SEER code separately from the MCA registers.

3.14 Error Codes

The MCA_STATUS[ErrorCode] field contains information used to identify the logged error. This section identifies how to decode the ErrorCode field.

Table 19: Error Code Types

Error Code	Error Code Type	Description
0000 0000 0001 TTLL	TLB	TT = Transaction Type
		LL = Cache Level
0000 0001 RRRR TTLL	Memory	RRRR = Memory Transaction Type
		TT = Transaction Type
		LL = Cache Level
0000 1XXT RRRR XXLL	Bus	XX = Reserved
		T = Timeout
		RRRR = Memory Transaction Type
		LL = Cache Level
0000 01UU 0000 0000	Internal Unclassified	UU = Internal Error Type

Table 20: Error code: transaction type (TT)

TT	Transaction Type
00	Instruction
01	Data
10	Generic
11	Reserved

Table 21: Error codes: cache level (LL)

LL	Cache Level

00	
01	L1: Level 1
10	L2: Level 2
11	LG: Generic

RRRR	Memory Transaction Type
0000	Generic
0001	Generic Read
0010	Generic Write
0011	Data Read
0100	Data Write
0101	Instruction Fetch
0110	Prefetch
0111	Evict
1000	Snoop (Probe)

Errors can also be identified by the MCA_STATUS[ErrorCodeExt] field. MCA_STATUS[ErrorCodeExt] indicates which bit position in the corresponding MCA_CTL register enables error reporting for the logged error. For instance, MCA_STATUS[ErrorCodeExt]=0x9 means that the logged error is enabled by MCA_CTL[9], and the description of MCA_CTL[9] contains information on decoding the error log. Specific ErrorCodeExt values are implementation dependent, and should not be used by architectural or portable code.

3.15 Error Thresholding

For some types of errors, the hardware maintains counts of the number of errors. When the counter reaches a programmable threshold, an event may optionally be triggered to signal system software. This is known as error thresholding. The primary purpose of error thresholding is to help software recognize an excessive rate of errors, which may indicate marginal or failing hardware. This information can be used to make decisions about deconfiguring hardware or scheduling service actions. Counts are incremented for corrected, deferred, and uncorrected errors.

The MCA_MISCx registers contain the architectural interface for error thresholding. The registers contain a 12-bit error counter that can be initialized to any value, with the option to interrupt when the counter reaches FFFh.

MCA_MISCx[ThresholdIntType] determines the type of interrupt to be generated for threshold overflow errors in that counter. This can be set to None, LVT, or SMI. If this is set to LVT, Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset] specifies the LVT offset that is used. Only one LVT offset is used per socket and the interrupt is routed to the APIC of the logical core from which the MCA bank is visible.

3.16 Error Simulation

Error simulation involves creating the appearance to software that an error occurred, and can be used to debug machine check interrupt handlers. See Core::X86::Msr::HWCR[McStatusWrEn] for making MCA registers writable for non-zero values. When McStatusWrEn is set, privileged software can write non-zero values to the specified registers without generating exceptions, and then simulate a machine check using the INT18 instruction (INTn instruction with an operand of 18). Setting a reserved bit in these registers does not generate an exception when this mode is enabled. However, setting a reserved bit may result in undefined behavior.

3.17 MCA Registers

MCA MSRs are accessed through x86 WRMSR and RDMSR instructions. See 3 [Machine Check Architecture] for details on MCA MSRs.

3.17.1 Decoding Error Type

If a valid error is logged in MCA_STATUS or MCA_DESTAT of an MCA bank:

- 1. Read the values of this bank's MCA_IPID and MCA_STATUS registers.
- 2. Use 3.17.3 [Hardware IDs and McaType] to look up the block associated with the values of MCA_IPID[HwId] and MCA_IPID[McaType].
- 3. In 3.17.4 [MCA Banks], find the sub-section associated with the block in error.
- 4. In this sub-section, find the MCA_STATUS table.
- 5. In the table, look up the row associated with the MCA_STATUS[ErrorCodeExt] value.
- 6. The error type in this row is the logged error. The MCA_STATUS, MCA_ADDR and MCA_SYND tables contain information associated with this error.
- 7. If there is an error in both MCA_STATUS and MCA_DESTAT, the registers contain the same error if MCA_STATUS[Deferred] is set. If MCA_STATUS[Deferred] is not set, MCA_DESTAT contains information for a different error than MCA_STATUS. MCA_DESTAT does not contain an ErrorCodeExt field, so in this case it is not possible to determine the type of error logged in MCA_DESTAT.

3.17.2 Mapping of Banks to Blocks

Bank	Block
0	LS
1	IF
2	L2
3	DE
4	RAZ
5	EX
6	FP
7	L3
8	L3
9	L3
10	L3
11	L3
12	L3
13	L3
14	L3
15	UMC
16	UMC
17	Reserved
18	Reserved
19	PB
20	CS
21	CS
22	PIE

Table 23: MCA Bank to Block Mapping

3.17.3 Hardware IDs and McaType

Block	Hardware ID	Мса Туре	
LS	0xb0	0x0	
IF	0xb0	0x1	
L2	0xb0	0x2	
DE	0xb0	0x3	
EX	0xb0	0x5	
FP	0xb0	0x6	
L3	0xb0	0x7	
UMC	0x96	0x0	
SMU	0x01	0x0	
PSP	0xFF	0x0	
PB	0x5	0x0	
CS	0x2E	0x0	
PIE	0x2E	0x1	

Table 24: MCA Block HWID and McaType Mapping

3.17.4 MCA Banks

3.17.5 LS

MSR0000_0400...MSRC000_2000 [LS Machine Check Control] (MCA::LS::MCA_CTL_LS)

Read-	write. Reset: 0000_0000_0000h.			
0=Dis	D=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the			
corres	corresponding error. The MCA::LS::MCA_CTL_LS register must be enabled by the corresponding enable bit in			
Core::	Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.			
_lthree[1	:0]_core[3:0]_inst0_alias[MSR,MSRLEGACY]; MSR[C00020,000004]00			
Bits	Description			
63:21	Reserved.			
20	L2DataErr. Read-write. Reset: 0. L2 Fill Data error.			
19	DcTagErr5. Read-write. Reset: 0. DC Tag error type 5.			
18	DcTagErr3. Read-write. Reset: 0. DC Tag error type 3.			
17	PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address.			
16	L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address.			
15	DcTagErr4. Read-write. Reset: 0. DC Tag error type 4.			
14	DcDataErr3. Read-write. Reset: 0. DC Data error type 3.			
13	DcDataErr2. Read-write. Reset: 0. DC Data error type 2.			
12	DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is set			
	on poison consumption from L2/L3.			
11	DcTagErr2. Read-write. Reset: 0. DC Tag error type 2.			
10	SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line			
	from the data fabric. Possible reasons include master abort and target abort.			
9	SystemReadDataErrorT0. Read-write. Reset: 0. System Read Data Error Thread 0. An error in a read of a line			
	from the data fabric. Possible reasons include master abort and target abort.			

8	IntErrTyp2. Read-write. Reset: 0. Internal error type 2.
7	IntErrTyp1. Read-write. Reset: 0. Internal error type 1.
6	DcTagErr1. Read-write. Reset: 0. DC Tag error type 1.
5	DcTagErr6. Read-write. Reset: 0. DC Tag error type 6.
4	Reserved.
3	L1DTLB. Read-write. Reset: 0. Level 1 TLB parity error.
2	MAB. Read-write. Reset: 0. Miss address buffer payload parity error.
1	STQ. Read-write. Reset: 0. Store queue parity error.
0	LDQ. Read-write. Reset: 0. Load queue parity error.

MSR0000_0001...MSRC000_2001 [LS Machine Check Status Thread 0] (MCA::LS::MCA_STATUS_LS)

Reset: 0000_0000_0000_0000h. Logs information associated with errors. _lthree[1:0]_core[3:0]_thread[1:0]_inst0_alias[MSR,MSRLEGACY,MSRLSLEGACY]; MSR[C0002001,00000401,00000001] Bits Description 63 Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the regis been read. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was relogged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 61 UC. Reset: Cold,0. 1=The error was not corrected by hardware.	ster has		
Ithree[1:0]_core[3:0]_thread[1:0]_inst0_alias[MSR,MSRLEGACY,MSRLSLEGACY]; MSR[C0002001,00000401,00000001] Bits Description 63 Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the regist been read. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was relogged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1	ster has		
Bits Description 63 Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the regist been read. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1	ster has		
 63 Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the regist been read. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 	ster has		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1 62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was to logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
62 Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was a logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1			
logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
Errors]. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1	not		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1	k 🛛		
61 UC. Reset: Cold.0. 1=The error was not corrected by hardware.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
60 En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	1		
MCA::LS::MCA_CTL_LS. This bit is a copy of bit in MCA::LS::MCA_CTL_LS for this error.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
59 MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::LS::MCA_MISC0_LS.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
58 AddrV. Reset: Cold,0. 1=MCA::LS::MCA_ADDR_LS contains address information associated with the e			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
57 PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operative operation of the processor may have been corrupted.			
the system may have unpredictable results. The error is not recoverable or survivable, and the system should be a set of the system set of	ld be		
reinitialized.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1	•		
56 ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
55 TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction po			
address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1	=1he		
thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::LS::MCA_STATUS_LS[PCC]=0.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1			
54 Reserved.	•		
53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::LS::MCA_SYND_LS. If			
MCA::LS::MCA SYND LS[ErrorPriority] is the same as the priority of the error in			
MCA::LS::MCA_STATUS_LS, then the information in MCA::LS::MCA_SYND_LS is associated with th	e error		
in MCA::LS::MCA STATUS LS.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1			
52:47 Reserved.			
46 CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC			

	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC				
	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
44	4 Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data				
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is				
	consumed.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
42:38	Reserved.				
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is				
	associated with the error; Otherwise this field is reserved.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
31:22	Reserved.				
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause				
	analysis. This field indicates which bit position in MCA::LS::MCA_CTL_LS enables error reporting for the				
	logged error.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this				
	field.				

AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Error Type	Bits	Description
LDQ	[6:0]	0x0
STQ	[6:0]	0x1
MAB	[6:0]	0x2
L1DTLB	[6:0]	0x3
DcTagErr5	[6:0]	0x4
DcTagErr6	[6:0]	0x5
DcTagErr1	[6:0]	0x6
IntErrTyp1	[6:0]	0x7
IntErrTyp2	[6:0]	0x8
SystemReadDataErrorT0	[6:0]	0x9
SystemReadDataErrorT1	[6:0]	0xa
DcTagErr2	[6:0]	0xb
DcDataErr1	[6:0]	0xc
DcDataErr2	[6:0]	0xd
DcDataErr3	[6:0]	0xe
DcTagErr4	[6:0]	0xf
L2DTLB	[6:0]	0x10
PDC	[6:0]	0x11
DcTagErr3	[6:0]	0x12
DcTagErr5	[6:0]	0x13
L2DataErr	[6:0]	0x14

Table 25: MCA STATUS LS[ErrorCodeExt] Decode

MSR0000_0000...MSRC000_2002 [LS Machine Check Address Thread 0] (MCA::LS::MCA_ADDR_LS)

Reset: 0000_0000_0000h.
MCA::LS::MCA_ADDR_LS stores an address and other information associated with the error in
MCA::LS::MCA_STATUS_LS. The register is only meaningful if MCA::LS::MCA_STATUS_LS[Val]=1 and
MCA::LS::MCA STATUS LS[AddrV]=1.

Bits Description

63:62 Reserved. Read-write. Reset: Cold,0h.

61:56 LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::LS::MCA_ADDR_LS[ErrorAddr]. A value of 0 indicates that MCA::LS::MCA_ADDR_LS[55:0] contains a valid byte address. A value of 6 indicates that MCA::LS::MCA_ADDR_LS[55:6] contains a valid cache line address and that MCA::LS::MCA_ADDR_LS[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::LS::MCA_ADDR_LS[55:12] contain a valid 4KB memory page and that MCA::LS::MCA_ADDR_LS[11:0] should be ignored by error handling software.
55:0 ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error, contains the address associated with the error logged in MCA::LS::MCA_STATUS_LS. For physical addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

THUR 20. MCH_HDDR_LD	Register	
Error Type	Bits	Description
LDQ	[55:0]	Reserved
STQ	[55:0]	Reserved
MAB	[55:0]	Reserved
L1DTLB	[55:48]	Reserved
	[47:12]	Virtual Address
	[11:0]	Reserved
DcTagErr5	[55:0]	Reserved
DcTagErr6	[55:0]	Reserved
DcTagErr1	[55:0]	Reserved
IntErrTyp1	[55:0]	Reserved
IntErrTyp2	[55:0]	Reserved
SystemReadDataErrorT0	[55:48]	Reserved
	[47:6]	Physical Address
SystemReadDataErrorT1	[55:48]	Reserved
	[47:6]	Physical Address
DcTagErr2	[55:48]	Reserved
	[47:6]	Physical Address
DcDataErr1	[55:48]	Reserved
	[47:6]	Physical Address
DcDataErr2	[55:48]	Reserved
	[47:1]	Physical Address
DcDataErr3	[55:48]	Reserved
	[47:1]	Physical Address
DcTagErr4	[55:0]	Reserved
L2DTLB	[55:48]	Reserved
	[47:12]	Virtual Address
	[11:0]	Reserved
PDC	[55:48]	Reserved
	[47:12]	Virtual Address
1	1	

Table 26: MCA ADDR LS Register

	[11:0]	Reserved
DcTagErr3	[55:0]	Reserved
DcTagErr5	[55:0]	Reserved
L2DataErr	[55:48]	Reserved
	[47:6]	Physical Address

MSR0000_0403...MSRC000_2003 [LS Machine Check Miscellaneous 0 Thread 0] (MCA::LS::MCA_MISC0_LS)

Reset:	D000 0000 0100 0000h.
Log m	iscellaneous information associated with errors.
	:0]_core[3:0]_thread[1:0]_inst0_alias[MSR,MSRLEGACY]; MSR[C00020,000004]03
Bits	Description
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
62	CntP. Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
	Reserved.
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
50.40	Read-only. Threach addret Turne, Deset: Cold Ob. Specifics the turne of interment signals durk on Ourflux is set and lat D=1.00b
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2004 [LS Machine Check Configuration] (MCA::LS::MCA_CONFIG_LS)

	0000_0002_0000_0025h.
	ols configuration of the associated machine check bank.
	:0]_core[3:0]_inst0_aliasMSR; MSRC0002004
	Description
	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
36:35	
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS, 1. 1=Log deferred errors in
51	MCA::LS::MCA_STATUS_LS and MCA::LS::MCA_ADDR_LS in addition to MCA::LS::MCA_DESTAT_LS and MCA::LS::MCA_DEADDR_LS. 0=Only log deferred errors in MCA::LS::MCA_DESTAT_LS and MCA::LS::MCA_DEADDR_LS. This bit does not affect logging of deferred errors in MCA::LS::MCA_SYND_LS, MCA::LS::MCA_MISCO_LS.
33	Reserved. Read-write. Reset: 1.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::LS::MCA_CONFIG_LS[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::LS::MCA_CONFIG_LS[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::LS::MCA_CONFIG_LS[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::LS::MCA_DESTAT_LS and MCA::LS::MCA_DEADDR_LS are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::LS::MCA_MISC0_LS[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::LS::MCA_STATUS_LS[TCC] is present.
MSRO	C000 2005 [LS IP Identification] (MCA::LS::MCA IPID LS)

Reset: 0000_00B0_0000_0000h.		
The MCA::LS::MCA_IPID_LS register is used by software to determine what IP type and revision is associated with the		
MCA bank.		
_lthree[1:0]_core[3:0]_inst0_aliasMSR; MSRC0002005		
Bits Description		
63:48 McaType . Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.		
47:44 Reserved.		
43:32 HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.		
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per		
instance of this register.		
MSRC000_2006 [LS Machine Check Syndrome Thread 0] (MCA::LS::MCA_SYND_LS)		

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::LS::MCA_STATUS_LS Thread 0 _lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC0002006

Bits	Description	
63:39	Reserved.	
38:32	Syndrome . Read-write, Volatile. Reset: Cold,00h. Contains the syndrome, if any, associated with the error logged in MCA::LS::MCA_STATUS_LS. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length specified by MCA::LS::MCA_SYND_LS[Length]. The Syndrome field is only valid when MCA::LS::MCA_SYND_LS[Length] is not 0.	
31:27	Reserved.	
26:24	ErrorPriority . Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in MCA::LS::MCA_SYND_LS. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.	
23:18	 Length. Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in MCA::LS::MCA_SYND_LS[Syndrome]. A value of 0 indicates that there is no valid syndrome in MCA::LS::MCA_SYND_LS. For example, a syndrome length of 9 means that MCA::LS::MCA_SYND_LS[Syndrome] bits [8:0] contains a valid syndrome. 	
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold,0_0000h. Contains error-specific information about the location of the error. Decoding is available in Table 27 [MCA_SYND_LS Register].	

Error Type	Bits	Description
LDQ	[17:0]	Reserved
STQ	[17:0]	Reserved
MAB	[17:0]	Reserved
L1DTLB	[17:0]	Reserved
DcTagErr5	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr6	[17:16]	Reserved
-	[15:8]	Index
	[7:0]	Way
DcTagErr1	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
IntErrTyp1	[17]	Reserved
	[16]	Thread ID
	[15:0]	Reserved
IntErrTyp2	[17]	Reserved
	[16]	Thread ID
	[15:0]	Reserved
SystemReadDataErrorT0	[17:2]	Reserved
	[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 =
		Transaction Error; 2'b11 = Protection Violation
SystemReadDataErrorT1	[17:2]	Reserved
	[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 =
		Transaction Error; 2'b11 = Protection Violation
DcTagErr2	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcDataErr1	[17:16]	Reserved

Table 27: MCA_SYND_LS Register

	[15:8]	Index
	[7:0]	Way
DcDataErr2	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcDataErr3	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr4	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
L2DTLB	[17:15]	Reserved
	[14:8]	Reserved
	[7:4]	Reserved
	[3:0]	Reserved
PDC	[17:0]	Reserved
DcTagErr3	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr5	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
L2DataErr	[17:0]	Reserved

MSRC000_2008 [LS Machine Check Deferred Error Status Thread 0] (MCA::LS::MCA_DESTAT_LS)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.		
Holds	status information for the first deferred error seen in this bank.		
_lthree[1	:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC0002008		
Bits	Description		
63	Val. Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow. Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::LS::MCA_DEADDR_LS contains address information		
	associated with the error.		
57:54	Reserved.		
53	SyndV. Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::LS::MCA_SYND_LS. If		
	MCA::LS::MCA_SYND_LS[ErrorPriority] is the same as the priority of the error in		
	MCA::LS::MCA_STATUS_LS, then the information in MCA::LS::MCA_SYND_LS is associated with the error		
	in MCA::LS::MCA_DESTAT_LS.		
52:45	Reserved.		
44	Deferred. Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000_2009 [LS Deferred Error Address Thread 0] (MCA::LS::MCA_DEADDR_LS)

Reset: 0000_0000_0000_0000h.

The MCA::LS::MCA_DEADDR_LS register stores the address associated with the error in MCA::LS::MCA_DESTAT_LS. The register is only meaningful if MCA::LS::MCA_DESTAT_LS[Val]=1 and MCA::LS::MCA_DESTAT_LS[AddrV]=1. The lowest valid bit of the address is defined by MCA::LS::MCA_DEADDR_LS[LSB].

_lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC0002009

Bits	Description
63:62	Reserved. Read-write. Reset: Cold,0h.
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in
	MCA::LS::MCA_DEADDR_LS[ErrorAddr]. A value of 0 indicates that MCA::LS::MCA_DEADDR_LS[55:0]
	contains a valid byte address. A value of 6 indicates that MCA::LS::MCA_DEADDR_LS[55:6] contains a valid
	cache line address and that MCA::LS::MCA_DEADDR_LS[5:0] are not part of the address and should be
	ignored by error handling software. A value of 12 indicates that MCA::LS::MCA_DEADDR_LS[55:12] contain a
	valid 4KB memory page and that MCA::LS::MCA_DEADDR_LS[11:0] should be ignored by error handling
	software.
	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with
	the error logged in MCA::LS::MCA_DESTAT_LS. The lowest-order valid bit of the address is specified in
	MCA::LS::MCA_DEADDR_LS[LSB].

MSRC001_0400 [LS Machine Check Control Mask] (MCA::LS::MCA_CTL_MASK_LS)

Read-	write. Reset: 0000_0000_0000h.		
Inhibit detection of an error source.			
	hree[1:0]_core[3:0]_inst0_aliasMSR; MSRC0010400		
Bits	Description		
63:21	Reserved.		
20	L2DataErr. Read-write. Reset: 0. L2 Fill Data error.		
19	DcTagErr5. Read-write. Reset: 0. DC Tag error type 5.		
18	DcTagErr3. Read-write. Reset: 0. DC Tag error type 3.		
17	PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address.		
16	L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address.		
15	DcTagErr4. Read-write. Reset: 0. DC Tag error type 4.		
14	DcDataErr3. Read-write. Reset: 0. DC Data error type 3.		
13	DcDataErr2. Read-write. Reset: 0. DC Data error type 2.		
12	DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is set		
	on poison consumption from L2/L3.		
11	1 DcTagErr2 . Read-write. Reset: 0. DC Tag error type 2.		
10	SystemReadDataErrorT1. Read-write. Reset: 0. Init: BIOS,1. System Read Data Error Thread 1. An error in a		
	read of a line from the data fabric. Possible reasons include master abort and target abort.		
9	SystemReadDataErrorT0. Read-write. Reset: 0. Init: BIOS,1. System Read Data Error Thread 0. An error in a		
	read of a line from the data fabric. Possible reasons include master abort and target abort.		
8	IntErrTyp2. Read-write. Reset: 0. Internal error type 2.		
7	IntErrTyp1. Read-write. Reset: 0. Internal error type 1.		
6	DcTagErr1. Read-write. Reset: 0. DC Tag error type 1.		
5	DcTagErr6. Read-write. Reset: 0. DC Tag error type 6.		
4	Reserved.		
3	L1DTLB. Read-write. Reset: 0. Level 1 TLB parity error.		
2	MAB. Read-write. Reset: 0. Miss address buffer payload parity error.		
1	STQ. Read-write. Reset: 0. Store queue parity error.		
0	LDQ. Read-write. Reset: 0. Load queue parity error.		

MSR0000_0404...MSRC000_2010 [IF Machine Check Control] (MCA::IF::MCA_CTL_IF)

MSK	0000_0404MISRC000_2010 [IF Machine Check Control] (MCA::IF::MCA_CIL_IF)		
Read-	write. Reset: 0000_0000_0000h.		
0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the			
	ponding error. The MCA::IF::MCA_CTL_IF register must be enabled by the corresponding enable bit in		
	X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
	:0]_core[3:0]_inst1_alias[MSR,MSRLEGACY]; MSR[C0002010,0000404]		
Bits			
	Reserved.		
13	SystemReadDataError. Read-write. Reset: 0. System Read Data Error. An error in a demand fetch of a line.		
	Possible reasons include master abort and target abort.		
12	L2RespPoison. Read-write. Reset: 0. L2 Cache Response Poison Error. Error is the result of consuming poison		
	data.		
11	L2BtbMultiHit. Read-write. Reset: 0. L2 BTB Multi-Match Error.		
10	L1BtbMultiHit. Read-write. Reset: 0. L1 BTB Multi-Match Error.		
9	BpqSnpParT1. Read-write. Reset: 0. BPQ Thread 1 Snoop Parity Error.		
8	BpqSnpParT0. Read-write. Reset: 0. BPQ Thread 0 Snoop Parity Error.		
7	L2ItlbParity. Read-write. Reset: 0. L2 ITLB Parity Error.		
6	L1ItlbParity. Read-write. Reset: 0. L1 ITLB Parity Error.		
5	L0ItlbParity. Read-write. Reset: 0. L0 ITLB Parity Error.		
4	DqParity. Read-write. Reset: 0. Decoupling Queue PhysAddr Parity Error.		
3	DataParity. Read-write. Reset: 0. IC Data Array Parity Error.		
2	TagParity. Read-write. Reset: 0. IC Full Tag Parity Error.		
1	TagMultiHit. Read-write. Reset: 0. IC Microtag or Full Tag Multi-hit Error.		
0	OcUtagParity. Read-write. Reset: 0. Op Cache Microtag Probe Port Parity Error.		
MSR(0000_0405MSRC000_2011 [IF Machine Check Status Thread 0] (MCA::IF::MCA_STATUS_IF)		
Reset:	0000_0000_0000h.		
Logs i	nformation associated with errors.		

_lthree[1	Ithree[1:0]_core[3:0]_thread[1:0]_inst1_alias[MSR,MSRLEGACY]; MSR[C0002011,00000405]		
Bits	Description		
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register h		
	been read.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not		
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check		
	Errors].		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in		
	MCA::IF::MCA_CTL_IF. This bit is a copy of bit in MCA::IF::MCA_CTL_IF for this error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::IF::MCA_MISC0_IF.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
58	AddrV. Reset: Cold,0. 1=MCA::IF::MCA_ADDR_IF contains address information associated with the error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of		
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be		
	reinitialized.		

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer		
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The		
	thread which consumed the error is not restartable and must be terminated. Only meaningful when		
	MCA::IF::MCA_STATUS_IF[PCC]=0.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
54	Reserved.		
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::IF::MCA_SYND_IF. If		
	MCA::IF::MCA_SYND_IF[ErrorPriority] is the same as the priority of the error in		
	MCA::IF::MCA_STATUS_IF, then the information in MCA::IF::MCA_SYND_IF is associated with the error in		
	MCA::IF::MCA_STATUS_IF. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
52:47	Reserved.		
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC		
40	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC		
	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data		
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is		
	consumed.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
42:38	Reserved.		
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is		
	associated with the error; Otherwise this field is reserved.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
31:22	Reserved.		
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause		
	analysis. This field indicates which bit position in MCA::IF::MCA_CTL_IF enables error reporting for the logged		
	error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read.Write-0-only.Error-on-write-1.		

Table 28: MCA_STA	TUS IF/E	ErrorCodeExt	Decode
-------------------	----------	--------------	--------

Error Type	Bits	Description
OcUtagParity	[6:0]	0x0
TagMultiHit	[6:0]	0x1
TagParity	[6:0]	0x2
DataParity	[6:0]	0x3
DqParity	[6:0]	0x4
L0ItlbParity	[6:0]	0x5
L1ItlbParity	[6:0]	0x6

L2ItlbParity	[6:0]	0x7
BpqSnpParT0	[6:0]	0x8
BpqSnpParT1	[6:0]	0x9
L1BtbMultiHit	[6:0]	0xa
L2BtbMultiHit	[6:0]	0xb
L2RespPoison	[6:0]	0xc
SystemReadDataError	[6:0]	0xd

MSR0000_0406...MSRC000_2012 [IF Machine Check Address Thread 0] (MCA::IF::MCA_ADDR_IF)

Reset: 0000 0000 0000 0000h.

MCA::IF::MCA_ADDR_IF stores an address and other information associated with the error in MCA::IF::MCA_STATUS_IF. The register is only meaningful if MCA::IF::MCA_STATUS_IF[Val]=1 and MCA::IF::MCA_STATUS_IF[AddrV]=1.

_lthree[1:0]_core[3:0]_thread[1:0]_inst1_alias[MSR,MSRLEGACY]; MSR[C0002012,00000406]

Bits Description

63:62 Reserved. Read-write. Reset: Cold,0h.

61:56 LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::IF::MCA_ADDR_IF[ErrorAddr]. A value of 0 indicates that MCA::IF::MCA_ADDR_IF[55:0] contains a valid byte address. A value of 6 indicates that MCA::IF::MCA_ADDR_IF[55:6] contains a valid cache line address and that MCA::IF::MCA_ADDR_IF[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::IF::MCA_ADDR_IF[55:12] contain a valid 4KB memory page and that MCA::IF::MCA_ADDR_IF[11:0] should be ignored by error handling software.

55:0 **ErrorAddr**. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error, contains the address associated with the error logged in MCA::IF::MCA_STATUS_IF. For physical addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Error Type	Bits	Description
OcUtagParity	[55:0]	Reserved
TagMultiHit	[55:48]	Reserved
	[47:0]	Physical Address
TagParity	[55:48]	Reserved
	[47:0]	Physical Address
DataParity	[55:48]	Reserved
	[47:0]	Physical Address
DqParity	[55:48]	Reserved
	[47:0]	Physical Address
L0ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
L1ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
L2ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
BpqSnpParT0	[55:0]	Reserved
BpqSnpParT1	[55:0]	Reserved
L1BtbMultiHit	[55:0]	Reserved

Table 29: MCA ADDR IF Register

L2BtbMultiHit	[55:0]	Reserved
L2RespPoison	[55:48]	Reserved
	[47:5]	Physical Address
	[4:0]	Reserved
SystemReadDataError	[55:48]	Reserved
	[47:5]	Physical Address
	[4:0]	Reserved

MSR0000_0407...MSRC000_2013 [IF Machine Check Miscellaneous 0 Thread 0] (MCA::IF::MCA_MISC0_IF)

Reset:	D000 0000 0100 0000h.
	iscellaneous information associated with errors.
	:0]_core[3:0]_thread[1:0]_inst1_alias[MSR,MSRLEGACY]; MSR[C0002013,00000407]
Bits	Description
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
62	CntP. Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
00	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write : Read-only.
59:56	Reserved.
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write : Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write : Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write : Read-only.

31:24 BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid. 23:0 Reserved.

MSRC000 2014 [IF Machine Check Configuration] (MCA::IF::MCA CONFIG IF)

Reset:	0000 0002 0000 0021h.
Contro	bls configuration of the associated machine check bank.
	:0]_core[3:0]_inst1_aliasMSR; MSRC0002014
Bits	Description
63:39	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
36:34	
33	Reserved. Read-write. Reset: 1.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::IF::MCA_CONFIG_IF[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::IF::MCA_CONFIG_IF[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::IF::MCA_MISC0_IF[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::IF::MCA_STATUS_IF[TCC] is present.

MSRC000_2015 [IF IP Identification] (MCA::IF::MCA_IPID_IF)

Reset: 0001_00B0_0000_0000h.
The MCA::IF::MCA_IPID_IF register is used by software to determine what IP type and revision is associated with the
MCA bank.
_lthree[1:0]_core[3:0]_inst1_aliasMSR; MSRC0002015
Bits Description
63:48 McaType. Read-only. Reset: 0001h. The McaType of the MCA bank within this IP.
47:44 Reserved.
43:32 HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
instance of this register.
MSRC000_2016 [IF Machine Check Syndrome Thread 0] (MCA::IF::MCA_SYND_IF)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::IF::MCA STATUS IF Thread 0

lthree[1:0] core[3:0] thread[1:0] inst1 aliasMSR; MSRC0002016

Bits Description

63:33 Reserved.

Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in 32 MCA::IF::MCA STATUS IF. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length

	specified by MCA::IF::MCA_SYND_IF[Length]. The Syndrome field is only valid when
	MCA::IF::MCA_SYND_IF[Length] is not 0.
31:27	Reserved.
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in
	MCA::IF::MCA_SYND_IF. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in
	MCA::IF::MCA_SYND_IF[Syndrome]. A value of 0 indicates that there is no valid syndrome in
	MCA::IF::MCA_SYND_IF. For example, a syndrome length of 9 means that
	MCA::IF::MCA_SYND_IF[Syndrome] bits [8:0] contains a valid syndrome.
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the
	location of the error. Decoding is available in Table 30 [MCA SYND IF Register].

Error Type	Bits	Description
OcUtagParity	[17:5]	Reserved
	[4:0]	Index
TagMultiHit	[17:16]	Reserved
	[15:8]	Subcache
	[8:0]	Reserved
TagParity	[17:8]	Reserved
	[7:0]	Way
DataParity	[17:16]	Reserved
	[15:8]	Subcache
	[8:0]	Way
DqParity	[17:0]	Reserved
L0ItlbParity	[17:4]	Reserved

Table 30: MCA_SYND_IF Register

[[1/.0]	Reserved
[7:0]	Way
[17:16]	Reserved
[15:8]	Subcache
[8:0]	Way
[17:0]	Reserved
[17:4]	Reserved
[3:0]	Reserved
[17:6]	Reserved
[5:0]	Reserved
[17:8]	Reserved
[7:0]	Reserved
[17:0]	Reserved
[17:2]	Reserved
[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 =
	Transaction Error; 2'b11 = Protection Violation
	[7:0] [17:16] [15:8] [8:0] [17:0] [17:4] [3:0] [17:6] [5:0] [17:6] [5:0] [17:8] [7:0] [17:0] [17:0] [17:0] [17:0] [17:0] [17:0] [17:2]

MSRC001_0401 [IF Machine Check Control Mask] (MCA::IF::MCA_CTL_MASK_IF)

Read-write. Reset: 0000_0000_0000_0000h.
Inhibit detection of an error source.

_lthree[1:0]_core[3:0]_inst1_aliasMSR; MSRC0010401

Bits Description

63:14 Reserved.

13 **SystemReadDataError**. Read-write. Reset: 0. Init: BIOS,1. System Read Data Error. An error in a demand fetch of a line. Possible reasons include master abort and target abort.

12	L2RespPoison. Read-write. Reset: 0. L2 Cache Response Poison Error. Error is the result of consuming poison
	data.
11	L2BtbMultiHit. Read-write. Reset: 0. L2 BTB Multi-Match Error.
10	L1BtbMultiHit. Read-write. Reset: 0. L1 BTB Multi-Match Error.
9	BpqSnpParT1. Read-write. Reset: 0. BPQ Thread 1 Snoop Parity Error.
8	BpqSnpParT0. Read-write. Reset: 0. BPQ Thread 0 Snoop Parity Error.
7	L2ItlbParity. Read-write. Reset: 0. L2 ITLB Parity Error.
6	L1ItlbParity. Read-write. Reset: 0. L1 ITLB Parity Error.
5	L0ItlbParity. Read-write. Reset: 0. L0 ITLB Parity Error.
4	DqParity. Read-write. Reset: 0. Decoupling Queue PhysAddr Parity Error.
3	DataParity. Read-write. Reset: 0. IC Data Array Parity Error.
2	TagParity. Read-write. Reset: 0. IC Full Tag Parity Error.
1	TagMultiHit. Read-write. Reset: 0. IC Microtag or Full Tag Multi-hit Error.
0	OcUtagParity. Read-write. Reset: 0. Op Cache Microtag Probe Port Parity Error.

3.17.7 L2

MSR0000_0408...MSRC000_2020 [L2 Machine Check Control] (MCA::L2::MCA_CTL_L2)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::L2::MCA_CTL_L2 register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

 __lthree[1:0]_core[3:0]_inst2_alias[MSR,MSRLEGACY]; MSR[C0002020,00000408]

 Bits
 Description

 63:4
 Reserved.

 3
 Hwa. Read-write. Reset: 0. Hardware Assert Error.

 2
 Data. Read-write. Reset: 0. L2M Data Array ECC Error.

 1
 Tag. Read-write. Reset: 0. L2M Tag or State Array ECC Error.

 0
 MultiHit. Read-write. Reset: 0. L2M Tag Multiple-Way-Hit error.

MSR0000_0409...MSRC000_2021 [L2 Machine Check Status Thread 0] (MCA::L2::MCA_STATUS_L2)

Reset: 0000_0000_0000h.		
Logs information associated with errors.		
_lthree[1	:0]_core[3:0]_thread[1:0]_inst2_alias[MSR,MSRLEGACY]; MSR[C0002021,00000409]	
Bits	Description	
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has	
	been read.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not	
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check	
	Errors].	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	
	MCA::L2::MCA_CTL_L2. This bit is a copy of bit in MCA::L2::MCA_CTL_L2 for this error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::L2::MCA_MISC0_L2.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	

58	AddrV. Reset: Cold,0. 1=MCA::L2::MCA_ADDR_L2 contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have unpredictable results. The error is not recoverable or survivable, and the system should be reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::L2::MCA_STATUS_L2[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::L2::MCA SYND L2. If
55	MCA::L2::MCA SYND L2[ErrorPriority] is the same as the priority of the error in
	MCA::L2::MCA_STATUS_L2, then the information in MCA::L2::MCA_SYND_L2 is associated with the error
	in MCA::L2::MCA_STATUS_L2.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
43	Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	Reserved.
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	Reserved.
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::L2::MCA_CTL_L2 enables error reporting for the logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 31: MCA_STATUS_L2[ErrorCodeExt] Decode

Error Type	Bits	Description
MultiHit	[6:0]	0x0
Tag	[6:0]	0x1

Data	[6:0]	0x2
Hwa	[6:0]	0x3

MSR0000_040A...MSRC000_2022 [L2 Machine Check Address Thread 0] (MCA::L2::MCA_ADDR_L2)

Reset: 0000_0000_0000h.		
MCA::L2::MCA ADDR L2 stores an address and other information associated with the error in		
MCA::L2::MCA STATUS L2. The register is only meaningful if MCA::L2::MCA STATUS L2[Val]=1 and		
MCA::L2::MCA_STATUS_L2[AddrV]=1.		
_lthree[1:0]_core[3:0]_thread[1:0]_inst2_alias[MSR,MSRLEGACY]; MSR[C0002022,0000040A]		
Bits Description		
63:62 Reserved. Read-write. Reset: Cold,0h.		
61:56 LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
MCA::L2::MCA_ADDR_L2[ErrorAddr]. A value of 0 indicates that MCA::L2::MCA_ADDR_L2[55:0] contains		
a valid byte address. A value of 6 indicates that MCA::L2::MCA_ADDR_L2[55:6] contains a valid cache line		
address and that MCA::L2::MCA_ADDR_L2[5:0] are not part of the address and should be ignored by error		
handling software. A value of 12 indicates that MCA::L2::MCA_ADDR_L2[55:12] contain a valid 4KB memory		
page and that MCA::L2::MCA_ADDR_L2[11:0] should be ignored by error handling software.		
55:0 ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000h. Unless otherwise specified by an error,		
contains the address associated with the error logged in MCA::L2::MCA_STATUS_L2. For physical addresses,		
the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Table 32: MCA ADDR L2 Register

Error Type	Bits	Description
MultiHit	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Tag	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Data	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Hwa	[31:0]	Reserved

MSR0000_040B...MSRC000_2023 [L2 Machine Check Miscellaneous 0 Thread 0] (MCA::L2::MCA_MISC0_L2)

Reset:	D000_0000_0100_0000h.		
Log m	Log miscellaneous information associated with errors.		
_lthree[1	:0]_core[3:0]_thread[1:0]_inst2_alias[MSR,MSRLEGACY]; MSR[C0002023,0000040B]		
Bits	Description		
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	CntP. Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt		
	generation are not supported.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :		
	Read-only.		

 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writter Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writter Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.0 = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SM trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writter Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writter Read-only. 	
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 0 = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SN trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	ne
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 0 = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SM trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	e :
Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 0 = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SM trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	
 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 0 No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SM trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated. 	e :
Read-only. 48 Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	
ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	e :
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ	
Read-only.	e :
47:44 Reserved.	
43:32 ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). It threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.	r
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-writ Read-only.	e :
31:24 BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is va	ılid.
23:0 Reserved.	

MSRC000_2024 [L2 Machine Check Configuration] (MCA::L2::MCA_CONFIG_L2)

Reset:	0000_0000_0025h.
	ols configuration of the associated machine check bank.
	:0]_core[3:0]_inst2_aliasMSR; MSRC0002024
Bits	Description
63:39	Reserved.
38:37	DeferredIntType. Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =
	SMI trigger event. 11b = Reserved.
36:35	Reserved.
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS, 1. 1=Log deferred errors in
	MCA::L2::MCA_STATUS_L2 and MCA::L2::MCA_ADDR_L2 in addition to MCA::L2::MCA_DESTAT_L2
	and MCA::L2::MCA_DEADDR_L2. 0=Only log deferred errors in MCA::L2::MCA_DESTAT_L2 and
	MCA::L2::MCA_DEADDR_L2. This bit does not affect logging of deferred errors in
	MCA::L2::MCA_SYND_L2, MCA::L2::MCA_MISC0_L2.
33	Reserved.
32	McaXEnable. Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported. Read-only. Reset: 1. 1=MCA::L2::MCA_CONFIG_L2[DeferredIntType] controls

the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::L2::MCA_CONFIG_L2[DeferredErrorLoggingSupported]=1.

4:3 Reserved.

DeferredErrorLoggingSupported. Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::L2::MCA_CONFIG_L2[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::L2::MCA_DESTAT_L2 and MCA::L2::MCA_DEADDR_L2 are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
 Reserved.

0 **McaX**. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::L2::MCA_MISC0_L2[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::L2::MCA_STATUS_L2[TCC] is present.

MSRC000_2025 [L2 IP Identification] (MCA::L2::MCA_IPID_L2)

Reset: 0002 00B0 0000 0000h.

The MCA::L2::MCA_IPID_L2 register is used by software to determine what IP type and revision is associated with the MCA bank.

_lthree[1:0]_core[3:0]_inst2_aliasMSR; MSRC0002025

Bits Description

63:48 McaType. Read-only. Reset: 0002h. The McaType of the MCA bank within this IP.

47:44 Reserved.

43:32 HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.

31:0 **InstanceId**. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per instance of this register.

MSRC000_2026 [L2 Machine Check Syndrome Thread 0] (MCA::L2::MCA_SYND_L2)

Read-write, Volatile. Reset: 0000 0000 0000 0000h. Logs physical location information associated with error in MCA::L2::MCA STATUS L2 Thread 0 _lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC0002026 **Bits Description** 63:49 Reserved. 48:32 Syndrome. Read-write, Volatile. Reset: Cold,0 0000h. Contains the syndrome, if any, associated with the error logged in MCA::L2::MCA STATUS L2. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length specified by MCA::L2::MCA SYND L2[Length]. The Syndrome field is only valid when MCA::L2::MCA SYND L2[Length] is not 0. 31:27 Reserved. 26:24 ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in MCA::L2::MCA SYND L2. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved. 23:18 Length. Read-write Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in MCA::L2::MCA SYND L2[Syndrome]. A value of 0 indicates that there is no valid syndrome in MCA::L2::MCA SYND L2. For example, a syndrome length of 9 means that MCA::L2::MCA SYND L2[Syndrome] bits [8:0] contains a valid syndrome. 17:0 ErrorInformation, Read-write, Volatile, Reset: Cold.0 0000h, Contains error-specific information about the location of the error. Decoding is available in Table 33 [MCA SYND L2 Register].

Table 33: MCA_SYND_L2 Register

Error Type	Bits	Description
MultiHit	[17:8]	Index
	[7:0]	One-hot way vector
Tag	[17:13]	Reserved

	[12:3]	Index
	[2:0]	Way
Data	[17:15]	Reserved
	[14:5]	Index
	[4:3]	Quarter-line
	[2:0]	Way
Hwa	[17:0]	Reserved

MSRC000_2028 [L2 Machine Check Deferred Error Status Thread 0] (MCA::L2::MCA_DESTAT_L2)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.		
Holds	Holds status information for the first deferred error seen in this bank.		
_lthree[1	:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC0002028		
Bits	Description		
63	Val. Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow. Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::L2::MCA_DEADDR_L2 contains address information		
	associated with the error.		
57:54	Reserved.		
53	SyndV. Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::L2::MCA_SYND_L2. If		
	MCA::L2::MCA_SYND_L2[ErrorPriority] is the same as the priority of the error in		
	MCA::L2::MCA_STATUS_L2, then the information in MCA::L2::MCA_SYND_L2 is associated with the error		
	in MCA::L2::MCA_DESTAT_L2.		
52:45	Reserved.		
44	Deferred. Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000_2029 [L2 Deferred Error Address Thread 0] (MCA::L2::MCA_DEADDR_L2)

Reset: 0000_0000_0000_0000h.		
The MCA::L2::MCA_DEADDR_L2 register stores the address associated with the error in		
MCA::L2::MCA DESTAT L2. The register is only meaningful if MCA::L2::MCA DESTAT L2[Val]=1 and		
MCA::L2::MCA_DESTAT_L2[AddrV]=1. The lo	west valid bit of the address is defined by	
MCA::L2::MCA_DEADDR_L2[LSB].		
_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC0002029		
Bits Description		
63:62 Reserved. Read-write. Reset: Cold,0h.		
61:56 LSB. Read-write, Volatile. Reset: Cold, 00h.	Specifies the least significant valid bit of the address contained in	
MCA::L2::MCA_DEADDR_L2[ErrorAdd	r]. A value of 0 indicates that MCA::L2::MCA_DEADDR_L2[55:0]	
contains a valid byte address. A value of 6 i	ndicates that MCA::L2::MCA_DEADDR_L2[55:6] contains a valid	
	A_DEADDR_L2[5:0] are not part of the address and should be ignored	
	ndicates that MCA::L2::MCA_DEADDR_L2[55:12] contain a valid	
4KB memory page and that MCA::L2::MC	A_DEADDR_L2[11:0] should be ignored by error handling software.	
55:0 ErrorAddr. Read-write, Volatile. Reset: Co	old,00_0000_0000_0000h. Contains the address, if any, associated with	
the error logged in MCA L ² MCA DEST	AT L2. The lowest-order valid bit of the address is specified in	

MCA::L2::MCA_DEADDR_L2[LSB].

MSRC001_0402 [L2 Machine Check Control Mask] (MCA::L2::MCA_CTL_MASK_L2)

Read-	Read-write. Reset: 0000 0000 0000 0000h.		
Inhibi	Inhibit detection of an error source.		
_lthree[1	_lthree[1:0]_core[3:0]_inst2_aliasMSR; MSRC0010402		
Bits	Bits Description		
63:4	Reserved.		
3	Hwa. Read-write. Reset: 0. Init: BIOS, 1. Hardware Assert Error.		
2	Data. Read-write. Reset: 0. L2M Data Array ECC Error.		
1	Tag. Read-write. Reset: 0. L2M Tag or State Array ECC Error.		
0	0 MultiHit. Read-write. Reset: 0. L2M Tag Multiple-Way-Hit error.		

3.17.8 DE

MSR0000_040C...MSRC000_2030 [DE Machine Check Control] (MCA::DE::MCA_CTL_DE)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::DE::MCA_CTL_DE register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

_lthree[1	_lthree[1:0]_core[3:0]_inst3_alias[MSR,MSRLEGACY]; MSR[C0002030,0000040C]		
Bits	Description		
63:9	Reserved.		
8	OCBQ. Read-write. Reset: 0. Micro-op buffer parity error.		
7	UcSeq. Read-write. Reset: 0. Patch RAM sequencer parity error.		
6	UcDat. Read-write. Reset: 0. Patch RAM data parity error.		
5	Faq. Read-write. Reset: 0. Fetch address FIFO parity error.		
4	Idq. Read-write. Reset: 0. Instruction dispatch queue parity error.		
3	UopQ. Read-write. Reset: 0. Micro-op queue parity error.		
2	Ibq. Read-write. Reset: 0. Instruction buffer parity error.		
1	OcDat. Read-write. Reset: 0. Micro-op cache data parity error.		
0	OcTag. Read-write. Reset: 0. Micro-op cache tag parity error.		

MSR0000_040D...MSRC000_2031 [DE Machine Check Status Thread 0] (MCA::DE::MCA_STATUS_DE)

Reset: 0000 0000 0000h.		
Logs information associated with errors.		
_lthree[]	:0]_core[3:0]_thread[1:0]_inst3_alias[MSR,MSRLEGACY]; MSR[C0002031,0000040D]	
Bits	Description	
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has	
	been read.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not	
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check	
	Errors].	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	
	MCA::DE::MCA_CTL_DE. This bit is a copy of bit in MCA::DE::MCA_CTL_DE for this error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::DE::MCA_MISC0_DE.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	

58	AddrV. Reset: Cold,0. 1=MCA::DE::MCA_ADDR_DE contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::DE::MCA_STATUS_DE[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::DE::MCA_SYND_DE. If
	MCA::DE::MCA_SYND_DE[ErrorPriority] is the same as the priority of the error in
	MCA::DE::MCA_STATUS_DE, then the information in MCA::DE::MCA_SYND_DE is associated with the error in MCA::DE::MCA_STATUS_DE.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
40	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
43	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
42:38	Reserved.
	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
31:22	Reserved.
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::DE::MCA_CTL_DE enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.

Table 34: MCA_STATUS_DE[ErrorCodeExt] Decode

Error Type	Bits	Description
OcTag	[6:0]	0x0
OcDat	[6:0]	0x1

Ibq	[6:0]	0x2
UopQ	[6:0]	0x3
Idq	[6:0]	0x4
Faq	[6:0]	0x5
UcDat	[6:0]	0x6
UcSeq	[6:0]	0x7
OCBQ	[6:0]	0x8

MSR0000_040E...MSRC000_2032 [DE Machine Check Address Thread 0] (MCA::DE::MCA_ADDR_DE)

Reset: 0000 0000 0000 0000h.

MCA::DE::MCA_ADDR_DE stores an address and other information associated with the error in MCA::DE::MCA_STATUS_DE. The register is only meaningful if MCA::DE::MCA_STATUS_DE[Val]=1 and MCA::DE::MCA_STATUS_DE[AddrV]=1.

_lthree[1:0]_core[3:0]_thread[1:0]_inst3_alias[MSR,MSRLEGACY]; MSR[C0002032,0000040E]

Bits Description

63:62 Reserved. Read-write. Reset: Cold,0h.

61:56 LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::DE::MCA_ADDR_DE[ErrorAddr]. A value of 0 indicates that MCA::DE::MCA_ADDR_DE[55:0] contains a valid byte address. A value of 6 indicates that MCA::DE::MCA_ADDR_DE[55:6] contains a valid cache line address and that MCA::DE::MCA_ADDR_DE[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::DE::MCA_ADDR_DE[55:12] contain a valid 4KB memory page and that MCA::DE::MCA_ADDR_DE[11:0] should be ignored by error handling software.
55:0 ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error, contains the address associated with the error logged in MCA::DE::MCA_STATUS_DE. For physical addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Table 35: MCA_ADDR_DE Register

Error Type	Bits	Description
OcTag	[55:0]	Reserved
OcDat	[55:0]	Reserved
Ibq	[55:0]	Reserved
UopQ	[55:0]	Reserved
Idq	[55:0]	Reserved
Faq	[55:0]	Reserved
UcDat	[55:0]	Reserved
UcSeq	[55:0]	Reserved
OCBQ	[55:0]	Reserved

MSR0000_040F...MSRC000_2033 [DE Machine Check Miscellaneous 0 Thread 0] (MCA::DE::MCA_MISC0_DE)

Reset: D000_0000_0100_0000h.		
Log m	niscellaneous information associated with errors.	
_lthree[1	:0]_core[3:0]_thread[1:0]_inst3_alias[MSR,MSRLEGACY]; MSR[C0002033,0000040F]	
Bits	Description	
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
62	CntP . Reset: 1. 1=A valid threshold counter is present.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not	
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.	

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
59:56	Reserved.
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA MISC0 DE[Locked]) ? Read-write :
	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. $11b = Reserved$.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
48	Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2034 [DE Machine Check Configuration] (MCA::DE::MCA_CONFIG_DE)

	0000_0002_0000_0021h.
	ols configuration of the associated machine check bank.
_	:0]_core[3:0]_inst3_aliasMSR; MSRC0002034
Bits	Description
63:39	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
36:34	Reserved.
33	Reserved. Read-write. Reset: 1.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::DE::MCA_CONFIG_DE[DeferredIntType] controls

	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::DE::MCA_CONFIG_DE[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported. Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and
	the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and
	MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::DE::MCA_MISC0_DE[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::DE::MCA_STATUS_DE[TCC] is present.

MSRC000_2035 [DE IP Identification] (MCA::DE::MCA_IPID_DE)

Reset: 0003 00B0 0000 0000h.

The MCA::DE::MCA_IPID_DE register is used by software to determine what IP type and revision is associated with the MCA bank.

_lthree[1:0]_core[3:0]_inst3_aliasMSR; MSRC0002035

Bits	Description
63:48	McaType. Read-only. Reset: 0003h. The McaType of the MCA bank within this IP.
47:44	Reserved.
43:32	HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSRC000_2036 [DE Machine Check Syndrome Thread 0] (MCA::DE::MCA_SYND_DE)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::DE::MCA_STATUS_DE Thread 0 _lthree[1:0]_core[3:0]_thread[1:0]_inst3_aliasMSR; MSRC0002036

_three[1:0]_core[3:0]_thread[1:0]_inst3_aliasMSK; MSRC0002036		
Bits	Description	
63:33	Reserved.	
32	Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in	
	MCA::DE::MCA_STATUS_DE. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a	
	length specified by MCA::DE::MCA_SYND_DE[Length]. The Syndrome field is only valid when	
	MCA::DE::MCA_SYND_DE[Length] is not 0.	
31:27	Reserved.	
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in	
	MCA::DE::MCA_SYND_DE. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =	
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.	
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in	
	MCA::DE::MCA_SYND_DE[Syndrome]. A value of 0 indicates that there is no valid syndrome in	
	MCA::DE::MCA_SYND_DE. For example, a syndrome length of 9 means that	
	MCA::DE::MCA_SYND_DE[Syndrome] bits [8:0] contains a valid syndrome.	
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the	
	location of the error. Decoding is available in Table 36 [MCA_SYND_DE Register].	

Table 36: MCA SYND DE Register

Error Type	Bits	Description
OcTag	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
OcDat	[17:16]	Reserved

	[15:8]	Index
	[7:0]	Way
Ibq	[17:0]	Reserved
UopQ	[17:0]	Reserved
Idq	[17:0]	Reserved
Faq	[17:0]	Reserved
UcDat	[17:0]	Reserved
UcSeq	[17:0]	Reserved
OCBQ	[17:0]	Reserved

MSRC001_0403 [DE Machine Check Control Mask] (MCA::DE::MCA_CTL_MASK_DE)

Read-write. Reset: 0000_0000_0000_0000h. Inhibit detection of an error source. _lthree[1:0]_core[3:0]_inst3_aliasMSR; MSRC0010403 Bits Description 63:9 Reserved. 8 OCBQ. Read-write. Reset: 0. Micro-op buffer parity error. 7 UcSeq. Read-write. Reset: 0. Patch RAM sequencer parity error.			
Ithree[1:0]_core[3:0]_inst3_aliasMSR; MSRC0010403 Bits Description 63:9 Reserved. 8 OCBQ. Read-write. Reset: 0. Micro-op buffer parity error.	Read-write. Reset: 0000_0000_0000_0000h.		
Bits Description 63:9 Reserved. 8 OCBQ. Read-write. Reset: 0. Micro-op buffer parity error.	Inhibit detection of an error source.		
63:9 Reserved. 8 OCBQ. Read-write. Reset: 0. Micro-op buffer parity error.			
8 OCBQ. Read-write. Reset: 0. Micro-op buffer parity error.			
7 UcSeq. Read-write. Reset: 0. Patch RAM sequencer parity error.			
6 UcDat. Read-write. Reset: 0. Patch RAM data parity error.			
5 Faq . Read-write. Reset: 0. Fetch address FIFO parity error.			
4 Idq . Read-write. Reset: 0. Instruction dispatch queue parity error.			
3 UopQ . Read-write. Reset: 0. Micro-op queue parity error.			
2 Ibq . Read-write. Reset: 0. Instruction buffer parity error.			
1 OcDat . Read-write. Reset: 0. Micro-op cache data parity error.			
0 OcTag . Read-write. Reset: 0. Micro-op cache tag parity error.			

3.17.9 EX

MSR0000_0414...MSRC000_2050 [EX Machine Check Control] (MCA::EX::MCA_CTL_EX)

	_	
Read-write. Reset: 0000_0000_0000_0000h.		
0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corresponding error. The MCA::EX::MCA_CTL_EX register must be enabled by the corresponding enable bit in		
Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
<pre>[three[1:0]_core[3:0]_inst5_alias[MSR,MSRLEGACY]; MSR[C0002050,00000414]</pre>		
Bits Description		
53:11 Reserved.		
10 BBQ . Read-write. Reset: 0. Branch buffer queue parity error.		
9 SQ. Read-write. Reset: 0. Scheduling queue parity error.		
8 STATQ. Read-write. Reset: 0. Retire status queue parity error.		
7 RETDISP . Read-write. Reset: 0. Retire dispatch queue parity error.		
6 CHKPTQ. Read-write. Reset: 0. CHKPTQ. Checkpoint queue parity error.		
5 PLDAL. Read-write. Reset: 0. EX payload parity error.		
4 PLDAG. Read-write. Reset: 0. Address generator payload parity error.		
3 IDRF . Read-write. Reset: 0. Immediate displacement register file parity error.		
2 FRF . Read-write. Reset: 0. Flag register file parity error.		
1 PRF . Read-write. Reset: 0. Physical register file parity error.		
0 WDT. Read-write. Reset: 0. Watchdog Timeout error.		

MSR0000_0415...MSRC000_2051 [EX Machine Check Status Thread 0] (MCA::EX::MCA_STATUS_EX)

	0000_0000_0000h.
\mathcal{U}	nformation associated with errors.
	:0]_core[3:0]_thread[1:0]_inst5_alias[MSR,MSRLEGACY]; MSR[C0002051,00000415]
	Description
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in MCA::EX::MCA CTL EX. This bit is a copy of bit in MCA::EX::MCA CTL EX for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV . Reset: Cold,0. 1=Valid thresholding in MCA::EX::MCA_MISC0_EX.
-	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV. Reset: Cold,0. 1=MCA::EX::MCA ADDR EX contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
01	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::EX::MCA_STATUS_EX[PCC]=0.
51	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved.
54	
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::EX::MCA_SYND_EX. If MCA::EX::MCA_SYND_EX[ErrorPriority] is the same as the priority of the error in
	MCA.:EX.:MCA_STAD_EX[Enor nony] is the same as the priority of the error in MCA::EX::MCA_STATUS_EX, then the information in MCA::EX::MCA_SYND_EX is associated with the
	error in MCA::EX::MCA STATUS EX.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
10	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	recessive. colo
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.

42:38	Reserved.			
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is			
	associated with the error; Otherwise this field is reserved.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
31:22	Reserved.			
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause			
	analysis. This field indicates which bit position in MCA::EX::MCA_CTL_EX enables error reporting for the			
	logged error.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this			
	field.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			

Table 37: MCA STATUS EX[ErrorCodeExt] Decode

Error Type	Bits	Description
WDT	[6:0]	0x0
PRF	[6:0]	0x1
FRF	[6:0]	0x2
IDRF	[6:0]	0x3
PLDAG	[6:0]	0x4
PLDAL	[6:0]	0x5
СНКРТQ	[6:0]	0x6
RETDISP	[6:0]	0x7
STATQ	[6:0]	0x8
SQ	[6:0]	0x9
BBQ	[6:0]	0xa

MSR0000_0416...MSRC000_2052 [EX Machine Check Address Thread 0] (MCA::EX::MCA_ADDR_EX)

Read-only. Reset: 0000_0000_0000_0000h.

MCA::EX::MCA_ADDR_EX stores an address and other information associated with the error in MCA::EX::MCA_STATUS_EX. The register is only meaningful if MCA::EX::MCA_STATUS_EX[Val]=1 and MCA::EX::MCA_STATUS_EX[AddrV]=1.

_lthree[1:0]_core[3:0]_thread[1:0]_inst5_alias[MSR,MSRLEGACY]; MSR[C0002052,00000416]

Bits Description

63:62 Reserved.
61:56 LSB. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::EX::MCA_ADDR_EX[ErrorAddr]. A value of 0 indicates that MCA::EX::MCA_ADDR_EX[55:0] contains a valid byte address. A value of 6 indicates that MCA::EX::MCA_ADDR_EX[55:6] contains a valid cache line address and that MCA::EX::MCA_ADDR_EX[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::EX::MCA_ADDR_EX[55:12] contain a valid 4KB memory page and that MCA::EX::MCA_ADDR_EX[11:0] should be ignored by error handling software.
55:0 ErrorAddr. Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error logged in MCA::EX::MCA_STATUS EX.

Table 38: MCA	ADDR	EX Register
---------------	------	-------------

Error Type	Bits	Description
WDT	55:49]	Reserved
	[48:0]	RIP of thread triggering the watchdog timeout
PRF	[55:0]	Reserved

FRF	[55:0]	Reserved
IDRF	[55:0]	Reserved
PLDAG	[55:0]	Reserved
PLDAL	[55:0]	Reserved
СНКРТQ	[55:0]	Reserved
RETDISP	[55:0]	Reserved
STATQ	[55:0]	Reserved
SQ	[55:0]	Reserved
BBQ	[55:0]	Reserved

MSR0000_0417...MSRC000_2053 [EX Machine Check Miscellaneous 0 Thread 0] (MCA::EX::MCA_MISC0_EX)

Reset:	D000_0000_0100_0000h.		
Log m	iscellaneous information associated with errors.		
	:0]_core[3:0]_thread[1:0]_inst5_alias[MSR,MSRLEGACY]; MSR[C0002053,00000417]		
Bits	Description		
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	CntP. Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt		
	generation are not supported.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :		
	Read-only.		
	Reserved.		
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the		
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see		
	Core::X86::Apic::ExtendedInterruptLvtEntries).		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :		
	Read-only.		
51	CntEn. Reset: 0. 1=Count thresholding errors.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :		
50.40	Read-only.		
50:49			
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		
	trigger event. 11b = Reserved. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :		
	Read-only.		
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,		
40	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is		
	generated.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :		
	Read-only.		
47:44	Reserved.		
-	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is		
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The		
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order		
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.		
1			

 AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] | !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write : Read-only.

 31:24
 BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.

 23:0
 Reserved.

MSRC000 2054 [EX Machine Check Configuration] (MCA::EX::MCA CONFIG EX)

Reset:	0000_0002_0000_0021h.
Contro	ols configuration of the associated machine check bank.
	:0]_core[3:0]_inst5_aliasMSR; MSRC0002054
Bits	Description
63:39	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
36:34	Reserved.
33	Reserved. Read-write. Reset: 1.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::EX::MCA_CONFIG_EX[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::EX::MCA_CONFIG_EX[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::EX::MCA_MISC0_EX[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::EX::MCA_STATUS_EX[TCC] is present.

MSRC000_2055 [EX IP Identification] (MCA::EX::MCA_IPID_EX)

Reset: 0005 00B0 0000 0000h.

The MCA::EX::MCA_IPID_EX register is used by software to determine what IP type and revision is associated with the MCA bank.

_lthree[1:0]_core[3:0]_inst5_aliasMSR; MSRC0002055

Bits	Description				
63:48	McaType. Read-only. Reset: 0005h. The McaType of the MCA bank within this IP.				
47:44	Reserved.				
43:32	HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.				
31:0	InstanceId. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per				
	instance of this register.				

MSRC000_2056 [EX Machine Check Syndrome Thread 0] (MCA::EX::MCA_SYND_EX)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::EX::MCA_STATUS_EX Thread 0

_lthree[1:0]_core[3:0]_thread[1:0]_inst5_aliasMSR; MSRC0002056

Bits Description

63:33 Reserved.

32	Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in				
	MCA::EX::MCA STATUS EX. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a				
	length specified by MCA::EX::MCA_SYND_EX[Length]. The Syndrome field is only valid when				
	MCA::EX::MCA_SYND_EX[Length] is not 0.				
31:27	Reserved.				
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in				
	MCA::EX::MCA_SYND_EX. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =				
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.				
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in				
	MCA::EX::MCA_SYND_EX[Syndrome]. A value of 0 indicates that there is no valid syndrome in				
	MCA::EX::MCA_SYND_EX. For example, a syndrome length of 9 means that				
	MCA::EX::MCA_SYND_EX[Syndrome] bits [8:0] contains a valid syndrome.				
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the				
	location of the error. Decoding is available in Table 39 [MCA SYND EX Register].				

Table 39: MCA_SYND_EX Register

Error Type	Bits	Description
WDT	[17:0]	Reserved
PRF	[17:0]	Reserved
FRF	[17:4]	Reserved
	[3:0]	Reserved
IDRF	[17:6]	Reserved
	[5:4]	Reserved
	[3:0]	Reserved
PLDAG	[17:2]	Reserved
	[1:0]	Reserved
PLDAL	[17:4]	Reserved
	[3:0]	Reserved
СНКРТQ	[17:4]	Reserved
	[3:2]	Reserved
	[1:0]	Reserved
RETDISP	[17:2]	Reserved
	[1:0]	Reserved
STATQ	[17:0]	Reserved
SQ	[17:6]	Reserved
	[5:0]	Reserved
BBQ	[17:6]	Reserved
	[5:0]	Reserved

MSRC001_0405 [EX Machine Check Control Mask] (MCA::EX::MCA_CTL_MASK_EX)

Read-	Read-write. Reset: 0000_0000_0000_0000h.			
Inhibit	Inhibit detection of an error source.			
_lthree[1	:0]_core[3:0]_inst5_aliasMSR; MSRC0010405			
Bits	Description			
63:11	Reserved.			
10	BBQ . Read-write. Reset: 0. Branch buffer queue parity error.			
9	SQ. Read-write. Reset: 0. Scheduling queue parity error.			
8	STATQ. Read-write. Reset: 0. Retire status queue parity error.			
7	RETDISP . Read-write. Reset: 0. Retire dispatch queue parity error.			

6	CHKPTQ. Read-write. Reset: 0. CHKPTQ. Checkpoint queue parity error.
5	PLDAL. Read-write. Reset: 0. EX payload parity error.
4	PLDAG. Read-write. Reset: 0. Address generator payload parity error.
3	IDRF. Read-write. Reset: 0. Immediate displacement register file parity error.
2	FRF. Read-write. Reset: 0. Flag register file parity error.
1	PRF. Read-write. Reset: 0. Physical register file parity error.
0	WDT. Read-write. Reset: 0. Watchdog Timeout error.

3.17.10 FP

MSR0000_0418...MSRC000_2060 [FP Machine Check Control] (MCA::FP::MCA_CTL_FP)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::FP::MCA CTL FP register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG CTL. Does not affect error detection, correction, or logging.

lthree[1:0] core[3:0] inst6 alias[MSR,MSRLEGACY]; MSR[C0002060,00000418]

Bits	Description		
63:7	Reserved.		
6	HWA. Read-write. Reset: 0. Hardware assertion.		
5	SRF. Read-write. Reset: 0. Status register file (SRF) parity error.		
4	RQ. Read-write. Reset: 0. Retire queue (RQ) parity error.		
3	NSQ. Read-write. Reset: 0. NSQ parity error.		
2	SCH. Read-write. Reset: 0. Schedule queue parity error.		
1	FL Read-write Reset 0 Freelist (FL) parity error		

. Read-write. Reset: 0. Freelist (FL) parity error.

0 PRF. Read-write. Reset: 0. Physical register file (PRF) parity error.

Reset:	0000_0000_0000h.
Logs i	nformation associated with errors.
_lthree[]	:0]_core[3:0]_thread[1:0]_inst6_alias[MSR,MSRLEGACY]; MSR[C0002061,00000419]
Bits	Description
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in MCA::FP::MCA_CTL_FP. This bit is a copy of bit in MCA::FP::MCA_CTL_FP for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::FP::MCA_MISC0_FP.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV. Reset: Cold,0. 1=MCA::FP::MCA_ADDR_FP contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have unpredictable results. The error is not recoverable or survivable, and the system should be

 reinitialized. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCorelVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FP[CC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_STATUS_FP. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. SyndV. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a tatually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a currectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a tatually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was a tatually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=A deferred error is acception is deferred until the erroro-only.Error-on-write-1. Deforred. Reset: Cold,0. 1=A deferred error					
 56 ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 57 TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FP[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was a call corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=The error was call corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Preferred. Reset: Cold,0. 1=The error was call ad ceffered error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-wri		reinitialized.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 55 TCC. Reset: Cold,0. 0—The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FP[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_STATUS_FP. then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP. then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 47 Reserved. 48 DECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 48 AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor.<		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
 TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FP[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_SYND_FP. ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_SYND_FP. is associated with the error in MCA::FP::MCA_STATUS_FP. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Deferred. Reset: Cold,0. 1=The error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=The error was treault of attempting to consume poisoned data error which did not immediately cause a processor exception; an exception is deferred until the errone-write-1. Poison. Reset: Cold,00. Herne treat the result of atte	56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.			
address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FPIPCE]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_STATUS_FP. 51 MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP. 7 AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 64 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 45 AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the errono-write-1. <td></td> <td>AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.</td>		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
 Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_SYND_FP[ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. Reroro	55	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::FP::MCA_STATUS_FP[PCC]=0.			
 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_SYND_FP[ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_STATUS_FP. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0.1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 31:24 Re	54				
MCA::FP::MCA_SYND_FP[ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,					
 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCodeExt. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this	55	MCA::FP::MCA_SYND_FP[ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_SYND_FP is associated with the error			
 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreI. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCodeExt. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrCoreld. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error	52:47	Reserved.			
 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 	46				
algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorOdeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. Acc	45				
44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErroCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErroCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.					
43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	42				
 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 	43				
 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error.					
associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.					
31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	37:32	associated with the error; Otherwise this field is reserved.			
 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 					
 analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 					
15:0 ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	21:16	analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error.			
field.		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	15:0				
		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			

Table 40: MCA_STATUS_FP[ErrorCodeExt] Decode

Error Type	Bits	Description
PRF	[6:0]	0x0
FL	[6:0]	0x1
SCH	[6:0]	0x2
NSQ	[6:0]	0x3
RQ	[6:0]	0x4
SRF	[6:0]	0x5

HWA	[6:0]	0x6
-----	-------	-----

MSR0000_041A...MSRC000_2062 [FP Machine Check Address Thread 0] (MCA::FP::MCA_ADDR_FP)

Read-only. Reset: 0000_0000_0000_0000h.

MCA::FP::MCA_ADDR_FP stores an address and other information associated with the error in MCA::FP::MCA_STATUS_FP. The register is only meaningful if MCA::FP::MCA_STATUS_FP[Val]=1 and MCA::FP::MCA_STATUS_FP[AddrV]=1. __lthree[1:0]_core[3:0]_thread[1:0]_inst6_alias[MSR,MSRLEGACY]; MSR[C0002062,0000041A] Bits Description

63:62 Reserved.
61:56 LSB. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::FP::MCA_ADDR_FP[ErrorAddr]. A value of 0 indicates that MCA::FP::MCA_ADDR_FP[55:0] contains a valid byte address. A value of 6 indicates that MCA::FP::MCA_ADDR_FP[55:6] contains a valid cache line address and that MCA::FP::MCA_ADDR_FP[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::FP::MCA_ADDR_FP[55:12] contain a valid 4KB memory page and that MCA::FP::MCA_ADDR_FP[11:0] should be ignored by error handling software.
55:0 ErrorAddr. Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error logged in MCA::FP::MCA_STATUS_FP.

Table 41: MCA_ADDR_FP Register

Error Type	Bits	Description	
PRF	[55:0	Reserved	
FL	[55:0	Reserved	
SCH	[55:0	Reserved	
NSQ	[55:0	Reserved	
RQ	[55:0	Reserved	
SRF	[55:0	Reserved	
HWA	[55:0	Reserved	

MSR0000_041B...MSRC000_2063 [FP Machine Check Miscellaneous 0 Thread 0] (MCA::FP::MCA_MISC0_FP)

Reset: D000_0000_0100_0000h.				
Log miscellaneous information associated with errors.				
_lthree[1	1:0]_core[3:0]_thread[1:0]_inst6_alias[MSR,MSRLEGACY]; MSR[C0002063,0000041B]			
Bits	Description			
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
62	CntP. Reset: 1. 1=A valid threshold counter is present.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not			
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.				
60	0 IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt			
	generation are not supported.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :			
Read-only.				
59:56	Reserved.			
55:52	55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the			
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see			
	Core::X86::Apic::ExtendedInterruptLvtEntries).			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :			

	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. $11b = Reserved.$
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :
	Read-only.
48	Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2064 [FP Machine Check Configuration] (MCA::FP::MCA_CONFIG_FP)

1110111	2000_2004 [F1 Machine Check Conngulation] (MCAF1MCA_CONFIG_F1)	
Reset:	0000_0002_0000_0021h.	
Controls configuration of the associated machine check bank.		
	:0]_core[3:0]_inst6_aliasMSR; MSRC0002064	
	Description	
63:39	Reserved.	
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.	
36:34	Reserved.	
33	Reserved. Read-write. Reset: 1.	
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.	
31:6	Reserved.	
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::FP::MCA_CONFIG_FP[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::FP::MCA_CONFIG_FP[DeferredErrorLoggingSupported]=1.	
4:3	Reserved.	
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.	
1	Reserved.	
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::FP::MCA_MISC0_FP[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is	

specifiable by MCA bank. MCA::FP::MCA_STATUS_FP[TCC] is present.

MSRC000_2065 [FP IP Identification] (MCA::FP::MCA_IPID_FP)

Reset: 0000	6 00B0	0000	0000h.

The MCA::FP::MCA_IPID_FP register is used by software to determine what IP type and revision is associated with the MCA bank.

_lthree[1:0]_core[3:0]_inst6_aliasMSR; MSRC0002065

Bits Description

63:48 McaType. Read-only. Reset: 0006h. The McaType of the MCA bank within this IP.

47:44 Reserved.

43:32 HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.

31:0 **InstanceId**. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per instance of this register.

MSRC000_2066 [FP Machine Check Syndrome Thread 0] (MCA::FP::MCA_SYND_FP)

1110111		
Read-	write, Volatile. Reset: 0000_0000_0000_0000h.	
Logs physical location information associated with error in MCA::FP::MCA_STATUS_FP Thread 0		
	:0]_core[3:0]_thread[1:0]_inst6_aliasMSR; MSRC0002066	
Bits	Description	
63:33	Reserved.	
32	Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in	
	MCA::FP::MCA_STATUS_FP. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a	
	length specified by MCA::FP::MCA_SYND_FP[Length]. The Syndrome field is only valid when	
	MCA::FP::MCA_SYND_FP[Length] is not 0.	
31:27	Reserved.	
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in	
	MCA::FP::MCA_SYND_FP. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred	
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.	
23:18	Length. Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in	
	MCA::FP::MCA_SYND_FP[Syndrome]. A value of 0 indicates that there is no valid syndrome in	
	MCA::FP::MCA_SYND_FP. For example, a syndrome length of 9 means that	
	MCA::FP::MCA_SYND_FP[Syndrome] bits [8:0] contains a valid syndrome.	
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold,0 0000h. Contains error-specific information about the	
	location of the error. Decoding is available in Table 42 [MCA_SYND_FP Register].	

Table 42: MCA SYND FP Register

Error Type	Bits	Description
PRF	[17:0]	Reserved
FL	[17:0]	Reserved
SCH	[17:0]	Reserved
NSQ	[17:0]	Reserved
RQ	[17:0]	Reserved
SRF	[17:0]	Reserved
HWA	[17:0]	Reserved

MSRC001_0406 [FP Machine Check Control Mask] (MCA::FP::MCA_CTL_MASK_FP)

Read-write. Reset: 0000_0000_0000_0000h.

Inhibit detection of an error source.

_lthree[1:0]_core[3:0]_inst6_aliasMSR; MSRC0010406

Bits Description

63:7 Reserved.

6	HWA. Read-write. Reset: 0. Init: BIOS,1. Hardware assertion.
5	SRF. Read-write. Reset: 0. Status register file (SRF) parity error.
4	RQ. Read-write. Reset: 0. Retire queue (RQ) parity error.
3	NSQ. Read-write. Reset: 0. NSQ parity error.
2	SCH. Read-write. Reset: 0. Schedule queue parity error.
1	FL. Read-write. Reset: 0. Freelist (FL) parity error.
0	PRF. Read-write. Reset: 0. Physical register file (PRF) parity error.

3.17.11 L3 Cache

MSR0000_041C...MSRC000_20E0 [L3 Machine Check Control] (MCA::L3::MCA_CTL_L3)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::L3::MCA_CTL_L3 register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

_ccx0_inst[10:7]_aliasMSRLEGACY; MSR0000_04[28,24,20,1C]

_ccx1_inst[10:7]_aliasMSRLEGACY; MSR0000_04[38,34,30,2C]

_ccx0_inst[10:7]_aliasMSR; MSRC000_20[A:7]0

_ccx1_inst[10:7]_aliasMSR; MSRC000_20[E:B]0 Bits Description

63:8 Reserved.

7 **Hwa**. Read-write. Reset: 0. L3 Hardware Assertion.

6 **XiVictimQueue**. Read-write. Reset: 0. L3 Victim Queue Parity Error.

5 **SdpParity**. Read-write. Reset: 0. SDP Parity Error from XI.

4 **DataArray**. Read-write. Reset: 0. L3M Data ECC Error.

3 **MultiHitTag**. Read-write. Reset: 0. L3M Tag Multi-way-hit Error.

2 Tag. Read-write. Reset: 0. L3M Tag ECC Error.

- 1 **MultiHitShadowTag**. Read-write. Reset: 0. Shadow Tag Macro Multi-way-hit Error.
- 0 **ShadowTag**. Read-write. Reset: 0. Shadow Tag Macro ECC Error.

MSR0000_041D...MSRC000_20E1 [L3 Machine Check Status] (MCA::L3::MCA_STATUS_L3)

Reset:	0000_0000_0000h.	
Logs information associated with errors.		
_ccx0_ir	nst[10:7]_aliasMSRLEGACY; MSR0000_04[29,25,21,1D]	
	nst[10:7]_aliasMSRLEGACY; MSR0000_04[39,35,31,2D]	
	nst[10:7]_aliasMSR; MSRC000_20[A:7]1	
	nst[10:7]_aliasMSR; MSRC000_20[E:B]1	
Bits	Description	
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has	
	been read.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not	
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check	
	Errors].	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	
	MCA::L3::MCA_CTL_L3. This bit is a copy of bit in MCA::L3::MCA_CTL_L3 for this error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::L3::MCA_MISC0_L3.	

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV. Reset: Cold,0. 1=MCA::L3::MCA_ADDR_L3 contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::L3::MCA_STATUS_L3[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::L3::MCA_SYND_L3. If
	MCA::L3::MCA_SYND_L3[ErrorPriority] is the same as the priority of the error in
	MCA::L3::MCA_STATUS_L3, then the information in MCA::L3::MCA_SYND_L3 is associated with the error in MCA::L3::MCA_STATUS_L3.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
40	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
42:38	Reserved.
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
31:22	Reserved.
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::L3::MCA_CTL_L3 enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.

Error Type	Bits	Description
ShadowTag	[6:0]	0x0

MultiHitShadowTag	[6:0]	0x1
Tag	[6:0]	0x2
MultiHitTag	[6:0]	0x3
DataArray	[6:0]	0x4
SdpParity	[6:0]	0x5
XiVictimQueue	[6:0]	0x6
Hwa	[6:0]	0x7

MSR0000_041E...MSRC000_20E2 [L3 Machine Check Address] (MCA::L3::MCA_ADDR_L3)

Reset:	0000_0000_0000h.		
MCA:	MCA::L3::MCA_ADDR_L3 stores an address and other information associated with the error in		
	:L3::MCA_STATUS_L3. The register is only meaningful if MCA::L3::MCA_STATUS_L3[Val]=1 and		
MCA:	:L3::MCA_STATUS_L3[AddrV]=1.		
	st[10:7]_aliasMSRLEGACY; MSR0000_04[2A,26,22,1E]		
	st[10:7]_aliasMSRLEGACY; MSR0000_04[3A,36,32,2E]		
	st[10:7]_aliasMSR; MSRC000_20[A:7]2		
	st[10:7]_aliasMSR; MSRC000_20[E:B]2		
Bits	Description		
63:62	Reserved. Read-write. Reset: Cold,0h.		
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::L3::MCA_ADDR_L3[ErrorAddr]. A value of 0 indicates that MCA::L3::MCA_ADDR_L3[55:0] contains		
	a valid byte address. A value of 6 indicates that MCA::L3::MCA_ADDR_L3[55:6] contains a valid cache line		
	address and that MCA::L3::MCA_ADDR_L3[5:0] are not part of the address and should be ignored by error		
	handling software. A value of 12 indicates that MCA::L3::MCA_ADDR_L3[55:12] contain a valid 4KB memory		
	page and that MCA::L3::MCA_ADDR_L3[11:0] should be ignored by error handling software.		
	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error,		
	contains the address associated with the error logged in MCA::L3::MCA_STATUS_L3. For physical addresses,		
	the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Error Type	Bits	Description
ShadowTag	[55:16]	Reserved
	[15:0]	$16'b{8'b{Index}, 2'b{Slice}, 6'b{0}}$
MultiHitShadowTag	[55:16]	Reserved
	[15:0]	$16'b{8'b{Index}, 2'b{Slice}, 6'b{0}}$
Tag	[55:19]	Reserved
	[18:0]	19'b{1'b{Bank[3]}, 7'b{Index}, 3'b{Bank[2:0]}, 2'b{slice},
		6'b{0}}
MultiHitTag	[55:19]	Reserved
	[18:0]	19'b{1'b{Bank[3]}, 7'b{Index}, 3'b{Bank[2:0]}, 2'b{slice},
		6'b{0}}
DataArray	[55:48]	Reserved
	[47:0]	Physical Address
SdpParity	[55:48]	Reserved
	[47:0]	Physical Address
XiVictimQueue	[55:48]	Reserved
	[47:0]	Physical Address
Hwa	[55:34]	Reserved
	[33:0]	Reserved

Table 44: MCA ADDR L3 Register

MSR0000_041F...MSRC000_20E3 [L3 Machine Check Miscellaneous 0] (MCA::L3::MCA_MISC0_L3)

-	D000_041FMSRC000_20E3 [L3 Machine Check Miscellaneous 0] (MCA::L3::MCA_MISC0_L3)
	D000_0000_0100_0000h.
	iscellaneous information associated with errors. ist[10:7]_aliasMSRLEGACY; MSR0000_04[2B,27,23,1F]
	ist[10:7] aliasMSRLEGACY; MSR0000_04[2B,27,23,1F]
_ccx0_in	ist[10:7]_aliasMSR; MSRC000_20[A:7]3
_ccx1_in	st[10:7]_aliasMSR; MSRC000_20[E:B]3
-	
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
62	CntP. Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
	Reserved.
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
47:44	·
	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write : Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_20[7...E]4 [L3 Machine Check Configuration] (MCA::L3::MCA_CONFIG_L3)

Reset: 0000 0000 0000 0025h.

Controls configuration of the associated machine check bank.

	ist[10:7]_aliasMSR; MSRC000_20[A:7]4		
	sst[10:7]_aliasMSR; MSRC000_20[E:B]4		
	Description		
	Reserved.		
	 7 DeferredIntType. Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved. 		
36:35	Reserved.		
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in MCA::L3::MCA_STATUS_L3 and MCA::L3::MCA_ADDR_L3 in addition to MCA::L3::MCA_DESTAT_L3 and MCA::L3::MCA_DEADDR_L3. 0=Only log deferred errors in MCA::L3::MCA_DESTAT_L3 and MCA::L3::MCA_DEADDR_L3. This bit does not affect logging of deferred errors in MCA::L3::MCA_SYND_L3, MCA::L3::MCA_MISC0_L3.		
33	Reserved.		
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.		
31:6	Reserved.		
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::L3::MCA_CONFIG_L3[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::L3::MCA_CONFIG_L3[DeferredErrorLoggingSupported]=1.		
4:3	Reserved.		
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::L3::MCA_CONFIG_L3[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::L3::MCA_DESTAT_L3 and MCA::L3::MCA_DEADDR_L3 are supported in this MCA bank. 0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::L3::MCA_MISC0_L3[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::L3::MCA_STATUS_L3[TCC] is present.		

MSRC000_20[7...E]5 [L3 IP Identification] (MCA::L3::MCA_IPID_L3)

Reset: 0007 00B0 0000 0000h.

The MCA::L3::MCA IPID L3 register is used by software to determine what IP type and revision is associated with the MCA bank.

ccx0 inst[10:7]_aliasMSR; MSRC000_20[A:7]5 ccx1_inst[10:7]_aliasMSR; MSRC000_20[E:B]5

Bits Description

63:48 McaType. Read-only. Reset: 0007h. The McaType of the MCA bank within this IP.

47:44 Reserved.

43:32 HardwareID. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.

31:0 InstanceId. Read-write. Reset: 0000 0000h. The instance ID of this IP. This is initialized to a unique ID per instance of this register.

MSRC000 20[7...E]6 [L3 Machine Check Syndrome] (MCA::L3::MCA SYND L3)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::L3::MCA STATUS L3 Thread 0

_ccx0_inst[10:7]_aliasMSR; MSRC000_20[A:7]6

_ccx1_inst[10:7]_aliasMSR; MSRC000_20[E:B]6

Bits Description

63:49	Reserved.		
48:32	Syndrome. Read-write, Volatile. Reset: Cold, 0_0000h. Contains the syndrome, if any, associated with the error		
	logged in MCA::L3::MCA_STATUS_L3. The low-order bit of the syndrome is stored in bit 0, and the syndrome		
	has a length specified by MCA::L3::MCA_SYND_L3[Length]. The Syndrome field is only valid when		
	MCA::L3::MCA_SYND_L3[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in		
	MCA::L3::MCA_SYND_L3. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred		
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in		
	MCA::L3::MCA_SYND_L3[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::L3::MCA_SYND_L3. For example, a syndrome length of 9 means that		
	MCA::L3::MCA_SYND_L3[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 45 [MCA_SYND_L3 Register].		

Table 45: MCA_SYND_L3 Register

Error Type	Bits	Description
ShadowTag	[17:12]	Reserved
	[11:8]	Pack
	[7:3]	Reserved
	[2:0]	Way
MultiHitShadowTag	[17:12]	Reserved
	[11:8]	Pack
	[7:0]	Reserved
Tag	[17:12]	Reserved
	[11:8]	Bank.
	[7:0]	Way
MultiHitTag	[17:0]	Reserved
DataArray	[17:12]	Reserved
	[11:8]	Bank[2:0]
	[7:3]	Reserved
	[2:0]	Way
SdpParity	[17:0]	Reserved
XiVictimQueue	[17:0]	Reserved
Hwa	[17:0]	Reserved

MSRC000_20[7...E]8 [L3 Machine Check Deferred Error Status] (MCA::L3::MCA_DESTAT_L3)

Read-	nd-write, Volatile. Reset: 0000_0000_0000_0000h.		
Holds	Holds status information for the first deferred error seen in this bank.		
_ccx0_in	nst[10:7]_aliasMSR; MSRC000_20[A:7]8		
_ccx1_in	_ccx1_inst[10:7]_aliasMSR; MSRC000_20[E:B]8		
Bits	Description		
63	Val. Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow . Read-write, Volatile. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::L3::MCA_DEADDR_L3 contains address information		

	associated with the error.		
57:54	Reserved.		
53	SyndV. Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::L3::MCA_SYND_L3. If		
	MCA::L3::MCA_SYND_L3[ErrorPriority] is the same as the priority of the error in		
	MCA::L3::MCA_STATUS_L3, then the information in MCA::L3::MCA_SYND_L3 is associated with the error		
	in MCA::L3::MCA_DESTAT_L3.		
52:45	Reserved.		
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000_20[7...E]9 [L3 Deferred Error Address] (MCA::L3::MCA_DEADDR_L3)

0000 0000 0000 D 0000

Reset:	t: 0000_0000_0000h.		
The M	ne MCA::L3::MCA DEADDR L3 register stores the address associated with the error in		
MCA:	ACA::L3::MCA DESTAT L3. The register is only meaningful if MCA::L3::MCA DESTAT L3[Val]=1 and		
MCA:	::L3::MCA_DESTAT_L3[AddrV]=1. The lowest valid bit of the address is defined by		
	::L3::MCA_DEADDR_L3[LSB].		
	nst[10:7]_aliasMSR; MSRC000_20[A:7]9		
	nst[10:7]_aliasMSR; MSRC000_20[E:B]9		
Bits	Description		
63:62	Reserved. Read-write. Reset: Cold,0h.		
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::L3::MCA_DEADDR_L3[ErrorAddr]. A value of 0 indicates that MCA::L3::MCA_DEADDR_L3[55:0]		
	contains a valid byte address. A value of 6 indicates that MCA::L3::MCA_DEADDR_L3[55:6] contains a valid		
	cache line address and that MCA::L3::MCA_DEADDR_L3[5:0] are not part of the address and should be ignored		
	by error handling software. A value of 12 indicates that MCA::L3::MCA_DEADDR_L3[55:12] contain a valid		
	4KB memory page and that MCA::L3::MCA_DEADDR_L3[11:0] should be ignored by error handling software.		
55:0	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with		
	the error logged in MCA::L3::MCA_DESTAT_L3. The lowest-order valid bit of the address is specified in		
	MCA::L3::MCA DEADDR L3[LSB].		

MSRC001_040[7...E] [L3 Machine Check Control Mask] (MCA::L3::MCA_CTL_MASK_L3)

Read-write. Reset: 0000_0000_0000_0000h.			
Inhibit detection of an error source.			
_ccx0_in	_ccx0_inst[10:7]_aliasMSR; MSRC001_040[A:7]		
_ccx1_in	st[10:7]_aliasMSR; MSRC001_040[E:B]		
Bits	B Description		
63:8	Reserved.		
7	Hwa. Read-write. Reset: 0. Init: BIOS,1. L3 Hardware Assertion.		
6	XiVictimQueue. Read-write. Reset: 0. L3 Victim Queue Parity Error.		
5	SdpParity. Read-write. Reset: 0. SDP Parity Error from XI.		
4	DataArray. Read-write. Reset: 0. L3M Data ECC Error.		
3	MultiHitTag. Read-write. Reset: 0. L3M Tag Multi-way-hit Error.		
2	Tag. Read-write. Reset: 0. L3M Tag ECC Error.		
1	MultiHitShadowTag. Read-write. Reset: 0. Shadow Tag Macro Multi-way-hit Error.		
0	ShadowTag. Read-write. Reset: 0. Shadow Tag Macro ECC Error.		
·			

3.17.12 CS

MSR0000_0450...MSRC000_2150 [CS Machine Check Control] (MCA::CS::MCA_CTL_CS)

Read-write. Reset: 0000_0000_0000_0000h.			
0-Display error reporting for the corresponding error 1-English error reporting via machine sheely error	Read-write. Reset: 0000_0000_0000_0000h.		
D-Disables error reporting for the corresponding error. 1–Enables error reporting via machine check exc	0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corresponding error. The MCA::CS::MCA CTL CS register must be enabled by the corresponding enable bit in			
Core::X86::Msr::MCG CTL. Does not affect error detection, correction, or logging.			
_instCS0_alias[MSR,MSRLEGACY]; MSR[C000214,0000045]0			
_instCS1_alias[MSR,MSRLEGACY]; MSR[C0002150,00000454]			
Bits Description			
63:9 Reserved.			
8 SPF_ECC_ERR. Read-write. Reset: 0. Probe Filter ECC Error: An ECC error occurred on a pro	be filter access.		
7 ATM_PAR_ERR. Read-write. Reset: 0. Atomic Request Parity Error: Parity error on read of an	ATM_PAR_ERR. Read-write. Reset: 0. Atomic Request Parity Error: Parity error on read of an atomic		
transaction.			
6 SDP_PAR_ERR. Read-write. Reset: 0. Read Response Parity Error: Parity error on incoming re	SDP_PAR_ERR . Read-write. Reset: 0. Read Response Parity Error: Parity error on incoming read response data.		
5 FTI_PAR_ERR. Read-write. Reset: 0. Request or Probe Parity Error: Parity error on incoming r	FTI_PAR_ERR. Read-write. Reset: 0. Request or Probe Parity Error: Parity error on incoming request or probe		
response data.			
4 FTI_RSP_NO_MTCH. Read-write. Reset: 0. Unexpected Response: A response was received fi	FTI_RSP_NO_MTCH . Read-write. Reset: 0. Unexpected Response: A response was received from the transport		
layer which does not match any request.	_		
FTI ILL RSP . Read-write. Reset: 0. Illegal Response: An illegal response was received from the transport layer.			
2 FTI_SEC_VIOL. Read-write. Reset: 0. Security Violation: A security violation was received from	om the transport		
layer.	*		
1 FTI_ADDR_VIOL. Read-write. Reset: 0. Address Violation: An address violation was received	from the		
transport layer.			
0 FTI_ILL_REQ. Read-write. Reset: 0. Illegal Request: An illegal request was received from the	transport layer.		

MSR0000_0451...MSRC000_2151 [CS Machine Check Status] (MCA::CS::MCA_STATUS_CS)

Reset:	0000_0000_0000h.		
Logs i	information associated with errors.		
	_instCS0_alias[MSR,MSRLEGACY]; MSR[C000214,0000045]1		
	1_alias[MSR,MSRLEGACY]; MSR[C0002151,00000455]		
Bits	Description		
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has		
	been read.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not		
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check		
	Errors].		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in		
	MCA::CS::MCA_CTL_CS. This bit is a copy of bit in MCA::CS::MCA_CTL_CS for this error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::CS::MCA_MISC0_CS.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
58	AddrV. Reset: Cold,0. 1=MCA::CS::MCA_ADDR_CS contains address information associated with the error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of		
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be		
	reinitialized.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.		
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		

56255 Rev 3.03 - July, 2018

55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when				
	MCA::CS::MCA_STATUS_CS[PCC]=0.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
54	Reserved.				
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::CS::MCA SYND CS. If				
	MCA::CS::MCA SYND CS[ErrorPriority] is the same as the priority of the error in				
	MCA::CS::MCA_STATUS_CS, then the information in MCA::CS::MCA_SYND_CS is associated with the error				
	in MCA::CS::MCA_STATUS_CS.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.				
52:47	Reserved.				
46	CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC				
	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.				
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC				
	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.				
44	Deferred. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data				
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is				
	consumed.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.				
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
42:38	Reserved.				
37:32					
	associated with the error; Otherwise this field is reserved.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
31:22					
21:16					
	analysis. This field indicates which bit position in MCA::CS::MCA_CTL_CS enables error reporting for the				
	logged error.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this				
	field.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.				

Table 46: MCA_STATUS_CS[ErrorCodeExt] Decode

Error Type	Bits	Description
FTI_ILL_REQ	[6:0]	0x0
FTI_ADDR_VIOL	[6:0]	0x1
FTI_SEC_VIOL	[6:0]	0x2
FTI_ILL_RSP	[6:0]	0x3
FTI_RSP_NO_MTCH	[6:0]	0x4
FTI_PAR_ERR	[6:0]	0x5
SDP_PAR_ERR	[6:0]	0x6
ATM_PAR_ERR	[6:0]	0x7
SPF_ECC_ERR	[6:0]	0x8

MSR0000_0452...MSRC000_2152 [CS Machine Check Address] (MCA::CS::MCA_ADDR_CS)

leset: 0000_0000_0000h.		
MCA::CS::MCA ADDR CS stores an address and other information associated with the error in		
MCA::CS::MCA STATUS CS. The register is only meaningful if MCA::CS::MCA STATUS CS[Val]=1 and		
ICA::CS::MCA_STATUS_CS[AddrV]=1.		
nstCS0_alias[MSR,MSRLEGACY]; MSR[C000214,0000045]2		
nstCS1_alias[MSR,MSRLEGACY]; MSR[C0002152,00000456]		
Bits Description		
3:62 Reserved. Read-write. Reset: Cold,0h.		
1:56 LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
MCA::CS::MCA_ADDR_CS[ErrorAddr]. A value of 0 indicates that MCA::CS::MCA_ADDR_CS[55:0]		
contains a valid byte address. A value of 6 indicates that MCA::CS::MCA_ADDR_CS[55:6] contains a valid		
cache line address and that MCA::CS::MCA_ADDR_CS[5:0] are not part of the address and should be ignored		
by error handling software. A value of 12 indicates that MCA::CS::MCA_ADDR_CS[55:12] contain a valid 4K		
memory page and that MCA::CS::MCA_ADDR_CS[11:0] should be ignored by error handling software.		
55:0 ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error,		
contains the address associated with the error logged in MCA::CS::MCA_STATUS_CS. For physical addresses,		
the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Table 47: MCA ADDR CS Register

Error Type	Bits	Description
FTI_ILL_REQ	[55:0]	Reserved
FTI_ADDR_VIOL	[55:0]	Reserved
FTI_SEC_VIOL	[55:0]	Reserved
FTI_ILL_RSP	[55:0]	Reserved
FTI_RSP_NO_MTCH	[55:0]	Reserved
FTI_PAR_ERR	[55:0]	Reserved
SDP_PAR_ERR	[55:0]	Reserved
ATM_PAR_ERR	[55:0]	Reserved
SPF_ECC_ERR	[55:0]	Reserved

MSR0000_0453...MSRC000_2153 [CS Machine Check Miscellaneous 0] (MCA::CS::MCA_MISC0_CS)

Reset: D000_0000_0100_0000h.		
Log miscellaneous information associated with errors.		
-	0_alias[MSR,MSRLEGACY]; MSR[C000214,0000045]3	
-	_alias[MSR,MSRLEGACY]; MSR[C0002153,00000457]	
Bits	Description	
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
62	CntP . Reset: 1. 1=A valid threshold counter is present.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not	
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt	
	generation are not supported.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :	
	Read-only.	
59:56	Reserved.	
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the	
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	
1		

	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :
	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. $11b = Reserved$.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :
	Read-only.
48	Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_21[4...5]4 [CS Machine Check Configuration] (MCA::CS::MCA_CONFIG_CS)

Reset:	0000 0000 0000 0025h.
Contro	ols configuration of the associated machine check bank.
_inst[CS	[1:0]]_aliasMSR; MSRC000_21[5:4]4
Bits	Description
63:39	Reserved.
38:37	DeferredIntType. Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
36:35	Reserved.
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in
	MCA::CS::MCA STATUS CS and MCA::CS::MCA ADDR CS in addition to MCA::CS::MCA DESTAT CS
	and MCA::CS::MCA DEADDR CS. 0=Only log deferred errors in MCA::CS::MCA DESTAT CS and
	MCA::CS::MCA_DEADDR_CS. This bit does not affect logging of deferred errors in
	MCA::CS::MCA_SYND_CS, MCA::CS::MCA_MISC0_CS.
33	Reserved.
32	McaXEnable. Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported. Read-only. Reset: 1. 1=MCA::CS::MCA_CONFIG_CS[DeferredIntType] controls
	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::CS::MCA_CONFIG_CS[DeferredErrorLoggingSupported]=1.
4:3	Reserved.

222

2	DeferredErrorLoggingSupported. Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and		
	MCA::CS::MCA_CONFIG_CS[LogDeferredInMcaStat] controls the logging behavior of these errors.		
	MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank.		
	0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional		
	MISC registers (MISC1-MISC4) are supported. MCA::CS::MCA_MISC0_CS[BlkPtr] indicates the presence of		
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is		
	specifiable by MCA bank. MCA::CS::MCA_STATUS_CS[TCC] is present.		

MSRC000_21[4...5]5 [CS IP Identification] (MCA::CS::MCA_IPID_CS)

Reset: 0000_002E_0000_0000h.

The MCA::CS::MCA_IPID_CS register is used by software to determine what IP type and revision is associated with the MCA bank.

_inst[CS[1:0]]_aliasMSR; MSRC000_21[5:4]5

Bits	Description
63:48	McaType. Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.
47:44	Reserved.
43:32	HardwareID. Read-only. Reset: 02Eh. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSRC000_21[4...5]6 [CS Machine Check Syndrome] (MCA::CS::MCA_SYND_CS)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.		
Logs p	ohysical location information associated with error in MCA::CS::MCA_STATUS_CS Thread 0		
_inst[CS	[1:0]]_aliasMSR; MSRC000_21[5:4]6		
Bits	Description		
63:48	Reserved.		
47:32	2 Syndrome. Read-write, Volatile. Reset: Cold,0000h. Contains the syndrome, if any, associated with the error		
	logged in MCA::CS::MCA_STATUS_CS. The low-order bit of the syndrome is stored in bit 0, and the syndrome		
	has a length specified by MCA::CS::MCA_SYND_CS[Length]. The Syndrome field is only valid when		
	MCA::CS::MCA_SYND_CS[Length] is not 0.		
31:27	7 Reserved.		
26:24	4 ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in		
	MCA::CS::MCA_SYND_CS. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::CS::MCA_SYND_CS[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::CS::MCA_SYND_CS. For example, a syndrome length of 9 means that		
MCA::CS::MCA_SYND_CS[Syndrome] bits [8:0] contains a valid syndrome.			
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold,0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 48 [MCA_SYND_CS Register].		

Error Type	Bits	Description
FTI_ILL_REQ	[8:0]	
FTI_ADDR_VIOL	[8:0]	
FTI_SEC_VIOL	[8:0]	
FTI_ILL_RSP	[2:0]	
FTI_RSP_NO_MTCH	[2:0]	
FTI_PAR_ERR	[7:0]	

SDP_PAR_ERR	[7:0]	
ATM_PAR_ERR	[7:0]	
SPF_ECC_ERR	[17:0]	

MSRC000 21[4...5]8 [CS Machine Check Deferred Error Status] (MCA::CS::MCA DESTAT CS)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Holds status information for the first deferred error seen in this bank. _inst[CS[1:0]]_aliasMSR; MSRC000_21[5:4]8 **Bits** Description Val. Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not). 63 **Overflow**. Read-write, Volatile. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least 62 one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the section on overwrite priorities.) 61:59 Reserved. AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::CS::MCA_DEADDR_CS contains address information 58 associated with the error. 57:54 Reserved. SyndV. Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::CS::MCA SYND CS. If 53 MCA::CS::MCA SYND CS[ErrorPriority] is the same as the priority of the error in MCA::CS::MCA STATUS CS, then the information in MCA::CS::MCA SYND CS is associated with the error in MCA::CS::MCA DESTAT CS. 52:45 Reserved. Deferred, Read-write, Volatile, Reset: Cold,0, 1=A deferred error was created. A deferred error is the result of an 44 uncorrectable data error which did not immediately cause a processor exception; poison is created and an exception is deferred until the poison data is consumed. 43:0 Reserved.

MSRC000 21[4...5]9 [CS Deferred Error Address] (MCA::CS::MCA DEADDR CS)

Reset: 0000 0000 0000 0000h. The MCA::CS::MCA DEADDR CS register stores the address associated with the error in MCA::CS::MCA DESTAT CS. The register is only meaningful if MCA::CS::MCA DESTAT CS[Val]=1 and MCA::CS::MCA DESTAT CS[AddrV]=1. The lowest valid bit of the address is defined by MCA::CS::MCA DEADDR CS[LSB]. _inst[CS[1:0]]_aliasMSR; MSRC000_21[5:4]9 **Bits** Description 63:62 Reserved. Read-write. Reset: Cold.0h. 61:56 **LSB**. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::CS::MCA DEADDR CS[ErrorAddr]. A value of 0 indicates that MCA::CS::MCA DEADDR CS[55:0] contains a valid byte address. A value of 6 indicates that MCA::CS::MCA DEADDR CS[55:6] contains a valid cache line address and that MCA::CS::MCA DEADDR CS[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::CS::MCA_DEADDR_CS[55:12] contain a valid 4KB memory page and that MCA::CS::MCA DEADDR CS[11:0] should be ignored by error handling software. ErrorAddr. Read-write, Volatile. Reset: Cold,00 0000 0000 0000h. Contains the address, if any, associated with 55:0 the error logged in MCA::CS::MCA DESTAT CS. The lowest-order valid bit of the address is specified in

MCA::CS::MCA DEADDR CS[LSB].

MSRC001 041[4...5] [CS Machine Check Control Mask] (MCA::CS::MCA CTL MASK CS)

Read-write. Reset: 0000 0000 0000 0000h.

Inhibit detection of an error source.

inst[CS[1:0]] aliasMSR; MSRC001 041[5:4]

Bits Description

63:9	Reserved.
8	SPF_ECC_ERR . Read-write. Reset: 0. Probe Filter ECC Error: An ECC error occurred on a probe filter access.
7	ATM_PAR_ERR. Read-write. Reset: 0. Atomic Request Parity Error: Parity error on read of an atomic
	transaction.
6	SDP_PAR_ERR . Read-write. Reset: 0. Read Response Parity Error: Parity error on incoming read response data.
5	FTI_PAR_ERR. Read-write. Reset: 0. Request or Probe Parity Error: Parity error on incoming request or probe
	response data.
4	FTI_RSP_NO_MTCH. Read-write. Reset: 0. Unexpected Response: A response was received from the transport
	layer which does not match any request.
3	FTI_ILL_RSP . Read-write. Reset: 0. Illegal Response: An illegal response was received from the transport layer.
2	FTI_SEC_VIOL. Read-write. Reset: 0. Security Violation: A security violation was received from the transport
	layer.
1	FTI_ADDR_VIOL. Read-write. Reset: 0. Address Violation: An address violation was received from the
	transport layer.
0	FTI_ILL_REQ. Read-write. Reset: 0. Illegal Request: An illegal request was received from the transport layer.

3.17.13 PIE

MSR0000_0458...MSRC000_2160 [PIE Machine Check Control] (MCA::PIE::MCA_CTL_PIE)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::PIE::MCA CTL PIE register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG CTL. Does not affect error detection, correction, or logging.

instPIE alias[MSR,MSRLEGACY]; MSR[C0002160,00000458]

Bits	Description	
63:4	Reserved.	
3	FI_DAT_STAT . Read-write. Reset: 0. Poison data consumption: Poison data was written to an internal PIE	
	register.	
2	GMI. Read-write. Reset: 0. Link Error: An error occurred on a GMI or xGMI link.	
1	CSW. Read-write. Reset: 0. Register security violation: A security violation was detected on an access to an	
	internal PIE register.	
0	HW_ASSERT. Read-write. Reset: 0. Hardware Assert: A hardware assert was detected.	

SDAAAA A450 MCDCAAA 4141 [DIE Maaking Charles 1.0.0 GTATUS DIE DID

Reset:	0000_0000_0000h.
Logs i	information associated with errors.
instPIE	_alias[MSR,MSRLEGACY]; MSR[C0002161,00000459]
Bits	Description
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
	been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::PIE::MCA_CTL_PIE. This bit is a copy of bit in MCA::PIE::MCA_CTL_PIE for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.

 MiseV. Reset: Cold,0. 1=Valid thresholding in MCA:PIE::MCA_MISC0_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. AddrV. Reset: Cold,0. 1=MCA::PIE::MCA_ADDR_PIE contains address information associated with the error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. PCC. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_SYND_PIE. MCA::PIE::MCA_SYND_PIE. MCA::PIE::MCA_SYND_PIE. CCC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor.		
 AddrV. Reset: Cold,0. 1=MCA:PIE::MCA_ADDR_PIE contains address information associated with the error. AccessType: Core::X86::Msr::HWCR[McStatusWEn] ? Read-write : Read,Write-0-only,Error-on-write-1. PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have unpredictable results. The error is not recoverable or survivable, and the system should be remitinalized. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErrOrPriority] is the same as the priority of the error in MCA::PIE::MCA_SYND_STATUS_PIE. Reserved. CCC::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECrC. Reset: Cold,0. 1=The error was an enorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was	59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::PIE::MCA_MISC0_PIE.
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 57 PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have umpredictable results. The error is not recoverable or survivable, and the system should be reinitialized. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 56 ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 57 TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. 74 Reserved. Reserved. Reserved. 75 SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE. [PCP] 74 Reserved. Read-write : Read,Write-0-only,Error-on-write-1. 74 Reserved. Reserved. Read/Write-0-only,Error-on-write-1. 75 SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_SYND_PIE. MCA::PIE::MCA_SYND_WCA_STATUS_PIE<		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 FCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have unpredictable results. The error is not recoverable or survivable, and the system should be reinitialized. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a currectable ECC error according to the restrictions of the ECC algorithm. UC midicates whether the error was retually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was a uncorrectable ECC error according to the restrictions of the ECC algorithm. UC midicates whether the error was a currectable to the restrict on	58	AddrV. Reset: Cold,0. 1=MCA::PIE::MCA_ADDR_PIE contains address information associated with the error.
 the system may have unpredictable results. The error is not recoverable or survivable, and the system should be reinitialized. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a nucrorectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a nucrorectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a nucrorectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a nucrorectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was a nucrorectable ECC error according to the rest		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 56 ErrCoreldVal. Reset: Cold,0. 1=The ErrCoreld field is valid. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 57 TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 47 UECC. Reset: Cold,0. 1=The error was catually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=The error was catually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was catually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0.	57	
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 55 TCC. Reset: Cold,0, 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE/PCC]=0. 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE [ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, prorPiority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE, PIE. 52:47 Reserved. 54:6 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 54:error_Motion_EXB(S):MSr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. 55:Suss:::X86::Msr::HWCR[McStatus		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErroPTiority] is the same as the priority of the error in MCA::PIE::MCA_SYND_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Deferred. Reset: Cold,0. 1=A deferred error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroreon-write-1. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=Th error was the resu	56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
 address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE/PCC]=0. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE:::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE:::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE:::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. CECC. Reset: Cold,0.1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0.1=The error was a cutally corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0.1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0.1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. ErrOrCodeExt. Reset: Cold,00h. Extended Error Code. This field indicates which core within the processor is aassociated with		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 Reserved. SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=Th error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=Th error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Reserved. ErroCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause anal	55	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::PIE::MCA_STATUS_PIE[PCC]=0.
 53 SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 31:22 Reserved.<th></th><td></td>		
MCA::PIE::MCA_SYND_PIE[ErrorProri or in mCA::PIE::MCA_SYND_PIE is associated with the error in mCA::PIE::MCA_STATUS_PIE. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 52:47 Reserved. 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. 44 Deferred. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. 42:38 Reserved. 37:32 ErrOreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; WhereMite: Kead,Write-0-only,Error-on-write-1. 31:22 Reserved. 37:32 ErrOreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates whic		
 52:47 Reserved. GECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1. Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. Poison. Reset: Cold,00. Herro regregation and the error example. StreCoreld. Reset: Cold,00. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreld. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrorCodeE. Reset: Cold,000h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position	53	MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_STATUS_PIE.
 46 CECC. Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Poison. Reset: Cold,0.0h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 47:28 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for t		
algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. <		
 45 UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 	46	
algorithm. UC indicates whether the error was actually corrected by the processor. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErroCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErroCode. Reset: Cold,000h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. A	45	
 44 Deferred. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 		
error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this f	44	
43 Poison. Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreld. Reset: Cold,00h. When ErrCoreldVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.		error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 42:38 Reserved. 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 	43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
 37:32 ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error.		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
associated with the error; Otherwise this field is reserved. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	42:38	Reserved.
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
31:22 Reserved. 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.		associated with the error; Otherwise this field is reserved.
 21:16 ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
 analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. 15:0 ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field. 	31:22	Reserved.
15:0 ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this field.	21:16	analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the logged error.
field.		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	15:0	
		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 49: MCA STATUS PIE[ErrorCodeExt] Decode

E	
Error Type Bits	Description

HW_ASSERT	[6:0]	0x0
CSW	[6:0]	0x1
GMI	[6:0]	0x2
FTI_DAT_STAT	[6:0]	0x3

MSR0000_045A...MSRC000_2162 [PIE Machine Check Address] (MCA::PIE::MCA_ADDR_PIE)

Read-only. Reset: 0000 0000 0000 0000h.

MCA::PIE::MCA_ADDR_PIE stores an address and other information associated with the error in MCA::PIE::MCA_STATUS_PIE. The register is only meaningful if MCA::PIE::MCA_STATUS_PIE[Val]=1 and MCA::PIE::MCA_STATUS_PIE[AddrV]=1.

_instPIE_alias[MSR,MSRLEGACY]; MSR[C0002162,0000045A]

Bits Description

63:62 Reserved.

61:56 LSB. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::PIE::MCA_ADDR_PIE[ErrorAddr]. A value of 0 indicates that MCA::PIE::MCA_ADDR_PIE[55:0] contains a valid byte address. A value of 6 indicates that MCA::PIE::MCA_ADDR_PIE[55:6] contains a valid cache line address and that MCA::PIE::MCA_ADDR_PIE[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::PIE::MCA_ADDR_PIE[55:12] contain a valid 4KB memory page and that MCA::PIE::MCA_ADDR_PIE[11:0] should be ignored by error handling software.
55:0 ErrorAddr. Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error logged in MCA::PIE::MCA_STATUS_PIE.

Table 50: MCA_ADDR_PIE Register

Error Type	Bits	Description
HW_ASSERT	[55:0]	Reserved
CSW	[55:0]	Reserved
GMI	[55:0]	Reserved
FTI_DAT_STAT	[55:0]	Reserved

MSR0000_045B...MSRC000_2163 [PIE Machine Check Miscellaneous 0] (MCA::PIE::MCA_MISC0_PIE)

	D000_0000_0100_0000h.	
Log miscellaneous information associated with errors.		
_instPIE	_alias[MSR,MSRLEGACY]; MSR[C0002163,0000045B]	
Bits	Description	
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
62	CntP. Reset: 1. 1=A valid threshold counter is present.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not	
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt	
	generation are not supported.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-	
	write : Read-only.	
59:56	Reserved.	
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the	
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	
	Core::X86::Apic::ExtendedInterruptLvtEntries).	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-	

	write : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read- write : Read-only.
50.40	
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. $11b = Reserved.$
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write : Read-only.
48	Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA MISC0 PIE[Locked]) ? Read-
	write : Read-only.
47:44	Reserved.
43:32	ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write : Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23.0	Reserved

MSRC000_2164 [PIE Machine Check Configuration] (MCA::PIE::MCA_CONFIG_PIE)

Reset:	0000_0002_0000_0025h.	
Controls configuration of the associated machine check bank.		
	_aliasMSR; MSRC0002164	
Bits	Description	
63:39	Reserved.	
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =	
	SMI trigger event. $11b = Reserved$.	
36:35	Reserved.	
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in MCA::PIE::MCA_STATUS_PIE and MCA::PIE::MCA_ADDR_PIE in addition to	
	MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE. 0=Only log deferred errors in MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE. This bit does not affect logging of	
	deferred errors in MCA::PIE::MCA SYND PIE, MCA::PIE::MCA MISCO PIE.	
33	Reserved. Read-write. Reset: 1.	
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.	
31:6	Reserved.	
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::PIE::MCA_CONFIG_PIE[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::PIE::MCA_CONFIG_PIE[DeferredErrorLoggingSupported]=1.	
4:3	Reserved.	
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::PIE::MCA_CONFIG_PIE[LogDeferredInMcaStat] controls the logging behavior of these errors.	

	MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE are supported in this MCA bank.
	0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::PIE::MCA_MISC0_PIE[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::PIE::MCA_STATUS_PIE[TCC] is present.

MSRC000_2165 [PIE IP Identification] (MCA::PIE::MCA_IPID_PIE)

Reset: 0001 002E 0000 0000h.

The MCA::PIE::MCA_IPID_PIE register is used by software to determine what IP type and revision is associated with the MCA bank.

_instPIE_aliasMSR; MSRC0002165

Bits	Description
63:48	McaType. Read-only. Reset: 0001h. The McaType of the MCA bank within this IP.
47:44	Reserved.
43:32	HardwareID. Read-only. Reset: 02Eh. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSRC000_2166 [PIE Machine Check Syndrome] (MCA::PIE::MCA_SYND_PIE)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.		
Logs p	Logs physical location information associated with error in MCA::PIE::MCA_STATUS_PIE Thread 0		
_instPIE	_aliasMSR; MSRC0002166		
Bits	Description		
63:33	Reserved.		
32	Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::PIE::MCA_STATUS_PIE. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a		
	length specified by MCA::PIE::MCA_SYND_PIE[Length]. The Syndrome field is only valid when		
	MCA::PIE::MCA_SYND_PIE[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in		
	MCA::PIE::MCA_SYND_PIE. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::PIE::MCA_SYND_PIE[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::PIE::MCA_SYND_PIE. For example, a syndrome length of 9 means that		
	MCA::PIE::MCA_SYND_PIE[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 51 [MCA SYND PIE Register].		

Table 51: MCA SYND PIE Register

Error Type	Bits	Description
HW_ASSERT	[17:0]	Reserved
CSW	[17:0]	Reserved
GMI	[4:0]	
FTI_DAT_STAT	[3:0]	

MSRC000_2168 [PIE Machine Check Deferred Error Status] (MCA::PIE::MCA_DESTAT_PIE)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.

Holds status information for the first deferred error seen in this bank.

_instPIE	aliasMSR; MSRC0002168
Bits	Description
63	Val. Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).
62	Overflow . Read-write, Volatile. Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the section on overwrite priorities.)
61:59	Reserved.
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::PIE::MCA_DEADDR_PIE contains address information associated with the error.
57:54	Reserved.
53	SyndV . Read-write, Volatile. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the error in MCA::PIE::MCA_DESTAT_PIE.
52:45	Reserved.
44	Deferred . Read-write, Volatile. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; poison is created and an exception is deferred until the poison data is consumed.
43:0	Reserved.

MSRC000_2169 [PIE Deferred Error Address] (MCA::PIE::MCA_DEADDR_PIE)

Reset	: 0000_0000_0000h.
	ICA::PIE::MCA_DEADDR_PIE register stores the address associated with the error in
	::PIE::MCA_DESTAT_PIE. The register is only meaningful if MCA::PIE::MCA_DESTAT_PIE[Val]=1 and
	::PIE::MCA_DESTAT_PIE[AddrV]=1. The lowest valid bit of the address is defined by
	::PIE::MCA_DEADDR_PIE[LSB].
	aliasMSR; MSRC0002169
Bits	Description
63:62	Reserved. Read-write. Reset: Cold,0h.
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in
	MCA::PIE::MCA_DEADDR_PIE[ErrorAddr]. A value of 0 indicates that
	MCA::PIE::MCA_DEADDR_PIE[55:0] contains a valid byte address. A value of 6 indicates that
	MCA::PIE::MCA_DEADDR_PIE[55:6] contains a valid cache line address and that
	MCA::PIE::MCA_DEADDR_PIE[5:0] are not part of the address and should be ignored by error handling
	software. A value of 12 indicates that MCA::PIE::MCA_DEADDR_PIE[55:12] contain a valid 4KB memory
	page and that MCA::PIE::MCA_DEADDR_PIE[11:0] should be ignored by error handling software.
55:0	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with
	the error logged in MCA::PIE::MCA_DESTAT_PIE. The lowest-order valid bit of the address is specified in
	MCA::PIE::MCA_DEADDR_PIE[LSB].

MSRC001_0416 [PIE Machine Check Control Mask] (MCA::PIE::MCA_CTL_MASK_PIE)

Read-	Read-write. Reset: 0000_0000_0000h.	
Inhibit	t detection of an error source.	
_instPIE	_aliasMSR; MSRC0010416	
Bits	ts Description	
63:4	Reserved.	
3	FTI_DAT_STAT. Read-write. Reset: 0. Poison data consumption: Poison data was written to an internal PIE	
	register.	
2	GMI. Read-write. Reset: 0. Link Error: An error occurred on a GMI or xGMI link.	
1	CSW. Read-write. Reset: 0. Register security violation: A security violation was detected on an access to an	
	internal PIE register.	
0	HW_ASSERT. Read-write. Reset: 0. Hardware Assert: A hardware assert was detected.	

3.17.14 UMC

MSR0000_043C...MSRC000_2100 [UMC Machine Check Control] (MCA::UMC::MCA_CTL_UMC)

Read-write. Reset: 0000_0000_0000_0000h.	
=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the	
corresponding error. The MCA::UMC::MCA_CTL_UMC register must be enabled by the corresponding enable bit in	1
Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.	
_instUMC_umc0_alias[MSR,MSRLEGACY]; MSR[C00020F0,0000043C]	
_instUMC_umc1_alias[MSR,MSRLEGACY]; MSR[C000210,0000044]0	
Bits Description	
63:6 Reserved.	
5 WriteDataCrcErr. Read-write. Reset: 0. Write data CRC error. A write data CRC error on the DRAM data bus	iS.
4 AddressCommandParityErr. Read-write. Reset: 0. Address/command parity error. A parity error on the DRA	١M
address/command bus.	
3 ApbErr. Read-write. Reset: 0. Advanced peripheral bus error. An error on the advanced peripheral bus.	
2 SdpParityErr . Read-write. Reset: 0. SDP parity error. A parity error on write data from the data fabric.	
1 WriteDataPoisonErr. Read-write. Reset: 0. Data poison error.	
0 DramEccErr. Read-write. Reset: 0. DRAM ECC error. An ECC error on a DRAM read.	

MSR0000_043D...MSRC000_2101 [UMC Machine Check Status] (MCA::UMC::MCA_STATUS_UMC)

Reset:	0000 0000 0000 0000h.
	nformation associated with errors.
	C_umc0_alias[MSR,MSRLEGACY]; MSR[C00020F1,0000043D]
	C_umc1_alias[MSR,MSRLEGACY]; MSR[C000210,0000044]1
Bits	Description
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
	been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::UMC::MCA_CTL_UMC. This bit is a copy of bit in MCA::UMC::MCA_CTL_UMC for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::UMC::MCA_MISC0_UMC.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV. Reset: Cold,0. 1=MCA::UMC::MCA_ADDR_UMC contains address information associated with the
	error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when

	MCA::UMC::MCA_STATUS_UMC[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::UMC::MCA_SYND_UMC. If
	MCA::UMC::MCA_SYND_UMC[ErrorPriority] is the same as the priority of the error in
	MCA::UMC::MCA_STATUS_UMC, then the information in MCA::UMC::MCA_SYND_UMC is associated
	with the error in MCA::UMC::MCA_STATUS_UMC.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42:38	Reserved.
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
31:22	Reserved.
21:16	
	analysis. This field indicates which bit position in MCA::UMC::MCA_CTL_UMC enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Error Type	Bits	Description
DramEccErr	[6:0]	0x0
WriteDataPoisonErr	[6:0]	0x1
SdpParityErr	[6:0]	0x2
ApbErr	[6:0]	0x3
AddressCommandParityErr	[6:0]	0x4
WriteDataCrcErr	[6:0]	0x5

MSR0000_043E...MSRC000_2102 [UMC Machine Check Address] (MCA::UMC::MCA_ADDR_UMC)

Reset: 0000 0000 0000 0000h.

MCA::UMC::MCA_ADDR_UMC stores an address and other information associated with the error in MCA::UMC::MCA_STATUS_UMC. The register is only meaningful if MCA::UMC::MCA_STATUS_UMC[Val]=1 and MCA::UMC::MCA_STATUS_UMC[AddrV]=1.

_instUMC_umc0_alias[MSR,MSRLEGACY]; MSR[C00020F2,0000043E] _instUMC_umc1_alias[MSR,MSRLEGACY]; MSR[C000210,0000044]2

Bits	Description
63:62	Reserved. Read-write. Reset: Cold,0h.
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in
	MCA::UMC::MCA_ADDR_UMC[ErrorAddr]. A value of 0 indicates that
	MCA::UMC::MCA_ADDR_UMC[55:0] contains a valid byte address. A value of 6 indicates that
	MCA::UMC::MCA_ADDR_UMC[55:6] contains a valid cache line address and that
	MCA::UMC::MCA_ADDR_UMC[5:0] are not part of the address and should be ignored by error handling
	software. A value of 12 indicates that MCA::UMC::MCA_ADDR_UMC[55:12] contain a valid 4KB memory
	page and that MCA::UMC::MCA_ADDR_UMC[11:0] should be ignored by error handling software.
55:0	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error,
	contains the address associated with the error logged in MCA::UMC::MCA_STATUS_UMC. For physical
	addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Table 53: MCA_ADDR_UMC Register

Error Type	Bits	Description
DramEccErr	[55:39]	Reserved
	[39:4]	Reserved
WriteDataPoisonErr	[55:0]	Reserved
SdpParityErr	[55:0]	Reserved
ApbErr	[55:30]	Reserved
	[29:0]	Reserved
AddressCommandParityErr	[55:38]	Reserved
	[37:36]	Reserved
	[35:32]	Chip Select
	[31:0]	Reserved
WriteDataCrcErr	[55:38]	Reserved
	[37:36]	Reserved
	[35:32]	Chip Select
	[31:0]	Reserved

MSR0000_043F...MSRC000_2103 [UMC Machine Check Miscellaneous 0] (MCA::UMC::MCA_MISC0_UMC)

Reset:	Reset: D000_0000_0100_0000h.	
Log m	iscellaneous information associated with errors.	
-	C_umc0_alias[MSR,MSRLEGACY]; MSR[C00020F3,0000043F]	
	C_umc1_alias[MSR,MSRLEGACY]; MSR[C000210,0000044]3	
Bits	Description	
63	Valid. Reset: 1. 1=A valid CntP field is present in this register.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
62	CntP. Reset: 1. 1=A valid threshold counter is present.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
61	Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not	
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.	
60	IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt	
	generation are not supported.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read-	
	write : Read-only.	
59:56	Reserved.	
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the	
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	

	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read-
	write : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read- write : Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read- write : Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read- write : Read-only.
47:44	Reserved.
43:32	ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read- write : Read-only.
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2[0F...10]4 [UMC Machine Check Configuration] (MCA::UMC::MCA_CONFIG_UMC)

Reset:	0000_0002_0000_0025h.
Contro	Is configuration of the associated machine check bank.
_instUM	C_umc[1:0]_aliasMSR; MSRC000_2[10:0F]4
Bits	Description
63:39	Reserved.
38:37	DeferredIntType. Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =
	SMI trigger event. 11b = Reserved.
36:35	Reserved.
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS, 1. 1=Log deferred errors in
	MCA::UMC::MCA STATUS UMC and MCA::UMC::MCA ADDR UMC in addition to
	MCA::UMC::MCA DESTAT UMC and MCA::UMC::MCA DEADDR UMC. 0=Only log deferred errors in
	MCA::UMC::MCA_DESTAT_UMC and MCA::UMC::MCA_DEADDR_UMC. This bit does not affect logging
	of deferred errors in MCA::UMC::MCA_SYND_UMC, MCA::UMC::MCA_MISC0_UMC.
33	Reserved. Read-write. Reset: 1.
32	McaXEnable. Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::UMC::MCA_CONFIG_UMC[DeferredIntType]
	controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::UMC::MCA_CONFIG_UMC[DeferredErrorLoggingSupported]=1.
4:3	Reserved.

DeferredErrorLoggingSupported. Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::UMC::MCA_CONFIG_UMC[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::UMC::MCA_DESTAT_UMC and MCA::UMC::MCA_DEADDR_UMC are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
 Reserved.
 McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::UMC::MCA_MISC0_UMC[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::UMC::MCA_STATUS_UMC[TCC] is present.

MSRC000 2[0F...10]5 [UMC IP Identification] (MCA::UMC::MCA IPID UMC)

Reset: 0000 0096 0000 0000h.

The MCA::UMC::MCA_IPID_UMC register is used by software to determine what IP type and revision is associated with the MCA bank.

_instUMC_umc[1:0]_aliasMSR; MSRC000_2[10:0F]5

Bits	Description
63:48	McaType. Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.
47:44	Reserved.
43:32	HardwareID. Read-only. Reset: 096h. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSRC000_2[0F...10]6 [UMC Machine Check Syndrome] (MCA::UMC::MCA_SYND_UMC)

alid
7
I
=

Table 54: MCA	1 SYND	UMC Register

Error Type	Bits	Description
DramEccErr	[17:16]	Reserved
	[15]	Software-Managed Bad Symbol ID Error
	[14]	Reserved
	[13:8]	Symbol. Only contains valid information if ErrorPriority indicates a corrected error.
	[7]	Reserved

	[6:4]	Cid. Specifies the rank multiply ID for supported DIMMs.
	[3]	Reserved
	[2:0]	Chip Select
WriteDataPoisonErr	[17:0]	Reserved
SdpParityErr	[17:0]	Reserved
ApbErr	[17:0]	Reserved
AddressCommandParityErr	[17:0]	Reserved
WriteDataCrcErr	[17:0]	Reserved

MSRC000_2[0F...10]8 [UMC Machine Check Deferred Error Status] (MCA::UMC::MCA_DESTAT_UMC)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

lds status information for the first deferred error seen in this bank.
--

_instUM	_instUMC_umc[1:0]_aliasMSR; MSRC000_2[10:0F]8		
Bits	Description		
63	Val. Read-write, Volatile. Reset: Cold,0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow. Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::UMC::MCA_DEADDR_UMC contains address		
	information associated with the error.		
57:54	Reserved.		
53	SyndV. Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in		
	MCA::UMC::MCA_SYND_UMC. If MCA::UMC::MCA_SYND_UMC[ErrorPriority] is the same as the priority		
	of the error in MCA::UMC::MCA_STATUS_UMC, then the information in MCA::UMC::MCA_SYND_UMC is		
	associated with the error in MCA::UMC::MCA_DESTAT_UMC.		
52:45	Reserved.		
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000_2[0F...10]9 [UMC Deferred Error Address] (MCA::UMC::MCA_DEADDR_UMC)

Reset: 0000 0000 0000 0000h.

Reset.			
	The MCA::UMC::MCA_DEADDR_UMC register stores the address associated with the error in		
	MCA::UMC::MCA_DESTAT_UMC. The register is only meaningful if MCA::UMC::MCA_DESTAT_UMC[Val]=1		
	CA::UMC::MCA_DESTAT_UMC[AddrV]=1. The lowest valid bit of the address is defined by		
	:UMC::MCA_DEADDR_UMC[LSB].		
_instUM	C_umc[1:0]_aliasMSR; MSRC000_2[10:0F]9		
Bits	Description		
63:62	Reserved. Read-write. Reset: Cold,0h.		
61:56	LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::UMC::MCA_DEADDR_UMC[ErrorAddr]. A value of 0 indicates that		
	MCA::UMC::MCA_DEADDR_UMC[55:6] contains a valid cache line address and that		
	MCA::UMC::MCA_DEADDR_UMC[5:0] are not part of the address and should be ignored by error handling		
	software. A value of 12 indicates that MCA::UMC::MCA_DEADDR_UMC[55:12] contain a valid 4KB memory		
55:0	ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with		
	the error logged in MCA::UMC::MCA_DESTAT_UMC. The lowest-order valid bit of the address is specified in		
	MCA::UMC::MCA_DEADDR_UMC[LSB].		
55:0	MCA::UMC::MCA_DEADDR_UMC[55:0] contains a valid byte address. A value of 6 indicates that MCA::UMC::MCA_DEADDR_UMC[55:6] contains a valid cache line address and that MCA::UMC::MCA_DEADDR_UMC[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::UMC::MCA_DEADDR_UMC[55:12] contain a valid 4KB memory page and that MCA::UMC::MCA_DEADDR_UMC[11:0] should be ignored by error handling software. ErrorAddr . Read-write,Volatile. Reset: Cold,00_0000_0000h. Contains the address, if any, associated with the error logged in MCA::UMC::MCA_DESTAT_UMC. The lowest-order valid bit of the address is specified in		

MSRC000_2[0F...10]A [UMC Machine Check Miscellaneous 1] (MCA::UMC::MCA_MISC1_UMC)

Read-	write. Reset: D000_0000_0100_0000h.		
Log miscellaneous information associated with errors, as defined by each error type.			
_	_instUMC_umc[1:0]_aliasMSR; MSRC000_2[10:0F]A		
Bits	Description		
63	Valid. Read-write. Reset: 1. 1=A valid CntP field is present in this register.		
62	CntP. Read-write. Reset: 1. 1=A valid threshold counter is present.		
61	Locked. Read-write. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this		
	register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
60	IntP. Read-write. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and		
	interrupt generation are not supported.		
59:52	Reserved.		
51	CntEn. Read-write. Reset: 0. 1=Count thresholding errors.		
50:49	ThresholdIntType . Read-write. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set. 00b =		
	No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]) to all cores.		
	10b = SMI trigger event. $11b = Reserved$.		
48	Ovrflw. Read-write. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh; also set by		
	hardware if ErrCnt is initialized to FFFh and transitions from FFFh to 000h. When this field is set, ErrCnt no		
	longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.		
47:44	Reserved.		
43:32	ErrCnt. Read-write. Reset: Cold,000h. This is written by software to set the starting value of the error counter.		
	This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no		
	rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors		
	necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not		
	supported.		
31:24	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.		
23:0	Reserved.		

MSRC001_04[0F...10] [UMC Machine Check Control Mask] (MCA::UMC::MCA_CTL_MASK_UMC)

Read-write. Reset: 0000_0000_0000_0000h.		
Inhibit	Inhibit detection of an error source.	
_instUM	C_umc[1:0]_aliasMSR; MSRC001_04[10:0F]	
Bits	Description	
63:6	Reserved.	
5	WriteDataCrcErr. Read-write. Reset: 0. Write data CRC error. A write data CRC error on the DRAM data bus.	
4	AddressCommandParityErr. Read-write. Reset: 0. Address/command parity error. A parity error on the DRAM	
	address/command bus.	
3	ApbErr. Read-write. Reset: 0. Advanced peripheral bus error. An error on the advanced peripheral bus.	
2	SdpParityErr. Read-write. Reset: 0. SDP parity error. A parity error on write data from the data fabric.	
1	WriteDataPoisonErr. Read-write. Reset: 0. Data poison error.	
0	DramEccErr. Read-write. Reset: 0. DRAM ECC error. An ECC error on a DRAM read.	

3.17.15 Parameter Block

MSR0000_044C...MSRC000_2130 [PB Machine Check Control] (MCA::PB::MCA_CTL_PB)

Read-write. Reset: 0000 0000 0000 0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::PB::MCA_CTL_PB register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

_instPB_alias[MSR,MSRLEGACY]; MSR[C0002130,0000044C]

Bits	Description			
63:1	Reserved.			
0	EccError. Read-write. Reset: 0. An ECC error in the Parameter Block RAM array.			
MSR(MSR0000_044DMSRC000_2131 [PB Machine Check Status] (MCA::PB::MCA_STATUS_PB)			
Reset:	0000_0000_0000h.			
	information associated with errors.			
	alias[MSR,MSRLEGACY]; MSR[C0002131,0000044D]			
Bits	Description			
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has been read.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not			
-	logged. Overflow is set independently of whether the existing error is overwritten. See 3.8 [Machine Check Errors].			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in			
00	MCA::PB::MCA CTL PB. This bit is a copy of bit in MCA::PB::MCA CTL PB for this error.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
59	MiscV . Reset: Cold,0. 1=Valid thresholding in MCA::PB::MCA_MISC0_PB.			
57	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
58	AddrV. Reset: Cold,0. 1=MCA::PB::MCA ADDR PB contains address information associated with the error.			
58	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only,Error-on-write-1.			
57				
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of the system may have unpredictable results. The error is not recoverable or survivable, and the system should be reinitialized.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer			
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The			
	thread which consumed the error is not restartable and must be terminated. Only meaningful when			
	MCA::PB::MCA_STATUS_PB[PCC]=0.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
54	Reserved.			
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::PB::MCA_SYND_PB. If			
	MCA::PB::MCA_SYND_PB[ErrorPriority] is the same as the priority of the error in			
	MCA::PB::MCA_STATUS_PB, then the information in MCA::PB::MCA_SYND_PB is associated with the error			
	in MCA::PB::MCA_STATUS_PB.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
52:47	Reserved.			
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC			
	algorithm. UC indicates whether the error was actually corrected by the processor.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.			
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC			
	algorithm. UC indicates whether the error was actually corrected by the processor.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data			

	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is	
	consumed.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
42:38	Reserved.	
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is	
	associated with the error; Otherwise this field is reserved.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
31:22	Reserved.	
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause	
	analysis. This field indicates which bit position in MCA::PB::MCA_CTL_PB enables error reporting for the	
	logged error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
15:0	ErrorCode. Reset: Cold,0000h. Error code for this error. See 3.14 [Error Codes] for details on decoding this	
	field.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.	

Table 55: MCA STATUS PB[ErrorCodeExt] Decode

Error Type	Bits	Description
EccError	[6:0]	0x0

MSR0000_044E...MSRC000_2132 [PB Machine Check Address] (MCA::PB::MCA_ADDR_PB)

Read-o	ead-only. Reset: 0000_0000_0000h.		
MCA:	ACA::PB::MCA_ADDR_PB stores an address and other information associated with the error in		
MCA:	MCA::PB::MCA_STATUS_PB. The register is only meaningful if MCA::PB::MCA_STATUS_PB[Val]=1 and		
	:PB::MCA_STATUS_PB[AddrV]=1.		
	alias[MSR,MSRLEGACY]; MSR[C0002132,0000044E]		
Bits	Description		
63:62	Reserved.		
61:56	LSB. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::PB::MCA_ADDR_PB[ErrorAddr]. A value of 0 indicates that MCA::PB::MCA_ADDR_PB[55:0]		
	contains a valid byte address. A value of 6 indicates that MCA::PB::MCA_ADDR_PB[55:6] contains a valid		
	cache line address and that MCA::PB::MCA_ADDR_PB[5:0] are not part of the address and should be ignored		
	by error handling software. A value of 12 indicates that MCA::PB::MCA_ADDR_PB[55:12] contain a valid 4KB		
	memory page and that MCA::PB::MCA_ADDR_PB[11:0] should be ignored by error handling software.		
55:0	ErrorAddr. Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error		
	logged in MCA::PB::MCA_STATUS_PB.		

Table 56: MCA ADDR PB Register

Error Type	Bits	Description
EccError	[55:0]	Reserved

MSR0000_044F...MSRC000_2133 [PB Machine Check Miscellaneous 0] (MCA::PB::MCA_MISC0_PB)

Reset: D000_0000_0100_0000h.
Log miscellaneous information associated with errors.

_instPB	_alias[MSR,MSRLEGACY]	; MSR[C0002133,0000044F]

Bits Description 63 Valid. Reset: 1. 1=A valid CntP field is present in this register. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.

62	CntP. Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
59:56	Reserved.
55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write : Read-only.
	BlkPtr. Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
22.0	Reserved.

MSRC000_2134 [PB Machine Check Configuration] (MCA::PB::MCA_CONFIG_PB)

Reset: 0000_0002_0000_0021h.		
Controls configuration of the associated machine check bank.		
_aliasMSR; MSRC0002134		
Bits Description		
Reserved.		
38:37 DeferredIntType. Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logg		
00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =		
SMI trigger event. 11b = Reserved.		
Reserved.		
Reserved. Read-write. Reset: 1.		
McaXEnable. Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the		
MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and		

	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::PB::MCA_CONFIG_PB[DeferredIntType] controls
	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::PB::MCA_CONFIG_PB[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported. Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and
	the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and
	MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::PB::MCA_MISC0_PB[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::PB::MCA_STATUS_PB[TCC] is present.

MSRC000_2135 [PB IP Identification] (MCA::PB::MCA_IPID_PB)

Reset: 0000_0005_0000_0000h.
The MCA::PB::MCA_IPID_PB register is used by software to determine what IP type and revision is associated with the
MCA bank.
instPB aliasMSR; MSRC0002135

	Description
	allasMSR; MSRC00021

63	3:48	МсаТуре.	. Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.

47:44 Reserved.

43:32 HardwareID. Read-only. Reset: 005h. The Hardware ID of the IP associated with this MCA bank.

31:0 **InstanceId**. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per instance of this register.

MSRC000_2136 [PB Machine Check Syndrome] (MCA::PB::MCA_SYND_PB)

Read-write, Volatile. Reset: 0000 0000 0000 0000h.

Logs physical location information associated with error in MCA::PB::MCA_STATUS_PB Thread 0			
_instPB	_instPB_aliasMSR; MSRC0002136		
Bits	Description		
63:33	Reserved.		
32	Syndrome. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::PB::MCA_STATUS_PB. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a		
	length specified by MCA::PB::MCA_SYND_PB[Length]. The Syndrome field is only valid when		
	MCA::PB::MCA_SYND_PB[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in		
	MCA::PB::MCA_SYND_PB. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::PB::MCA_SYND_PB[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::PB::MCA_SYND_PB. For example, a syndrome length of 9 means that		
	MCA::PB::MCA_SYND_PB[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 57 [MCA_SYND_PB Register].		

Description

Table 57: MCA_SYND_PB Register

Error Type

EccError

[17:0]

MSRC001_0413 [PB Machine Check Control Mask] (MCA::PB::MCA_CTL_MASK_PB)

Reserved

4 SMU Registers

The system management unit (SMU) is a subcomponent of the processor that is responsible for a variety of system and power management tasks during boot and runtime.

4.1 MP0 Configuration Unit Registers

SEVx00010580 [SEV CmdResp mailbox register.] (MP::MP0CRU::SEVCmdResp)

Read-write. Reset: 0000 0000h.

SEVx00010580; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]

Bits	Description
------	-------------

31:0 **CmdMailbox**. Read-write. Reset: 0000_0000h. SEV Cmd Response mailbox register. See: AMD SEV API Specification (PID 55766) for details.

SEVx000105E0 [SEV CmdBufAddr_Lo mailbox register.] (MP::MP0CRU::SEVCmdBufLo)

Read-write. Reset: 0000 0000h.

SEVx000105E0; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]

Bits Description

31:0 **RespMailboxLo**. Read-write. Reset: 0000_0000h. SEV Command buffer address low mailbox register. See: AMD SEV API Specification (PID 55766) for details.

SEVx000105E4 [SEV CmdBufAddr_Hi mailbox register.] (MP::MP0CRU::SEVCmdBufHi)

Read-write. Reset: 0000 0000h.

SEVx000105E4; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]

Bits Description 31:0 RespMailboxHi. Read-write. Reset: 0000_0000h. SEV Command buffer address high mailbox register. See: AMD SEV API Specification (PID 55766) for details.

4.2 Thermal (THM)

The thermal block contains all the features related to temperature sensing, control, and reporting. It includes:

- Temperature collection and calculation using TCON (digital control logic) and TMON and Remote Diode Interface macros.
- Fan speed control for off-chip fans.
- Temperature reporting through the SMBUS interface.

4.2.1 Registers

SMUTHMx00000000 (SMU::THM::THM_TCON_CUR_TMP)

Read-	write. Reset: 0000_0000h.
_aliasSN	1N; SMUTHMx00000000; SMUTHM=0005_9800h
Bits	Description
31:21	CUR_TEMP. Read-write. Reset: 000h. Provides current control temperature.
20	Reserved.
19	CUR_TEMP_RANGE_SEL. Read-write. Reset: 0. 0=Report on 0C to 225C scale range. 1=Report on -49C to
	206C scale range.
18:0	Reserved.

5 Advanced Platform Management Link (APML)

5.1 Overview

The Advanced Platform Management Link (APML) is a SMBus v2.0 compatible 2-wire processor slave interface. APML is also referred as the sideband interface (SBI).

APML is used to communicate with the SBI Temperature Sensor Interface (SB-TSI). For related specifications, see 1.2 [Reference Documents].

5.1.1 Definitions

Table 58: APML Definitions

Term	Description
ARA	Alert response address.
ARP	Address Resolution Protocol
EC	Embedded Controller.
KBC	Keyboard Controller.
Master or SMBus	The device that initiates and terminates all communication and drives the clock, SCL.
Master	
PEC	Packet error code.
POR	Power on reset.
RTS	Remote temperature sensor, typical examples are ADM1032, LM99, MAX6657, EMC1002.
SBI	Sideband interface.
Slave or SMBus slave	The slave cannot initiate SMBus communication and cannot drive the clock but can drive the
	data signal SDA and the alert signal ALERT_L.
TSI	Temperature sensor interface.

5.2 SBI Bus Characteristics

The SBI largely follows SMBus v2.0. This section describes the exceptions.

5.2.1 SMBus Protocol Support

The SBI follows SMBus protocol except:

- The processor does not implement SMBus master functionality.
- The SBI implements the Send Byte/Receive Byte, Read Byte/Write Byte. Block Read/Block Write and
- Block Write-Block Read Process Call SMBus protocols. The Send Byte/Receive Byte SMBus protocol is only supported by SB-TSI.
- Packet error checking (PEC) is not supported by SB-TSI.
- Address Resolution Protocol (ARP) is not implemented.
- Cumulative clock extensions are not enforced.

5.2.2 I2C Support

The processor supports higher I2C-defined speeds as specified in the Physical Layer Characteristics section. The

processor supports the I2C master code transmission in order to reach the high-speed bus mode. Multiple SBI commands may be sent within a single high-speed mode session. Ten-bit addressing is not supported.

5.3 SBI Processor Information

5.3.1 SBI Processor Pins

Up to six processor pins are used for SBI support: two for data transfer, three for address determination and one for an interrupt output. Of the three address pins, one bit is socket_id used to determine which package is addressed. These pins do not have changeable pinstrap. The Serial Interface Clock (SIC) and Serial Interface Data (SID) pins function as the SMBus clock and data pins respectively. The SMBus alert pin (ALERT_L) is used to signal interrupts to the SMBus master.

5.3.1.1 Physical Layer Characteristics

The SIC and SID pins differ from the SMBus specification with regard to voltage. System board voltage translators are necessary to convert the SIC and SID pin voltage levels to that of the SMBus specification. SBI supports frequencies of 100 KHz, 400 KHz over SIC.

5.3.2 Processor States

SBI responds to SMBus traffic except when PWROK is de-asserted (and for a brief period after it is de-asserted).

5.4 SBI Protocols

5.4.1 SBI Modified Block Write-Block Read Process Call

SBI uses a modified SMBus PEC-optional Block Write-Block Read Process Call protocol. The change from the SMBus protocol is support for an optional intermediate PEC byte and Ack after the Ack for Data Byte M. The PEC byte after Data Byte N covers all previous bytes excluding the first PEC byte. Figure below shows the transmission protocol. Each byte in the protocol is sent with the most significant bit first (bit[7]). The master may reset the bus by holding the clock low for 25ms as specified by the SMBus Specification.

OSRR for AMD Family 17h processors, Models 00h-2Fh

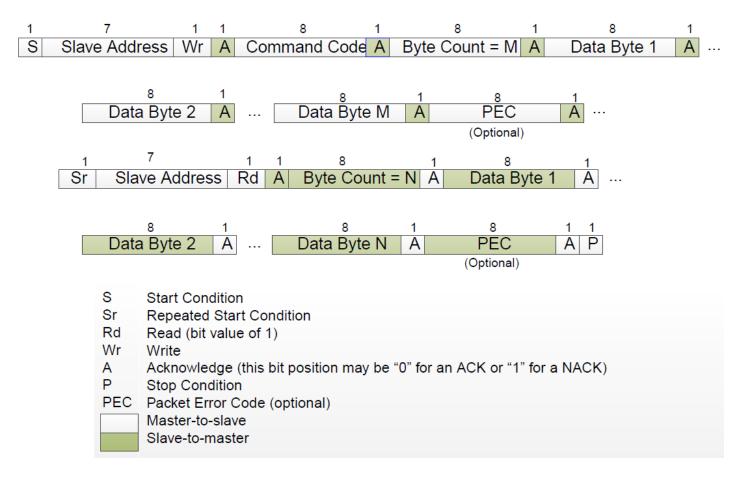


Figure 17: SBI Transmission Protocol

5.4.2 SBI Error Detection and Recovery

This section describes the various error detection and recovery methods that can be used on the SBI bus. The important item in providing a high reliability SBI connection is the ability to detect when an error occurs and to gracefully recover from that error. When the SBI connections are noisy, messages can become garbled which, in turn, may cause undefined behavior on the SBI bus. The most common noise sources are cross-talk and clock skew. Cross-talk results when the SBI connections are routed too close to other signal carrying lines. Clock skew is usually a result of higher than expected capacitance, between the SBI signals (clock and / or data) and ground, which causes the master and slave devices to disagree on when data should be stable and when it is allowed to be changing.

5.4.2.1 Error Detection

SBI provides several methods of error detection: protocol ACK/NAK, packet error correction (PEC) fields, and timeouts. The ACK/NAK mechanism is always active in SBI, but the PEC and timeouts are optional.

5.4.2.1.1 ACK/NAK Mechanism

After each byte of an SBI message, the device receiving that byte must either acknowledge (ACK) that it received the byte correctly, or deny (NAK) that the byte was correctly received. This is most easily seen in the case of the address bytes which follow a START (or REPEATED START) sequence, but can be used anywhere in the message. In the case of an address byte, if a slave device recognizes the address, it will respond with an ACK and await the rest of the message. If a slave device does not recognize the message, it will respond with a NAK and ignore the rest of the message.

5.4.2.1.2 Bus Timeouts

Bus timeouts should be enabled to prevent a device waiting indefinitely on a message that may not be coming. Some timeouts are used to prevent the SBI bus from waiting for a response from a CPU that is in a power-saving idle mode. Other timeouts are used to allow the slave device to recognize that the bus master is attempting to reset all of the devices on the SBI bus. Either way, when a device recognizes a timeout, it should abort its current message transfer.

5.4.2.2 Error Recovery

The simplest form of error recovery is a retry. When the bus master detects an unexpected NAK, it should abort the current transfer and retry the message sequence. In some cases, however, a message can be so garbled that a simple retry is insufficient. This can occur, if there are multiple devices on the bus and a garbled address byte has caused the wrong slave device to be selected. That slave device may even continue to transmit during the retry. In those cases, it will be necessary to force a reset of all devices on the SBI bus, before retrying the message transfer.

5.4.2.2.1 SBI Bus Reset

The bus master can hold the clock low for a period longer the standard timeout in order to force slave devices off the bus (see section 3.1.1.3 of the SMBUS Management Guide). All SBI slave devices are required to reset their communications if another device holds the clock line low for longer than TTimeout, min (25 milliseconds). The devices are required to complete their reset within TTimeout, max (35 milliseconds). SBI bus masters should use the extended timeout to force a reset of all slave devices if a simple retry does not remove an error condition.

5.5 SBI Physical Interface

5.5.1 SBI SMBus Address

The SMBus address is really 7 bits. Some vendors and the SMBus specification show the address as 8 bits, left justified with the R/W bit as a write (0) making bit 0. Some vendors use only the 7 bits to describe the address.

5.5.2 SBI Bus Timing

SBI supports 100KHz standard-mode and 400 KHz fast-mode I2C operation. Refer to the standard-mode and fast-mode timing parameters in the I2C specification.

5.5.3 SBI Bus Electrical Parameters

SBI conforms to most of the I2C fast-mode electrical parameters. Table below lists the electrical parameters of SBI that vary from I2C or are specific to SBI.

Symbol	Parameter	Unit	Minimum	Typical	Maximum
VDDIODDR4	Normal bus	V	TBD	1.2	TBD
(Note 1)	voltage				
VIH_DC(SCL,S	Input high voltage	V	TBD	-	TBD
DA)					
VIL_DC(SCL,	Input low voltage	V	TBD	-	-
SDA)					
Input Hysteresis	Vhyst	V	TBD	-	-

Table 59: SBI Specific SMBus Electrical Parameters

of Schmitt Trigger Inputs					
	Low level output voltage at 3 mA sink current	V	TBD	-	-

Note 1. Interface voltage is bounded by the AMD processor VDDIO_MEM voltage rail. For DDR4 VDDIO_MEM, VDDIO_MEM_ABCD and VDDIO_MEM_EFGH are nominally 1.2V.

5.5.4 Pass-FET Option

There is a possibility that a device with a standard SMBus interface will not be able to directly interface to SBI. Therefore, pass FETs must be used to create two SkMBus segments, see the following figure.

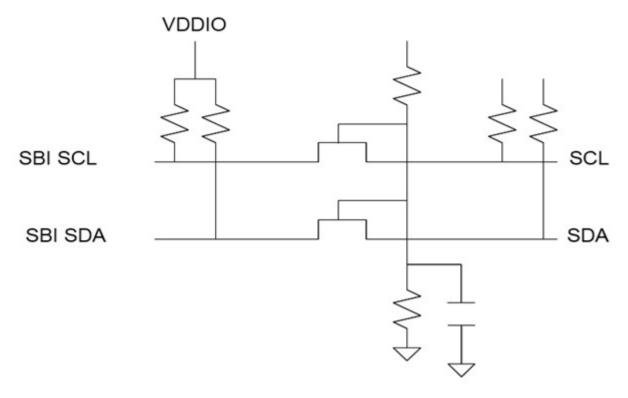


Figure 18: Pass FET Implementation

Notes:

- SCL and SDA pull-up resistors are the normal pull-up resistors for a SMBus segment, and are not part of the translation circuit. They are shown for completeness.
- The gates of the FETs are tied to a voltage approximately Vgs above the lower rail voltage. A resistive divider is shown, but a convenient power rail will also work.
- Care must be taken to install the FETs so that any body diode does not conduct.
- The key requirement is the high side drive low enough to register as low on the low side (High side Vol < Vil on low side)

6 SB Temperature Sensor Interface (SB-TSI)

6.1 Overview

The SBI temperature sensor interface (SB-TSI) is an emulation of the software and physical interface of a typical 8-pin remote temperature sensor (RTS), see Figure 19 [RTS Thermal Management Example]. The goal is to resemble a typical RTS so that KBC or BMC firmware requires minimal changes for future AMD products, see Figure 20 [SB-TSI Thermal Management Example]. SB-TSI supports the SMBus protocols that typical RTS supports.

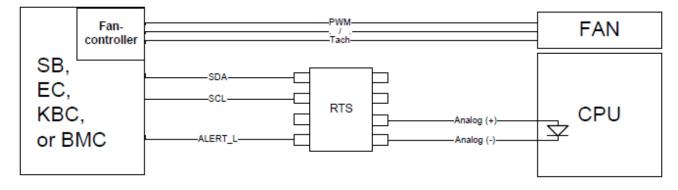


Figure 19: RTS Thermal Management Example

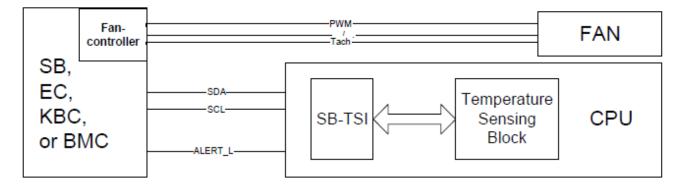


Figure 20: SB-TSI Thermal Management Example

Refer to the following external sources for additional information.

- System Management Bus (SMBus) specification. See docSMB.
- I2C-bus Specification and User Manual, Revision 03. See docI2C.

6.1.1 Definitions

Table 60: SB-TSI Definitions

Term	Description
BMC	Base management controller.
ТСС	Temperature calculation circuit.
Tctl	Processor temperature control value.

TSM	Temperature sensor macro.
SB-TSI	Sideband Internal Temperature Sensor Interface. See APML.

6.2 SB-TSI Protocol

The SB-TSI largely follows SMBus v2.0 specification except:

- The combined-format repeated start sequence is not supported in standard-mode and fast-mode. The response of the processor's SB-TSI to the sequence in undefined.
- Only 7-bit SMBus addresses are supported.
- SB-TSI implements the Send/Receive Byte and Read/Write Byte protocols.
- SB-TSI registers can only by written using a write byte command.
- Address Resolution Protocol (ARP) is not supported.
- Packet Error Checking (PEC) is not supported.
- The usage of unsupported protocols may lead to an undefined bus condition.
- To release the bus from an undefined condition and to reset the SB-TSI slave, the bus master must hold the clock low for a duration of time that is longer than Ttimeout.max, as specified for SMBus. The time-out needs to be enabled by SBTSI::TimeoutConfig[TimeoutEn]=1.

6.2.1 SB-TSI Send/Receive Byte Protocol

A SMBus master can read SB-TSI registers by issuing a send byte command with the address of the register to be read as the data byte followed by a receive byte command.

6.2.1.1 SB-TSI Address Pointer

The SB-TSI controller has an internal address pointer that is updated when a register is accessed using a read or write byte command or when a send byte command is received. This address pointer is used to determine the address of the register being read when a receive byte command is processed by the controller.

6.2.2 SB-TSI Read/Write Byte Protocol

An SMBus master can read or write SB-TSI registers by issuing a read or a write byte command with the address of the register to be read or written in the command code field.

6.2.3 Alert Behavior

The ALERT_L pin is asserted if (SBTSI::Status[TempHighAlert] || SBTSI::Status[TempLowAlert]) &&

- ~SBTSI::Config[AlertMask] as shown in Figure 3. The following registers also affect temperature alert behavior.
 - SBTSI::Config[AraDis]: Disables ARA response.
 - SBTSI::UpdateRate[UpRate]: Specifies rate at which temperature thresholds are checked.
 - {SBTSI::HiTempInt[HiTempInt], SBTSI::HiTempDec[HiTempDec]}: Sets high temperature threshold.
 - {SBTSI::LoTempInt[LoTempInt], SBTSI::LoTempDec[LoTempDec]}: Sets low temperature threshold.
 - SBTSI::AlertThreshold[AlertThr]: Specifies number of consecutive temperature samples to assert an alert.
 - SBTSI::AlertConfig[AlertCompEn]: Specifies ALERT L pin to be in latched or comparator mode. Affects ARA.

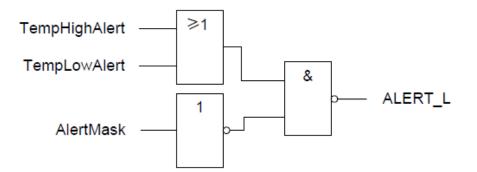


Figure 21: Alert Assertion Diagram

6.2.4 Atomic Read Mechanism

To ensure that the two required reads (integer and decimal) for reading the CPU temperature are always originated from one temperature value, atomic reading procedures are required. SB-TSI offers functions to maintain atomicity between the temperature integer and decimal bytes.

[The SB-TSI Configuration Register] SBTSI::Config[ReadOrder] specifies the order for reading integer and decimal part of the CPU temperature value for atomic CPU temperature reads. If SBTSI::Config[ReadOrder] is 0, then a read of the integer part (SBTSI::CpuTempInt) of the CPU temperature triggers a latch of the decimal part (SBTSI::CpuTempDec) until the next read of the integer part. This latch syncs the decimal part with the integer part. The integer part is continuously updated.

If SBTSI::Config[ReadOrder] is 1, then the read order to ensure atomicity is reversed, i.e. decimal part = first, integer part = second.

If it is not possible to ensure a dedicated read order as described above, the Run/Stop bit ([The SB-TSI Configuration Register] SBTSI::Config[RunStop]) may be used to provide atomicity of reading the CPU temperature. If this bit is 0, the CPU temperature registers are updated continuously. If it is 1, they get frozen and always deliver their last value on read requests.

- Set SBTSI::Config[RunStop].
- Read the integer (SBTSI::CpuTempInt) or the decimal (SBTSI::CpuTempDec) part of the CPU temperature.
- Read the remaining part of the CPU temperature.
- Clear SBTSI::Config[RunStop].

6.2.5 SB-TSI Temperature and Threshold Encodings

SB-TSI CPU temperature readings and limit registers encode the temperature in increments of 0.125 from 0 to 255.875. The high byte represents the integer portion of the temperature from 0 to 255. One increment in the high byte is equivalent to a step of one. The upper three bits of the low byte represent the decimal portion of the temperature. One increment of these bits is equivalent to a step of 0.125.

TemperatureTemperature High Byte
SBTSI::CpuTempInt[CpuTempInt]
SBTSI::HiTempInt[HiTempInt]Temperature Low Byte
SBTSI::CpuTempDec[CpuTempDec]
SBTSI::HiTempInt[HiTempInt]

Table 61: SB-TSI CPU Temperature and Threshold Encoding Examples

	SBTSI::LoTempInt[LoTempInt]	SBTSI::LoTempDec[LoTempDec]
0.000 °C	0000_0000b	0000_0000b
1.000 °C	0000_0001b	0000_0000b
25.125 °C	0001_1001b	0010_0000b
50.875 °C	0011_0010b	1110_0000b
90.000 °C	0101_1010b	0000_0000b

6.2.6 SB-TSI Temperature Offset Encoding

By default, SBTSI::CpuTempInt and SBTSI::CpuTempDec provide Tctl from the processor. Refer to the BIOS and Kernel Developer's Guide for the processor family for further details on Tctl. The temperature offset registers allow the system to adjust the SB-TSI temperature from Tctl.

The SB-TSI temperature offset registers use a different encoding in order to provide negative temperature values. SBTSI::CpuTempOffInt[CpuTempOffInt] and SBTSI::CpuTempOffDec[CpuTempOffDec] form an 11-bit 2's complement value representing the temperature offset. The high byte encodes the integer portion of the temperature and the upper three bits of the low byte represent the fractional portion of the temperature offset. One increment of these bits is equivalent to a step of 0.125 °C. After reset the offset is always set to 0 °C. Software needs to adjust the offset to the appropriate level.

Temperature	Temperature High Byte	Temperature Low Byte
1	SBTSI::CpuTempOffIn	SBTSI::CpuTempOffDe
	t[CpuTempOffInt]	c[CpuTempOffDec]
-10.375 °C	1111_0101b	1010_0000b
-0.250 °C	1111_111b	1100_0000b
0.000 °C	0000_0000b	0000_0000b
0.875 °C	0000_0000b	1110_0000b
10.000 °C	0000_1010b	0000_0000b

Table 62: SB-TSI Temperature Offset Encoding Examples

6.3 SB-TSI Physical Interface

This chapter describes the physical interface of the SB-TSI.

6.3.1 SB-TSI SMBus Address

The SMBus address is really 7 bits. Some vendors and the SMBus specification show the address as 8 bits, left justified with the R/W bit as a write (0) making bit 0. Some vendors use only the 7 bits to describe the address. The SB-TSI address is normally 98h (1001 100W) or 4Ch (100 1100). The address could vary with address select pins.

Table 63: SB-TSI Address Encodings

Socket ID	SB-TSI Address
0b	98h
1b	90h

6.3.2 SB-TSI Bus Timing

SB-TSI supports standard-mode (100 kHz) and fast-mode (400 kHz) according to the I2C-bus Specification and User Manual.

6.3.3 SB-TSI Bus Electrical Parameters

SB-TSI conforms to most of the I2C fast-mode electrical parameters. See the Electrical Data Sheet for the processor family for electrical parameters.

6.3.4 Pass-FET Option

The KBC may not have the capability to directly interface to SB-TSI. Pass FETs may be used to create two SMBus segments, see Figure 4.

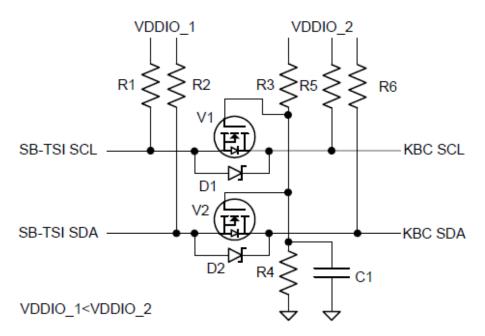


Figure 22: Pass FET Implementation

Notes:

- SCL and SDA pull-up resistors (R5 and R6, respectively) are the normal pull-up resistors for an SMBus segment and are not part of the translation circuit. They are shown for completeness.
- The gates of the FETs are tied to a voltage approximately Vgs above the lower rail voltage. A resistive divider is shown, but a convenient power rail would do nicely.
- Care must be taken to install the FETs so that any body diode does not conduct.
- The key requirement is that the high side drive low enough to register as a low on the low side. (High side Vol < Vil on low side)

6.4 SB-TSI Registers

Reads to unimplemented registers return 00h. Writes to unimplemented registers are discarded.

SBTSIx01 [CPU Integer Temperature] (SBTSI::CpuTempInt)

Read-only. Reset: XXh.
The CPU temperature is calculated by adding the CPU temperature offset (SBTSI::CpuTempOffInt,
SBTSI::CpuTempOffDec) to the processor control temperature (Tctl). SBTSI::CpuTempInt and SBTSI::CpuTempDec
combine to return the CPU temperature. For the temperature encoding, see 6.2.5 [SB-TSI Temperature and Threshold
Encodings]
Bits Description

7:0 **CpuTempInt**: integer CPU temperature value. Read-only. Reset: Cold,XXh. This field returns the integer

portion of the CPU temperature.

SBTSIx02 [SB-TSI Status] (SBTSI::Status)

Read-only, Volatile. Reset: XXh.

Read	Read only, volatile. Reset: AXII.		
If SB7	If SBTSI::AlertConfig[AlertCompEn]==0, the temperature alert is latched high until the alert is read. If		
SBTS	SBTSI::AlertConfig[AlertCompEn]==1, the alert is cleared when the temperature does not meet the threshold conditions		
for ter	for temperature and number of samples. See 6.2.3 [Alert Behavior].		
Bits	Description		
7:5	Reserved.		
4	TempHighAlert : temperature high alert . Read-only, Volatile. Reset: Cold,X. 1=Indicates that the CPU temperature is greater than or equal to the high temperature threshold (SBTSI::HiTempInt, SBTSI::HiTempDec) for SBTSI::AlertThreshold[AlertThr] consecutive samples. 0=Indicates that the CPU tempera- ture is less than the high temperature threshold (SBTSI::HiTempInt, SBTSI::HiTempInt, SBTSI::AlertThreshold[AlertThr] samples and SBTSI::AlertConfig[AlertCompEn]=1. Hardware will clear this bit when read if SBTSI::AlertConfig[AlertCompEn]=0.		
3	TempLowAlert: temperature low alert . Read-only, Volatile. Reset: Cold,X. 1=Indicates that the CPU temperature is less than or equal to the low temperature threshold (SBTSI::LoTempInt, SBTSI::LoTempDec) for SBTSI::AlertThreshold[AlertThr] consecutive samples. 0=Indicates the CPU temperature is greater than the low temperature threshold (SBTSI::LoTempInt, SBTSI::LoTempInt, SBTSI::AlertThreshold[AlertThr] samples and SBTSI::AlertConfig[AlertCompEn]=1. Hardware will clear this bit when read if SBTSI::AlertConfig[AlertCompEn]=0.		
2:0	Reserved.		

SBTSIx03 [SB-TSI Configuration] (SBTSI::Config)

Reset: 00h.

The bits in this register are read-only and can be written by writing to the corresponding bits in SBTSI::ConfigWr. See 6.2.3 [Alert Behavior] and 6.2.4 [Atomic Read Mechanism].

Bits	Description
7	AlertMask: alert mask. Read-only, Volatile. Reset: Cold, 0. 0=ALERT_L pin enabled. 1=ALERT_L pin disabled
	and does not assert. IF (SBTSI::Config[AraDis]==0) THEN Read-only; set-by-hardware. ELSE Read-only
	ENDIF. Hardware sets this bit if SBTSI::Config[AraDis]=0, either SBTSI::Status[TempHighAlert]==1 or
	SBTSI::Status[TempLowAlert]==1, and a successful ARA is sent.
6	RunStop: run stop. Read-only. Reset: Cold,0. 0=Updates to SBTSI::CpuTempInt and SBTSI::CpuTempDec and
	the alert comparisons are enabled; Alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the
	corresponding timer (specified by SBTSI::UpdateRate[UpRate]) continue to update. 1=Updates to
	SBTSI::CpuTempInt and SBTSI::CpuTempDec and the alert comparisons are disabled; Alert history counters
	(specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by
	SBTSI::UpdateRate[UpRate]) are stopped. See 6.2.4 [Atomic Read Mechanism] for further details.
5	ReadOrder: atomic read order. Read-only. Reset: Cold,0. 0=Reading SBTSI::CpuTempInt causes the state of
	SBTSI::CpuTempDec to be latched. 1=Reading SBTSI::CpuTempDec causes the state of SBTSI::CpuTempInt to
	be latched. See 6.2.4 [Atomic Read Mechanism] for further details.
4:2	Reserved.
1	AraDis: ARA disable. Read-only. Reset: Cold,0. Read-only. 1=ARA response disabled.
0	Reserved.

SBTSIx04 [Update Rate] (SBTSI::UpdateRate)

Read-write. Reset: 08h.		
Bits	Description	
7:0	UpRate: update rate . Read-write. Reset: Cold,08h. This field specifies the rate at which CPU temperature is	
	compared against the temperature thresholds to determine if an alert event has occurred. Write access causes a	
	reset of the alert history counters (specified by SBTSI:: AlertThreshold[AlertThr]) and the corresponding timer	
	(specified by SBTSI::UpdateRate[UpRate]).	

ValidVa	lues:
Value	Description
00h	0.0625 Hz
01h	0.125 Hz
02h	0.25 Hz
03h	0.5 Hz
04h	1 Hz
05h	2 Hz
06h	4 Hz
07h	8 Hz
08h	16 Hz
09h	32 Hz
0Ah	64 Hz
FFh-	Reserved.
0Bh	

SBTSIx07 [High Temperature Integer Threshold] (SBTSI::HiTempInt)

Read-write. Reset: 46h.

The high temperature threshold specifies the CPU temperature that causes ALERT_L to assert if the CPU temperature is greater than or equal to the threshold. SBTSI::HiTempInt and SBTSI::HiTempDec combine to specify the high temperature threshold. See 6.2.5 [SB-TSI Temperature and Threshold Encodings]. Reset value equals 70 °C. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]). See 6.2.3 [Alert Behavior].

Bits Description

7:0 **HiTempInt**: high temperature integer threshold. Read-write. Reset: Cold,46h. This field specifies the integer portion of the high temperature threshold.

SBTSIx08 [Low Temperature Integer Threshold] (SBTSI::LoTempInt)

Read-write. Reset: 00h.

The low temperature threshold specifies the CPU temperature that causes ALERT_L to assert if the CPU temperature is less than or equal to the threshold. SBTSI::LoTempInt and SBTSI::LoTempDec combine to specify the low temperature threshold. See 6.2.5 [SB-TSI Temperature and Threshold Encodings]. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]). See 6.2.3 [Alert Behavior].

Bits	Description	
7	LoTempInt: low temperature integer threshold. Read-write. Reset: Cold,0. This field specifies the integer	
	portion of the low temperature threshold.	
6:0	Reserved.	

SBTSIx09 [SB-TSI Configuration Write] (SBTSI::ConfigWr)

Read-	Read-write. Reset: 00h.	
This re	This register provides write access to SBTSI::Config.	
Bits	Description	
7	AlertMask: alert mask. Read-write. Reset: Cold,0. See SBTSI::Config[AlertMask].	
6	RunStop: run stop. Read-write. Reset: Cold,0. See SBTSI::Config[RunStop].	
5	ReadOrder: atomic read order. Read-write. Reset: Cold,0. See SBTSI::Config[ReadOrder].	
4:2	Reserved.	
1	AraDis: ARA disable. Read-write. Reset: Cold,0. See SBTSI::Config[AraDis].	
0	Reserved.	

SBTSIx10 [CPU Decimal Temperature] (SBTSI::CpuTempDec)

Read-only. Reset: X0h. See SBTSI::CpuTempInt.

Bits Description 7:5 CpuTempDec: decimal CPU temperature value. Read-only. Reset: Cold,XXXb. Read-only. This field returns the decimal portion of the CPU temperature. 4:0 Reserved.

SBTSIx11 [CPU Temperature Offset High Byte] (SBTSI::CpuTempOffInt)

Read-write. Reset: 00h.

SBTSI::CpuTempOffInt and SBTSI::CpuTempOffDec combine to specify the CPU temperature offset. See 6.2.6 [SB-TSI Temperature Offset Encoding] for encoding details.

Bits Description

7:0 **CpuTempOffInt**: **CPU temperature integer offset**. Read-write. Reset: Cold,00h. This field specifies the integer portion of the CPU temperature offset added to Tctl to calculate the CPU temperature. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]).

SBTSIx12 [CPU Temperature Decimal Offset] (SBTSI::CpuTempOffDec)

Read-	Read-write. Reset: 00h.		
See SBTSI::CpuTempOffInt.			
Bits	Description		
4:0	Reserved.		

SBTSIx13 [High Temperature Decimal Threshold] (SBTSI::HiTempDec)

Read-	Read-write. Reset: 00h.		
See SI	See SBTSI::HiTempInt.		
Bits	Description		
7:5	HiTempDec: high temperature decimal threshold. Read-write. Reset: Cold,0h. This field specifies the decimal		
	portion of the high temperature threshold.		
4:0	Reserved.		

SBTSIx14 [Low Temperature Decimal Threshold] (SBTSI::LoTempDec)

See SI	See SBTSI::LoTempInt.	
Bits	Description	
7:5	LoTempDec: low temperature decimal threshold. Read-write. Reset: Cold,0h. This field specifies the decimal	
	portion of the low temperature threshold.	
4:0	Reserved.	

SBTSIx22 [Timeout Configuration] (SBTSI::TimeoutConfig)

Read-write. Reset: 80h.		
Bits	Description	
7	TimeoutEn: SMBus timeout enable. Read-write. Reset: Cold,1. 0=SMBus defined timeout support disabled.	
	1=SMBus defined timeout support enabled. SMBus timeout enable.	
6:0	Reserved.	

SBTSIx32 [Alert Threshold Register] (SBTSI::AlertThreshold)

Read-	ead-write. Reset: 00h.		
See 6.	See 6.2.3 [Alert Behavior].		
Bits	Descript	ion	
7:3	Reserved	1.	
samples for which a temperature alert condition needs to remain valid before the corresponding a SBTSI::AlertConfig[AlertCompEn]=1 it specifies the number of consecutive CPU temperature s a temperature alert condition need to remain not valid before the corresponding alert bit gets clear resets the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding to the specified by SBTSI::UpdateRate[UpRate]). Details in SBTSI::Status.			
	Value	Description	
	0h	1 Sample	
	6h-1h	<value+1> Samples</value+1>	
	7h	8 Samples	

SBTSIxBF [Alert Configuration] (SBTSI::AlertConfig)

Read-write. Reset: 0Xh.

Itteau	
Bits	Description
7:1	Reserved.
0	AlertCompEn: alert comparator mode enable. Read-write. Reset: Cold,X. 0=SBTSI::Status[TempHighAlert]
	and SBTSI::Status[TempLowAlert] are read clear. 1=SBTSI::Status[TempHighAlert] and
	SBTSI::Status[TempLowAlert] are read only; ARA response disabled. Write access does not change the alert
	history counters (specified by SBTSI::AlertThreshold[AlertThr]) or the corresponding timer (specified by
	SBTSI::UpdateRate[UpRate]). See SBTSI::Status.

SBTSIxFE [Manufacture ID] (SBTSI::ManId)

Read-only. Reset: 00h.

Bits Description

7:1 Reserved.

0 ManId: Manufacture ID. Read-only. Reset: Cold,0. Returns the AMD manufacture ID.

SBTSIxFF [Revision] (SBTSI::Revision)

Read-only. Reset: 04h.

Bits Description

7:0 **Revision**: **SB-TSI revision**. Read-only. Reset: Cold,04h. Specifies the SBI temperature sensor interface revision.

List of Namespaces

Namespace	Heading(s)
Core::X86::Apic	2.1.8.2.2 [Local APIC
1	Registers
Core::X86::Cpuid	2.1.9.1 [CPUID Instruction
1	Functions]
Core::X86::Msr	2.1.10.1 [MSRs -
	MSR0000 xxxx]
	2.1.10.2 [MSRs -
	MSRC000_0xxx]
	2.1.10.3 [MSRs -
	MSRC001_0xxx]
	2.1.10.4 [MSRs -
	MSRC001_1xxx]
Core::X86::Pmc::Core	2.1.11.2 [Large Increment per
	Cycle Events]
	2.1.11.3.1 [Floating Point (FP)
	Events]
	2.1.11.3.2 [LS Events]
	2.1.11.3.3 [IC and BP Events]
	2.1.11.3.4 [DE Events]
	2.1.11.3.5 [EX (SC) Events]
	2.1.11.3.6 [L2 Cache Events.]
Core::X86::Pmc::L3	2.1.11.4.1 [L3 Cache PMC
Core::X86::Smm	Events]
ColeA80Sillin	2.1.8.1.6 [System Management State]
ΙΟ	<u> </u>
10	2.1.5 [PCI Configuration Legacy Access]
MCA::CS	
MCA::DE	3.17.12 [CS] 3.17.8 [DE]
MCA::EX	3.17.9 [EX]
MCA::FP	3.17.10 [FP]
MCA::IF	3.17.6 [IF]
MCA::L2	3.17.7 [L2]
MCA::L3	3.17.11 [L3 Cache]
MCA::LS	3.17.5 [LS]
MCA::PB	3.17.15 [Parameter Block]
MCA::PIE	3.17.13 [PIE]
MCA::UMC	3.17.14 [UMC]
MP::MP0CRU	4.1 [MP0 Configuration Unit
	Registers]
SBTSI	6.4 [SB-TSI Registers]
SMU::THM	4.2.1 [Registers]

List of Definitions

ABS: ABS(integer expression): Remove sign from signed value.

ARA: Alert response address.

ARP: Address Resolution Protocol

BAR: The BAR, or base address register, physical register mnemonic format is of the form PREFIXxZZZ.

BMC: Base management controller.

CEIL: CEIL(real expression): Rounds real number up to nearest integer.

Configurable: Indicates that the access type is configurable as described by the documentation.

COUNT: COUNT(integer expression): Returns the number of binary 1's in the integer.

CPUID: The CPUID, or x86 processor identification state, physical register mnemonic format is of the form CPUID FnXXXX_XXXX_EiX[_xYYY], where XXXX_XXXX is the hex value in the EAX and YYY is the hex value in ECX.

docACPI: Advanced Configuration and Power Interface (ACPI) Specification. <u>http://www.acpi.info</u>.

docAPM1: AMD64 Architecture Programmer's Manual Volume 1:

Application Programming, order# 24592.

docAPM2: AMD64 Architecture Programmer's Manual Volume 2: System Programming, order# 24593.

docAPM3: AMD64 Architecture Programmer's Manual Volume 3:

Instruction-Set Reference, order# 24594.

docAPM4: AMD64 Architecture Programmer's Manual Volume 4: 128-Bit and 256-Bit Media Instructions, order# 26568.

docAPM5: AMD64 Architecture Programmer's Manual Volume 5: 64-Bit Media and x87 Floating-Point Instructions, order# 26569.

docI2C: I2C Bus Specification.

http://www.nxp.com/documents/user_manual/UM10204.pdf docIOMMU: AMD I/O Virtualization TechnologySpecification, order# 48882.

docJEDEC: JEDEC Standards. http://www.jedec.org.

docPCIe: PCI Express® Specification. http://www.pcisig.org.

docPCIIb: PCI Local Bus Specification. http://www.pcisig.org.

docRAS: RAS Feature Enablement for AMD Family 17h Models 00h-0Fh, order# 55987.

docRevG: Revision Guide for AMD Family 17h Models 00h-0Fh Processors, order# 55449.

EC: Embedded Controller.

Error-on-read: Error occurs on read.

Error-on-write: Error occurs on write.

Error-on-write-0: Error occurs on bitwise write of 0.

Error-on-write-1: Error occurs on bitwise write of 1.

FLOOR: FLOOR(integer expression): Rounds real number down to nearest integer.

Inaccessible: Not readable or writable (e.g., Hide ? Inaccessible : Read-Write).

KBC: Keyboard Controller.

MAX: MAX(integer expression list): Picks maximum integer or real value of comma separated list.

MIN: MIN(integer expression list): Picks minimum integer or real value of comma separated list.

MSR: The MSR, or x86 model specific register, physical register mnemonic format is of the form MSRXXXX_XXXX, where XXXX_XXXX is the hexadecimal MSR number. This space is accessed through x86 defined RDMSR and WRMSR instructions.

PCICFG: The PCICFG, or PCI defined configuration space, physical register mnemonic format is of the form DXFYxZZZ. **PEC**: Packet error code.

PMC: The PMC, or x86 performance monitor counter, physical register mnemonic format is any of the forms {PMCxXXX, L2IPMCxXXX, NBPMCxXXX}, where XXX is the performance monitor select. POR: Power on reset.

POW: POW(base, exponent): POW(x,y) returns the value x to the power of y.

Reserved-write-as-0: Reads are undefined. Must always write 0.

Reserved-write-as-1: Reads are undefined. Must always write 1. **ROUND**: ROUND(real expression): Rounds to the nearest integer; halfway rounds away from zero.

RTS: Remote temperature sensor, typical examples are ADM1032, LM99,

OSRR for AMD Family 17h processors, Models 00h-2Fh

MAX6657, EMC1002.

SB-TSI: Sideband Internal Temperature Sensor Interface. See APML.
 SBI: Sideband interface.
 TCC: Temperature calculation circuit.
 TctI: Processor temperature control value.

TSI: Temperature sensor interface.

TSM: Temperature sensor macro.

UNIT: UNIT(register field reference): Input operand is a register field reference that contains a valid values table that defines a value with a unit (e.g., clocks, ns, ms, etc). This function takes the value in the register field and returns the value associated with the unit (e.g., If the field had a valid value definition where 1010b was defined as 5 ns). Then if the field had the value of 1010b, then UNIT() would return the value 5.

Unpredictable: The behavior of both reads and writes is unpredictable. **Volatile**: Indicates that a register field value may be modified by hardware, firmware, or microcode when fetching the first instruction and/or might have read or write side effects. No read may depend on the results of a previous read and no write may be omitted based on the value of a previous read or write.

Write-0-only: Writing a 0 clears to a 0; Writing a 1 has no effect. If not associated with Read, then reads are undefined.

Write-1-only: Writing a 1 sets to a 1; Writing a 0 has no effect. If not associated with Read, then reads are undefined.

Write-1-to-clear: Writing a 1 clears to a 0; Writing a 0 has no effect. If not associated with Read, then reads are undefined.

Write-once: Capable of being written once; all subsequent writes have no effect. If not associated with Read, then reads are undefined.

Memory Map - MSR

Physical Mnemonic	Namespace
0000 0000h0000 0001h	MCA::LS
0000 0010h0000 02FFh	Core::X86::Msr
0000 0400h0000 0403h	MCA::LS
0000 0404h0000 0407h	MCA::IF
0000 0408h0000 040Bh	MCA::L2
0000 040Ch0000 040Fh	MCA::DE
0000_0414h0000_0417h	MCA::EX
0000 0418h0000 041Bh	MCA::FP
0000_041Ch0000_043Bh	MCA::L3
0000_043Ch0000_0443h	MCA::UMC
0000_044Ch0000_044Fh	MCA::PB
0000_0450h0000_0457h	MCA::CS
0000_0458h0000_045Bh	MCA::PIE
C000_0080hC000_0410h	Core::X86::Msr
C000_2000hC000_2009h	MCA::LS
C000_2010hC000_2016h	MCA::IF
C000_2020hC000_2029h	MCA::L2
C000_2030hC000_2036h	MCA::DE
C000_2050hC000_2056h	MCA::EX
C000_2060hC000_2066h	MCA::FP
C000_2070hC000_20E9h	MCA::L3
C000_20F0hC000_210Ah	MCA::UMC
C000_2130hC000_2136h	MCA::PB
C000_2140hC000_2159h	MCA::CS
C000_2160hC000_2169h	MCA::PIE
C001_0000hC001_029Bh	Core::X86::Msr
C0010400	MCA::LS
C0010401	MCA::IF
C0010402	MCA::L2
C0010403	MCA::DE
C0010405	MCA::EX
C0010406	MCA::FP
C001_0407hC001_040Eh	MCA::L3
C001_040FhC001_0410h	MCA::UMC
C0010413	MCA::PB
C001_0414hC001_0415h	MCA::CS
C0010416	MCA::PIE
C001_1002hC001_103Ch	Core::X86::Msr

Memory Map - SMN

Physical Mnemonic	Namespace
0005_9800h: SMUTHMx00000000	SMU::THM