

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SA

Where Is the Best Location for My DOCSIS Residential Gateway?

How Do I Mount the Modem on a Wall? (Optional)

Setup > Lan Setup

The Setup Lan Setup page allows you to configure the settings for the Local Area Network (LAN) in your home. These settings include the range of IP addresses that define the LAN itself as well as how the addresses are assigned (automatically by DHCP or manually) as new devices are added to the network.

Important: Unless you are knowledgeable about administering IP addresses, we recommend that you do not change these settings. If you change these values incorrectly, you can lose Internet access.

Select thvi3.04 6sTJ17.63 0 Td(BDC /TT3 1 Tf-0.002 Tc 0.00[(Lt)-6(a Se)-2n)-2(up)-6(:)]TJ/TT2 1 Tf0 Tc

Section

Field Description

Maximum Number of DHCP Users

Enter the maximum number of users to which the DHCP server can assign IP addresses for use in the LAN. This number cannot

Configure

Section

Field Description

WPS Setup Using Your Wi-Fi Adapter PIN (Option 2)


This is the most secure option to register a wireless client with the gateway. You need the Wi-Fi Protected Setup PIN number, which is found in the client Wi-Fi Protected Setup utility. After entering the client's Wi-

Configure Wireless Settings

Wireless Security Page Description

Use the following table to configure the wireless security for the residential gateway. After you make your selections, click

Section

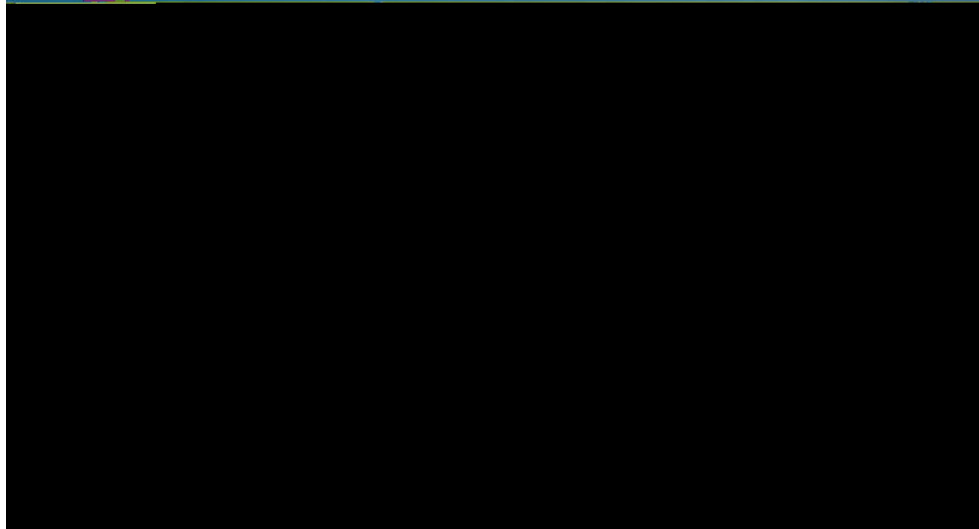

Wireless Advanced Settings Page Description

Use the descriptions and instru

Section	Field Description
----------------	--------------------------

Wireless > WDS Settings

Configure Security

Section	Field Description
Filters	Filter Proxy

Security > VPN

Access Restrictions > Basic Rules

Access restrictions allow you to block or allow specific kinds of Internet usage and traffic, such as Internet access, designated applications, websites, and inbound traffic.

Control Access to the Gateway

Section Tod Filter	Field Description
-------------------------------	--------------------------

Section

Field Description

End Port

For the End port, select a port from the recommended 49152

Configure

Manage the Gateway

Field

Administration > Backup & Restore

Monitor Gateway Status

Frequently Asked Questions

Q. How Do I Configure TCP/IP Protocol?

Frequently Asked Questions

5 Select both

Renewing the IP Address on Windows 95, 98, 98SE, and ME Systems

- 1 Click **Start**, and then click

Special Conditions

Software and Firmware Use

The software described in this document is protected by copyright law and


For Information

If You Have Questions

If you have technical questions, call Cisco Services for assistance. Follow the menu options to speak with a service engineer. Use the following table to find the center in your area.

Region

For



Cisco Systems, Inc.